Introduction

Thank you for purchasing SoftBank 001SH.

- For proper handset use, read "Quick Tips" (in the box) and this guide beforehand.
- Accessible SoftBank Mobile services may vary by service area, subscription, etc.

SoftBank 001SH is compatible with 3G network technology; supports international roaming where 3G network coverage is available (3G areas).

For details, contact SoftBank Mobile Customer Center, General Information (P.15-39).

Notes

- Copying this guide in whole or part without authorization is prohibited.
- Guide content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this guide. Please contact SoftBank Mobile Customer Center, General Information (P.15-39) about unclear or missing information.

Chapter Contents At A Glance

Getting Started	1
Universal Operations, Etc.	2
Calling	3
Messaging	4
Internet	5
Digital TV	6
Camera & Imaging	7
Media Player & S! Applications	8
Handy Extras	9
Widgets & Entertainment	10
Handset Security	11
Data Folder & Memory Card	12
Connectivity & File Backup	13
Handset Customization	14
Appendix	15



- Most operation descriptions are based on default settings with handset open (P.1-2) in Standby (P.1-6).
- •Operations and results may differ by handset status.
- Sample screenshots, etc. are provided for reference only.
- Actual handset windows, menus, etc. may differ in appearance.
- "(Japanese)" appears next to functions or applications which require Japanese ability to use as intended.
- •In this guide and on handset, "abroad" means "outside Japan" with regard to handset/service usage.

With the exception that Handset Code and Administrator Code are set.

Table of Contents

Guide Usage Notesii
Table of Contentsiii
Accessoryv
Safety Precautionsvi
1 Getting Started
Handset Parts 1-2
Charging Battery 1-4
Power On/Off1-6
Display & Indicators1-7
Accessing Functions1-12
Mobile Manners 1-18
Security Codes 1-19
Double Number 1-21
Basic Tools 1-24
Additional Functions1-25
2 Universal Operations, Etc.
Z Oniversal Operations, Etc.
Font Size2-2
Font Size2-2
Font Size
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5 Text Entry 2-6
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5 Text Entry 2-6 User Dictionary 2-12
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5 Text Entry 2-6 User Dictionary 2-12 Dictionary 2-13
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5 Text Entry 2-6 User Dictionary 2-12 Dictionary 2-13 Search 2-15 Scratch Pad 2-16 Phone Book 2-17
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5 Text Entry 2-6 User Dictionary 2-12 Dictionary 2-13 Search 2-15 Scratch Pad 2-16
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5 Text Entry 2-6 User Dictionary 2-12 Dictionary 2-13 Search 2-15 Scratch Pad 2-16 Phone Book 2-17
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5 Text Entry 2-6 User Dictionary 2-12 Dictionary 2-13 Search 2-15 Scratch Pad 2-16 Phone Book 2-17 Additional Functions 2-20
Font Size 2-2 Wallpaper 2-3 Customized Screen 2-4 Sounds & Alerts 2-5 Text Entry 2-6 User Dictionary 2-12 Dictionary 2-13 Search 2-15 Scratch Pad 2-16 Phone Book 2-17 Additional Functions 2-20 Troubleshooting 2-25

Video Calling	3-6
Speed Dial & Rakutomo Link	3-7
Call Log	3-9
Call Time	3-10
Call Barring	
Optional Services	3-13
Additional Functions	
Troubleshooting	3-23
4 Messaging	
Messaging	4-2
Sending Messages	4-4
Incoming Messages	
Handling Messages	4-15
Chat Folder	4-18
Mail Groups	
PC Mail	4-20
Additional Functions	
Troubleshooting	4-40
5 Internet	
Internet Services	5-2
Yahoo! Keitai	
PC Site Browser	5-5
Browsing	
Bookmarks & Saved Pages	
RSS Feeds	
Additional Functions	
Troubleshooting	5-17
6 Digital TV	
Digital TV	
Recording/Playing	6-7

Additional Functions6-10
Troubleshooting6-15
7 Camera & Imaging
Camera7-2
Photo Camera7-4
Video Camera7-5
Review7-6
Shooting Modes7-7
Editing Images7-8
Printing7-12
Additional Functions7-13
Troubleshooting7-16
8 Media Player & S! Applications
Media Player8-2
Music8-4
Video8-5
Playlists8-6
S! Appli8-7
Additional Functions8-8
Troubleshooting8-12
9 Handy Extras
Calendar & Tasks9-2
Alarms9-8
Wakeup TV9-10
Relaxation Time9-12
Household Accounts9-13
Calculator9-17
Expenses Memo9-18
Simulated Call9-19
Stopwatch9-20
Countdown Timer9-21

World Clock 9-22
Hour Minder 9-23
Notepad 9-24
ASCII Art 9-25
Voice Recorder 9-26
Barcode Reader 9-27
Create QR Code 9-28
Scan Card 9-29
Scan Text 9-30
Kanji Grabber 9-31
Additional Functions 9-32
Troubleshooting9-43
10 Widgets & Entertainment
Mobile Widget 10-2
S! Quick News 10-5
S! Information Channel 10-6
Content Downloads 10-7
e-Books10-8
S! Friend's Status 10-9
S! Circle Talk 10-12
Blog Tool 10-14
Additional Functions 10-16
Troubleshooting 10-22
11 Handset Security
Handset Security 11-2
Function Control 11-4
Additional Functions 11-5
12 Data Folder & Memory Card
Data Folder 12-2
Memory Card 12-5
Additional Functions 12-7

Troubleshooting 12	9-6
13 Connectivity & File Backup	
Infrared	3-5 3-9 10 13
14 Handset Customization	
Date & Time 14 Display & Illumination 14 Incoming Transmissions 14 Sounds 14 Connectivity 14 Reset 14	-3 -5 -6 -7
15 Appendix	
USIM Card	j- 2
Troubleshooting 15	i- 6
Text Entry Key Assignments 15 Pager Codes	1(
Weather Indicators 15-	17
Specifications 15- Menu List 15- Index 15-	18 24
Warranty & Service 15-	
Customer Service 15-	

Accessory

■ Battery (SHBCU1)



- For accessory-related information, please contact SoftBank Mobile Customer Center, General Information (P.15-39).
- Use specified Charger or Headphones (each sold separately) only.

Safety Precautions

Read safety precautions before using handset.


- Observe precautions to avoid injury to self or others, or damage to property.
- SoftBank Mobile is not liable for any damages resulting from use of this product.

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

⚠ DANGER	Great risk of death or serious injury from improper use
⚠ WARNING	Risk of death or serious injury from improper use
⚠ CAUTION	Risk of minor injury or damage to property from improper use

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.



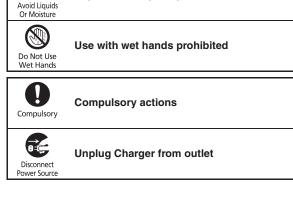


Handset, Battery, USIM Card, Charger (Sold Separately) & Memory Card (Sold Separately)



Use specified battery and Charger



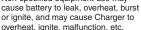



Compulsory

Do not disassemble, modify or solder handset or related hardware. May cause fire, injury, electric shock or malfunction. Battery may leak. overheat, burst or ignite.

Do Not Disassemble

Modifying handsets is prohibited by the Radio Law and subject to a penalty.

Do not expose handset or related hardware to liquids.

Do not let liquid-exposed handset/ related hardware remain wet: do not charge wet battery. May cause overheating, electric shock, fire, injury or malfunction. Use handset/related hardware properly/appropriately.



Avoid Liquids Or Moisture

Do not charge battery in or expose handset or related hardware to extreme heat (e.g., near fire or sources of heat, in direct sunlight. inside vehicles, etc.).



May cause warping/malfunction; battery may leak, overheat, ignite or burst. Handset or related hardware may become hot to the touch, leading to burn injuries, etc.

Do not force battery/Charger into handset. Confirm terminal/ connector orientation and retry. Battery may leak, overheat, burst, ianite, etc.





WARNING

Do not place handset, battery or Charger in/on ovens, microwave ovens, pressure cookers, induction stoves or other cooking appliances. Battery may leak, overheat, burst or ignite. Handset/Charger may overheat, emit smoke, ignite, malfunction, etc.



Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk. Handset use near petrochemicals or

other flammables may cause fire/

explosion.



Compulsory

Do not apply strong shocks or impacts.



Do not drop/throw handset or related hardware. Battery may leak, overheat, burst or ignite, resulting in fire, electric shock, malfunction, etc.

If there is unusual sound/odor. smoke or any other abnormality:



Continued use may cause fire, electric shock, etc.; grasp plug to disconnect Charger, power off, then remove battery, being careful not to burn or iniure vourself.

fire, malfunction, etc.

Keep liquids (water, pet urine, etc.) or conductive material (pencil lead, metallic strip, metal jewelry, etc.) away from External Device Port. May cause short circuit, resulting in





Do not place handset or related hardware on unstable surfaces.



Handset or related hardware may fall. resulting in injury, malfunction, etc.; take added care when Vibration is set or while charging.

Keep handset and related hardware out of infants' reach.



Infants may choke from swallowing handset or related hardware or be injured, etc.

Compulsory

If your child is using handset/ related hardware, explain all instructions and supervise usage. Misuse may cause injury, etc.



Battery




Read battery label to confirm battery type: use/dispose of battery accordingly.

Symbol on Label	Battery Type
Li-ion00	Lithium-ion

Do not dispose of battery in fire. Battery may leak, burst, ignite, etc.



Do not damage battery (with a nail. hammer, foot, etc.) or subject it to strong impacts or shocks.

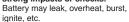



Keep wire or other metal objects away from battery terminals. Do not carry/store battery with conductive material (pencil lead, metallic strip. metal jewelry, etc.).



Battery may leak, overheat, burst, ianite, etc.

If battery fluid gets in eyes, do not rub; rinse with water and consult a doctor immediately. Eves may be severely damaged.



♠ WARNING

If battery fluid contacts skin or clothes, discontinue handset use and rinse with clean water immediately. May cause skin damage.



If battery does not charge properly, stop trying.

Battery may leak, overheat, burst, ianite, etc.



If there is abnormal odor, excessive heat, discoloration or distortion, remove battery, being careful not to burn or injure yourself. Avoid fire sources.



Continued use may cause battery to leak, overheat, burst, ignite, etc.

Keep battery away from pets. Pet bites may cause battery to leak. burst, overheat, ignite, etc.



A CAUTION

Do not dispose of an exhausted battery with ordinary refuse. Tape over battery terminals before



disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.

Handset



Do not use handset while driving or cycling.



Accidents may result. Phone use while driving or cycling is prohibited by law and subject to a penalty; park legally beforehand.

Prohibited

Power off near electronic devices that employ high precision control systems or weak signals.



Compulsory

May cause electronic malfunctions, etc. Take added care near these devices: Hearing aids, implanted pacemakers/ defibrillators and other electronic medical equipment: fire alarms. automatic doors and other automatic control devices.

Power off before boarding aircraft to avoid possible radio wave interference with aircraft operations.



Compulsory

If mobile phone use is allowed on board, follow airline or cabin crew instructions regarding handset use.

Users with a heart condition should adjust ringtone Vibration and Volume as needed.



Compulsory

If thunder is heard while outdoors. power off; find cover.

May cause heart damage.



There is a risk of lightning strike or electric shock

Do not look into Infrared Port during infrared transmissions. Evesight may be affected.







Do not use handset when it may affect a vehicle's electronic equipment.



Handset use inside vehicles may cause electronic equipment to malfunction, resulting in accidents.

If you experience any skin irritation associated with handset use. discontinue handset use and consult a doctor.



Compulsory

Metal and other materials (P.15-18) may cause skin irritation, rashes, or itchiness depending on your physical condition


Keep handset away from magnetic cards, etc.



Prohibited

Data on bank cards, credit cards. telephone cards, floppy disks, etc. may he lost

Do not swing handset by strap. May harm self or others; strap may break, resulting in injury or handset malfunction/breakage.

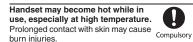

Always maintain some distance from Speaker while ringtones, music or other handset sounds play. Excessive volume may damage ears or hearing.

Keep fingers, straps, etc. outside when opening/closing handset. May cause injury, breakage, etc.



Prohibited

Watch TV from a distance in good liaht.



Watching in poor light or too close may affect evesight.

Compulsory

Moderate handset volume when using Headphones.



Excessive volume may damage ears or hearing.

Charger (Sold Separately)



⚠ WARNING

Do not cover/wrap Charger while charging.



Charger may overheat, resulting in fire. malfunction, etc.

Use only the specified voltage. Non-specified voltages may cause fire. malfunction, etc.



AC Charger: AC 100V-240V Input

• In-Car Charger (use in negative earth vehicles only): DC 12V/24V Input Do not use power adapters. Using Charger with step-up/step-down transformer may cause fire, electric shock or malfunction

Prohibited


Leave Charger unplugged during periods of disuse; grasp plug to disconnect it.

May cause electric shock, fire or malfunction.



Disconnect Power Source

Use only the specified fuse for In-Car Charger

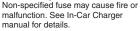



Compulsory

If liquids (water, pet urine, etc.) seep inside Charger, grasp plug and disconnect it immediately. May cause electric shock, smoke or fire.



Power Source

If plug is dusty, grasp it and disconnect Charger, then clean with dry cloth.



Fire may result.

earth vehicles only.

Do not use In-Car Charger in positive earth vehicles. May cause fire, etc. Use in negative



Plug Charger firmly into the outlet. keeping the plug and charging terminals away from conductive material (pencil lead, metallic strip, metal iewelry, etc.).



Compulsory

May cause electric shock, short circuit, fire, etc.

Do not touch Charger plug with wet hands.

May cause electric shock, malfunction,



Wet Hands

Do not touch Charger if thunder is heard. May cause electric shock, etc.





Grasp plug and disconnect Charger before cleaning. May cause electric shock, etc.



Disconnect Power Source

Always grasp plug (not cord) to disconnect Charger.

Pulling the plug by cord may damage cord, causing electric shock, fire, etc.



Do not subject AC Charger to strong shocks or impacts while it is plugged into the outlet. May cause malfunction or injury.



Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment"

(Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



Persons with implanted pacemaker/ defibrillator should keep handset more than 22 cm away.



Radio waves may interfere with implanted pacemakers or defibrillators. If you intend to use electronic medical equipment other than implanted pacemaker/defibrillator outside medical facilities, consult the vendor on radio wave effects. Radio waves may interfere with electronic medical equipment.



Compulsory

Observe these rules inside medical facilities to avoid effects of radio waves on electronic medical equipment:



- Do not enter an operating room or an Intensive or Coronary Care Unit while carrying a handset.
- Keep handset off in hospitals.
- Even in lobbies or other places where handset use is permitted, keep handset off near electronic medical equipment.
- Obey medical facility rules on mobile phone use.

Power off in crowds or trains where persons with implanted pacemaker/ defibrillator may be near.



Compulsory

Radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.

General Notes

General Use

- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of handset/Memory Card files or settings. Keep separate copies of Phone Book entries, etc.
- Handset transmissions/TV signal reception may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- For proper use of Memory Card (sold separately), read the manual beforehand.
- Beware of eavesdropping.

Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

 Beware of harmful/malicious websites. Take added care when posting personal information, etc. • An export license may be required to carry the handset into other countries if it is to be used by or transferred to another person. However, no such license is required when you take the handset abroad for personal use on a vacation or business trip and then bring it back. Export control regulations in the United States provide that an export license granted by the US government is required to carry the handset into Cuba, Iran, North Korea, Sudan or Syria.

Handset & Hardware Care

- Handset is not waterproofed. Avoid exposure to liquids and high humidity.
 - Keep handset away from precipitation.
 - Cold air from air conditioning, etc. may condense causing corrosion.
 - Avoid dropping handset in damp places (restroom, bath/shower room, etc.).
- On the beach, keep handset away from water and direct sunlight.
- Perspiration may seep inside handset causing malfunction.
- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank Mobile is not liable for any resulting damages.
- Use handset within 5°C 35°C (35% 85% humidity).
- Avoid extreme temperatures or direct sunlight.
- Handset/battery may warm during operation or while charging. This is normal.

- Malfunction resulting from misuse is not covered by the warranty.
- Exposing lens to direct sunlight may damage color filter and affect image color.
- Battery may not charge properly if port/ terminals are obstructed by dust, etc. Clean with dry cloth, cotton swab, etc.
- Clean handset with soft dry cloth. Using alcohol, thinner, etc. may damage it.
- Avoid scratching Display.
- Avoid heavy objects or excessive pressure. May cause malfunction or injury.
 - Do not sit on handset in back pants pocket.
 - Do not place heavy objects on handset inside handbags, packs, etc.
- Connect only specified products to External Device Port. Other devices may malfunction or cause damage.
- Always power off before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.
- Do not power off while using Memory Card; may result in data loss or malfunction.
- When walking outside, moderate handset volume to avoid accidents.
- · Avoid covering Speaker while using handset.

Bluetooth® Function

SoftBank Mobile is not liable for any damages resulting from data/information leakage due to use of handset Bluetooth® function.

Handset Bluetooth® function is certified as compliant with Japanese wireless standards; do not use it abroad. Using handset Bluetooth® function abroad may be subject to a penalty.

■ Precautions

The frequency band utilized by handset Bluetooth® function is shared with industrial, scientific or medical equipment, including household microwave ovens, etc., and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

- 1 Before using Bluetooth®, visually confirm that no other radio stations sharing the same frequency band are in use nearby.
- 2 Should interference occur between handset and other radio stations, move or cancel Bluetooth[®] function immediately.
- 3 For additional information and support, contact SoftBank Mobile Customer Center, General Information: From a SoftBank handset, call toll free at 157. To call toll free from a landline/IP phone, see P.15-39 "Customer Service."

Frequency Band

This radio station utilizes 2.4 GHz band with FHSS modulation. Maximum transmission radius is 10 meters (32 feet). It is not possible for the radio station to avoid using the frequency band of the mobile unit identification apparatus.



Function Usage Limits

These functions are disabled after handset upgrade/replacement or service cancellation: Camera; Media Player; S! Applications; TV. After a period of disuse, these functions may be unusable; retrieve Network Information (P.14-7) to restore usability.

Mobile Camera

- Mind your manners when using handset camera.
- Test the camera before capturing/recording special moments.
- Do not use handset camera in places where photography or videography is prohibited.
- Captured images may not be used/transferred without copyright holder (photographer, etc.) permission, except for personal use.

In-Call/Transmission Caution

During calls/transmissions, calling/transmission charges/fees apply even if other functions or operations are simultaneously in use.

Electromagnetic Waves

For body-worn operation, this phone has been tested and meets RF exposure guidelines when used with accessories containing no metal, that position handset a minimum of 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

CE Declaration of Conformity



Hereby, Sharp Telecommunications of Europe Ltd, declares that 001SH is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the original declaration of conformity for each model can be found at the following Internet address: http://www.sharp.co.jp/k-tai/



Battery - CAUTION

Use specified battery or Charger only.

Non-specified equipment use may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.

Do not dispose of an exhausted battery with ordinary refuse; always tape over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.

Charge battery in ambient temperatures between 5°C and 35°C; outside this range, battery may leak/overheat and performance may deteriorate.



European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg.

As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

Highest SAR value:

Model	At the Ear"	On the Body
001SH	0.711 W/kg	0.508 W/kg

As SAR is measured utilizing the device's highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the Network. The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a handsfree device to keep the mobile phone away from the head and body.

Headphone Signal Level

The maximum output voltage for the music player function, measured in accordance with EN 50332-2, is 27.0 mV.

Please see Electromagnetic Waves on the left for important notes regarding body-worn operation.
Measured in accordance with international auidelines for testing.

Rights, Trademarks & Patents

Portrait Rights

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity, which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/distributing their photographs without permission is illegal; use handset camera responsively.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without copyright holder permission may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

The software contained in handset is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software; do not separate it from hardware in whole or part.

Video recording and playback are based on MPEG-4. This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA.

See http://www.mpegla.com.

This product is licensed under the MPEG-4
Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional license and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use. Such additional license may be obtained from MPEG LA. LLC.

See http://www.mpegla.com for additional details. This product is licensed under the AVC Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA, LLC. See http://www.mpegla.com.



Handset employs RSA® BSAFE™ software developed by RSA Security Inc.

RSA is a registered trademark of RSA Security Inc.

BSAFE is a registered trademark of RSA Security Inc. in the United States and/or other countries.

This product is equipped with JBlend[™] designed to accelerate the performance of Java[™] Application. Powered by JBlend[™]. Copyright 1997-2010 Aplix Corporation. All rights reserved.



JBlend and JBlend-related brands are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

Java and Java-related brands are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.



The microSD and microSDHC logos are trademarks of SD-3C, LLC.

The Twitter name and logo are registered trademarks of Twitter. Inc.

NetFront®

This product employs NetFront Browser (Internet browser) and NetFront SMIL Player developed by ACCESS Co., Ltd.

Copyright© 2010 ACCESS Co., Ltd. ACCESS and NetFront are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan or other countries.

This product includes a module developed by Independent JPEG Group.

Bluetooth is a registered trademark of the Bluetooth SIG. Inc.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by SHARP is under license.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.



This product contains Adobe® Flash® Lite™ player software under license from Adobe Systems Incorporated.

Adobe Flash Lite Copyright © 2003-2007 Adobe Systems Incorporated. All rights reserved. Adobe, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and other countries.

Wakeup TV, VeilView, Smartlink, Animation View, Simulated Call, Rakutomo Link, Arc Ridge Key and Clear Tone are trademarks or registered trademarks of SHARP Corporation.

Chaku-Uta and Chaku-Uta Full are registered trademarks of Sony Music Entertainment (Japan) Inc. BookSurfing® is a registered trademark of CELSYS Inc., Voyager Japan, Inc. and INFOCITY Inc.

Genius English-Japanese Dictionary ©2005-2008 Taishukan

Genius Japanese-English Dictionary ©2005-2008 Taishukan

Meikyo Japanese Dictionary ©2005-2008 Taishukan

- Genius English-Japanese Dictionary MX.net
 ©KONISHI Tomoshichi, MINAMIDE Kosei & Taishukan, 2009
- Genius Japanese-English Dictionary MX.net
 ©KONISHI Tomoshichi, MINAMIDE Kosei & Taishukan, 2009
- Meikyo Japanese Dictionary MX.net
 ©KITAHARA Yasuo & Taishukan, 2009
- Imidas Encyclopedia ©SHUEISHA Inc.
- Complete Japanese Encyclopedia (Encyclopedia Nipponica 2001) including "Nipponica Plus," Digital Dai-ji-sen Japanese Dictionary, Shogakukan Progressive English-Japanese Dictionary, Shogakukan Progressive Japanese-English Dictionary @Shogakukan Inc.
- Amazon.co.jp is a trademark of Amazon.com, Inc. or its affiliates.
- HOT PEPPER Gourmet ©RECRUIT
- Family Medical Encyclopedia ©Houken 2004
- Guide to Prescription Drugs ©Shigeru Kimura/ lyakuseidokenkyukai 2009
- Yahoo! Answers ©Yahoo Japan

- Household Accounts[™] is a trademark of Information System Products Co., Ltd.
- Kanji Grabber[®] is a registered trademark of Information System Products Co., Ltd.

Chara Time and MOBILE KAKARICHO® are registered trademarks of Primeworks.

Machi-Uta® is a registered trademark of KDDI CORPORATION.

iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language, and for phrase prediction methods for English. iWnn© OMRON SOFTWARE Co., Ltd. 2008-2010 All rights reserved.

SOFTBANK, SoftBank and the SoftBank logo are trademarks or registered trademarks of SOFTBANK CORP, in Japan and other countries.

Yahoo! and the Yahoo! and Y! logos are trademarks or registered trademarks of Yahoo! Inc.

CP8 PATENT

S! Application, Mobile Widget, S! Quick News, S! Information Channel, S! Friend's Status, S! Circle Talk, S! Addressbook Back-up, Weather Indicator, Double Number, Customized Screen, Video Call, Input Memory, PC Mail, PC Site Browser, Multi Job, Graphic Mail, S! Mail, Feeling Mail, Sha-mail, Movie Sha-mail, Secure Remote Lock and Auto Art are trademarks or registered trademarks of SOFTBANK MOBILE Corp.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

Specific Absorption Rate (SAR)

001SH meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the body, shall not exceed 2 W/kg². This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

The highest SAR value of 001SH is 0.551 W/kg. SAR tests were conducted with handset transmitting at its highest certified power level in accordance with testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network. Additional information on SAR can be obtained on the following Websites.

Ministry of Internal Affairs and Communications http://www.tele.soumu.go.jp/e/sys/ele/index.htm Association of Radio Industries and Businesses (ARIB) http://www.arib-emf.org/ (Japanese)

^{*}Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).


Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Power On/Off	1-6
Handset Power On/Off	1-6
Display & Indicators	1-7
Display	1-7
Indicators	1-9
Accessing Functions	1-12
Main Menu	1-13
Function Shortcuts	1-14
Toggling Active Functions (Multi	Job)
	1-15
Standby Shortcuts	1-16
Using Simplified Menus (Simple	Menu)
	1-17

Mobile Manners	1-18
Security Codes	1-19
Double Number	1-21
Using Double Number	1-21
Modes	1-22
Basic Tools	1-24
My Details & Basic Tools	1-24
Additional Functions	1-25



Getting Started

Parts & Functions

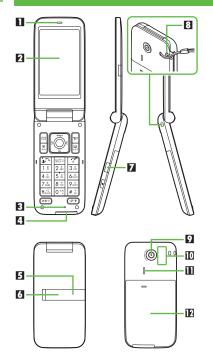

- Earpiece
- 2 Display
- Microphone
- ☑ External Device Port (with Port Cover)
- Small Light
- 6 Sub Display
- Infrared Port
- Strap Eyelet
- Camera (lens cover)
- Internal Antenna Location
- Speaker
- **I** Battery Cover
- Do not cover or place stickers, etc. over Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Handset Positions

Handset Closed



Keep handset closed when not in use.


Handset Open



Open handset to place or answer calls, enter text, etc.

Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with *via Set Key Shortcut (P.1-14) as needed.

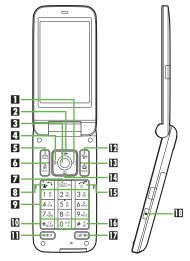

- Multi Selector (right) Open Call Log (Received). Long Press to activate/cancel Infrared.
- Multi Selector (up) Open Mobile Widget window. Long Press to open PC Site Browser menu.

Center Key

Open Main Menu. Long Press to activate/cancel Keypad Lock.

✓ Multi Selector (left) ✓ Open Call Log (Dialed). Long Press to activate/cancel Bluetooth®

Open Messaging menu. Long Press to open S! Mail Composition window.

- Shortcuts & A/a Key
 Open Shortcuts menu. Long Press to show active indicators (Status Icon List).
- Clear/Back Key
 Play Answer Phone messages. Long
 Press to activate/cancel Answer Phone.
- Start & Rakutomo Link Key 🔊
 Open Rakutomo Link window. Long Press to open Double Number Mode menu.
- Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- Enter ボ, +, P, ? and -. Long Press to open S! Friend's Status member list.
- Dictionary Key (BRD)
 Open Dictionary. Long Press to activate/
 cancel VeilView.
- ☑ Yahoo! Keitai Key
 ☑
 Open Yahoo! Keitai portal. Long Press to open Yahoo! Keitai menu
 .
- ETV & Text Key Activate TV. Long Press to open Change Menu window.

Multi Selector (down) ♀
Open Phone Book. Long Press to open Exchange Profile menu.

- E Power On/Off & End Key ☐
 Toggle Standby display. Long Press to power off.
- # Key # Enter #. Long Press to activate/cancel Manner mode.
- ☑ Multi Job & Manner Key ⑤
 ⑤
 ⑤ Select handset mode. Long Press to activate/cancel Manner mode.

Side Key Shutter Key

Open: Long Press to activate mobile camera. **Closed:** Toggle Clock view.

Multi Selector

 In this guide, Multi Selector operations are indicated as follows:


Press or Q	়
Press № or •	•••
Press ૾, ♀, ⊷ or ⊶	∳

Charging Battery

Battery must be inserted in handset to charge it.

AC Charger

- Use specified AC Charger ZTDAA1 (sold separately) only. In this guide, ZTDAA1 is referred to as "AC Charger."
- Handset and AC Charger may warm while charging.

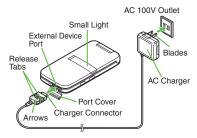

Important AC Charger Usage Note

• Fold back blades after charging. Do not pull, bend or twist the cord.

Open Port Cover as shown



- Insert Charger Connector
 - With arrows up, insert connector until it clicks.
- Extend blades and plug AC Charger into AC outlet



- Small Light illuminates red while charging.
- Small Light goes out when battery is full.
- Unplug AC Charger
 - Pull AC Charger straight out.

- Disconnect handset
 - Squeeze Charger Connector release tabs and pull straight out to remove.
- Fold back blades and replace Port Cover

When Small Light Flashes

• Battery is unchargeable; may be defective or simply at the end of its life; replace it.

USB Charge


Connect handset (with power on) to PC via USB Cable to charge battery.

- Download and install USB Cable driver beforehand.
- Handset must be on to charge battery.
- Battery may not charge if handset is connected through a USB hub.

In-Car Charger

In-Car Charger may be purchased separately.

Cigarette Lighter Socket

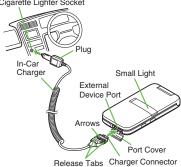

- **Open Port Cover**
 - **Insert Charger Connector**
 - With arrows up, insert connector until it clicks.

Plug Charger into cigarette lighter socket

- Start car engine
 - Small Light illuminates red while charging.
 - Small Light goes out when battery is full.
- **Unplug Charger**
- Disconnect handset • Squeeze Charger Connector release tabs and pull straight out to remove.
- **Replace Port Cover**

Important In-Car Charger Usage Notes

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Avoid charging battery inside extremely hot vehicles.



Handset Power On/Off

Power On

Follow these steps when powering on 001SH for the first time:



 After Power On Graphic, follow the steps below.




2

Select option **⇒** ■

Guide descriptions are based on Standard Menu.



My Details setup starts.

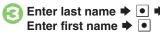

 Change Menu display option confirmation appears.





Standby

- Choose No to enter Standby immediately after powering on.
- Hereafter, most screenshots omit Mobile Widgets and Standby Shortcuts.

When USIM Card is Not Installed

 Insert USIM Card appears; insert the card to use handset.

Retrieving Network Information

Handset initiates Network Information retrieval when lacksquare, lacksquare, lacksquare, lacksquare or lacksquare is pressed for the first time.



Follow these steps to retrieve Network Information to use Network-related services and TV; retrieval automatically sets Clock:






Power Off



 After Power Off Graphic, handset shuts down.

Display

Standby

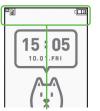

Indicators (signal strength, battery strength, etc.) appear.

Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)



(Long)



- · Active indicators are enlarged; description for selected indicator appears.
- Use 🕏 to select indicators to view their descriptions.
- Press
 to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

Information

Information window opens at the bottom for Missed Calls, new mail, etc.



Information Window

Information label (e.g., *Message*, etc.) and count appear in Information window. Select an item and press • to open it.

Advanced

Softkeys

Functions/operations assigned to and appear at the bottom of Display.



Display Saving

Display goes dark after Display Saving time elapses. Press any key (except curing a call) to activate it.

Backlight

- Backlight turns off after Time Out time elapses. Press 0 2 9 de to illuminate it (key press may affect active function).
- Display goes dark during a call. (Backlight does not turn off first.)

Indicators

Display Indicators


In Dual Mode, line type appears bottom right of some indicators.

■ Basic Status


П	3G	Within 3G range
•		International roaming in progress
2	Thi	Signal strength ¹
3		Battery strength ²

¹The more bars the better.

■ Function Status

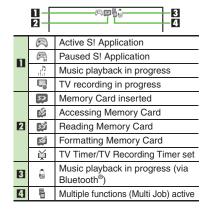

■ Notifications

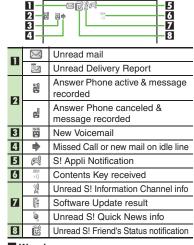


Warnings

	2	—————————————————————————————————————	-3
П	\boxtimes	Mail memory low	
2	2 Message delivery failure		
3	×	Memory Card unusable/mis	inserte

²Battery strength % (appears when Display activates, etc.) is an approximation.


■ Transmissions

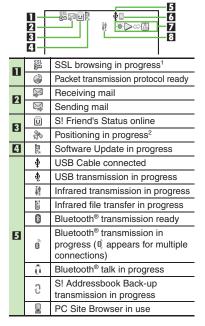

6	2	RSS-compatible site
7	*	Weather Indicator
8	Infrared transmission ready	

¹Hidden while Mobile Widget is in use. ²Flashes while positioning.

Settings

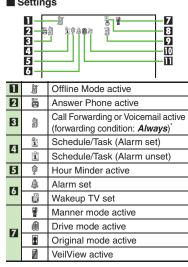

ě	Keypad Lock active	
	Auto Answer or Remote Monitor active	
Ringtone (Silent)		
11111	Ringtone (Increasing Volume)	
5	Vibration for incoming Voice/ Video Calls active	
Show Secret Data active		
6	Function Lock (Once) active	
	\$	

*Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

Sub Display Indicators

■ Basic Status



■ Signal strength* 2 Battery strength

*The more bars the better.

■ Notifications

- Notinoutions	
≈	Missed Calls
	Answer Phone message recorded
110	Missed Call Notification
3	New Voicemail
∇	Unread mail
≡	Unread Delivery Report
ŧŶ.	Contents Key received
(m) A	Unread S! Information Channel info
•	Weather Indicator update
$\mathbb{R}!$	S! Appli Notification
	Unread S! Friend's Status notification
₩*	Location Info request
1	Auto Backup complete
§5į	Auto Backup canceled

■ Warnings

<u>[3</u>	Message delivery failure	
≵ ×	S! Information Channel info reception failure	
**	IP Service connection failure	
⊕ X	Weather Indicator update failure	
5€	Auto Backup failure	

■ Handset Status	
<u> </u>	Alarm
1	Schedule Alarm
Ž	Task Alarm
¥	TV Alarm (watch)
50	TV Alarm (record)


Activating Backlight

Sub Display Clock

• Press to toggle view.

Accessing Functions

Use the following methods as needed.

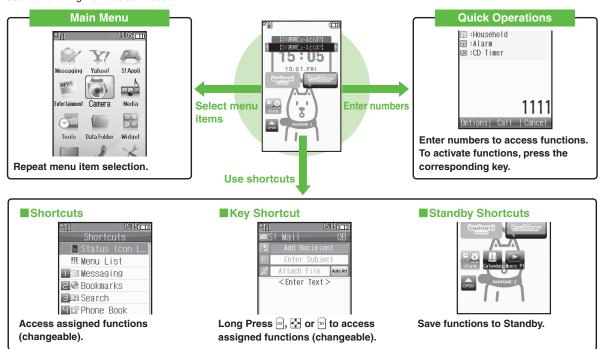

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.

Main Menu

Menu Item Selection





Main Menu opens.



Select menu item ▶ •





- Menu/window opens.
- If Sub Menu opens, use 🗘 to select an item and press .

Tabs

• Menus/lists in a single window appear on separate tabs; use ot to toggle tabs.



Tab

Reverse Navigation

• Press . If a confirmation appears, follow onscreen prompts.

Returning to Standby

• Press 3. If a confirmation appears, follow onscreen prompts.

Simple Menu

· Simplify menus and enlarge fonts; ideal for users who use only basic handset functions.

Main Menu Items

Messaging	Open/create messages, etc.
Yahoo!	Browse the Internet
S! Appli	Use S! Applications including games
Entertainment	Read e-Books, receive news updates, etc.
Camera	Capture images or record video
Media	Play/download media files
Tools	Manage schedules, set Alarm, scan QR Codes, etc.
Data Folder	Open files saved on handset/Memory Card
Widget	Use Mobile Widgets
TV	Watch/record TV programs
Phone	Search contacts, add entries, etc.
Settings	Customize handset interface, sounds, etc.

Function Shortcuts

Shortcuts Menu

Access assigned functions via Shortcuts menu.





Shortcuts Menu

Select function **→** •

Menu/window opens.

Changing Default Shortcuts

In 2. select numbered function > = **▶** •

■ To assign menu items, select one and press .

Assigning Files & Folders

In 2. select numbered function > =

■ For folders, select Set this folder and press .

Key Shortcut

In Standby, Long Press □, ❖ or □ to access assigned functions.


Open S! Mail Composition window Open PC Site Browser menu Open Exchange Profile menu •0 Activate/cancel Bluetooth® Activate/cancel Infrared Open Yahoo! Keitai menu

Changing Assigned Functions

Follow these steps to assign Calculator to (Long Press):

- Settings ⇒ □ ⇒ ⊡ Phone/
- Set Key Shortcut ▶ •
- Long press

 •
- From Appli 🖈 💽

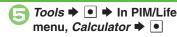

Bookmark

In ②. From Bookmark → • • Select title **→** • **Yes →**

Infrared, Show Secret Data, Etc. On/Off In ②. From Other

Select item **→** •

Canceling Assigned Function In ②. Off ⇒ •

Advanced

Changing item order Restoring default shortcuts (P.1-25)

Toggling Active Functions (Multi Job)

Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet



Jot down information

Multi Job may not activate from some menus/windows

Using Multi Job

In a function window, In text entry/dial windows, Long Press I.



- Select function

 ◆ Menu/window opens.
- To toggle active windows,
- - If a confirmation appears, follow onscreen prompts.

Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

Saving Shortcuts to Standby











- Select item ⇒
 - Corresponding icon appears.
 - >> appears when more items are available.

Saving from Menu/Window

 In Options menu, select Set as StbyShortcut (may not appear for some items) and press
 ; select sheet as needed.

Using Pointer

 After ①, Long Press ☑ to activate pointer navigation; select widgets, etc. (To cancel pointer navigation, Long Press ☑.)

Using Shortcuts



Toggling Sheets

Toggle sheets to use Standby Shortcuts and widgets pasted on each sheet.



- To toggle further, press v or v.
- Sheet name appears at the top, then disappears.
- Save Standby Shortcuts as needed; corresponding icons appear on the current sheet.

Using Locked Sheets

Removing Shortcuts from Standby



- Operation →
 - Remove 🕈 💽
 - Yes ⇒ •

Advanced

Sorting icons Moving icons Moving icons to front/back Removing multiple icons at once Slowing pointer speed Editing sheet names Locking sheets (P.1-25)

Using Simplified Menus (Simple Menu)

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.



- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).

■ Menu Items

Messaging	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
Phone	Phone Book, Add New Entry, Call Log, Play Messages, Answer Phone, Play Voicemail, My Details, Rakutomo Link, Speed Dial/Mail
Camera	Photo Camera, Video Camera, Barcode Reader, Scan Card, Kanji Grabber, Review
Convenient Tool	Alarms, Calendar, Exchange Profile, Calculator, Assignment, Dictionary, Notepad, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
Data Folder	-
TV	-

While Simple Menu is active, some operations in Standby are disabled.

Activating Simple Menu



(Long)






Simple Menu **⇒** •



While Using an Incompatible Function

• End the function before activating Simple Menu.

Canceling Simple Menu

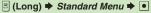

Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Power it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.





Manner mode is set.

When Manner Mode is Active

- Ringtones and other sounds are muted.
 001SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.

(Long)

Offline Mode

Temporarily suspends all transmissions.







Canceling Offline Mode In ⑤, Off ▶ ●

Advanced

Security Codes

These codes are required for handset use. (Set Handset Code and Administrator Code beforehand.)

- Guide descriptions are based on the assumption that Handset Code and Administrator Code are set.
- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

Handset Code	Use or change some functions
Administrator Code*	Required for Reset Settings and Reset All
Center Access Code (Network Password)	Four-digit code selected at contract; access Optional Services via landlines, change service options, or set call restrictions

^{*}Set/change on handset.

If Security Code is Unset

 Code setup message/window appears whenever Security Code is required.

Incorrect Code Entry

- Message appears for incorrect code entries; retry.
- Incoming/outgoing call restriction settings will be locked if incorrect code is entered three times consecutively during the setting. To resolve, Center Access Code (Network Password) must be changed.
- If you have previously changed Network Password on a SoftBank handset, enter the latest code.

Saving Handset Code

Enter four to eight digits.







Locks Menu

- 🔞 Handset Code Settings 🕈 💽
- Save Handset Code ⇒ ■
- ∃ Enter Handset Code ⇒
- Re-enter Handset Code

Changing Handset Code

After ②, enter current Handset Code ▶

- Enter new Handset Code
 ●
- → Re-enter new Handset Code → •

Getting Started

Saving Administrator Code

Enter four to eight digits.

- In Locks menu, Administrator Setting **▶** •
- Register Administrator Code **→** •
- **Enter Administrator Code**
- **Re-enter Administrator** Code **→** •

Changing Administrator Code

After @, enter current Administrator Code

- → Enter new Administrator Code
- ⇒ Re-enter new Administrator Code

Need/UnNeed Setting

For enhanced security, set Need/UnNeed Setting to Need; Handset Code is now required to delete all files/entries, etc.

- In Locks menu, Handset Code Settings **▶** •
- Need/UnNeed Setting **▶** •
- Handset Code **▶** •

Using Double Number

Callers to the other line hear a busy tone;

messages are received without alerts.


Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

Customize Wallpaper, incoming call

graphic, ringtone, vibration, etc. by account.

- Double Number requires a separate contract and basic monthly fee.
- Outside Japan, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.15-39).

Two Phone Numbers & Two Mail Addresses

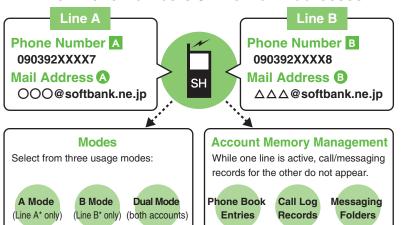

Activating Double Number

Make sure signal is stable.



- 🕟 Double Number 🕈 💽
- Switch On/Off → •
- On ⇒ •
- 🕞 Yes Þ 💽

Canceling Double Number

In **(4)**, Off **♦ (5)**

- When Double Number is canceled:
- Line B calls and SMS messages are redirected to Line A Phone Number.
- Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
- Double Number account is not affected.

Modes

Activate A Mode to use Line A only, B Mode to use Line B only, or Dual Mode to use both accounts.

A Mode

Receive Calls to Line A Only

• Place calls or send messages via Line A.

A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

B Mode

Receive Calls to Line B Only

• Place calls or send messages via Line B.

B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status and S! Circle Talk are unavailable.

Dual Mode

Receive Calls to Both Accounts

• Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

Phone Book Entries

Specify A, B or Dual.

Messaging

Select Line A or Line B. Sender Address changes accordingly.


Calling

Select Line A or Line B. Caller ID changes accordingly.

• Line indicators appear in Phone Book entries, message lists, Call Log records, etc.

Switching Modes



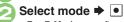

• For *B Mode*, a confirmation appears.



In Dual Mode

During an operation, if prompt window below appears, select a line and press .



If customizable by line, line indicator appears bottom right; press v to switch.



If line selection is otherwise required, follow onscreen prompts.

My Details & Basic Tools

My Number



 Handset phone number and the name entered at initial setup appear.

Editing My Details

After ①, ⊙ (select tab) ⇒ Select item ⇒ □ ⇒ Select item ⇒ □ ⇒ Edit ⇒ □

VeilView

Activate VeilView to prevent peeking.



Canceling VeilView

(Long)

Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
- 3 does not power handset off.


Incoming Calls while Keypad Lock is Active


 Keypad Lock is temporarily canceled; press to answer calls. Keypad Lock reactivates after the call.

Canceling Keypad Lock

• (Long)

Battery Meter

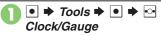

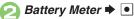


• Approximate battery strength appears.

Battery Strength %

• 100% may not appear even when battery is full. This is by design; not a malfunction.

Phone Help

Access this handy guide to handset settings and key functions/shortcuts.

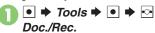



Select item

For *Indicators*, select a category and press

.

Advanced

Selecting My Details items to send Clearing My Details Toggling My Details in Dual Mode Changing battery strength indicator pattern
Changing VeilView pattern/density (P.1-27)

USB Charge		
Disabling USB Charge	● → Tools → ● → ○ Connectivity → USB Charge → ● → Disable → ●	
Information		
	Start Here ● → Phone → ● → See below	
Handling Information list	Opening List Manually Information	
	Clearing List Information	
Shortcuts		
Changing item order	S ⇒ Select numbered function ⇒ □ → Move	
Restoring default shortcuts	Select numbered function ⇒ Set to Default → • Yes → •	
Standby Shortcut		
■ Operations in Standby		
Sorting icons	 ♦ Sort Icon ♦ ● Select option ♦ ● Widgets may also be sorted depending on the size. 	
Moving icons	○ → Select icon → ○ → Operation → ● → Change Layout → ● → Specify target location → ●	

Moving icons to front/back	 ♦ Select icon ♦ □ ♦ Operation ♦ ● To Front or To Back ♦ ●
	Start Here (3) ⇒ □ ⇒ Operation from List ⇒ • ⇒ Remove ⇒ • ⇒ See below
Removing multiple icons at once	All Icons Remove All
	Selected Icons Select & Remove → ● → → Shortcut → Select icon → ● (→) → Complete selection → → Yes → ●
Slowing pointer speed	
Sheets	
	Start Here
Editing sheet names	Renaming Select sheet ■ ■ Enter name ■ ■
	Resetting All Sheet Names yes Yes
	Start Here Settings Setings Settings Setings Setings Setings Settings Setings Setings
Locking sheets	Activating Lock Select sheet
	Changing Method for Temporary Access Unlock Method No Password Press to unlock sheet temporarily.

1 Mode Settings

	Start Here ● → Settings → ● → In Sound/Display menu, Mode Settings → ● → See below
Changing handset	Selecting a Handset Mode Select mode
modes	Customizing Handset Modes Select mode ⇒ ⊕ ⇒ Select item ⇒ ◆ Adjust settings • Not available for Normal mode. • Customizable items depend on mode.
Creating a custom mode	● ► Settings → ● In Sound/Display menu, Mode Settings → ● Original → □ → Select item → ● Adjust settings
Resetting Mode Settings	● Settings → In Sound/Display menu, Mode Settings → Select mode → Yes → ■
Suppressing Manner mode audio output confirmation	● Settings ● In Sound/Display menu, Mode Settings ● Manner ● Audio Confirmation ● Do not Show ●

Double Number

All Modes

		⇒ Settings ⇒
	Renaming Double	Double Number ⇒ ● → Mode Name ⇒ ● ⇒
Number modes		Select mode ⇒ ● ⇒ Enter name ⇒ ● ⇒
		Select icon ⇒ •

A Mode & B Mode

Showing indicator for calls missed or new mail on idle line	● Settings ● ● ☆ Phone/ Double Number ● ● Show Missed ● ● On ● ●
Hiding Internet connection confirmation	● Settings ● ● ☆ Phone/ Double Number ● ● Packet Warning ● ● Off ● ● Available for B Mode.


■ Dual Mode

Rejecting calls to	⇒ Settings →	
either line in Dual	Double Number ⇒ • Reject By Line ⇒ •	
Mode	⇒ Select line ⇒ • → On ⇒ •	
Setting main line for Dual Mode	● Settings → ● → Phone/ Double Number → ● → Send Priority → ● → Select option → ●	

Battery Meter

Changing battery strength indicator pattern

■ **Settings ** • ** In Sound/Display menu, Display ** • ** Mini Battery ** • ** Select pattern ** • ** Battery strength (appears as a percentage) is for reference only.

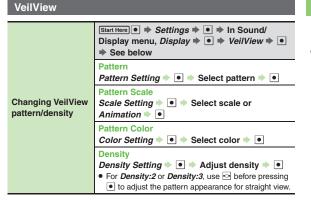

Font Size	2-2
Changing Font Size	2-2
Wallpaper	2-3
Customized Screen	2-4
Customized Screen (Japanese)	2-4
Sounds & Alerts	2-5
Customizing Handset Responses	2-5
Text Entry	2-6
Entering Characters	2-7
Editing Characters	
User Dictionary	. 2-12
Saving Frequently Used Words	
(Japanese)	. 2-12

Dictionary	. 2-13
Using Dictionaries (Japanese)	2-13
Search	2-15
Searching Text	2-15
Scratch Pad	2-16
Phone Book	2-17
HOHE BOOK	. 2-17
Creating Phone Book Entries	
	2-17
Creating Phone Book Entries	2-17 2-19

2

Universal Operations, Etc.



Changing Font Size

Enlarging All Fonts

Follow these steps to enlarge fonts for menus, text entry, etc.:





🔎 Large Font Menu 🕈 💿



Resizing Specific Fonts





- In Sound/Display menu,

 Display

 ●
- Font Settings ▶ •



Font Settings Menu

- Font Size → Select item → •
- Select size ▶ •

Changing Font Weight

In Font Settings menu, Font
Weight ▶ ●



Select weight ⇒ ■



Wallpaper.

- **Settings ●** In Sound/Display menu, Display ⇒ •
- Wallpaper

 ▶

 •



Wallpaper Menu

- Select file **▶**
 - Some files may not be usable.
 - Omit the next step when Preset Pictures is selected in @
 - rotate



Selecting Images Smaller or Larger than Display

After ②, select option ▶ • •

■ For *Centered*, use 🗘 to zoom in/out or press do rotate.

Downloading Images via Yahoo! Keitai In ³, Download Pictures ▶ •

■ Read terms of service and then follow onscreen instructions.

Selecting Images with Limited Usage Period

- A confirmation appears. Follow these steps: Yes **▶** • **▶** •
- If Double Number Mode Menu Opens Select mode

 ●

Selecting Chara Time Files

In ⓒ, Chara Time → • Select file $\Rightarrow \bullet \Rightarrow \bullet \Rightarrow \bullet$

Slide Show Wallpaper

Set Slide Show to appear in Standby. Some folders/files may not be supported.

- In Wallpaper menu, Slide W paper **→** •
 - Folder Setting ▶ •
- Set this folder ⇒ •
 - Omit steps for sub folder if none is applicable.

If There is No Image in Set Folder

Preset images appear.

Using Preset Images

In €. Preset Pictures • •

Changing Pattern

In ②, Pattern Setting

■ Select pattern **▶** •

■ To check patterns, select one and press .



Customized Screen (Japanese)

Preset Customized Screens





🛐 Select pattern 🕈 💽



When Selected Customized Screen is Active

● Cancellation confirmation appears after ②.

To cancel, choose *Yes* and press •.

Downloading Customized Screens

Read information (price, etc.) on Customized Screen download page.





Customized Screen Menu



Follow onscreen instructions.

Customized Screen Setup

In Customized Screen menu, select Customized Screen ▶ ●



Applying Fee-Based Customized Screen

• If Contents Key is required, follow these steps:

After ①, ● → Yes → ●

 Read terms of service and then follow onscreen instructions.



Customizing Handset Responses

Ringtone





Sounds & Alerts Menu

- Ringtone/videos

 ▶ •
- For For New Message, etc., select Assign Tone and press .



- Select folder **→** •

Setting Ring Time for Incoming Mail, etc. After ⓒ, Duration ▶ • Enter time **▶** •

Playing Video for Incoming Transmissions In ②, Videos → • Select file → •

If Portion of File Content is Specifiable

 After (a), start point selection window opens. Follow these steps: Select start point **▶** •

Selecting Files with Limited Usage Period

• A confirmation appears. Choose Yes and press • to proceed.

Machi-Uta® Service Registration (Japanese)

Use Machi-Uta® to play music instead of the standard ringback tone for the other party. Machi-Uta® requires a separate contract and basic monthly fee.

- In Sounds & Alerts menu.
- Register/Cancel

 ▶ Follow onscreen instructions

Vibration

- In Sounds & Alerts menu, Vibration **→** •
- Select item **→ →** *Switch*
- On **⇒** •
- Vibration Pattern **▶**
 - To check vibration patterns, select one and press \square .
- Select pattern **→** •

Important Vibration Usage Note

 Cancel Vibration when charging battery to help avoid accidents.

Text Entry

Unless noted otherwise, text entry descriptions are for text entry windows.



Text Entry Window (Message Text)

Opening Help

Note

• Pressing repeatedly may not close text entry windows.

Switching Entry Modes





Available entry modes appear.



Select mode **▶** •

• Entry Mode Indicators:

	a 5 € 5 € 5 € 5 € 5 € 5 € 5 € 5 € 5 € 5	Kanji (Hiragana)	
	アノア	Double/Single-byte Katakana	
	A/a	Double-byte Alphanumerics (upper/lower case)	
Single-byte A (upper/lower		Single-byte Alphanumerics (upper/lower case)	
	1	Single-byte Number	
	X	Character Code	

[🛪] appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle character options for that key.

Example: In Double-byte Katakana mode, press $\fill \fill \$



Example: In Single-byte Alphanumerics mode, enter *no*.



 Long Press a key to enter the current character and advance cursor.





Hiragana

Follow these steps to enter **ff** in Kanji (Hiragana) mode:





(Confirm)

Kanji

Convert すずき to 鈴木





- In Kanji (Hiragana) mode, word suggestions change as hiragana are typed. (Predictive)
- Long Press to toggle suggestion mode between Standard, Literary, Spoken and Automatic. (Personal Mode)












 Words likely to follow the entry appear based on previous entries. (Previous Usage)

When Target Word is Not Listed

- Press or to segment hiragana to convert separately.
- Press v to toggle Predictive and Non-Predictive suggestions.


Deleting Words/Phrases from Entry Log
Type hiragana → ♀ → Select word/
phrase → □ (Long) → Yes → ●

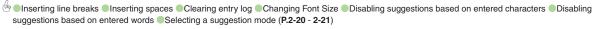



Entering from Dictionaries (Search Word)

Enter text by referring to word definitions, translations, etc.

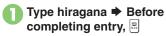



- Press to toggle dictionaries.
- Select word, etc.

 Definition/translation appears.
- **6**

C

One-Hiragana Conversion

Type the first hiragana to access previously selected words.

Example: **すずき** was previously converted to **鈴木**.

- 3 € 3 € 3 € (**♂**) → ♀
- Select word/phrase >

Correction Conversion

After mistyping hiragana assigned to the same key (e.g., 1 instead of 3), follow these steps to enter intended word/phrase from suggestion list without retyping: (Available when three or more hiragana are typed.)

- Type hiragana → Before selecting word/phrase, 💍
 - Corrected word suggestions appear.
- Select word/phrase

Katakana

Follow these steps to switch to Double-byte Katakana mode and enter **\(\mathcal{z}\)\(\mu\).

- □ □ → アイウ → •





Pictograms & Symbols

- May be unavailable depending on the entry mode
- Immediately after inserting a descriptive word such as 嬉しい or 悲しい. corresponding Pictograms may appear in suggestion list. (PictgramWordLink)



 Pictogram or Symbol List appears. (Log appears if Pictogram/Symbol has been used.)





• While entering message text, press in Pictogram List to toggle Cross-Carrier Pictograms and all Pictograms. Alternatively, press (a) to switch to My Pictogram or Symbol List.

Select Pictogram or Symbol

- **▶** •
- Pictograms are double-byte even in single-byte entry modes.
- **➡** List closes

Emoticons





Alternative Emoticon Entry Method

• In Kanji (Hiragana) mode, type かお or a descriptive word such as b-li or j-h. then convert the entry.

Mail & Web Extensions

Enter .co.ip, http://, etc., easily.





• Extensions are single-byte even in double-byte entry modes.





Hiragana to Katakana/ **Alphanumeric Conversion**

Enter katakana and alphanumerics in Kanji (Hiragana) mode. Example: To enter PM Use key inscriptions.





Select word/phrase (PM)



Using Wildcard Characters

To improve word suggestions in Kanji (Hiragana) mode, or Single-byte Alphanumerics mode, add *\frac{1}{2}s, or *s (wildcard) characters) respectively, to entries. Use ★ or * to specify the character count: For example, type **b**h X for a list of words/phrases of four or more characters starting with 50, type so** for a list of case insensitive words/phrases that start with so.

Example: Kanji (Hiragana) mode





• ** appears; to type another, press • again.



▶ Select word/phrase










Editing Characters

Deleting & Editing

Follow these steps to correct **また、お願** *いします* to *また明日お願いします*:

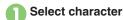







• The highlighted character is deleted.

Select target location Enter characters



Recovering Deleted Characters

 Press to recover characters deleted with .


Deleting All Text

 Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press

Jumping to the End or Top of Text


□ → Cursor Position → □ → Jump
to End or Jump to Top → □

Copy/Cut & Paste

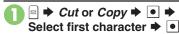



• To cancel and start over, press [27].

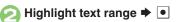

Select target location ▶

(Long)



• Text is entered.

■ Available when Paste List appears.

Saving Frequently Used Words (Japanese)

Saving Words

Saved words appear among suggestions.





User Dictionary Menu



🕟 Enter reading 🖈 💽

Editing Entries

In \emptyset , Saved Word List $\Rightarrow \bullet \Rightarrow$ Select word $\Rightarrow \bullet \Rightarrow$ Edit $\Rightarrow \bullet \Rightarrow$ Edit reading $\Rightarrow \bullet \Rightarrow Yes \Rightarrow \bullet$

Obtaining Download Dictionaries

Get specialized 001SH Download Dictionaries. Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions.

Some dictionary files may not be usable.

- In User Dictionary menu, Download Dictionary ⇒ ●
 - Handset connects to the Internet.
 Follow onscreen instructions.

Activating Download Dictionaries

- In User Dictionary menu,

 Acquire Dictionary

 ●
- Select number

 Select file
 - Existing dictionary is replaced.

Canceling Dictionary

In ②, select dictionary ⇒ □ → Cancel ⇒ □

Viewing Dictionary Information

In ②, select dictionary ⇒ □ → Info

→ □

Reply Assist Dictionary (メール返信アシスト辞書)

- When replying, this dictionary prioritizes original message words (katakana or alphanumerics) in suggestion list.
- Effective in Kanji (Hiragana) mode.



Using Dictionaries (Japanese)

Available Dictionaries:

Preloaded Dictionaries*	Meikyo Japanese Dictionary, Genius English-Japanese Dictionary, Genius Japanese-English Dictionary
Online Dictionaries	Yahoo! Answers, Meikyo Japanese Dictionary MX.net, Genius English-Japanese Dictionary MX.net, Genius Japanese-English Dictionary MX.net, Genius Japanese-English Dictionary MX.net, Imidas Encyclopedia, Complete Japanese Encyclopedia (Encyclopedia Nipponica 2001) including "Nipponica Plus," Digital Dai-ji-sen Japanese Dictionary, Shogakukan Progressive English-Japanese Dictionary, Shogakukan Progressive Japanese-English Dictionary, HOT PEPPER Gourmet, Amazon.co.jp, Family Medical Encyclopedia, Guide to Prescription Drugs

Download and add dictionaries as needed.

Online Dictionaries

- Online dictionary use requires Internet connection incurring packet transmission fees. Information fees may also apply.
 Read terms of service and then follow onscreen instructions.
- Update dictionary list for most recent versions.

Using Preloaded Dictionaries

Searching As-You-Type



🔁 Select dictionary 🕈 💽



Dictionary Window

- Last used dictionary appears first.
- Enter reading (spelling for English-Japanese dictionary)
 - Enter reading in katakana.
 - Search results appear as you type.
- Select word, etc. > •



Definition/Translation Window

- Perform from ② (except ③) in "Using Online Dictionaries" on P.2-14. (Read bulleted sentence in ⑤ beforehand.)
 Viewing Dictionary Information

- Searching by Keyword
- 📗 In Dictionary window, 🖻
- Search Method → ★
 Keyword Search → ●
- Search → Select word, etc. →
 - Definition/translation window opens.



- Copying Text
- Selected Portions
- In definition/translation window,
- **■** Index Word Only
 - In definition/translation window, □
- Copy Index Word ▶ •
- Adding Downloaded Dictionary
- Add Dictionary ▶ •
- 🕟 Select dictionary 🕈 💽

Using Online Dictionaries



- Terms of service (Japanese) appear when using online dictionary for the first time; read and then press
 Subsequently, image download options appear; select one and press
- Select pull-down menu 🖈 💿
- Select dictionary

 Select

 Select
- - Search

 To disable confirmation, press
 - \square (\square).
- 🍞 Yes 🖈 💽
- 🥏 Select word, etc. 🖈 💽
 - Definition/translation window opens.

Viewing Dictionary Information

After ⑤, select word, etc. ♦ ۚ ♠ Reference ♦ ♠ ♦ Yes ♦ ♠

Looking Up in Preloaded Dictionaries

oking Up in Preloaded Dictionaries

After ⑤, ⑥ → Find by Other Dict. →

⑥ → Select dictionary → ⑥ →

Search → ⑥ → Select word, etc.

Opening Terms of Service

After ①, □ → Terms of service → ○
■ Press ○ to return to Dictionary window.

Using History & Bookmarks

- Saving Bookmarks
- In definition/translation window, □
- 🔁 Bookmark 🕈 💽
- Opening History or Bookmarks
- 👔 In Dictionary window, 🖻
- History List or Bookmark
- 💽 Select word, etc. 🖈 💽
 - Definition/translation window opens.
 - Not available in History List of online dictionaries.

Advanced

▶ •



Searching Text

Web Search

Packet transmission fees apply.







Search Window

- Web Search is selected by default.
- Search →
 - Search results appear.

Switching Browsers

[Search Window]

→ Change Browser

→ PC Site Browser

●

Mail Search

- In Search window, *Mail*Search **→** •
- Select entry field

 Select entry field


 Enter search text
- 🛐 Search 🖈 💽
- Select option → ●

Searching within Received or Sent Messages
[Search Window] → Change Mail
Folder → → Received Messages
or Sent Messages → ●




Scratch Pad

Open Scratch Pad to jot down text, and more.

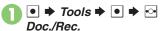

• Text entry window opens.

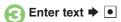




Save to Notepad **▶** • • Open saved entries from Notepad.

Other Scratch Pad Usage		
Usage	Operation in @	
Paste to Standby	Set as StbyShortcut ⇒ ■ Select sheet ⇒ ■	
Enter Mail Message Text	Create Message Select mail type	
Enter Schedule Subject/Details	Save to Calendar ▶ •	
Enter Task Subject/Details	Save to Tasks ▶ •	
Add Last Name/ Phone Number/ Mail Address to Phone Book	Save to Phone Book → Reading is not entered.	
Save Text File	Save as Text File ⇒ Enter name ⇒ ⇒ Save here ⇒ ■ Saved to Data Folder (Other Documents).	
Search Internet	Web Search Select browser ■	

For more, see corresponding function description or follow onscreen instructions. Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

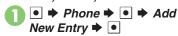








 Characters entered for names (reading for kanji) appear.

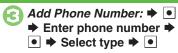



- To save additional phone numbers, repeat €.
- Add Email Address:

 Enter mail address
 - Soloet type
 - Select type →



 To save additional mail addresses, repeat ②.





Phone Book Entry Window




• Entry is saved to Phone Book.

Incoming Calls while Creating Entry


• Contents are temporarily saved. End the call to return.

Selecting Mode in Dual Mode
[Phone Book Entry Window] Mode:

Phone Book Entry Window] *Mode*→ • Select mode → • •

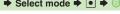



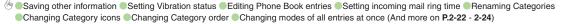



Personal Ringtone

Set tone for calls from saved numbers.

- In Phone Book entry window, select item, e.g.,
- Assign Tone → Select folder **⇒** •
- Select tone/file **→ →**

Saving Secret Entries

Hide Phone Book entries to require Handset Code for access.

- In Phone Book entry window, Secret: ▶ •
- On **▶ ▶** ∞

Accessing Secret Entries

- ⇒ Enter Handset Code ⇒
 •

Customizing Response by Category





Set Category Menu

- Select Category **→** □ **→**
- item, e.g., Assign Tone ▶ Customize responses
 - Customize responses in the same way as Phone Book entries.
 - Not available for USIM Card

Responses Set by Phone Book Entry • Settings for each entry take priority.

Saving Numbers After Calls

After a call, save number to Phone Book.



When confirmation appears, Complete other fields **▶** [∞]

Saving to an Existing Entry In ①, New Detail → • Select entry ◆ Complete other fields ◆

√

Using Phone Book Entries

Dialing via Phone Book






Entry Search Window (By あかさたな)

- When using Double Number in Dual Mode, line indicators appear.
- Select entry → ●
- Select phone number



Placing Video Calls
After ②, ● *Video Call* ◆ ●

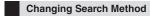

Phone Book Search Methods:

By あかさたな	Shows entries with Readings that start with katakana in the specified row
By Category	Opens entries in the specified Category
By Reading	Shows all entries in Reading order (katakana, alphabetical then numerical)

- In entry search window, □

 → Ph.Book Settings → •
- 🕟 Sort Entries 🕈 💿
- Select method ▶ •

Changing Search Method Temporarily [Entry Search Window] → (press to toggle search methods)


Opening from Other Functions

Example: Enter a recipient via Phone Book when sending a message.



Select Recipient Window

- Phone Book ⇒
 - Entry search window opens.
- Select entry 🕈 💽
- Select phone number or mail address ▶
 - Recipient is entered.
 - Omit if only one number or address is saved.

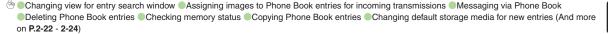



Customized Screen

Canceling Customized Screen	● ⇒ □ → Off → ● → Yes → ●
Canceling Customized Screen unconditionally	
Deleting Customized Screens	■ Data Folder ■ Customized Screen ■ Select Customized Screen □ Delete ■ Yes ■ ■ When the corresponding Contents Key has been downloaded, choose Yes or No and press ■.
Accessing Customized Screen source sites	Data Folder Customized Screen Select Customized Screen Web Access S Follow onscreen instructions.

Machi-Uta®

	Start Here ● ⇒ Settings ⇒ ● ⇒ In Sound/ Display menu, Sounds & Alerts ⇒ ● ⇒ Machi-Uta ⇒ ● ⇒ See below
	Searching Music Music Search
Using Machi-Uta® (Japanese)	Follow onscreen instructions.
(Japanese)	Changing Settings
	Settings •
	Follow onscreen instructions.
	Viewing Machi-Uta® Information
	What's Machi-Uta

Text Entry

■ Entry & Edit	
Using Character Codes	In a text entry window, → Character Code → → Enter four digits
Using Pager Code	In a text entry window, Input/Conversion Input Method Input/Conversion
	At the End of Text In a text entry window, Q
Inserting line breaks	Mid-Entry In a text entry window, ﷺ ② (select <i>Symbols</i>) ③ (⑤ or ☑ ④) ✓ (line break) ③
Inserting spaces	Mid-Entry In a text entry window, ⊙
	Between Entered Text In a text entry window, ﷺ ♥ (select Symbols) ♦ (o or v) (space) ♦ •
Clearing entry log	In a text entry window, □ → Input/Conversion → ■ → Reset Log → ■ → Yes → ■
Undo conversion or recover deleted characters	In a text entry window,
Inserting Phone Book entry items	In a text entry window, □ → Insert/Font Size → ■ → Phone Book → ■ Select entry → ■ ■ Select item → ■
Changing Font Size	In a text entry window, Insert/Font Size Font Size Select size Insert/Font Size Insert/Font Size Insert/Font Size Insert/Font Size Insert/Font Size

■ Conversion

Disabling suggestions based on entered characters	In a text entry window, □ → Input/Conversion → ● → Predictive → ● → Off → ●
Disabling suggestions based on entered words	In a text entry window, → Input/Conversion → → Previous Usage → → Off → ●
Disabling Pictogram suggestions based on entered words	In a text entry window, ■ ➤ Input/Conversion ■ ■ ➤ PictgramWordLink ■ ● ➤ Off ■ ■ ■ My Pictograms are not affected.
Selecting a suggestion mode	In a text entry window, Input/Conversion Personal Mode Select mod
Disabling wildcard character input	In a text entry window, → Input/Conversion → Wild Card Input → → Off → ●

User Dictionary

	Settings O Phone/ Settings O
Deleting entries	Dictionary ⇒ ● ⇒ Saved Word List ⇒ ● ⇒
	Select word ⇒ □ → Yes ⇒ ■

Dictionary

■ Preloaded & Online Dictionaries

Changing Font Size	Select size ⇒ Select size ⇒ •
Looking up copied words in dictionaries	Copy text and return to Standby → □□ → Search by Copied Text → □ → Search → □ → Select word, etc. → □ • If a confirmation appears, choose Yes and press □.
	Start Here □==□ → □ → History List or Bookmark List → □ → See below
Deleting history records or bookmarks	One Word Select word ⇒ □ → Delete ⇒ • → Yes ⇒ •
DOCKINGING	All Words □ → Delete All → ● → Yes → ●
Looking up scanned kanji in dictionaries	(Select word, etc. → (Select word, etc. → (Select word).
Looking up scanned text in dictionaries	□ □ □ □ Scan Text □ □ Frame text in center of Display □ □ Select line □ □ □ Search □ □ Select word, etc. □ □
	Type text → Before completing entry, (***) → Select dictionary → ● → Search → ● →
Using dictionaries during text entry	Select word, etc. ■ To insert Index Word into text, press after the steps above, then select <i>Paste Index Word</i> and press ■.

■ Online Dictionaries

Online Dictional	iles
Updating dictionary list	□ → □ → ネット辞書 → □ → □ → Update Dictionaries → □ → Yes → □
Selecting dictionaries for use	□ ⇒ □ ⇒ を Edit Dict. List → ● > Select dictionary → □ (□/√) → □
Selecting image download option	■ Show Image ● ● Select option ● ● For Auto, choose Yes and press ●.
Selecting search method	● *** *** *** *** *** *** *** *** *** *
Selecting search area	● Select pull-down menu ● Select dictionary ● Not available when すべてor unsupported dictionary is selected.
Opening Help	■■□ → → ネット辞書 → ● → Select pull-down menu → ● → Select dictionary → ● → □ → Help → ● → Yes → ●

Phone Book

■ Viow Sottings

■ view Settings	
Changing view for entry search window	● Phone ● ● Settings/Manage ● ● Ph.Book Settings ● ● View Settings ● ■ List Only ● ●
Hiding confirmation after calls to/from unsaved numbers	● Phone ● ● Settings/Manage ● ● Ph.Book Settings ● ● New Number Prompt ● ● Incoming Call or Outgoing Call ● ● Off ●

■ Phone Book Entry
Press → at the end to save entry. (At least a name, phone number or mail address must be entered.)

	Start Here ● → Phone → ● → Add New Entry → ● → See below
Saving other information	Address: → ● → Select item → ● → Complete field → ● → ¬
	Office Office: Select item Enter text Enter text Enter text
	Homepage Homepage: ■ ■ Enter URL ■ ■ Select type ■ ■
	Note Note: ■ Enter text ■
	Birthday Birthday: ■ Enter date



	Start Here ● ⇒ Phone ⇒ ● ⇒ Add New Entry ⇒ ■ ⇒ Select item, e.g., Vibration-Message: ⇒ ■ ⇒ See below	
Setting Vibration status	Activating Vibration Switch On/Off	
	Changing Pattern Vibration Pattern	
A - al - malm - al - man - a	Start Here ● → Phone → ● → Add New Entry → ● → Picture: → ● → See below	
Assigning images to Phone Book entries for incoming transmissions	Assigning Images Pictures	
	Capturing Images Take a Photo Frame image on Display Frame image on Display Frame image on Display	
■ Editing Entries & Categories		
Editing Phone Book entries	Select entry Select entry Select item Select edit select item Select editing names.	
Setting incoming mail ring time	Select entry → Edit → Duration → Duration → Available for compatible ringtones.	
Renaming Categories	● → Phone → ● → Set Category → ● → Select Category → ● → Edit Name → ● → Enter name → ●	

Changing Category icons	● Phone ● Set Category ● ● Select Category ● ● Change Icon ● ● Select Pictogram ● ●
Changing Category order	Phone Set Category Select Category Select Category Select target location In Select Category Select target location In Select Category Phone Book search changes accordingly.
■ Using Entries	
Messaging via Phone Book	Start Hore
Initiating S! Circle Talk via Phone Book	Select entry
Placing international calls via Phone Book	Select entry



■ Managing Entries

_ managing _miles			
Deleting Phone Book entries	One Entry Select entry Delete Ves All Entries Select entry Delete Phone Settings/Manage Manage Entries Delete All Select entry type Yes Select entry Yes		
Checking memory status	● Phone → ● Settings/Manage → ● → Manage Entries → ● Memory Status → ●		
Copying Phone Book entries	One Entry (Handset → USIM Card)		
	One Entry (USIM Card → Handset)		
	All Entries		

	Start Here ● → Phone → ● → Set Category → ● → Set Category → See below
Editing Categories	Renaming Categories Select Category → ● → Edit Name → ● → Enter name → ●
on USIM Card	Changing Order Select Category ⇒ ¬ ⇒ Select target location ⇒ ■
	Changing Icons Select Category
Changing default storage media for new entries	Phone Settings/Manage Ph.Book Settings Save New Entry USIM Memory or Ask Each Time
Switching reference Phone Book	● Phone ● Settings/Manage ● Ph.Book Settings ● Select Phone Book ● USIM Memory or Both ●
■ Mode (Double Number)	

Activate Double Number first.

Changing modes of all entries at once	Phone Settings/Manage Manage Entries Change Mode(All) Select mode
Changing modes of multiple entries	
Changing modes of entries by Category	Select Category



Customized Screen



Customized Screen is not applied

 Some Customized Screens may not contain files for Wallpaper, System Graphics, ringtones or ringvideos; default settings apply for these functions.

Phone Book



Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc., be sure that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images may not appear when another function is active, etc.



Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., be sure that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Memory Card with source files may be removed; reinsert the card to restore settings.



Cannot enter 16 characters for Category names

 Character entry limit for Category names may be lower depending on the USIM Card in use.



Emergency Calls	3-2
Voice Calling	3-3
Video Calling	3-6
Speed Dial & Rakutomo Link	3-7
Placing Calls Easily	3-7
Call Log	3-9
Call Time	3-10

Call Barring	3-11
Restrict Destinations	3-11
Reject Numbers	3-12
Optional Services	3-13
Additional Functions	3-15
Troubleshooting	3-23

3

Calling



Emergency Calls

Your location is automatically reported to the corresponding agency (police, etc.) when you place emergency calls (110, 119 or 118) with SoftBank 3G handsets. (Emergency Location Report) 001SH reports Location Information based on positioning signals from radio stations.

Registration/transmission fees do not apply.Positioning accuracy is affected by

location/signal conditions. Always provide your location and purpose on the phone.

- Location Information is not reported when emergency calls are placed without Caller ID (such as when the number is prefixed with 184). However, the corresponding agency may obtain your Location Information in a life threatening situation.
- Location Information is not reported during international roaming.

Handset Restrictions & Emergency Calls

Emergency calls are possible even while some handset restrictions are active.

Active Restriction	Emergency Calls	
Function Lock	Possible	
Bar Outgoing Calls		
Offline Mode	Restricted	
Keypad Lock		
PIN Entry		



Voice Calling

Answering a Voice Call

Incoming Call window opens for a call.



Incoming Voice Call Window

- 1 to accept the call
 - Call connects.



Muting Ringer Temporarily When a call arrives,

Earpiece Volume
During a call, [3]

After Calls to/from Unsaved Numbers

Save to Phone Book confirmation appears.
 Select New Entry or New Detail and press to save number; Phone Book entry window or entry search window opens, respectively.

Placing a Voice Call

- Enter phone number with area code
 - To correct entry, use on to place cursor under the digit and press on to delete the digits above and after the cursor, Long Press on.
- - Wait for receiver to accept the call.



Call ends

Specifying Line in Dual Mode

After ①, ● → Select Line(Voice) →

● → Select line → ●

Placing an International Call

- Enter phone number with area code ▶ □
- Int'l Call ⇒ •

Calling Unlisted Countries
In ⑤, Enter Code ▶ ● ▶ Enter
country code ▶ ● ▶ ♪

Advanced

Rejecting calls Placing calls on hold Answering with Headphones Adjusting Earpiece Volume Sending/blocking Caller ID Muting Microphone Recording caller voice (And more on P.3-15 - 3-17)






Placing Calls from Outside Japan

See below to place a call to Japan from abroad. 001SH supports international roaming in 3G areas. Apply for Global Roaming beforehand. See SoftBank Mobile Website for details: http://mb.softbank.jp/en/global_services/ Access roaming area/rate information or print it out to carry with you while traveling abroad.



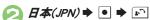

- Handset dials the number
- To call other countries, select the target country instead of 日本(JPN).



Calling SoftBank Handsets

● In ②, always select 日本(JPN).

Calling Landlines & Mobiles within the Same Country

Enter phone number with area code

→ → Dial to Your Stay → •

Calls Overseas

 Calling may not be possible outside Japan.
 Connections depend on available network, signal strength, and handset settings.

Improving Earpiece Sound Quality

When the other party's voice sounds muffled, Clear Tone may improve audibility.



During a call, 🖸

- Clear Tone activates.



Answer Phone

Record caller messages on handset. Answer Phone cannot be used in power off or out-of-range. Use Voicemail to record caller messages when Answer Phone is not available.



Canceling Answer Phone
(Long)
Answering Calls while Recording

■ No message will be recorded.



■ Playback Operations

Volume Control	٥
Replay/Skip Backward	•
Stop	•
Skip Forward	•
Delete	□ → Yes → •
Loudspeaker On/Off	Yr)


Advanced



Video Calling

View the other party's image or send an Outgoing Image to compatible handsets. Handle Video Calls like Voice Calls. This page describes functions/operations unique to Video Call.

Window Description

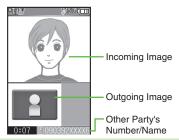

Important Video Call Usage Notes

- If both parties are using handset models without internal cameras, Video Call cannot be used as intended.
- If both parties are not using the same Video Call system, call may be interrupted. (Video Call charges apply.)

Answering a Video Call

Incoming Call window opens for a call.



Incoming Video Call Window

- 1 to accept the call
 - Alternative Image is sent. (Video Call charges apply to the caller.)
- 🔁 🗊 ➡ Call ends

Answering with Camera Image
[Incoming Video Call Window] ●

No ● ●

■ Engaged Video Call Operations

	o por autorio
Toggle View	0.11
Toggle Outgoing Image	•
Open Help	→ Help → •

Placing a Video Call

- Enter phone number ⇒ ■
- 🔁 Video Call 🕈 💽



- Image appears when call is accepted.

Specifying Line in Dual Mode
After ①, Select Line(Video) → ●
Select line → ●

Advanced




- Answering Video Calls automatically (And more on P.3-15)
- Adjusting Outgoing Image brightness Disabling touch tone sending (P.3-17)
- Sending camera image when initiating Video Calls Disabling Loudspeaker for Video Calls Muting Microphone when initiating Video Calls (And more on P.3-22)

Placing Calls Easily

Save phone numbers to Speed Dial/Mail list or Rakutomo Link for easy dialing.


Using Speed Dial

Saving Entries

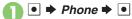





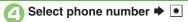



Select mail address prompt appears.
 To save mail address for easy messaging, select one and press .
 (Omit .)



🕞 🗹 🕈 Saved

To save additional entries, repeat € - ⑤.

Using Headphones for Speed Dial

• Save a phone number to **①**. Removing Speed Dial Entries

moving Speed Dial Entries
In ⑤, select entry ➡ ☐ ➡ Remove
Selected or Remove All ➡ ● ➡ Yes
➡ ●

Omit entry selection step when removing all entries.

Placing a Call



2

Placing Video Calls

In ②, ● **Speed Video →** • Using Headphones

 In Standby, Long Press Call Button until a double beep sounds; handset dials the number saved in . To end the call, Long Press Call Button until a beep sounds.

Using Rakutomo Link

Saving Entries

Follow these steps to save entries from Phone Book:

(Entries saved to Rakutomo Link are saved to Speed Dial list as well.)



Calling




- Select blank entry (<Empty> appears) → ●
- Refer Phone Book → → Select entry →
 - To select a different saved number, press ●, select one and press ●.









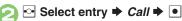



Call Log

Open recent dialed/received call records.









Select record **▶** •



When the Same Number is Dialed More than Once Using the Same Call Option

• Only the last record appears. (All records appear for S! Circle Talk.)

Hiding Dialed Ranking

In ②, ☑ Dialed or Dialed (Ranking) ⇒ Hide Dialed Ranking ⇒
■

■ To show Dialed Ranking again, follow

these steps:

In ②, № Dialed • □ • Show Dialed Ranking •

Call Time

Check estimated time of the most recent call and all calls.

2



- Call Timers → ●
- Dialed Calls or Received Calls

 • •

Resetting Dialed or Received Call Timer
After ②, □ → Yes → ■
Call Time Count
■ Ring time for incoming or outgoing calls

• Ring time for incoming or outgoing calls is not counted. (On hold time is counted.)



Restrict Destinations

Allow calls to numbers saved in Phone Book or Call Permitted List only.

Limiting to Phone Book

- Settings → → ☐
 Call → Call Barring → ●
- Restrict Destinations

 Enter Handset Code

 ■



Restrict Destinations Menu

Restrict Phonebook

→ Do →

□

When Restrict Phonebook is Do

 Handset Code is required to add/edit Phone Book entries.

Limiting to Call Permitted List

- Specifying Numbers
- In Restrict Destinations menu, Specified Numbers

 ▶ •



Specified Numbers Menu

- Call Permitted List ▶ •
- ⟨Empty> ▶ ■
- Enter phone number ⇒
 - Repeat € ② to add phone numbers.
- Activating Call Permitted List
- In Specified Numbers menu,

 Switch On/Off

 ●
- 쥗 On 🕈 🖸


Reject Numbers

Reject calls from specified/unsaved numbers, calls without Caller ID, etc.

Rejecting Specified Numbers


Specifying Numbers



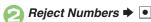



Reject Numbers Menu

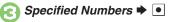





Specified Numbers Menu








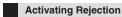

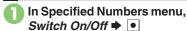



Rejecting Unsaved Numbers

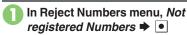




Saved Numbers Containing P (Pause)

• Calls from the number before **P** are rejected.

Rejecting Other Calls

Reject calls without Caller ID, calls from public phones or calls with undisplayable Caller ID.

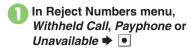





Optional Services

Call Forwarding and Voicemail can only be set simultaneously when Call Forwarding is set to Video Calls.

Call Forwarding	Automatically divert all or all unanswered incoming calls to another preset phone number
Voicemail	Redirect all or unanswered calls to Voicemail Center; access messages from handset/touch tone phones
Call Waiting*	Answer incoming calls or open another line during a call
Group Calling*	Switch between open lines or connect multiple lines at once for teleconferencing
Caller ID	Show or hide your own number when placing calls
Call Barring	Restrict incoming/outgoing calls depending on conditions

*A separate contract is required.

Initiating Call Forwarding

Follow these steps to divert calls to a phone number saved in Phone Book after selected ring time (*No Answer* set): (Numbers starting with 1, 00, 0120 or 0990 cannot be saved.)



Voicemail/Call Forwarding

→

→



Voicemail/Call Forwarding Menu

- Diverts → ●
- 🔼 Select call type 🖈 🖭
- ြ No Answer 🖈 💽
- Phone Book ⇒ ⇒ Select entry ⇒ ●








Diverting Calls without Handset Response In ⑤, Always ▶ ● ▶ ⑥ - ⑥
Entering Forwarding Number Directly In ⑥, Enter Number ▶ ● ▶ Enter phone number ▶ ● ▶ Select ring time ▶ ●



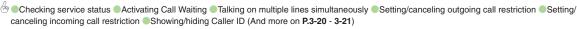



3

Calling

Follow these steps to divert calls to Voicemail Center after selected ring time (*No Answer* set):





Diverting Calls without Handset Response In ⊘, Always ▶ •

Missed Call Notification

Activate this function for records of calls missed in power off/out-of-range and Voicemail is active.





Playing Messages



Play Voicemail

Follow the voice guidance for further operations.

Deleting New Voicemail Message Indicator In ⊘, Clear Indicator ▶ ● ≯ Yes ▶ ●

Canceling Call Forwarding/Voicemail

- In Voicemail/Call Forwarding menu, *Cancel All* **▶** •
- Yes → •

Answer Phone

Recording messages when Answer Phone is inactive	When a Voice Call arrives, → Record Message → ●
Changing ring time	● Settings → ● Call → Answer Phone → ● Answer Time → ● Enter time → ●
Sampling outgoing message	● Settings ● ● Call Answer Phone ● Outgoing Message ● • Press ■ to stop playback.
Muting Earpiece	● ⇒ Settings ⇒ ● ⇒ Call ⇒ Answer Phone ⇒ ● ⇒ Volume ⇒ ● ⇒ Silent ⇒ ●

■ Remote Monitor (Video Call)	
	Start Here ● ⇒ Settings ⇒ • ⇒ • Call ⇒ Video Call ⇒ • ⇒ Remote Monitor ⇒ • ⇒ See below
Answering Video Calls automatically	Saving Numbers from Phone Book Auto Answer List → ● → <empty> → □ → Change → ● → From Phone Book → ● → Select entry → ● → Select phone number → ● To enter a phone number directly, select <empty> and press ●.</empty></empty>
	Saving Numbers from Call Log Auto Answer List → ● → <empty> → □ → Change → ● → From Call Log → ● → Select record → ●</empty>
	Activating Remote Monitor Switch On/Off • • • On • • • • When Remote Monitor is active, auto answer tone sounds even in Manner mode; cancel afterward. • Calls cannot be answered automatically with handset closed.
Edition Assets	Start Here ● ⇒ Settings ⇒ ● ⇒ • Call ⇒ Video Call ⇒ ● ⇒ Remote Monitor ⇒ ● ⇒ Auto Answer List ⇒ ● ⇒ See below
Editing Auto Answer List	Editing Numbers Select entry ■ Edit ■
	Deleting Entries Select entry ⇒ □ ⇒ Delete ⇒ • → Yes ⇒ •
Changing ring time	Settings Answer Time Answer Time Enter time



Caller ID

Placing a Call ■ Basic Operations Adjusting Earpiece Volume ■ Sending/blocking After phone number entry, ■ Hide My ID or

Caller ID ⇒ •

■ International Calls

Example: Voice Calls

Placing calls by entering country code directly	Enter phone number with area code • Omit the first 0 of the area code except when calling ltaly or some other countries. • Pressing during a call does not enter +.
Using Roaming Dial Assistant to place international calls while outside Japan	Start Here Enter phone number with area code
	Calling Japan (Landlines & Mobiles) Dial to Japan
	Calling Other Countries (Landlines & Mobiles) Dial to Other Country → ● ⇒ Select country → ● ⇒ ♪

Disabling Roaming Dial Assistant	● Settings ● ● Call ■ Int'l Calling ● ● Roaming Dial Assistant ● ● Off ● ● ● When Off, handset dials the entered phone number as-is even while outside Japan.
Saving frequently used international prefix	● Settings → ● → Call → Int'l Calling → ● → Int'l Prefix → ● → Enter prefix → ●
	Start Here ● → Settings → ● → Call → Int'l Calling → ● → Country Code → ● → See below
	Changing (Selecting from Complete List) Select country/region → ● → Change(Refer All List) → ● → Select country/region → ● → Yes → ●
Adding/changing/ deleting country	Changing (Direct Entry) Select country/region → ● → Change(Number Directly) → ● → Enter name → ● → Enter country code → ●
codes	Adding (Selecting from Complete List) <empty></empty>
	Adding (Direct Entry) <empty> → → Change(Number Directly) → → Enter name → → Enter country code → ●</empty>
	Deleting Select country

During a Call

■ Voice Call & Video Call	
Muting Microphone	Voice Call During a call, ₩ (press again to cancel)
	Video Call During a call,
Activating/cancelir	Activating Loudspeaker for Voice Call During a call, • > While message appears, • • To cancel, press •.
Louuspeaker	Canceling Loudspeaker for Video Call During a call, [w] (press again to activate)
Switching sound output	During a call, ■ Transfer Audio → To Phone or To Bluetooth → ■ For To Bluetooth, select a device and press ■.
Opening Phone Book	During a call, → Phone Book → → Select entry → ● → Press twice to return to call window.
Saving Phone Book entries	During a call, → Phone Book → → → Add New Entry → → Complete fields → → Press → to return to call window.
Placing calls on hold	During a call,

■ Voice Call Only

Improving Earpiece sound quality	During a call, □ ■ To cancel Clear Tone, press □ again.
Recording caller voice	During a call, → Record Caller Voice → Recording starts → Recording ends • To play recorded messages, see P.3-5 "Playing Messages."
Opening messages	During a call,
Creating messages	During a call,
Sending saved touch tones	During a call, → Touch-Tone Signal List → → Select number → □
Sending touch tones via Phone Book	During a call, → Phone Book → ● Select entry → → Send Push Tone → ● Select phone number → ● • Press → to return to call window.

■ Video Call Only

Trace can only	
Adjusting	During a call,
Outgoing Image	level ⇒ •
brightness	 Alternative Image brightness is fixed.
Disabling touch tone sending	During a call,

Call Log

Dialing from records	Calling Dialed Numbers (Redial) Select record To place Video Calls, press instead of In, then select Video Call and press Calling from Received Call Records Select record To place Video Calls, press instead of In, then select Video Calls, press instead of In, then select Video Call and press Calling Transmitter (Redial)
Sending messages from records	⊘ or ⊘ → Select record → □ → Create Message → ● → S! Mail or SMS → ● Complete message → □
Saving Phone Book entries from records	O or O Select record Save to Phone Book A New Entry Save to Complete other fields W ■ To add to an existing entry, select As New Detail.
Opening Phone Book entries from records	O or O → Select record → Display Phone Book → ■ Available when selected record (phone number) is saved in Phone Book.
Initiating S! Circle Talk from records	 O or → Select record →
Deleting records	One Record ○ or ○ → Select record → ○ → Delete → ● → Yes → ● All Records ○ or ○ → ○ → Delete All → ● → Yes → ●
Hiding Dialed Ranking	Phone Settings/Manage Call Log Setting Hide Dialed Ranking

Call Time & Data Communication

■ Call Time

Setting handset to beep during Voice Calls	● Settings ● ● ☆ Call → Call Time/ Data Counter → ● Minute Minder → ● On → ●
Hiding Call Time during calls	■ Settings ■
Resetting Call Timers	■ Settings ■

■ Data Communication

Checking	Settings Call Call Time/
accumulated data	Data Counter ⇒ • Data Counter ⇒ • ⇒
transmission volume	All Data ▶ •
Resetting Data Counter	■ Settings ■ Call Call Time/ Data Counter ■ Data Counter ■ Clear Counter ■ Yes ■



	Restrict Destinations		
	Designating Call	Start Here • \Rightarrow Settings \Rightarrow • \Rightarrow ○ Call \Rightarrow Call \Rightarrow Call Barring \Rightarrow • \Rightarrow Restrict Destinations \Rightarrow • \Rightarrow Enter Handset Code \Rightarrow • \Rightarrow Specified Numbers \Rightarrow • \Rightarrow Call Permitted List \Rightarrow • \Rightarrow <empty> \Rightarrow \Rightarrow See below</empty>	
Permitted List numbers from saved information	From Phone Book Ph.Book List ■ Select entry ■ Select phone number ■		
		From Call Log Records From Call Log	
		From S! Friend's Status Member List From Member List	
Editing Ca		Start Here ● ♦ Settings ♦ ● ♦ ○ Call ♦ Call Barring ♦ ● ♦ Restrict Destinations ♦ ● ♦ Enter Handset Code ♦ ● ♦ Specified Numbers ♦ ● ♦ Call Permitted List ♦ ● \$ See below	
	Permitted List	Editing Numbers Select number/name → ● ➡ Edit ➡ ●	
		Deleting Numbers Select number/name Delete Delete Position Delete	

Reject Numbers	
Designating numbers to reject from saved information	From Phone Book Ph.Book List
mormation	From Call Log Records From Call Log
	From S! Friend's Status Member List From Member List
Editing Reject Numbers List	Editing Numbers Select number/name ■ ■ Edit ■ ■
	Deleting Numbers Select number/name ⇒ □ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●
Excluding rejected calls from Call Log	Settings According Reject Numbers Record on Call Log Do not Record Call Log Cal

Optional Services

All Services

	⇒ Settings →
Checking service	service → ● → Status → ● • Available for Voicemail/Call Forwarding, Caller ID
status	Available for Voicemail/Call Forwarding, Caller ID
	and <i>Call Waiting</i> .

■ Call Waiting (Contract Required)

Activating Call Waiting	● ⇒ Settings ⇒ ● ⇒ • Call ⇒ Call Waiting ⇒ • → On ⇒ •
Placing Line 1 on hold to answer Line 2	A tone sounds during a Voice Call Press to switch between lines. Press to end active line and re-engage the party on hold.

■ Group Calling (Contract Required)

Opening another line during a call	During a Voice Call, enter phone number To dial via Rakutomo Link, press during a Voice Call.	
Switching between open lines (Swap Calls)	During a Voice Call, ▶ • Press ▶ to switch between lines.	
Talking on multiple lines simultaneously While switching between lines, ⊕ → Grofenence All → ●		
Switching to private conversation	During Group Calling, select number/name → ■ → Private → ■	

■ Call Barring

When Call Forwarding or Voicemail is active, setting *All Outgoing Calls* or *All Incoming Calls* to *On* may not restrict Voice Calls/Video Calls. (Call Forwarding or Voicemail takes priority.)

· ·	
Setting/canceling outgoing call restriction	Start Here
	Setting Restriction Select restriction ● ● → On ● ● Enter Center Access Code ● ● ● Outgoing SMS messages are also restricted. ● Outgoing SI Circle Talk requests are not affected. ● Following restrictions are available: ■ All Outgoing Calls: Restrict all non-emergency calls ■ Bar Int'l Call: Restrict all international calls ■ Local & Home Only: Restrict all international calls except to Japan
	Checking Restriction Status Select restriction
	Canceling All Restrictions Cancel All

Setting/canceling incoming call restriction	Start Here ● ⇒ Settings ⇒ ● ⇒ ○ Call ⇒ Call Barring ⇒ ● ⇒ Bar Incoming Calls ⇒ ● ⇒ See below
	Setting Restriction Select restriction
	Center Access Code
	Incoming SMS messages are also restricted. Incoming SI Circle Talk requests are not affected. Following restrictions are available: All Incoming Calls: Reject all calls Bar if Abroad: Reject calls when outside Japan
	Checking Restriction Status Select restriction
	Canceling All Restrictions Cancel All
Caller ID	
Showing/hiding Caller ID	● ⇒ Settings ⇒ ● ⇒ • Call ⇒ Caller ID ⇒ ● ⇒ On or Off ⇒ ●
Callel ID	

Settings	
■ Voice Call	
Answering calls automatically when using Headphones	Start Here ● → Settings → ● → Call → Auto Answer → ● → See below
	Activating Auto Answer Switch On/Off → ● → On → ● • When Auto Answer is active, Auto Answer tone sounds after ringtone even in Manner mode; cancel afterward.
	Changing Ring Time Answer Time ■ Enter time ■
Saving frequently used touch tones	Phone
Saving touch tones for White Office	● Phone ● Touch-Tone Signal List ● ● Change to White Office Tone ● ● Touch tones for White Office are saved to ● - 5. ● When touch tones are already saved in ● - 5, choose Yes and press ●.
Deleting touch	Start Here ● → Phone → ● → Touch-Tone Signal List → ● → See below One Entry
tones	Select number



■ Video Call

Sending camera image when initiating Video Calls	Settings Se
Disabling Loudspeaker for Video Calls	Settings Call Video Call Loudspeaker Off Off
Muting Microphone when initiating Video Calls	Settings Call Video Call Mute Microphone On On On On On On On On On
Changing Alternative Image that is sent when initiating Video Calls	Settings Alternative Select file Select file Select file Select file
Changing Incoming/Outgoing Image quality	Settings Se
Setting image that is sent while call is on hold	Settings Se
Setting Backlight status	Settings Settings Setting Select option Selecting Normal Setting applies Display Backlight settings.

Receiving a Call



Cannot use Answer Phone or **Record Caller Voice**

- Answer Phone and Record Caller Voice are disabled when less than 12 seconds of recording capacity remain or 20 messages are recorded. Delete messages.
- Answer Phone and Record Caller Voice are not available for Video Calls.

Placing a Call



Cannot place call via Speed Dial

· Speed Dial is not available when Phone Book access is restricted by Application Lock.



Cannot place call

 Cancel Keypad Lock, Function Lock and Offline Mode, if active,



Call won't connect

- Did you include the area code or the first 0? Dial the number including the area code or 0.
- Handset may be out-of-range (out appears). Move to a place where signal is strong and retry.

During a Call



Outgoing Image is distorted during Video Calls

 Rapid motion can make images appear choppy or distorted.



Camera image switches to Alternative Image during Video Calls

 Prolonged camera use may cause camera area to heat up, resulting in automatic shutdown; wait a while and retry.



Conversation is hampered

- Conversations may be hampered by ambient noise.
- Check Earpiece Volume when using Loudspeaker. Increasing Earpiece Volume may cause feedback/interference.



Call is choppy or cut off

- Network signal may be weak. Move to a place where signal is strong and retry.
- Battery may need to be charged or replaced. Charge battery or install a charged battery.



Clicking noise is heard during call

- Handset may be moving into another service area. Noise is heard when Network signal switches. This is normal.

Cannot hear other party's voice

- Earpiece Volume may be low. Increase Earpiece Volume (P.3-3).
- · Sound output may be set to use handsfree device. Set Transfer Audio (P.3-17) to To Phone.



Messaging	4-2
Basics	4-2
Customizing Handset Address	4-3
Sending Messages	4-4
Sending S! Mail	4-4
Sending Graphic Mail	4-7
Sending SMS	
Restricting Outgoing Messages	4-11
Incoming Messages	4-12
Opening & Replying	
Customizing S! Mail Retrieval	4-14
Handling Messages	4-15
Managing & Using Messages	
Sorting Messages	

Chat Folder	4-18
Using Chat Folders	4-18
Mail Groups	4-19
Creating Groups for Broadcast Ma	
	4-19
PC Mail	4-20
Additional Functions	4-23
Troubleshooting	4-40

4

Messaging



Basics

Use the following messaging services.

SMS

Exchange up to 160 alphanumerics with SoftBank handsets.

S! Mail

Exchange up to 30,000 characters with e-mail compatible handsets, PCs. etc.: attach media files. etc.

Large Size Messages Transmit messages of up to 2 MB including large images or multiple files; may incur high charges depending on subscribed price plan.

PC Mail

Receive or reply to PC mail account messages. Use 001SH to handle PC Mail messages like SMS or S! Mail.

Available Entry Items

	Recipient	Subject	Message	Attachment
SMS	Available*	N/A	Available	N/A
S! Mail	Available	Available	Available	Available
PC Mail	Available	Available	Available	Available

*SoftBank handset numbers only.

- A separate contract is required to use S! Mail and receive e-mail from PCs. etc.
- For more information, see SoftBank Mobile Website (P.15-22).

Auto Retry Function

If recipient's handset is off/out-of-range, a sent message is saved in Server Mail Box and delivery attempted at regular intervals. (Undeliverable messages are deleted.)

Auto Resend

When Auto Resend is active, handset makes up to two attempts to send unsent messages automatically. Cancel to disable (P.4-36).



Customizing Handset Address

Change alphanumerics before @ of the default handset mail address. For more information, see SoftBank Mobile Website (P.15-22).

Changing Address











Select *English* and press •, then follow onscreen instructions.

Saving Address

When handset address is changed, SoftBank Mobile sends new address confirmation via S! Mail.



To save new address to My Details, follow these steps. (New address is effective even if not saved.)

















Sending S! Mail

Follow these steps to send S! Mail to a number/address saved in Phone Book:



S! Mail Composition Window

- Select recipient field ⇒
 - 🌏 Phone Book 🖈 💽
- Select entry → ●
- Select number or mail address **→**
 - Omit if only one number or address is saved.
 - When a mail address is entered, avoid using single-byte katakana in message text or subject; may not appear properly on recipient devices.



Select message text field



Text Entry Window

Enter message → ■



S! Mail Composition Window



• To cancel, press 🗹 during transmission.

Incoming Calls while Creating Message

 Content is saved temporarily. End the call to return.

Personal Mode

 When recipient is entered via Phone Book, text entry window word suggestions change by recipient type.

Previewing Outgoing Message After ③, → Preview Message → ●

Pictogram Entry

- In Pictogram List, press at to toggle
 Cross-Carrier Pictograms and all Pictograms.
- Pictogram appearance may differ by carrier.

Specifying Line in Dual Mode

Converting to Graphic Mail

After \bigcirc , Auto Art \Rightarrow \bullet \Rightarrow Select decoration type \Rightarrow \bullet \Rightarrow \bowtie (Next) or \bowtie (Prev.) \Rightarrow \bullet \Rightarrow \bigcirc


- To cancel conversion, follow these steps before ⑤:
 - □ ⇒ Cancel Arrangement ⇒ •Yes ⇒ •

Advanced




- Wising other recipient entry methods Adding recipients Inserting signature automatically Converting mail type (SMS/S! Mail) Saving without sending Requesting delivery confirmation Designating/editing reply-to address (And more on P.4-23 4-25)
 - Hiding progress bar while sending messages Disabling automatic resend of unsent messages Designating/editing reply-to address (And more on P.4-36 4-37)

Text Entry Assistance

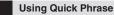

Use fixed text (Japanese) or previously entered text for quick entry. Quick Phrase Options:

Quick Phrase List	Shows Quick Reply text	
Auto Registration	Shows initial portions of recently sent messages	
Learning	Prioritizes recently used Quick Phrase text	

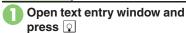



→ Off → •



Deleting Quick Phrase Text In ②, select text ▶ □ ▶ Yes ▶ • Auto Registration and Learning entries can be deleted. Disabling Quick Phrase (Options) [Text Entry Window] □ → Quick Phrase

◆

Select option

•




Using Opening Phrase Prediction (Japanese)

Words/phrases likely to be used to begin a message appear in suggestion list according to time of year and day. (Opening Phrase Prediction)



• Long Press v to toggle Quick Phrase and Opening Phrase Prediction.

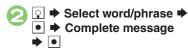

Transmission starts

Disabling Opening Phrase Prediction Beainnina **→** • **→** Off **→** •

Phrase Log (Japanese)

Portions of sent messages are saved automatically and appear in suggestion list as Previous Usage candidates; enter previously used phrase/sentence easily. (Phrase Log)

Disabling Phrase Log • **→** Off **→** •



Attaching Files

Send attachments to compatible handsets. Follow these steps to attach images to S! Mail:









File attached



Attaching Non-Image Files

• In ②, select a folder other than *Picture* and press •, then select a file.

Attaching Multiple Files



X in Attach (X) indicates the number of attached files.

Auto Image Resize

Large images may be automatically reduced to approximately 400 - 500 KB by default.

Change resize setting via Picture Auto Resize (**P.4-36**).

If Recipient Cannot Receive Large Messages (Up to 2 MB)

 Message may be truncated or attachments may be lost.

Sending Feeling Mail

Set emotion (happiness, sadness, etc.) to messages; recipient handset responds accordingly.

- In S! Mail Composition window after composing message,

 → Feeling Settings → •
- Select category, e.g.,

 Happy/Glad

 ●
- Select item, e.g., I Love You

 →

 •



🔼 🖻 🖈 Transmission starts

Canceling Feeling Mail

[S! Mail Composition Window]
Select subject field

Select
Pictogram

Select





- (and more on P.4-26)
 - Limiting outgoing S! Mail message size Selecting size to which images are reduced when attaching (And more on P.4-36 4-37)

Sending Graphic Mail

Basic Procedure

Follow these steps to:

- Change font size
- Insert images
- Scroll text
- Select/enter recipient and subject (P.4-4)
- Select message text field



Text Entry Window





Graphic Mail Window



Select size **▶** • **▶** Enter text



- ✓ → IMAGE → → Select folder → → Select file
- Select target location ▶ •





- 🕦 Scrolling 🕈 💽
- Select direction

 Enter text
- → □ → Transmission starts

Canceling Last Action
[Graphic Mail Window] UNDO

Canceling All Graphic Mail Settings
[Graphic Mail Window] CANCEL

■

● Yes ● ●
Saving as Templates


After ①, ● → □ → Save as

Template → ● → Enter name → ●

Save here → ●

Only the message text is saved.



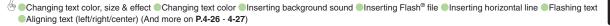



Using My Pictograms

My Pictograms are grouped by category; add or rename categories as needed.

- Source files are saved in Data Folder (My Pictograms).
- Save up to 1,000 additional My Pictograms on handset.
- Some preloaded My Pictograms appear in suggestion list when corresponding reading is typed.





- My Pictogram List appears. (Log appears if My Pictogram has been used.)
- Press ** or ** to open next or previous Category.





Select Category → ●



My Pictogram List

- Press or to open next or previous page, if any.
- Select file

 To hide message, press
 (☑).
- CLEAR SA
 - List closes; enter text, add other decorative effects, etc.
- © Complete message ▶ ▶

 ☑ ▶ Transmission starts



My Pictograms can also be moved/ copied within the same Category.

Deleting My Pictograms [My Pictogram List] Select file → (Long) → Delete → ● → Yes → ●

Source files in Data Folder will be deleted.

■ To return, press .

Opening Data Folder (My Pictograms)

[My Pictogram List] Select file → □

(Long) → Access to Data Folder → ■

Clearing Entry Log

Open Log then follow these steps:
 Select file → → (Long) → Delete This
 Log → ● → Yes → ●



Converting from S! Mail

Convert S! Mail to Graphic Mail easily.

- In text entry window, enter message

 □ (Long)
- Select decoration type ▶

 Next) or (Prev.)







Canceling Conversion

Using Templates

Create Graphic Mail from templates.

- 🚹 🖻

 → Templates
 →
- Select template ▶ •
- Complete message ▶ ☑ ▶
 Transmission starts

Template Size

• Template size may change when used for creating messages.

Opening Templates from Text Entry Window (S! Mail)

[Text Entry Window]
□ → Launch

Template → □ → Select template →
□ → Complete message → □

If message text has already been entered, follow onscreen prompt to insert it.

Advanced

Sending SMS

Follow these steps to send SMS to a number saved in Phone Book:





SMS Composition Window










Omit if only one number is saved.

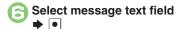




🗩 Enter message 🖈 💽



SMS Composition Window

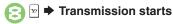

Incoming Calls while Creating Message

 Content is saved temporarily. End the call to return.

Personal Mode

 When recipient is entered via Phone Book, text entry window word suggestions change by recipient type.

When Message Text Exceeds Limit

• A confirmation appears. To convert SMS to S! Mail, choose *Yes* and press •.

Entering Pictograms Automatically

After \bigcirc , Auto Art $\Rightarrow \bigcirc \Rightarrow \bigcirc$ (Next) or \bigcirc (Prev.) $\Rightarrow \bigcirc \Rightarrow \bigcirc$

Using Quick Phrase

After ⊕, ♀ ⇒ Select text ⇒ • ⇒ •

Advanced



(b) Using other recipient entry methods Adding recipients Using Speed Dial/Mail list Converting mail type (SMS/S! Mail) Saving without sending Requesting delivery confirmation Changing SMS Server storage limit for outgoing message (And more on P.4-23 - 4-25)

Changing SMS Server sent message storage limit Changing SMS Server number Changing character encoding for composing messages (P.4-39)

Allow messaging to handset numbers/ addresses saved in Phone Book or Permitted List only.

Limiting to Phone Book

- Settings → •
- Create/Send Settings ▶ •
- Restrictions Setting

 ●

 Enter Handset Code

 ●



Restrict Mail Menu



When Phonebook Entries is On

 Handset Code is required to add/edit Phone Book entries.

Limiting to Permitted List

- Specifying Mail Addresses
- In Restrict Mail menu,
 Individual Address ▶ •



Individual Address Menu

- Permitted List → ■
- ← < Empty >

 ◆

 ●
- Select method ▶ ▶
 Select/enter address ▶
 - Repeat € ② to add mail addresses.
- Activating Permitted List
- On ⇒ •

Opening & Replying

Opening New Messages

Information window opens for new mail. See **P.4-22** to receive PC Mail.



Important Message Retrieval Notes

- By default, if message size is around
 1 MB or less, the complete message including attachments is retrieved in and outside Japan; transmission fees apply depending on subscribed price plan.
- Automatic message retrieval outside Japan may incur high charges.
- To retrieve only the initial portion of message text automatically, set Auto Settings to Off, retrieve complete message manually as needed.

Delivery Report

 Information window opens for Delivery Report. Follow these steps to open it:
 Delivery Report ⇒ ● Select message with report ⇒ ● ⇒ □





Message List





Message Window

Receiving Feeling Mail

 Small Light, Vibration and ringtone respond according to settings.

Attached Images

Attached images open automatically.
 Messages with Quiz

Enter or select answer ▶ •

Message opens when the correct answer is entered or selected.

Animation View

 When a specific Pictogram is entered as the first character of subject or included in message text, corresponding animation appears in message window background.

Mail Notice

- Depending on the setting (e.g., Auto Settings is Off), Server sends initial portion of message text in each of the following cases:
 - The message was sent to multiple recipients
 - Files are attached to the message
- If message size exceeds 1 MB, Server sends only initial portion of message text regardless of Auto Settings status.
 (Approximate size appears in message text.)


Advanced



Accessing new mail out of Standby Viewing new messages on Sub Display (And more on P.4-28)
 Limiting incoming S! Mail message size Muting ringer, etc. for messages sorted into Secret folders Changing ringtone settings for incoming Feeling Mail (And more on P.4-35 - 4-36)

Window Description

Message List

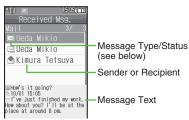


Message Type/Status



"SMS" or "PC" appears accordingly on indicators.

Message Window

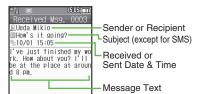

Press (or) to open other messages (higher or lower in message list).

Changing Font Size [Message Window] [3.4] (Long) to enlarge or [18] (Long) to reduce

Replying to Messages





 Original message text is guoted (except for SMS and Graphic Mail).

Complete message ▶ [v] ▶ Transmission starts

Replying to Messages Addressed to Multiple Recipients

After ①, To Sender or Reply All →

Reply Assist Dictionary (メール返信アシ スト辞書)

- When replying in Kanji (Hiragana) mode, this dictionary prioritizes original message words (katakana or alphanumerics) in suggestion list. **Auto Reply**
- Handset sends a reply automatically
- when receiving messages from saved numbers or addresses in specified mode (Manner mode, etc.).

Advanced

Saving attachments to Data Folder Saving to Phone Book Using linked info Looking up message text words in dictionaries Jumping to message top/bottom Reporting unsolicited message sources as spammers Selecting mail type/quote option Opening received message for reference Replying quickly using fixed text Replying to messages automatically (And more on P.4-28 - 4-30) Selecting quote option (P.4-37)



Customizing S! Mail Retrieval

Set complete S! Mail retrieval to manual (Server sends only initial portion of message text without attachments) or set handset to retrieve complete messages automatically by specifying sender type, mail address, etc.

Retrieving Messages Manually









Message Download Menu





Retrieving Complete S! Mail Automatically when Approximate Size is 300 KB or Less In ⑤, On(Up to 300KB) ▶ ■


Restricting Automatic Retrieval



In Message Download menu,

Condition(Auto) →

■

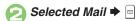




Selected Mail Menu




By Mail Address

Specify mail addresses or domains (alphanumerics after @ of mail addresses).

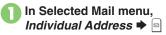



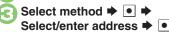

Repeat ② - ⑥ to add mail addresses.



Restricting by Domain (Direct Entry)

[Selected Mail Menu] Receive by the

Domain → □ → Select blank entry

→ ● → Direct Entry → ● → Enter

domain → ● → □ → □





- Retrieving remaining portions (P.4-28)
 - Retrieving all messages (including spam) automatically Deleting addresses/domains specified for complete message retrieval (P.4-35)

Managing & Using Messages

Messaging Folders

Messages are organized in folders by type.



Auto Delete

 Oldest received/sent messages are deleted automatically to save new ones when memory is full. (Protect important messages to avoid unintentional deletion.)

Opening Help

• Follow these steps in folder list, message list or message window:



When Failed Message is Saved

• A reminder message appears upon opening Messaging menu.


Checking Messages





Folder List

- When a PC Mail Account exists, PC Mail folder (folder with the name specified in Account Name) appears.
- Select Mail folder or PC Mail folder and press v to hide/show sub folders. To open full message list, hide sub folders and press .

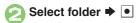



Message List





Message Window

Protecting Messages


In message list, select message **→** □ Manage Msg. **▶** |•|



Canceling Protection In ②, Unlock ▶ •

Advanced

Selecting multiple messages Deleting messages Deleting all Server Mail directly from Server (And more on P.4-30 - 4-31)

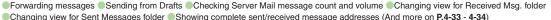



Moving Messages to Spam Folder

- In message list, select message ▶ □
 - For PC Mail, skip ahead to 3.
- Spam Measures Operation
- - If a confirmation appears, choose Yes or No and press . Choose Yes to proceed with Sort Spam Mail settings; follow onscreen instructions.

Searching Messages

Search messages by message text, sender/recipient address, etc.

- Search All Msg. ▶ •

Searching by Folder

In ②, select folder ⇒ □ ⇒ Search ⇒

■ ⇒ Search Folder ⇒ □ ⇒ ②

Searching Message Text

- Follow these steps to find specific words/ phrases; limit search by character type.

 Search Total

 - Press v or to jump to next/previous search result

Hiding Folders

Hide Received Msg./Sent Message folder to require Handset Code for access to the folder and messages within.

Chat Folders are not affected.

- 🔁 Select folder 🖈 🖻
- Set Secret → → ●

Accessing Secret Folders After ①, □ → Unlock Temporarily → ■ → Enter Handset Code → ■

Advanced



Messaging

Sorting Messages

Sorting into Designated Folders

Sort messages by sender/recipient or partially matching text in subject or SMS message text.

- Received Msg. or Sent Messages

 ▶ •
- Select target folder **→** □
- blank entry **→** •



- Sender (Recipient for Sent Messages) **▶** •
- Select/enter number/ address **▶** •
- Saved

Sorting by Domain (Direct Entry) In (a), Sender(Domain) (Recipient(Domain) for Sent → • Enter domain → • • • Sorting by Part of Subject/SMS Message Text In ②, Subject ▶ ● ▶ Enter text

Filtering Spam

Follow these steps to filter messages from handset numbers/addresses not saved in Phone Book into Spam Folder: (Alternatively, set sort keys to filter messages.)

- Settings → → Receive Settings ▶ •
- Spam Mail Settings ▶ •
- Sort Spam Mail ▶ •





Exempting Messages from Filtering After ②, Permitted List(Common) ▶ Select blank entry → ● Select kev

Select/enter **▶** • (√) **>** □

When a PC Mail Account Exists

 Filter PC Mail messages from addresses not saved in Phone Book.





Using Chat Folders


Organize messages exchanged between handset and Chat members' handsets. To hide messages, set Chat Folder to Secret.

Saving Members





Chat Folder List

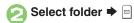





- Select saved member to edit number/ address.
- Select/enter number/ address **▶** •
 - Repeat (2) (3) to add members.



- In Chat Folder list, select folder **→** •
- Select message **▶** ●



Creating Groups for Broadcast Mail

Create Mail Groups to send messages to multiple recipients at one time. Save target recipients to Phone Book first.









Mail Group Entry Window





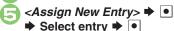



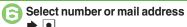



- Omit (a) if only one number or address is saved.
- Repeat 5 6 to add members.








PC Mail

Receive or reply to PC mail account messages.

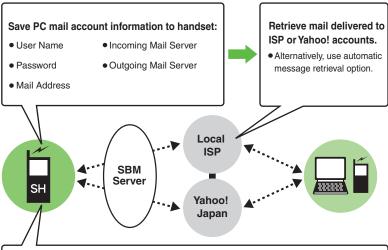

Messages are saved in unique folders; reply to/send messages via PC mail account addresses.



 Handle messages (sort, etc.) like S! Mail or SMS. (Unavailable functions do not appear in Options menu and some may appear under different names.)

Important PC Mail Usage Notes

- Receiving PC Mail for the first time after PC Mail Account setup may incur high charges due to large-volume packet transmissions.
- Setting handset to retrieve PC Mail automatically may incur high packet transmission fees; remember this, especially when using handset outside Japan.
- Other functions may slow while handset is checking for new messages.
- Checking for new messages may incur packet transmission fees even when none exists.
- Single-byte katakana and Pictograms are not supported.
- When messages sent from handset to PC mail account are retrieved by handset (then opened, replied with quotes, forwarded, etc.), included Pictograms may not appear or may appear as different characters.



PC Mail Account Setup

- Proceed with setup according to information supplied by ISP.
- PC Mail services may be unavailable depending on the services, settings or contract details for your PC mail account. Confirm compatibility with POP/SMTP message retrieval/transmission via e-mail software beforehand

■ Mandatory Items for Retrieval


User Name	Required to connect to incoming mail server
Password	Required to connect to incoming mail server
ReceivingServer	Incoming mail server address

■ Mandatory Items for Transmission

Mail Address	Address to use PC Mail
	Outgoing mail server address

Setting Other Items

• Edit information as needed; for description, select an item and press .

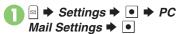



- PC Mail Account → ●
- ⟨Empty> ▶
 - Account Name → →
 Enter name → ●
- Set Receiving

 Select item

 Select/enter item


 Select/
 - User Name, Password and ReceivingServer are mandatory.
- Set Sending

 Selectitem

 Select/enter

 item

 Select/enter
 - Mail Address and Sender Server are mandatory.
- - If a confirmation appears, follow onscreen prompts.

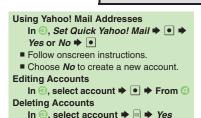

Saving User ID & Password for Transmission

 If User Name and Password are unset Set Receiving items are automatically used for SMTP authentication. Follow these steps if ISP requires User Name and Password:





Retrieving New PC Mail

Retrieve new messages from created accounts. If message count is high, some may not be received on the first attempt.







- Press v to retrieve full message.
- Message window is similar to that of S! Mail

Deleting Messages

[Message List] Select message > = Delete ⇒ • Select option ⇒ • **≯** Yes **▶** •

Retrieving Messages by Account After ①, select account ▶ • • •

Omit if only one message is retrieved.

Checking Received PC Mail



- Message list appears. Message list is similar to that of S! Mail.
- Select message **▶** Message window opens.

Replying to PC Mail

- In message window, [v]
 - PC Mail Composition window opens.
 - Original message text is guoted (except for HTML messages).
- Complete message ▶ [\forall] Transmission starts

Replying without Quoting Original Message Text

[Message Window]

Reply

Reply

■ message 🖈 🗹

Changing Account for Outgoing Messages [PC Mail Composition Window]

Select recipient field **→** • From: ⇒ Select account ⇒

■

Sending PC Mail

Follow these steps to create and send PC Mail:

- → Create Message →
- Complete message ▶ 🗹 ▶ Transmission starts

Converting to S! Mail

After ②, □ → Convert to S! Mail → Yes →

Note

• Single-byte katakana and Pictograms are not supported.

Advanced



🔊 🔊 Retrieving complete PC Mail messages 🔍 Retrieving new messages automatically 🔍 Retrieving PC Mail for specified folder 🔍 Disabling automatic word wrap Retrieving complete messages from specified addresses Deleting addresses/domains specified for complete message retrieval Restricting complete message retrieval by size (P.4-37 - 4-38)

Creating/Sending Messages Recipient In Mail Composition window, select recipient Using other recipient entry field ⇒ • Select method ⇒ • Select/ methods enter number/address ⇒ • In Mail Composition window, select recipient field ⇒ • Add Recipient ⇒ • Select Adding recipients method ⇒ • Select/enter number/address In Mail Composition window, select recipient Switching field ⇒ • Select recipient ⇒ □ ⇒ Select recipient status status 🔷 🔎 🔊 (To, Cc and Bcc) • Other recipients cannot see numbers/addresses set to Bcc. Start Here ▶ See below Saving Recipients (from Phone Book) ● → Refer Phone Book → ● → Select entry **Using Rakutomo** Link Creating Messages Create Message ⇒ • • When messaging to SoftBank handset numbers,

select S! Mail or SMS and press .

Using Speed Dial/ Mail list	Saving Recipients □ → Settings → ● → Speed Dial/Mail → ● → <empty> → ● → Select entry → ● → Select number or mail address → ● → Do not Assign → ● → □</empty>
	Creating Messages In Standby, [0.1] - [9-2-1](Speed Dial/Mail entry number)
Editing/deleting recipients	Start Here In Mail Composition window, select recipient field ▶ ● ▶ See below
	Editing Recipients Select recipient → ● → Edit → ● →
	Deleting a Recipient Select recipient
	Deleting All Recipients Select recipient → □ → Delete All → ● → Yes → ● → □
	Start Here ▶ Select entry ▶ □ ▶ See below
Editing/removing Rakutomo Link entries	Editing Entries Change Registered Contents • • Change the Use Address • • Mail address: • • Select new number/address • • • Removing Entries
	Remove ⇒ • → Yes ⇒ •



Editing Speed Dial/ Mail list	Start Here
	Editing Entries Select entry
	Removing Entries Select entry Remove Selected Remove Selected Ves ■
	Removing All Entries □ → Remove All → • Yes → •

■ Message Text

Inserting signature automatically	Settings Create/Send Settings Figure Signature Figure Figure Signature Figure Signature Figure Signature Figure Signature Figure Signature Figure Figure Signature Figure Figur
Inserting signature manually	In text entry window, in text entry window, in text entry window, in Insert/Font Size in Signature in Signa
Inserting ASCII Art	In text entry window, → Call ASCII Art → → Select entry → ●
Converting mail type (SMS/S! Mail)	In Mail Composition window, → Change to SMS or Convert to S! Mail → → Yes → ●

■ Save, Send Reservation & Sent Cancel

Saving without sending	After completing message,
	Start Here After completing message, → Send Reservation → • See below
Sending automatically later	Auto Send when Signal Returns Within the Network
automatically later	Designating Send Date/Time (within 30 days) Date & Time → ● Date Cate/time → ● Yes → ●
Canceling sent S! Mail	 Sent Messages Select folder Select message Set Sent Cancel Yes Effective for messages addressed to SoftBank handsets.

- Messaging Settings
 For SMS, only Delivery Report and Expiry Time are available.
- For PC Mail, only Reply to Settings and Priority are available.

Requesting delivery confirmation	In Mail Composition window, Messaging Settings Delivery Report Delivery Report Delivery Report Delivery Report arrives when message is delivered. Open sent message to check delivery status indicator: Delivered, S: Unknown, S: Failed Effective for messages addressed to SoftBank handsets.
Setting priority	In Mail Composition window, → Messaging Settings → → Priority → → Select priority → ●
Setting message to be deleted from recipient handset once read	In Mail Composition window,



Adding a reply request	In Mail Composition window, Messaging Settings Messaging Settings Messaging Reply Request Messaging • Effective for messages addressed to SoftBank handsets.
Restricting forward/delete	In Mail Composition window, Messaging Settings Forward NG or Delete NG On Effective for messages addressed to SoftBank handsets.
Locking message with Quiz	Start Here In Mail Composition window,

Editing assigned Quiz	In Mail Composition window,
Lowering size limit for outgoing S! Mail message	In Mail Composition window, Messaging Settings Create Msg. Size 300KB 300KB ■
Designating/ editing reply-to address	Start Here In Mail Composition window, Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Performance Messaging Settings Messagin
	Designating Switch On/Off → ● → On → ● → Select method → ● → Select/enter address → ●
	Editing Edit Address ■ Edit ■
Changing SMS Server storage limit for outgoing message	In Mail Composition window,



■ Attachments

Changing attached image size	Select attached file → □ → Resize Picture → ■ → Select size → ■ ■ May be unavailable for some images.
	Start Here In Mail Composition window, select attachment field ▶ ● ▶ See below
	Still Images Picture → ● → Take Picture → ● → • to shoot → ●
Capturing/ recording and attaching	Video Video Record Video to start recording to stop Accept Select storage media Video Accept Video Vide
	Sounds Sound → ● → Record Voice → ● → ● to start recording → ● to stop → Accept → ● → Select storage media → ●
Set Auto Play File	Select attached file Select attached file Select attached file Select Auto Play File Sel

■ Graphic Mail

a crapino man	
Changing text color, size & effect	In text entry window,
Changing text color	In text entry window, → COLOR → → → Select color → → Enter text
	Start Here In text entry window, → INSERT → → See below
Inserting background sound	Inserting BGM Sound → ● → Select folder → ● → Select file → ●
	Deleting Delete BGM
Inserting Flash® file	In text entry window,
Previewing Flash® file	In text entry window after inserting Flash® file, □ → Preview → ● • When Graphic Mail window is open, press ¬ first.
Deleting Flash® file	In text entry window after inserting Flash® file, move cursor before Flash® icon ■ □ • When Graphic Mail window is open, press □ first.

Inserting	In text entry window, 🗹 ⇒ INSERT ⇒ • →
horizontal line	Line ●
Flashing text	Start Here In text entry window, w ⇒ See below
	Canceling
Aligning text (left/ right/center)	In text entry window,
Using custom decoration type	Start Here In text entry window, enter message
	Inserting Pictograms/My Pictograms at the End of Text Only Insert Pictograms Position ■ Page Bottom
	Changing Pictogram/My Pictogram Quantity Insert Pictograms Volume Select option New York (Next) or (Prev.) Output Provided The Pictogram Pictogra
	Enabling/Disabling Text Color/Size & Background Color Auto Change Change Font Color, Change Font Size or Change Background Color

■ My Pictograms

iny riotograms	
Creating Categories	In text entry window, Solution
Editing Categories	In text entry window, Solect Category Category Name Edit Category Name Select item Edit Edit Fair
Changing Category order	In text entry window, ♠ ♠ Select Category ♠ ♠ Relocate Category ♠ ♠ Select target location ♠ ●
Opening Category properties	In text entry window, ♣ ♦ ♣ Select Category ♦ ♦ Details ♦ ●
Deleting Categories	In text entry window, ♣ ♦ ♦ Select Category ♦ ♦ Delete Category ♦ ♦ Yes • •



Receiving/Opening Messages Receiving Accessing new (Long) mail out of Standby Retrieving new • When a PC Mail Account exists, select S! Mail and S! Mail manually press . • Retrieve messages missed while handset is out-of-range. Server Mail Box ⇒ ● Mail List ⇒ ● **Retrieving Server** Mail list → Yes → • Via Mail Notice In message list, select Mail Notice > • > • If retrieve size options appear, select one and press •. Retrieving Via Server Mail List remaining portions Server Mail Box ⇒ ● Mail List ⇒ ● Select message ⇒ • • If retrieve list confirmation appears, choose Yes and press . Start Here Server Mail Box See below **Directly from Server** Retrieve All ⇒ • Retrieving all Server Mail Via Server Mail List Mail List ⇒ • ⇒ Retrieve All ⇒ • • If retrieve list confirmation appears, choose Yes and press .

Opening

Viewing new messages on Sub Available with handset closed. Display

■ Message Window	
Saving attachments to Data Folder	In message window, select file □ → Save to Data Folder → □ → Enter name → □ → Save here → □ • For Graphic Mail templates, Save as Template appears. (Omit file name entry step.)
Installing attached widgets	In message window, select file → □ → Install Attach → ● → Enter name → ●
	Start Here In message window, select file ⇒ □ → See below
Using attachments	As Wallpaper Set as Wallpaper → ● ► Enter name → ● → Save here → ● • For images smaller or larger than Display, Wallpape Display options appear; follow onscreen prompts.
	As Ringtone/Ringvideo Set as Ringtone or Set as Ring Video Enter name Save here Select item For For New Message or For New PC Mail, enter ring time and press .

Playing slides	In message window,
Saving to Phone Book	Saving Sender Address In message window, Select number or mail address Select number or mail address Mew Entry To add to an existing entry, select As New Detail.
	Saving Linked Info In message window, select number or mail address • • * Save to Phone Book or Save Address • • * As New Entry • • * Complete other fields • □ • To add to an existing entry, select As New Detail.
	Dialing Numbers In message window, select number Call or Video Call ■
Using linked info	Sending Messages In message window, select number or mail address → ● → Create Message → ● → S! Mail or SMS → ● → Complete message → □ • For mail addresses, omit mail type selection step.
	Accessing Websites In message window, select URL
	Start Here In message window, □ → Copy → ■ See below
Copying text	Sender/Recipient Number/Address Address Select number/address ■
	Subject or Message Text Subject or Message Text ■ Select first character ■ Highlight text range ■

Looking up message text words in dictionaries	In message window, Copy & Search Dict. Select first character Select dictionary Search Select word Select word
Jumping to message top/bottom	In message window, → View Settings → → Scroll Jump → → Jump to Top or Jump to Bottom → □
Deleting attachments	In message window, select file ⇒ □ → Remove File ⇒ • → Yes ⇒ •
Reporting unsolicited message sources as spammers	In message window, → Report Spam → → → Signature is not inserted automatically. • Not available for PC Mail.
Saving attachments within Graphic Mail	In Graphic Mail message window,
	Start Here In Graphic Mail message window, Save Items Save My Pictograms See below
Saving My	All Files Save All Save All Select folder Save here ■
Pictograms within Graphic Mail	One File Select file → ● → Enter name → ● → Select folder → ● → Save here → ●
	Selected Files
Saving Graphic Mail as templates	In Graphic Mail message window, □ → Save as Template → ● → Enter name → ● → Save here → ●



■ Replying

- Replying	
Selecting mail type/quote option	In message window, → Reply → → Select type/option → → Complete message → ✓
Opening received message for reference	In message window, → Rep. with View → → Select option → ← Complete message → □
Replying quickly	Editing Quick Reply Text □ → Settings → □ → Create/Send Settings → □ → Reply Settings → □ → Set Quick Reply → □ → Select text → □ → Edit → □
using fixed text	Using Quick Reply In message window, (Long) Select text
	Start Here Settings Reply Settings Auto Reply Settings Auto Reply Settings Settings Auto Reply Settings Settings Auto
Replying to messages	Saving Recipients Address Setting ● ● Select blank entry ● ● ● Select method ● ● ● Select/enter number/address ● ● Select mode ● ● (
automatically	Editing Reply Text Reply Message → ● → Select mode → ● → Enter text → ● • Edit text for each mode.
	Activating Auto Reply Switch On/Off On

Managing Messages

■ Message List	
	Selecting In message list, → Select message → (✓) • To uncheck, press • again.
Selecting multiple messages	Selecting Up to 50 Messages at Once In message list, □ → Manage Msg. → Check in Block → •
	Unchecking All In message list with message checked (☑), □ → Uncheck All → ■
Color-tagging messages	In message list, select message → □ → Manage Msg. → ● → Color Label → ● Select color → ●
Sorting messages	In message list,
Opening sender/ recipient details	In message list, select message → □ → View Mail Address → ● → Select sender or recipient → ●
Checking memory status	Memory Status Select item Fress to check memory status by service (SMS & S! Mail or PC Mail). USIM Card SMS message count and volume do not appear.
Opening properties	In message list, select message
Changing Graphic Mail template name display	□ → Templates → • • → □ → Item Displayed → • Select item → •



Saving SMS messages to USIM Card	In message list, select SMS message Ananage Msg. Not available for some SMS messages.	
Changing received message status (read/unread)	In message list, select message ▶ □ ▶ Manage Msg. ▶ ● ▶ Switch to Unread or Switch to Read ▶ ●	
■ Deleting Messages		
	One Message In message list, select message Delete Political Property of the property of t	
Dalatina managana	All Messages In message list,	
Deleting messages	All Messages in Spam Folder In message list (Spam Folder),	

● ≯ Yes or No ≯ ●

Deleting Server

Mail via Mail Notice

All Messages in Drafts or Unsent Messages In message list (Drafts or Unsent Messages), □ ⇒ Delete All ⇒ • Yes ⇒ •

In message list, select Mail Notice 🗼 🖾 🖈

Delete → • Select option → • Yes → •

Deleting Server Mail via Server Mail list	Start Here → Server Mail Box →
	Select message
Deleties all Comon	Start Here Server Mail Box Delete All Server Mail Box Delete See below
Deleting all Server Mail directly from Server	All Retrieved Messages Except New Msg.
	All Messages Delete All
Folders	
Moving messages manually	In message list, select message Anange Msg. Anange Msg. Move to Folder Select folder Select folder and press messages confirmation appears, choose Yes and press messages sent to/received from the number/address will be sorted into selected folder automatically.
Renaming folders	In folder list, select folder



Deleting folders	In folder list, select folder ▶ ♠ Delete ▶ ● ➤ Yes ▶ ● ■ When Double Number is active, corresponding folders in other modes are also deleted.
Deleting Spam Folder messages	In folder list, Spam Folder → □ → Delete → ● → Delete Spam Measures. → ● → Yes or No → ●
Adding folders	In folder list,
Moving folders	In folder list, select folder → □ → Relocate Folder → ● → Select target location → ●
Changing status of all messages within folders to read	In folder list, select folder ⇒ □ ⇒ To All Read ⇒ ● → Yes ⇒ ●
Canceling automatic deletion of messages within folders	In folder list, select folder → □ → Protect → ■ • To cancel protection, select Not Protect and press • in the steps above.
Canceling Secret	Unlock Secret folders temporarily and select Secret folder ⇒ □ → Unset Secret → ■

■ Sorting into Folders

	Sorting into Folders	
	Re-sorting messages	In folder list, select folder □ → Classify → • Available in Chat Folder list as well.
	Sorting spam by setting keys	Settings → Receive Settings → Spam Mail Settings → Sort Spam Mail Individual(Common) → (✓) → Select blank entry → Select key → Select/enter number/address/subject → North →
		Start Here In folder list, select folder ⇒ □ → My Folders → □ → Select entry → See below
	Edition/deletion	Editing Sender/Recipient Key Property
	Editing/deleting sort keys	Editing Subject Key ■ ⇒ Edit ⇒ ■ ⇒ □
		Deleting an Entry □ → Delete → ● → Yes → ● → ₩
		Deleting All Entries □ → Clear All → ● → Yes → ■ → □

Chat Folder

Deleting folders	 ➡ Chat Folder ➡ ■ ➡ Select folder ➡ ■ ➡ Delete Folder ➡ ■ ➡ Yes ➡ ■ ■ When Double Number is active, corresponding folders in other modes are also deleted.
Deleting all messages	 □ → Chat Folder → ● → Select folder → ● □ → Manage Msg. → ● Delete All → ● Yes → ●
Resetting Chat Folders	□ → Chat Folder → ■ → □ → Reset → ● → Yes → ■

Mail Groups

Renaming Mail Groups	Select Group → □ → Edit Name → □ → Enter name → □ → Yes → □
Deleting Mail Groups/Group members	Start Here → Settings → • Mail Groups → • Select Group → See below
	Mail Groups □ → Delete → ● → Yes → ●
	Group Members
	● ⇒ Select member ⇒ □ ⇒ Remove Entry ⇒ • ⇒ Yes ⇒ • ⇒ №
	Source Phone Book entries remain even after deleting members.
	Settings ⇒ ● → Mail Groups ⇒ ● →
Changing Mail	Select Group Select member
Group members	Re-assign Entry → ● → Select entry → ● → Select number or mail address → ● → Yes →
	Select number of man address • • • res

Using Messages Complete message ⇒ 🔽 Forwarding Attached files are forwarded. messages • To forward SMS messages, select S! Mail or SMS and press . □ → Drafts → • Select message → • → Sending from **Drafts** Complete message ▶ 🔽 Start Here → Unsent Messages → → Select message ▶ 🖾 ▶ See below Sending unsent Sending without Editing messages Resend > Edit & Send Edit ⇒ • Complete message ⇒ 🔽 Sent Messages ⇒ Select folder ⇒ Using sent messages ● Domplete message > 🔛 In message list, select message 🗼 🖻 🖈 ▶ Enter subject ▶ Select Category ▶ • Saving schedules ▶ Enter start/end date/time ▶ ● Complete from message list other fields 🗼 🔽 • Source message is accessible from schedule window (via Related Mail in Options menu).



Forwarding Server Mail	Via Mail Notice In message list, select Mail Notice Forward Notice text only) or Remote Forward Complete message
	Via Server Mail List Server Mail Box Mail List Select message Memote Forward Memote Forward Freieve list confirmation appears, choose Yes and press ■.
Opening Server Mail properties	 Server Mail Box Mail List Select message Message Details If retrieve list confirmation appears, choose Yes and press
Checking Server Mail message count and volume	 Server Mail Box → ● Mailbox Volume → ●

View Settings	
Changing view for Received Msg. folder	■ Settings ● View Settings ● ■ Received Msg. View ● Select option ● ■ Folder View by Account is selectable when a PC Mail Account exists.
Changing view for Sent Messages folder	■ Settings ■ View Settings ■ Sent Msg. View ■ Select option ■ Folder View by Account is selectable when a PC Mail Account exists.
Changing message list view	Settings → View Settings → → Message List View → ● → Select option → ●
Changing message window scroll unit	Settings → ● → View Settings → ● → Scroll Unit → ● → Select unit → ●
Enabling sound auto-play	■ Settings ■ View Settings ■ Auto Play Attached Sound ■ On ■ Setting applies to PC Mail as well.
Enabling image auto-resize	Settings → View Settings → Picture Appearance → Double-Sized → Setting applies to PC Mail as well.
Disabling Animation View	Settings → View Settings → Animation View → Off → Off
Showing complete sent/received message addresses	□ → Settings → ● → View Settings → ● → Address View → ● → Show All → ●

Receive Settings	
Limiting incoming S! Mail message size	■ Settings ■ Receive Settings ■ Message Download ■ DL Size Limit ■ Restricted(300KB) ■ Exceeding attachments are reduced (images) or deleted (other files) at Server.
Retrieving all messages (including spam) automatically	■ Settings ■ Receive Settings ■ Message Download ■ ■ Condition(Auto) ■ All Message ■ ■ Available when Sort Spam Mail is active.
Deleting addresses/ domains specified for complete message retrieval	Start Here
	One Entry (Mail Address) Individual Address □ → Select entry → □ Delete → □ → Yes → □ → □
	All Entries (Mail Address) Individual Address Select entry Clear All Yes W
	One Entry (Domain) Receive by the Domain → □ → Select entry → □ → Delete → ● → Yes → ● → □
	All Custom Entries (Domain) Receive by the Domain → □ → Select entry → □ → Clear All → ● → Yes → ● →
Selecting automatic deletion option for received messages	□ → Settings → ● → Receive Settings → ● → Auto Delete Received Msg. → ● → Select option → ●

Changing alerts for messages received during handset use	Start Here
	Selecting Scrolling Notice Option View Setting
	Muting Alert Sound Alert Sound
Muting ringer, etc. for messages sorted into Secret folders	 Settings → ● → Receive Settings → ● Secret Folder → ● → No Response → ●
Hiding graphics above Information window for received Feeling Mail	□ → Settings → ● → Receive Settings → ● → Link to Feeling → ● → Standby Screen Info. → ● → Off → ●
Disabling Small Light for incoming Feeling Mail	□ ⇒ Settings ⇒ • ⇒ Receive Settings ⇒ • ⇒ Link to Feeling ⇒ • ⇒ Light ⇒ • ⇒ Off ⇒ •



	Disabling Vibration for incoming Feeling Mail	□ → Settings → ● → Receive Settings → ● → Link to Feeling → ● → Vibration Pattern → ● → Off → ●
	Changing ringtone settings for incoming Feeling Mail	Start Here
		Muting Ringer Switch On/Off → ● → Off → ●
		Changing Ringtones Assign Tone → ● → Select category → ● → Select folder → ● → Select tone/file → ●
		Changing Duration Duration
	Changing spam report recipient	Spam Mail Settings → • Receive Settings → • Spam Mail Settings → • Report Spam

Create/Send Settings	
Limiting outgoing S! Mail message size	■ Settings ■ Create/Send Settings ■ Create Msg. Size ■ 300KB or Confirm(When exceed 300KB) ■ Images are resized automatically when message size exceeds the limit upon attaching them.
Selecting size to which images are reduced when attaching	● Settings ● Create/Send Settings ● Picture Auto Resize ● Select option ● ● • Set to Ask Each Time to select size every time an image is attached.
Hiding progress bar while sending messages	Settings → Create/Send Settings → Sending Status → → Off(Background) → ●
Disabling automatic resend of unsent messages	○ → Settings → ● → Create/Send Settings → ■ → Auto Resend → ● → Off → ●
Canceling automatic deletion of oldest sent messages	Settings → Create/Send Settings → Auto Delete Sent Msg. → Not Auto Del → ●
Requesting Delivery Report for all messages	Settings → Create/Send Settings → Send Option → Delivery Report → On → O • Effective for messages addressed to SoftBank handsets.

Designating/ editing reply-to address	Start Here → Settings → Treate/Send Settings → Settings → Send Option → Reply to Settings → See below Designating Switch On/Off → On → Select method → Select/enter address → O
	Editing Edit Address ■ ■ Edit ■ ■
Selecting quote option	Settings → Create/Send Settings → Reply Settings → Reply With Text → Select option → •
Attaching captured/recorded files unsaved	Settings → Create/Send Settings → Send File Settings → Attach Only → ■ Setting applies to PC Mail as well.
Deleting Permitted List entries	Start Here → Settings → ● Create/Send Settings → ● Restrictions Setting → ● → Enter Handset Code → ● → Individual Address → ● → Permitted List → ● → Select entry → ● → See below One Entry Delete → ● → Yes → ● All Entries
	Clear All → • Yes → •

PC Mail Settings Settings ⇒ • PC Mail Settings ⇒ • Retrieving → PC Mail DL → • → PC Mail DL → • → All complete PC Mail Contents ⇒ • messages Start Here → Settings → PC Mail Settings → Auto Check → ● See below **Enabling Automatic Retrieval** Mail Account ⇒ • → On ⇒ • ⇒ Select account $\Rightarrow \bullet (\checkmark) \Rightarrow \checkmark \Rightarrow \bullet$ • Setting Mail Account to On may incur high charges; checking for new messages may incur packet transmission fees even when none exists. Remember this, especially when using handset outside Japan. • Handset does not check for new messages between 10:00 PM and 6:00 AM; change/cancel Blackout Time as needed. Retrieving new **Enabling Automatic Retrieval Outside Japan** messages Abroad ⇒ • ⇒ Enable ⇒ • ⇒ • automatically · Automatically retrieving messages abroad may incur high charges. Changing Automatic Retrieval Interval Interval ⇒ • Select interval ⇒ • **Changing Blackout Time** Blackout Time ⇒ • Start Time: ⇒ • ⇒ Enter start time > • Fnd Time: > • Enter end time • **Canceling Blackout Time** Blackout Time ⇒ • Switch On/Off ⇒ • ⇒ Off ⇒ •



Retrieving PC Mail for specified folder	In folder list, select PC Mail folder □ Retrieve New □
Disabling automatic word wrap	Settings → PC Mail Settings → ■ Word wrap → → Off → ■
Retrieving complete messages from specified addresses	Start Here → Settings → ● PC Mail Settings → ● → PC Mail DL → ● → PC Mail DL → ● → DL All From List → □ → See below
	Selecting Sender Types Select item
	Specifying Addresses Individual Address Select blank entry Select/enter address Select/enter
	Specifying Domains (Direct Entry) Receive by the Domain → □ → Select blank entry → ● → Direct Entry → ● → Enter domain → ● → □

Deleting addresses/ domains specified for complete message retrieval	Start Here → Settings → → PC Mail Settings → → PC Mail DL → → PC Mail DL → → DL All From List → → See below
	One Entry (Mail Address) Individual Address □ □ Select entry □ □ Delete □ □ Yes □ □ □
	All Entries (Mail Address) Individual Address □ → Select entry → □ → Clear All → ● → Yes → ● → □
	One Entry (Domain) Receive by the Domain → □ → Select entry → □ → Delete → ● → Yes → ● → □
	All Entries (Domain) Receive by the Domain → □ → Select entry → □ → Clear All → ● → Yes → ● → ⋈
Restricting	
complete message	Select account Select size Select size
retrieval by size	Effective when PC Mail DL is set to All Contents or
,	DL All From List.

SMS Settings	
Changing SMS Server sent message storage limit	○ → Settings → ● → SMS Settings → ● → Expiry Time → ● → Select option → ●
	Start Here → Settings → → SMS Settings → Message Center → → See below
Changing SMS	Editing Setting1(Default) to Setting3 → ■ Edit number → ■ Do not change Server number unless instructed to do so.
Server number	Deleting Setting2 or Setting3 ⇒ □ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●
	Activating Setting2 or Setting3 → □ → Set Default → ■ Activated number moves to Setting1(Default) and shifts the others down.

Settings
 SMS Settings
 Char-code
 Select encoding
 ■

Changing character encoding

for composing messages

Messaging

Sending Messages



Cannot enter message text or attach files

 Attachment size affects text size limit. In turn, text size affects attachment size limit



Sending failure appears in Information window

• To resend, follow these steps: Sending failure ⇒ • Select message ⇒ • • • • • • •



Unsent message is not resent automatically

 Auto Resend makes up to two attempts to send unsent messages automatically. Resend unsent message(s) manually.



Set Auto Play File cannot be set

- Apply to one file per message.
- Not available for Graphic Mail.
- May be unavailable for some files.





Messaging Settings are not applied

- Settings are valid for one message, and effective when viewed on compatible handsets/applications.
- Delivery Report/Priority setting may not be effective when sent to mail addresses.
- · Priority setting does not affect delivery speed.



Cannot set Messaging Settings

• These settings cannot be applied to a message simultaneously (select one): Set Auto Delete, Reply Request, Forward NG, Delete NG, Quiz, Set Auto Play File.



Signature is not inserted automatically

Not available for SMS.



Cannot cancel sent messages

- Short messages may not be canceled.
- · Set Sent Cancel is available for S! Mail only.



Cannot send PC Mail

• Some ISPs require SMTP authentication setup in addition to Set Receiving setup. Follow these steps to check User Name and Password for SMTP authentication: Settings ⇒ • PC Mail Settings ⇒ • PC Mail Account Set Sending ⇒ • Sender Auth. Name or Password > •



Incoming Messages



Handset won't ring or vibrate for some incoming messages

- · Handset does not ring or vibrate for messages with Low Priority.
- Handset does not ring, vibrate or open Information window for messages filtered as spam.



A confirmation requesting a reply appears

• To reply, choose **Yes** and press •. Confirmation does not appear for replied messages.



Handset won't respond according to Feeling Mail settings

- · Responses set in Phone Book take priority.
- Feeling Mail settings are disabled when:
- Sender is saved in Phone Book as Secret entry
- The message was filtered as spam
- The message was sorted to a Secret folder



Message text appears distorted

• Follow these steps to change encoding: Settings ⇒ • Char-code ⇒ • ⇒ Select option ⇒

•

Handling Messages



Cannot move messages into some folders

• To move to Secret folders, unlock temporarily or cancel Secret beforehand.



Cannot receive messages

- If appears, memory is full; delete messages (P.4-31).
- If out appears, move to a place where signal is strong.



S! Mail is not delivered as sent

 Recipient must be subscribed to S! Mail, etc. The maximum size of messages/attachments handsets can receive varies by make and model. Confirm compatibility with recipient handsets.



Still images are not delivered as sent

· Recipient handset may not be JPEG-compatible. Convert JPEG files to PNG



Video files are not delivered as sent

 Send video files to S! Mail- or VGS-compatible SoftBank handsets supporting MPEG-4.



Internet Services	5-2
Service Basics	5-2
Yahoo! Keitai	5-3
Using Yahoo! Keitai	5-3
PC Site Browser	5-5
Browsing PC Sites	5-5
Browsing PC Sites	

Bookmarks & Saved Pages	5-8
Using Bookmarks & Saved Pages	5-8
RSS Feeds	5-9
Updating Blogs & News	5-9
Additional Functions	5-10
Troubleshooting	5-17

5

Internet



Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SoftBank Mobile Website (P.15-22).

Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. (Information fees may also apply.) To prevent automatic connection, select an appropriate option for *Script Settings*, *Flash*® *auto-download* and *Download Videos* (P.5-16).

Security

Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

Opening Secure Pages

- A confirmation appears. Choose *Yes* and press
 to proceed.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GMO GlobalSign, RSA Security, SECOM Trust Systems and Comodo Japan cannot be held liable for any damages associated with the use of SSL.



Advanced

- © Clearing cache (temporarily saved information) Clearing authentication information (And more on P.5-10)
 - Disabling manufacture number auto send for authentication Restoring default handset settings (And more on P.5-16)


Using Yahoo! Keitai

Using Yahoo! Keitai Main Menu

Browse Yahoo! Keitai sites from Yahoo! Keitai Main Menu.

Internet pages may not open depending on connection/Server status, etc.




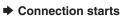



Internet Page

- Yahoo! Keitai Main Menu opens.
- To disconnect, press 🗹.

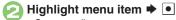

- Corresponding page opens.
- Repeat ② to open additional links.
- ③ → Yes → Page closes

Returning to Previous Pages

[Internet Page] → Previous page opens

Follow these steps to return to the initial page:

[Internet Page]

→ Forward

■ Returning to Yahoo! Keitai Main Menu [Internet Page]
→ Yahoo! Keitai

→ ●

User Authentication

 Follow these steps to open pages requiring authentication:

Enter user ID or password $\Rightarrow \bullet \Rightarrow \neg$ Accessing $\cancel{A} = \cancel{1} - \cancel{1} \cancel{A} \nearrow$ Directly

■ ★ Yahoo! ★ ■ ★ Menu List ★ ■ ★ = - 4 J X Is a portal to Yahoo!

Keitai content and services. (Includes a link to lists of sites supporting English.)

Using History




- Select record ▶ ► Connection starts
 - Corresponding page opens.
- ③ → Yes → Page closes

Entering URLs Directly

- Enter URL **→ ● →** Connection starts
 - Corresponding page opens.
- ③ → Yes → Page closes

Advanced

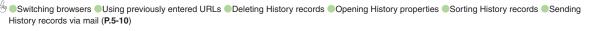



Playing Media during Download

Play files while they transfer from the server (progressive download) or stream media files.

- Save progressive download files, as needed, after playback. (Copy protected files cannot be saved.)
- Streaming media files cannot be saved even after playback.
- Packet transmission fees apply even while playback is paused.
- On a page, select file >
 - Playback starts.

Pausing Playback

•

- To resume playback, press
- Progressive download continues even while playback is paused.

Stopping Playback



■ Progressive download continues on the page even while playback is stopped. (Press • to resume playback.)

Stopping Progressive Download During playback, ◆ Previous page returns 🕈 🚟

Playback Sound

 Sound is heard from Speaker/Headphones regardless of Sound Output setting.



Internet

Browsing PC Sites

View PC Internet sites via PC Site Browser.

- Internet pages may not open depending on connection/Server status, etc.
- Browsing PC sites may incur high charges depending on subscribed price plan.
- Homepage

 ◆

 Connection starts



Internet Page

- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, press [17].
- 🔁 Highlight menu item 🕈 💽
 - Corresponding page opens.
- ② → Yes → Page closes

Returning to Previous Pages [Internet Page] → Previous page opens

Follow these steps to return to the initial page:

[Internet Page]
→ Forward

• •

Returning to Yahoo! JAPAN Home
[Internet Page] → Homepage
• •

User Authentication

Enter user ID or password ▶ • ▶

Using History
In ②, History ▶ ● Select record
▶ ●

Entering URLs Directly

In ②, Enter URL → ■ Enter URL → ■

Hiding Softkeys

Browsing in Wideview [Internet Page]

 Use Multi Selector according to page orientation.

Advanced

Switching browsers Using previously entered URLs Deleting History records Opening History properties Sorting History records Sending History records via mail (P.5-10)
Hiding navigation map for continuous scroll Changing scroll unit Hiding PC Site Browser messages (P.5-13)



Interne

If page content continues beyond view, use

to scroll pages.

Long Press
to scroll continuously.

Options 8 Back



Switching Frames

On framed pages, Long Press to switch active frame.



Frames

- In pointer navigation, point to a frame and press
 to select it.
- Otherwise, use 🚱 to select one.



■ To return, press .

Tabbed Browsing

Open another page in a new tab and switch between tabs.

- Opening a New Tab
- On a page, select menu item

 → □ → Tab Menu → •
- Open in New Tab → ■



- Switching Tabs
- (Long) ▶ Select tab
 - In pointer navigation, point to a tab and press
 to open it.

Closing Tabs





Looking up copied words in dictionaries
 Using Web Search
 Searching current page
 Jumping to page top/bottom
 Saving files to Data Folder
 Changing Font Size
 Enlarging specific areas
 Disabling automatic image display/sound playback
 Changing scroll unit (And more on P.5-11 - 5-13)

Selecting Text

Activate Drag Mode in pointer navigation to enable text selection. Select text to copy or look up words in dictionaries. Follow these steps to use a dictionary: (Text may not be selectable or linked page may open depending on the site or page.)

- On a page, point to first character → (Long)
 - Drag Mode activates.





- **3** •
- - Dictionary opens with text inserted.
- Search → Select word, etc. → •


Starting Over

After €, point to first character ▶ •

From ②

Additional Page Operations

Enter text or select/execute items.

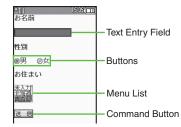

- Text Entry
- Enter text ▶
 - Internet page returns.

Using Entered Text (Input Memory)

- [Internet page] Select text entry field

 → → □ → Insert/Font Size → •
- → Input Memory → Select text
- **▶** •

- Pull-down Menu Item Selection
- 🔁 Select item 🕈 💽

- Page Item Indicators
- Selection Items
 Buttons or boxes appear.
- On a page, select button or box ▶ •



■ Execution Items

Execute the assigned command.

On a page, select command▶ •



Bookmarks

Bookmark sites for quick access.

Saving Bookmarks

On a page,
→ Bookmarks
→ → Add New Entry>

→ ●

Check/edit URL ▶ •

👔 Check/edit title 🕈 💽

Save ⇒ •

Opening Bookmarks

● → Yahoo! → ● →
Bookmarks → ●

Select title

Corresponding page opens.

Switching Bookmarks Lists

After ①, □ → Change List → ● → Select type → ●

Opening Bookmarks Online

[Internet Page]

→ Bookmarks →

Select title →

■

Saved Pages

Save page content; handset opens saved pages without connecting to the Internet.

Saving Pages

Some pages may not be saved.

On a page,

→ Saved

Pages → → Save (or

Register(Image Only)) → ●

 Select Register(Image Only) to capture page content as a screenshot.

If a confirmation appears, choose
 Yes and press

Check/edit title → ●

Opening Saved Pages



Select page

● Corresponding page opens.

Switching Saved Pages Lists
After ①, □ → Change List → ●

Select type

Opening Saved Pages Online

[Internet Page]

Saved Page

Saved

Advanced

Deleting titles Editing titles Changing title order Sorting titles into folders Deleting pages Editing page titles Changing page order (And more on P.5-13 - 5-14)

Internet

Updating Blogs & News

Register RSS-compatible sites; view content updates without opening source sites. Packet transmission fees apply.

Subscribing to RSS Feeds

Indicator below appears for RSS-compatible sites.

Available for PC Site Browser



Save ▶ •

 Choose *Yes* to update immediately or *No* and press

Via RSS Icons

Use RSS icons to subscribe to RSS feeds from sites that are not RSS-compatible.


Available for PC Site Browser.


On a page, select icon ⇒ •



Checking Updates

Follow these steps to update all feeds:

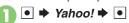

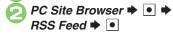



RSS Feed List

- 😱 Reload All 🖈 💽
 - If a message appears, follow onscreen prompts.
- 🔼 Select feed 🖈 💽



Title List

- Select title ▶ •
- Information appears.
 Updating Single RSS Feeds
 - [RSS Feed List] Select feed

 □

 Reload

 □
- If a message appears, follow onscreen prompts.

Accessing Source Sites

After ⑤, select linked title ▶ ● ≯

Yes ▶ ●

If a message appears, follow onscreen prompts.

Advanced



Deleting History

records

⇉
ᄍ
¥
⇉
ਜ
ž.

Connecting & Browsing General On a page, → Switch Browser → → This Switching browsers • A confirmation may appear when switching to PC Site Browser. Yahoo! Keitai Enter URL ⇒ • ⇒ □ → URL Entry Log ⇒ • Using previously Select URL ⇒ • • • entered URLs PC Site Browser PC Site Browser ⇒ ● ⇒ Enter URL ⇒ ● ⇒ □ ⇒ URL Entry Log ⇒ • Select URL ⇒ • • History Follow these steps to switch History lists: Start Here ● → Yahoo! → ● → History → ● →

See below

All Records

Single Record

Select record ⇒ □ → Delete → • → Yes → •

□ → Delete All → • Yes → •

Opening History	→ Yahoo! →
properties	record ⇒ 🖾 ⇒ Details ⇒ 🗨
Sorting History	→ Yahoo! →
records	Sort ⇒ ● ⇒ By Domain or By Date ⇒ ●
Sending History records via mail	
Memory Operation	
For PC Site Browse Browser Settings	r, perform the following sequence instead of
For PC Site Browse Browser Settings PC Site Browse	r, perform the following sequence instead of
For PC Site Browse Browser Settings	rr, perform the following sequence instead of
For PC Site Browse Browser Settings PC Site Browse Clearing cache	r, perform the following sequence instead of
For PC Site Browse Browser Settings PC Site Browse Clearing cache (temporarily saved	r, perform the following sequence instead of
For PC Site Browse Browser Settings PC Site Browse Clearing cache (temporarily saved information)	r, perform the following sequence instead of
For PC Site Browse Browser Settings PC Site Browse Clearing cache (temporarily saved information) Clearing cookies	r, perform the following sequence instead of



Page Operations

Some operations may be unavailable depending on the page.

■ Yahoo! Keitai & PC Site Browser

Using linked info	Dialing Numbers On a page, highlight number
	Sending Messages On a page, highlight number or mail address → ○ → Create Message → ○ → S! Mail or SMS → ○ → Complete message → □ • For mail addresses, omit mail type selection step.
	Saving to Phone Book On a page, highlight number or mail address → ● → Save to Phone Book → ● → As New Entry → ● → Complete other fields → □ • To add to an existing entry, select As New Detail.
Copying text	On a page, Copy Text Select first character Highlight text range Output
Looking up copied words in dictionaries	On a page, Copy & Search Dict. By Select first character By Highlight text range Select dictionary Select word, etc. Copy & Search Search Select word, etc. Select word, etc.
Using Web Search	On a page, → Convenient Functions → → Web Search → → Enter search text → →
Searching current page	On a page, Convenient Functions Search Search Enter search text Press to jump to next search result, if any.

Jumping to page top/bottom	On a page, Convenient Functions Jump In Page Page Top or Page Bottom
Opening page properties	On a page, → Convenient Functions → → Details → → Select item → ●
Sending URLs via mail	On a page, → Send URL → ● S! Mail or SMS → ● Complete message → □ • S! Mail Composition window opens automatically depending on character count.
	Start Here On a page, → Convenient Functions → → Flash®Menu → ● → See below
Handling Flash® files	Pausing/Playing Pause, Resume or Replay
	Selecting Image Quality Quality Select quality
Saving files to Data Folder	Start Here On a page, See below Save Items Save Items ■
	Files on Page Select file → ● → Save → ● → Enter name → ● → Save here → ● ● On a page with background image, select Save Items and press ● Ifirst. ● Some files are saved automatically. ● Be sure signal is strong, battery is charged adequately and that there is enough free memory beforehand. Background Images Save Background Image
	Enter name ■ Save here ■ ■ For pages consisting of a background image only, omit Save Background Image selection step.



Updating page content	On a page, → Reload → ● To update content in Saved Pages, open a page and follow the steps above. (Not available for pages captured via Register(Image Only).)
Changing encoding to read garbled text	On a page, □ → Settings → ● → Char-code → ● → Select option → ●
Opening function shortcuts	On a page,

Yahoo! Keitai

Changing Font	On a page, 34 (Long) to enlarge or 13 (Long)
Size	to reduce

■ PC Site Browser

Switching view	On a page, → PC Screen or Small Screen → ● In Small Screen view, PC sites are redesigned to fit Display.
Zooming on pages	On a page, 35 (Long) to enlarge or 15 (Long)
(Zoom Factor)	to reduce
Jumping to specific locations	On a page, 5₺ (Long) → Quick Movement map appears → Select target location → ●
•	
·	On a page, point to area ⇒ ¼ (Long)
Enlarging specific	On a page, point to area ⇒ 7-4 (Long) • Use to move pointer in enlarged view; highlight
Enlarging specific areas	On a page, point to area ⇒ 🍱 (Long)

Internet Page Settings

Yahoo! Keitai & PC Site Browser

For PC Site Browser, perform the following sequence instead of $\textit{Browser Settings} \Rightarrow \boxed{\bullet}$.

PC Site Browser ▶ ● PC Site Browser Settings ▶ ●

		, _ ,
	Disabling sutematic	Start Here ● → Yahoo! → ● → Browser Settings → ● → Downloads → ● → See below
	Disabling automatic image display/ sound playback	Image Display Images ⇒ ● Do not Show ⇒ ●
		Sound Playback Sounds ⇒ ● Do not Play ⇒ ●
	Changing Font Size	 Yahoo! Browser Settings Font Size Select size ■
	Setting pointer navigation	Start Here ● → Yahoo! → ● → Browser Settings → ● → Cursor Settings → ● → See below
		Activating/Canceling Cursor Mode Settings
		Changing Pointer Speed Speed Settings
	Using handset as primary download storage	● Yahoo! ● Browser Settings ● Download to ● Phone Preferred ● ● Some files may be saved to Memory Card regardless of this setting.



Yahoo! Keitai

Changing carell	→ Yahoo! → → Browser Settings →
Changing scroll unit	Scroll Unit ⇒ ● ⇒ Select unit ⇒ ●
	Effective when Cursor Mode Settings is Off

■ PC Site Browser

Hiding navigation map for continuous scroll	● Yahoo! ● ● PC Site Browser ● ● PC Site Browser Settings ● ● Scroll Settings ● ● Page Navigation ● ● Off
Changing scroll unit	● Yahoo! ● PC Site Browser ● PC Site Browser Settings ● Scroll Settings ● Scroll Unit ● Select unit ● Effective when Cursor Mode Settings is Off.
Hiding PC Site Browser messages	● Yahoo! ● ● PC Site Browser ● ● PC Site Browser Settings ● ● Warning Message ● ● Off ● ●

Streaming & Progressive Download

General

Customizing media playback settings	⇒ See below	
	Changing Playback Size Display Size ■ Select size ■ Playback size may not change depending on file.	
		Setting Backlight Status Backlight Select option Selecting Normal Settings applies Display Backlight settings.
		Adjusting Sound Effects Sound Effects Select effect ■

■ Streaming

	Start Here ● → Media → ● → Streaming → ● ⇒ See below
Streaming from	Resuming from Stopped Point Last Played
Media Player	Using Bookmarks Bookmarks
	Using History History Select record ■

Bookmarks

	Start Here ● → Yahoo! → ■ → Bookmarks → ■ → See below
Deleting titles	One Title Select title
	All Titles □ → Delete All → ● → Yes → ●
Editing titles	● * Yahoo! * • * Bookmarks * • * Select title * • * Edit * • * Title: * • * Enter title * • * *
Editing bookmarked URLs	● → Yahoo! → ● → Bookmarks → ● → Select title → □ → Edit → ● → URL: → ● → Edit → ● → □
Sending bookmarked URLs via mail	● ➤ Yahoo! → ● ➤ Bookmarks → ● → Select title → ○ → Send → ● → As Message → ● → S! Mail or SMS → ● → Complete message → □ ● S! Mail Composition window opens automatically depending on character count.



Changing title order	● → Yahoo! → ● → Bookmarks → ● → Select title → □ → Change Order → ● Select target location → ●
Opening title properties	● → Yahoo! → ● → Bookmarks → ● → Select title → □ → Details → ●
	Start Here ● → Yahoo! → ● → Bookmarks → ● → See below
	Creating Folders
	Moving to Folders Select title ▶ □ ▶ Move ▶ ● Select folder → ● → Move ▶ ●
Sorting titles into folders	Moving from Folders Select folder ⇒ ● ⇒ Select title ⇒ □ ⇒ Move ⇒ ● → Move ⇒ ●
	Renaming Folders Select folder ⇒ □ ⇒ Rename ⇒ ● Enter name ⇒ ●
	Deleting All Titles within a Folder Select folder Select title Select title Delete All Select title Select title Select title Select title Select title Select title Select title Select Sele
	Deleting Folders Select folder

Saved Pages	
	Start Here ● ⇒ Yahoo! ⇒ ● ⇒ Saved Pages ⇒ ● ⇒ See below
Deleting pages	One Page Select page
	All Pages □ → Delete All → ● → Yes → ●
Editing page titles	■ Yahoo! ■ Saved Pages ■ ■ Select page ■ Rename ■ Enter title ■
Changing page order	■ → Yahoo! → ■ → Saved Pages → ■ → Select page → □ → Change Order → ■ → Select target location → ■
Opening page properties	→ Yahoo! →
Switching page list view	● → Yahoo! → ● → Saved Pages → ● → Select page → □ → List View or Preview View → ●

RSS Feeds		
Disabling feed updates	RSS Feed Select feed Manage RSS Feed Select feed Manage RSS Feed	
	Start Here ● ⇒ Yahoo! ⇒ ● ⇒ PC Site Browser ⇒ ● ⇒ RSS Feed ⇒ ● ⇒ See below	
	Creating Folders	
Sorting feeds into folders	Moving to Folders Select feed ⇒ □ → Manage RSS Feed ⇒ ● Move → ● → Select folder → ● → Move → ●	
	Renaming Folders Select folder ⇒ □ ⇒ Manage RSS Feed ⇒ ● ⇒ Rename ⇒ ● ⇒ Enter name ⇒ ●	
	Deleting Folders Select folder	
	Start Here ● → Yahoo! → ● → PC Site Browser → ● → RSS Feed → ● → See below	
Deleting feeds	One Entry Select feed ⇒ □ ⇒ Delete ⇒ • Yes ⇒ •	
	All Entries → Manage RSS Feed → → Delete All → → Yes → ● • Alternatively, perform Delete RSS Feed List in	
	Memory Operation (PC Site Browser Settings) to delete all feeds.	

Sorting feeds	●	
Opening feed properties	■ Yahoo! → PC Site Browser → ● → RSS Feed → ● → Select feed → □ → Manage RSS Feed → ● → Details → ●	
Exchanging feeds with other devices	Start Here	
	Exporting All Feeds Export All	
	Importing (Adding Feeds) Import → ● → Select file → ● → As New Items → ● → Yes or No → ● If a confirmation appears, follow onscreen prompts.	
	Importing (Overwriting Existing Feeds) Import → ● → Select file → ● → Delete All → ● → Enter Handset Code → → Yes → ● → Yes or No → ● • If a confirmation appears, follow onscreen prompts.	
Sending feeds via mail	■ Yahoo! ■ PC Site Browser ■ HRSS Feed ■ Select feed ■ Manage RSS Feed ■ As Message ■ Complete message ■ W	



Security Settings

For PC Site Browser, perform the following sequence instead of Browser Settings **▶** •

PC Site Browser ▶ ● PC Site Browser Settings ▶ ●		
Disabling manufacture number auto send for authentication	● Yahoo! → ● Browser Settings → ● Security Settings → ● Manufacture Number → ● → Off → ●	
Disabling referer information delivery to the Server	Security Settings Security Settings Security Settings Security Settings Security Settings Security Se	
Enabling/disabling cookies	● → Yahoo! → ● → Browser Settings → ● → Security Settings → ● → Cookies → ● → Select option → ●	
Selecting script execution option	● Yahoo! ● Browser Settings ● Security Settings ● Script Settings ● Select option ● Select option ●	
Selecting automatic Flash® file download option	● Yahoo! ● ● Browser Settings ● ● Security Settings ● ● Flash® auto-download ● ● Select option ● ●	
Disabling Flash® video download	Yahoo!	
Opening electronic certificates saved on handset	● Yahoo! ● ● Browser Settings ● ● Security Settings ● ● Root Certificates ● ● Select certificate ● ●	

Changing validity of entered user ID/ password	● Yahoo! ● Browser Settings ● Security Settings ● Keep Auth Info ● Select option ● ● Per Browsing retains entered user ID/password during browsing sessions. On retains such authentication information even after powering off. ● Authentication information may not be retained depending on the site.
Suppressing confirmation before entering/exiting secure pages	● → Yahoo! → ● → Browser Settings → ● → Security Settings → ● → Secure Prompt → ● → Do not Show → ●

Resetting

For PC Site Browser, perform the following sequence instead of Browser Settings **▶ ●**.

PC Site Browser ▶ ● PC Site Browser Settings ▶ ●

Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.)	● → Yahoo! → ● → Browser Settings → ● → Initialize Browser → ● → Yes → ●
Restoring default handset settings	 ▶ Yahoo! ⇒ ● ▶ Browser Settings ⇒ ● ▶ Reset Settings ⇒ ● ▶ Yes ⇒ ●



Connecting & Browsing



What is the bar at Display bottom?

• This is a data progress bar; the number beside it indicates transmitted (green) or received (red) data.

Page Operations




Internet page does not open completely

• Portions of page content may not appear in tabbed browsing; close other tabs.



Text overlaps

- The site may be designed for browsing on PCs; try Tiny font size.
- Text may overlap when Zoom Factor is used; adjust scale.

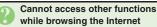

• Multi Job may be active. When switching between browsers, additional function activation is disabled; close either browser and retry.

Bookmarks



Cannot add Bookmarks

• <Add New Entry> is unselectable if storage limit is reached; delete titles.



Digital TV	6-2
Basics	6-2
Area Setup	6-3
Watching TV	6-4
Obtaining Program Information	6-6
Recording/Playing	6-7
Recording Programs	6-7
Playing Recorded Programs	6-8

TV Timer	6-
TV Timer & TV Recording Timer.	6-
Additional Functions	6-1
Troubleshooting	6-1

6

Digital TV



Basics

001SH supports One Seg terrestrial digital television broadcast services developed for mobile devices in Japan.

Watch Live Television

Set up a channel list for your service area to access available programming.

View Data Broadcasts

In addition to audio and visuals, enjoy text, program-related information and interactive services.

Record & Play Back Shows

Record current program on Memory Card for later viewing.

TV Listing (EPG) & Program Info

Find program channels and times, or open program details via current channel's schedule.

Reserve TV Programs

Record a show or activate TV at a specified time; enter dates & times manually or reference TV Listing electronic program guide.

Important Digital TV Usage Notes

- 001SH TV is exclusively for use in Japan.
- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- When using TV while charging battery, separate AC Charger and Antenna to avoid interference
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programs may not be viewable or record properly when:
 - Too far from or too close to broadcasting stations
 - In mountainous areas or near tall buildings
 - Aboard trains or in moving vehicles
 - Near high-voltage lines, neon lights or wireless base stations
 - Near railroad tracks or highways
 - Anywhere a jamming signal is broadcast/reception is unstable



Area Setup

When activating TV for the first time, follow these steps to set up channels by area:





Setup confirmation appears.





Select region ▶ •






• After setup, channel list appears.






To watch TV, select *Digital TV* and press ●.

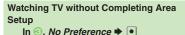

Adding Reception Areas

■ ▶ ■ ▶ Set Channels ▶ ■ ▶

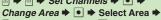

Digital TV Antenna

TV Antenna is located behind Display. Move handset to find best reception.







Watching TV

Complete Area setup (P.6-3) first.





TV Window

Use Keypad to select a channel

- Use o to switch channels one by one; Long Press to find channel with stable signal automatically.

- Press to toggle view between Full Screen, Normal (Portrait), Enlarge (Portrait) and Normal (Landscape).
- In portrait position, Data Broadcast appears below TV image.

Toggling [Function

 While watching TV in portrait position, press to toggle to toggle to toggle nuclion between volume control (Volume Operation mode) and Data Broadcast item selection (Data Operation mode).

Incoming Calls

• Press 🔊 to answer calls.

Incoming Messages

 Double beep sounds and New Message notice appears. Long Press to access messages.


Key Assignments

Open Options Menu	D
Toggle Panel On/Off	(in portrait) (in landscape)
Volume Control	ૄ 1*

^{*}In portrait position, Volume Operation mode.

Multi Selector

Multi Selector response changes with TV orientation.

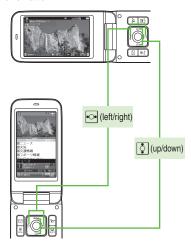

Advanced



Opening Help Searching for current program on the Internet Adjusting brightness Changing panel pattern in portrait position Changing handset responses to incoming transmissions, etc. (And more on P.6-10 - 6-11)
Changing subtitle settings Changing sound settings (P.6-12)

Panel Description




1	Area name	5	Station name
2	Channel key	6	Signal strength*
3	Channel	7	Sound Channel
4	Program name	8	Volume

*The more bars the better Indicator position varies with display content. etc.

Data Broadcast (Japanese)

In portrait position, Data Broadcast appears below TV image. Use 🐧 to select an item and press • to access program-related information and interactive services.


In Volume Operation mode, press v to switch to Data Operation mode first.

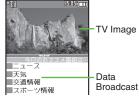

Data Broadcast Window

Data Broadcast Fees

- Data Broadcast information viewing is free, however, using data links/related services incurs Internet connection fees.
- A confirmation appears the first time a fee-based Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed.

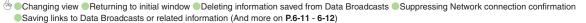



Obtaining Program Information

Find program channels and times, or open program details via current channel's schedule.

TV Listing	Start EPG S! Application to find program channels and times for specified area	
Program Info	Open program details via current channel's schedule; set Reservations to record shows or activate TV	

TV Listing (Japanese)



- EPG application starts; refer to the application's help menu for operational instructions.
- When using EPG application for the first time, a confirmation appears. Follow onscreen instructions.

Program Info







Program Info Window

- Select program **→**
 - To return to TV window, press we twice.

Setting Recording Timer via Program Info [Program Info Window] Select program **⇒** 🗹 **→** •

- Insert a Memory Card beforehand.
- To hide message, press 🖾 after 🛂.
- Timer entries set via Program Info are updated with program changes automatically. Program cancellations cancel corresponding Timer entries. (Poor signal conditions may inhibit updates or cancellations.)

Setting TV Timer via Program Info [Program Info Window] Select program **→** □ **→** *Watching* **→** •



Recording Programs

Record current program on Memory Card.

Precautions

- Saved files cannot be forwarded or attached to messages.
- 001SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank Mobile is not liable for any damages resulting from accidental loss or alteration of recorded content

In TV window, ● (Long) ▶ **Recording starts**



Recording Window

- · Changing volume, etc. does not affect recordings.
- When Small Light flashes orange. reception is poor; change location to where Small Light illuminates green.



Recording Programs in Portrait [TV Window] (Long)

- To stop, Long Press while recording. Memory/Battery Runs Low or Video Call/S! Circle Talk Request is Accepted
- Recording stops. (Recorded clip is saved.)

Digital TV



Playing Recorded Programs





Video List

• mi indicates the file is unplayable.



Select file **▶** •



Playback Window

• Playback starts. (The last played file plays from where it stopped.)



[☑] (Long) → Playback stops

Major Playback Operations

Adjust volume or temporarily enlarge a portion of widescreen image following the same operations used while watching TV.

Fast Forward	○ 1	
Rewind	1, 2	
Skip Forward	# v	
Skip Backward	X***	
Pause ³	• 4	
Split File	(Long)	
Set Marker	•	
Toggle Panel On/Off	53.0 6.17	

¹Each press increases speed. To resume normal playback, press .



²Long Press to replay. (Available when no Marker is saved.)

³In pause, use of to reverse/advance frame.

⁴In portrait position, Volume Operation mode.

TV Timer & TV Recording Timer

- In TV window, □ **P** Rec. Operation >
- Reservation List ▶ •
- New Entry → •
- or *Recording* **→** •
- Enter start date/time

 ▶ ▶ Enter end date/time
 ▶ ●
- Channel:

 ◆

 Select

Setting Timer via EPG

In ②, From TV Listing **→** •

■ Refer to the application's help menu for operational instructions.

Timer Recording Precautions

Confirm target channel reception; keep handset open.

- Insert a Memory Card.
- End the current operations.
- Be sure battery is charged adequately and there is enough free memory.

At Timer Time (TV Alarm Time)

TV and Alarm activate.



Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.

While Using Another Function

 TV activates via Multi Job and target program/recording starts. However, if Multi Job cannot activate in the current state, TV may remain off, or the current function may end automatically (unsaved images, messages, Phone Book entries, etc. may be deleted). End all active functions/applications before Timer time.





Area & Channel	
Switching reception Areas	While watching TV, → Set Channels → Change Area → Select Area
Renaming Areas	While watching TV, Set Channels Schange Area Select Area Change Area Mame Enter name Select Area Select Area Schange Area Name
	Start Here While watching TV, → Set Channels → Channel Key Setting → See below
Changing/disabling	Toggling All Receivable Channels By Manual ■
	Disabling Disable
	Start Here While watching TV,
Editing channels	Switching Channel Positions Flip
	Deleting Channels Delete
Deleting all channels in Area	While watching TV, Set Channels Set Channels Set Change Area Select Area Select Area Reset Settings Set Channels Set Chann
Adding new channels to Area	While watching TV, Set Channels Schange Area Select Area Channel Update Update Update Further
Updating all channels in the Area	While watching TV, Set Channels Change Area Select Area Channel Update Update All Yes ■

Watching	
Opening Help	While watching TV, → Help → → Also available while recording or playing programs.
Searching for current program on the Internet	While watching TV, → OperateProgram → Program Info. Search → ● → Search → ● Follow onscreen instructions.
Enlarging image portion in landscape	With TV in landscape, ☐ ☐ - 戶 (Long) Corresponding image portion is enlarged. May be unavailable depending on viewing style.
Saving current channel	While watching TV, □ → Set Channels → ● → Save Channel → ● → Select key → ● ■ To overwrite a saved channel, choose Yes and press ●.
Adjusting brightness	While watching TV, → AV Settings → Set Brightness → → Adjust level → •
Selecting sound option	While watching TV, □ → AV Settings → • → Tone → • → Select option → •
Changing panel pattern in portrait position	With TV in portrait, □ → Advanced → ● → Panel Type → ● → Select pattern → ●



	Start Here With TV in landscape, Advanced Set Landscape See below
Customizing viewing options for	Showing Indicators Always Display Icon
landscape position	Disabling Partial Image Enlargement Magnify Area
	Using Portrait Position Key Assignments Key Direction
Switching One Seg services	While watching TV, Select Serv. Station Available for programs with multiple services. ■ Available for programs with multiple services.
Listening to audio from Speaker	While watching TV, → Advanced → → Sound Output → → Loudspeaker →
Switching audio output to wireless device	● → TV → ● → Settings → ● → ⊗Sound Output → ● → Bluetooth Device → ●
Using wireless Headphones	While watching TV, [□] (Long) • Pair SCMS-T DRM scheme compliant Bluetooth [®] headphones beforehand.
Setting TV to end automatically after a period of time	While watching TV,
Disabling auto shut-off when handset is closed	While watching TV, $\bigcirc \Rightarrow Advanced \Rightarrow \bullet \Rightarrow$ $Auto Exit \Rightarrow \bullet \Rightarrow Close Action \Rightarrow \bullet \Rightarrow Watch$ $TV \Rightarrow \bullet$

	Start Here ● → TV → ● → Settings → ● → Calls & Alarms → ● → See below
Changing handset responses to	Showing Alarm Notice Alarm
incoming transmissions, etc.	Showing Voice Calls, Etc. Select item
	Showing New Message Window Incoming Message

Broadcast Data	
Changing view	With Data Broadcast in portrait, SetBroadcastData Change View (Data) To return to TV window, press To return to TV window.
Returning to initial window	With Data Broadcast in portrait, SetBroadcastData ■ Back to Top ■
Deleting information	Start Here While watching TV, □ → SetBroadcastData → ■ → Delete StationData → ■ → See below
saved from Data Broadcasts	Deleting by Station Select station
	Deleting All □ → Delete All → ● → Yes → ●
Suppressing Network connection confirmation	While watching TV,



Sending/hiding Location Information	Start Here While watching TV, → SetBroadcastData → Location → → See below
	Sending Always On
	Hiding Always Off
Hiding manufacture number and other information	While watching TV,

TV Link (Japanese)

TV LINK (Japanese)		
Saving links to Data Broadcasts or related information	While viewing Data Broadcast, select link source ■ Link navigation varies by program. Follow onscreen instructions to save links.	
	Start Here ● → TV → ● → TV Link → ● → See below	
Using TV links	Opening TV Links Select link • • Connection fees may apply.	
	Opening Properties Select link	
	Start Here ● → TV → ● → TV Link → ● → See below	
Deleting TV links	One Entry Select link ⇒ □ ⇒ Delete ⇒ • → Yes ⇒ •	
	All Entries □ → Delete All → ● → Yes → ●	

Subtitle & Sound	
	Start Here While watching TV,
	Showing Subtitles Always Display Subtitle On On ●
Changing subtitle settings	Hiding Subtitles Always Display Subtitle
	Changing Subtitle Language Subtitle Language ■ Language 2 ■
	Showing Subtitle Area Always Auto Subtitle Off
	Showing Subtitles at the Top Subtitle Position ■ Upper ■
	Start Here While watching TV,
Changing sound settings	Selecting Sound Option Sound Type → Sound2
settings	Listening to Sub Language Sound Channel
	Listening to Main & Sub Languages Sound Channel ■ Main + Sub ■



Recording

Recording programs without Data Broadcasts	While watching TV, □ → SetBroadcastData → Set Recording → ● → Image Only → ●
Saving Data	While watching TV,
Broadcast images	▶ Image Location ▶
to handset	▶ •

Recorded Programs

Playback

Splitting files by specifying a time point	During playback,
Playing files	→ TV →
repeatedly	Playback Pattern ⇒ ● ⇒ Repeat ⇒ ●
Playing split files	→ TV →
Flaying split files	split file

■ Managing

i Managing	
Selecting multiple files	Start Here ● ⇒ TV ⇒ ● ⇒ TV Player ⇒ ● ⇒ □ ⇒ See below
	Selecting Select file
	Selecting/Unchecking All
Checking memory status	→ TV →
Renaming files	→ TV →
	Start Here $\bullet \Rightarrow TV \Rightarrow \bullet \Rightarrow TV$ Player $\Rightarrow \bullet \Rightarrow$ See below
Deleting files	Single Files Select file
	All Files □ → Delete All → ● → Yes → ●
Opening file properties	→ TV →



Start Here During playback → See below Skipping between Markers Plaving files with (Long) or
 □ (Long) Markers Moving to Specific Markers 0 12 - 9 miz Start Here During playback,

→ Set Marker →

• Starting Playback Select number ⇒ • **Using Marker List Deleting a Marker** Select number ⇒ □ → Delete ⇒ • **Deleting All Markers** □ → Delete All → • Yes → •

TV Timer & TV Recording Timer

Start Here While watching TV.
Rec. Operation Reservation List
 See below **Opening Entries** Opening/editing/ **Editing Entries** deleting Timer Select entry ⇒ □ ⇒ Edit ⇒ • Edit ⇒ □ details • Some entries may not be edited depending on the content. **Deleting Entries** Select entry ⇒ □ ⇒ Delete ⇒ • → Yes ⇒ • Start Here While watching TV,

→ Rec. Operation → ● Reservation List • • • • See below **Opening Timer Log** Opening/playing/ Select record ⇒ • deleting Timer log **Playing Recorded Programs** records Select record ⇒ □ **Deleting Records** Select record ⇒ ¬ → Yes → • Start Here While watching TV,

→ Rec. Operation ⇒ Reservation List ⇒ • ⇒ TV Alarm ⇒ • See below **Changing TV Alarm Time Customizing TV** Alarm Time ⇒ • Select time ⇒ • Alarm settings Disabling Tone/Vibration/Small Light Alarm, Vibration or Light ⇒ • → Off ⇒ • **Changing Duration** Duration ⇒ • Select time ⇒ • Prioritizina current ● → TV → ● → Settings → ● → TV Reserve operation over TV Prior ⇒ • → Off ⇒ • Timer/TV Recording Timer

Watching



TV won't activate

 Battery may be low. Charge battery or install a charged battery.



Cannot watch TV

- · Reception may be poor; change location to improve it. (TV signal strength is independent of handset signal strength.)
- Handset may not have been used for a period of time: retrieve Network Information.
- TV is disabled upon subscription termination



Area setup does not complete correctly

• Perform Update All in Channel Update. Area setup may not complete correctly depending on the area or service availability.

Recording



Ringtone does not sound as set while recording

• When a Chaku-Uta® file, etc. is set as ringtone, default ringtone may sound for incoming transmissions while recording.

TV Recording Timer



Could not start recording. appeared as recording result

 Recording failed due to low battery/ memory, active function, etc.



Recording aborted. appeared as recording result

 Recording was interrupted due to low memory.



Camera	7-2
Getting Started	7-2
Photo Camera	7-4
Capturing Still Images	7-4
Video Camera	7-5
Recording Video	7-5
Review	7-6
Opening Saved Files	7-6
Shooting Modes	7-7
Using Shooting Modes	7-7

diting Images	7-8
Picture Editor	7-8
Composite	7-11
Printing	7-12
Printing Images	7-12
Additional Functions	7-13
roubleshooting	7-16



Camera & Imaging



Getting Started

Capture still images or record video.

Various Image Sizes

Select small sizes to send captured images/recorded video via S! Mail*: select larger sizes for higher resolutions.

Auto Focus

Measures the distance between subjects and camera to adjust focus.

Multiple Shooting Modes

Apply effect or add frame, or capture successive images.

Review

Open/play last saved mobile camera file quickly; access older files as needed.

Important Mobile Camera Usage Notes

- Clean dust/smudges from lens cover with soft dry cloth before use.
- Mobile camera is a precision instrument, however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Exposing lens to direct sunlight may damage color filter and affect image color.

Auto Shut-off

• Before image capture/recording, mobile camera shuts down after a period of inactivity and handset returns to Standby. **Shutter Click**

 Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.




^{*}May not be delivered as sent depending on image/recording size or recipient device.

Display Indicators


The following indicators appear at the top of Display.

Photo Viewfinder

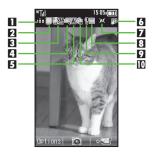

1	Memory	6	Save to
2	Picture Quality	7	Focus
3	Picture Size	8	White Balance
4	Continuous Shoot	9	Exposure
5	Scene	10	Self-timer

Video Viewfinder

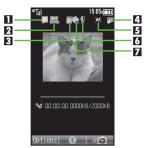

1	Video Quality	5	Focus
2	Record Size	6	Exposure
3	Record Time	7	Self-timer
4	Save to		

Camera & Imaging

Capturing Still Images







Photo Viewfinder





Captured Image Window

 Shutter clicks; captured image appears. (To discard file and start over, press ...)



- Image is saved. (Viewfinder returns.)
 - Open saved images via Review or Data Folder.



Sending Captured Images via Mail [Captured Image Window]

Complete message


□

■ Pre-Image Capture Operations

Zoom In/Out	ै/♀
Toggle Mode	¥2)
Adjust Brightness	● / ●
Change Image Size	5 m
Open Help	0 pt

*May be unavailable depending on image size.



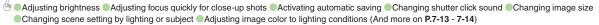

Recording Video





Video Viewfinder



· Recording starts after a tone. (To start over, press .)







Video Save Menu

• Recording stops with a tone. (To discard file and start over, press ...)



- Video is saved. (Viewfinder returns.)
- Play saved video via Review, Data Folder or Media Player.

→ Camera shuts down

■ Pre-Recording Operations

Zoom In/Out	ै/ੵ
Toggle Mode	Ψ/
Adjust Brightness	•/•
Change Record Size	5 m
Open Help	0 ₂₋₆

Playing Unsaved Video In ②, Preview ▶ •

Sending Recorded Video via Mail

In ②, Send ▶ • Save and Send

→ Complete message →

□ ■ May not be delivered as sent depending

on recording size or recipient device.


Incoming Calls

 If a call arrives before video is saved. recorded clip is temporarily saved. End the call to return.

If Battery Runs Low

· Recording stops. (Recorded clip is saved.)



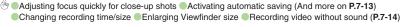



Opening Saved Files

Opening Last Saved File

Open/play last saved mobile camera file; access older files as needed.















Review Window

List

To end, press
 ☼

Options Zoon

Enlarging Images

After 2, •

Pausing/Resuming Video

After (2), (press to pause/resume)

Opening Help

[Review Window] Des

Accessing Older Files

In Review window, 🔄



Review File List

- File list appears.
- Press 🖭 to toggle lists.






Using Shooting Modes

May be unavailable depending on selected image/recording size.

Self-timer



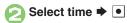



- After selected time elapses, captured image appears or recording starts.
- To stop recording, press
- For more, see operation descriptions on P.7-4 or P.7-5.

Releasing Shutter during Countdown After €, ●

Incoming Calls/Alarm during Countdown

Countdown stops. (Self-timer remains active.)

Continuous Shoot (Photo Camera)

Available Modes:

4 Pictures	Capture four separate images with Index Image
9 Pictures	Capture nine separate images with Index Image
Overlapped	Capture five images to create a composite image





Mode Menu

- 🔎 Continuous Shoot 🕈 💽
- Select mode

 Select mode

 Select speed

 Select


 Sele
- Frame subject on Display
 - After image capture, Index Image or a composite image appears.
 - When shooting speed is set to Manual (4 Pictures and 9 Pictures modes), repeat ② for each frame.



Adding Frames (Photo Camera)





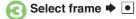



- Captured image appears.
- Press to save image. (Viewfinder returns.)





Picture Editor

Picture Editor Options

The following options are available. Some images may not be editable depending on file type and size.

Resize	Select from preset sizes or crop image
Frame	Add Frame to images
Paste	Add text/dates to images
Retouch	Dress up images with preloaded visual effects
Stamp	Add stamps to images
Face Arrange	Make smiley, angry or sad faces
Correction	Correct images
Rotate	Rotate images
File Format	Convert file format and change file size

Basic Operation





- Picture Editor ⇒ ■



Picture Editor Menu

- Select effect ▶ Fdit
- 🌎 When finished, 🔄
- 🥏 Save as New 🕈 💿
 - To overwrite, select *Overwrite* and press ●. (Omit ⑤.)
- Enter name

 Save
 here

 Save

Canceling Effects

After ⊕, Undo ⇒ •

■ To restore effect immediately after canceling, select *Redo* and press ●.



Changing Image Size

Select from preset sizes or crop image.

Resize to Preset Size

In Picture Editor menu, Resize

▶ •



Resize Window





• If crop frame does not appear, omit 3.

• Editing is complete.

Zooming In/Out



Cropping Images

In Resize window, Cut ▶ •

Move + to the upper left corner of the portion to crop



Move + to the lower right corner of the portion to crop

Editing is complete.

Specifying Image Area After €, 🖓 🖈 🙆 Zooming In/Out After €, □ → 🖸 → 🕘

Applying Visual Effects

Render in sepia tones or add blur, etc.

In Picture Editor menu, Retouch

●

Select effect

●

• Editing is complete.

Adding Frames

In Picture Editor menu, Frame **→** •

Select frame **→**

• Editing is complete.

Face Arrange


Make faces smiley, sad, etc.

In Picture Editor menu, *Face Arrange*

●



Face Arrange Menu

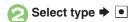



Editing is complete.

Important Face Arrange Usage Note

 When using Face Arrange, take care not to create images that may embarrass or offend others. Always obtain permission before photographing others.

Adjusting Positions

Change the default positions and sizes of targets to fit the image.



- ightharpoons
- A rectangle appears with + in the upper left corner.
- Move + to top left of face

 → □
- Move + to bottom right of face







 Face line is set. Set the eyes and then mouth in the same way.



 Image is saved as a new entry with Face Arrange positions adjusted.
 Complete Face Arrange. Face Arrange is applied to the adjusted positions.



Composite

Composite Options

The following options are available. Some images may not be editable depending on file type and size.

	Combine up to four reduced images into one
Merge	Combine two still images
Panorama	into one

Panorama Images

Panorama Image Effects:

	Near View	Best suited for close-up shots
	Document	Use for images with text
Γ	Standard	Apply to other images













- File selected in ② is set as left image.
- ⟨Empty⟩

 Select image

 Output

 Select image

 Output

 Outpu
- EFFECT → → Select effect →
 - Editing is complete.
- - Merged image appears.









Printing Images

Digital Print Order Format (DPOF)


Select images from Memory Card and specify the number of copies to print on DPOF-compatible printers, or at digital printing services.

DPOF settings made on other devices are unusable; delete existing settings to create new ones on handset.





Number of Copies ⇒ ■

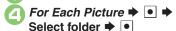





Enter a number of copies to print ▶ ●

• For more settings, repeat 😇 - 🙃.



Applying a Number to All Images
In ②, For All Pictures ▶ ● ▶ Enter
a number of copies to print ▶ ●
Canceling Specified Number
In ③, enter 00 ▶ ● ▶
Viewing Current Print Settings
In ③, Check Settings ▶ ●

Using Printers

Connect handset to a Bluetooth®-compatible printer and print images in Pictures folder.

- Activate Bluetooth[®] on the printer.
- Some images may not be sent depending on file type and size.



Via Bluetooth

Select printer

■

Yes

To cancel, press

To cancel.

When Authorization Code is Required Enter Authorization Code ▶ •



Photo Camera & Video Camera General In Photo/Video Viewfinder, → Help → • **Opening Help** • Press related to toggle Help window for key assignments and indicator descriptions. Capturing In Photo/Video Viewfinder, → Shooting Settings or Record Settings ⇒ • Exposure Adjusting brightness → Adjust level **Adjusting focus** In Photo/Video Viewfinder. Shooting quickly for Settings or Record Settings ⇒ • Focus Setting or Focus ⇒ • Macro ⇒ • close-up shots In Photo/Video Viewfinder. Shooting Settings or Record Settings ⇒ ● Focus Adjusting focus manually → ○ Adjust focus → ● • To readjust focus, press 🛐 In Photo/Video Viewfinder. Locking focus • Frame subject in center of Display first. • To cancel Focus Lock, press . Changing image In Photo/Video Viewfinder. → Picture Quality or *Video Quality* ⇒ • Select quality ⇒ • quality Saving In Photo/Video Viewfinder. □ → Settinas → • Activating automatic saving Auto Save ⇒ • on ⇒ on In Photo/Video Viewfinder. □ → Settinas → • Setting save Save Pictures to or Save Videos to ⇒ • location Select option ⇒ •

■ General		
Changing shutter click sound	In Photo Viewfinder,	
Hiding indicators	In Photo Viewfinder, → Settings → → Display Icons →	
Selecting send option assigned to 🔄	In Photo Viewfinder, Settings Settings Set Send Key Short Press or Long Press Select option Select send option separately for each key press method.	
Releasing shutter remotely with a Bluetooth® watch	In Photo Viewfinder, press the corresponding button on Bluetooth® watch Connect handset to a Bluetooth® watch and set Set Remote Shutter to <i>On</i> beforehand. For details, see the Bluetooth® watch guide.	
Disabling remote shutter control via Bluetooth® watches	In Photo Viewfinder, → Settings → Set Remote Shutter → Off → • Available when a Bluetooth® watch is registered.	
Changing focus frame design	In Photo Viewfinder, → Shooting Settings → Focus Setting → Focus Mark → Select pattern → ●	

Photo Camera



Select scene ⇒ •

Adjusting image In Photo Viewfinder, Shooting Settings color to lighting conditions

Video Camera

Recording

without sound

In Video Viewfinder.
Record Time/Size Changing ● → For Message or Extended → ● → Select recording time/size size 🗼 💿 In Video Viewfinder, □ → Display Size → • **Enlarging** Viewfinder size Enlarge 🗼 💿 In Video Viewfinder,

→ Microphone →

→ Recording video

Off ⇒ •

Editing Images

■ Picture Editor

● ⇒ Select file ⇒ • ⇒ □ ⇒ Edit ⇒ • ⇒ Picture Editor ⇒ • See below Changing Text/Outline Color Paste ⇒ • ⇒ Select text color ⇒ • ⇒ Select outline color ⇒ • ⇒ ¬ **Adding Text** Paste ⇒ • Free Text ⇒ • Enter text ⇒ → • Move text → Adding Dates Paste ⇒ • Date ⇒ • Move date ⇒ • Using additional Adding Stamps editing options Stamp ⇒ • Select stamp ⇒ • Move stamp 🔷 🔳 **Correcting Image Parameters** Correction ⇒ • ⇒ Select type ⇒ • ⇒ • Rotating Images

Rotate ⇒ • Select type ⇒ • •


File Format ⇒ • File Format ⇒ • •


 Changing file format may affect file size/image quality. • To return to Picture Editor menu, press

Converting File Format

Camera & Imaging

	Start Here
Using additional editing options	Changing File Size File Format → ● → File Size → ● Select size → ● • Changing file size may affect image quality.
	To return to Picture Editor menu, press
Composite	

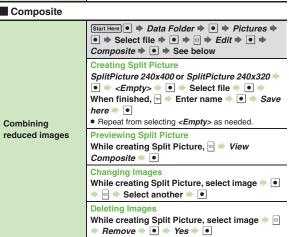

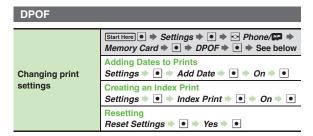

Mobile Camera



Mobile camera won't activate/ shuts down automatically

 Battery may be low. (Video Camera does not activate if battery is low.)
 Charge battery or install a charged battery.



Cannot use Auto Save

 Auto Save is not available when Save Pictures to is set to Ask Each Time.

Editing Images



Cannot save/send edited images

 Edited images may be too large to save or send via mail.

DPOF



Cannot specify print settings properly

 If Memory Card image files have been deleted or renamed on PCs or other devices, reset print settings and start over with settings.

Media Player	8-2
Media Basics	8-2
Music	8-4
Playing Music	8-4
Video	8-5
Playing Video	8-5

Playlists	8-6
Using Playlists	
S! Appli	8-7
Using S! Applications	8-7
Additional Functions	8-8
Troubleshooting	8-12

8

Media Player & S! Applications



Media Basics

Use Media Player to play music/video on 001SH.

- Download media files from Mobile Internet sites via Media Player directly.
- Transfer PC music files and save them on Memory Card.

Music File Support

My Music

(Handset/Memory Card)

Downloads/Transferred Files

Video File Support

My Videos

(Handset/Memory Card)

Downloads/Recorded Files

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming/progressive download).
 Packet transmission fees apply even while playback is paused.

Compatibility

• Files transferred from PCs cannot be used as ringtones or System Sounds.




Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.







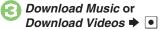

Follow the links to download media

Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

Saving AAC Files

Convert PC music files to 001SH-compatible format (**P.15-21**), then save to corresponding Memory Card folder (**P.15-23**) via Card Reader Mode.

Install USB Cable driver beforehand.



Playing Music

- → Media → → Music
- My Music → Select tab (folder)



Music Playlists Window

- All Music ▶ •
- 🔼 Select file 🕈 💽

Advanced



Music Playback Window

 Album art appears for compatible Chaku-Uta Full[®] files.

Using Other Functions while Playing Music After ②, or ③

■ To stop playback, follow these steps in Standby:

③ → Yes → •

Searching Music Files

After ⓒ, ☐ → Search → ● ► Enter search text → ●

Lyric Display-Compatible Files

● Press [w] to display lyrics.

Music Playback Operations

Replay	(Long Press: Rewind*, Double Press: Skip Backward)
Skip Forward	(Long Press: Fast Forward)
Volume Down	(Long Press: Mute)
Volume Up or Cancel Mute	•
Pause	•
Stop	In Pause,
Switch Sound Output	(Long)
Open Help	0 ½ t

Music Playback Window Description



1	Title	6	Elapsed time
2	Artist name	7	Volume
3	Track number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		·
		-	



^{*} Resuming from stopped point Specifying start point Accessing linked information Switching audio output to wireless device Playing repeatedly or randomly Changing Sound Effects (P.8-8)

^{*}Release for playback.

Playing Video

- Media → Videos
- My Videos → Memory Card or Phone Memory → ●



Video Playlists Window

- All Videos → ●
- Select file ⇒ •



Video Playback Window



Searching Video Files



- At Alarm Time
- Playback pauses.

Video Recorded on Other Devices

Video image may appear rotated.


Video Playback Operations

For pause, volume up/down, sound output or help, see **P.8-4** "Music Playback Operations."

Replay	(Long Press: Rewind*, Double Press: Skip Backward)	
Skip Forward	(Long Press in Pause: Advance Frame, Long Press: Fast Forward')	
Interface On/Off	29	
Toggle Display Size	2 ⁵ / ₄₅ .	
*D (


Release for playback.

Video Playback Window Description

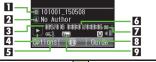

1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

Advanced

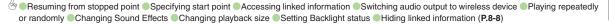



Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.

Adding to Playlist

Follow these steps to add a music file to プレイリスト1:







Playlists Window

- All Music

 ◆

 Select file
- Add to Playlist $\Rightarrow \bullet \mathcal{I} \mathcal{V}$ イリスト1 ⇒ •

Renaming Playlists

- In Playlists window, select Playlist **▶** □
- Edit List Title

 Enter name **→** |•|



Using S! Applications

Try out the preloaded S! Applications or download and use 001SH-compatible S! Applications, including games. Refer to the S! Application's help menu or the source website, etc. for operational instructions.





S! Appli Library



Network S! Applications

 A message appears indicating that Internet connection is required. Follow onscreen instructions.

Incoming Calls

 Incoming calls automatically pause S! Application. Exiting S! Applications







Pausing S! Applications
In ∅, Suspend ♦ •
Resuming S! Applications
• ♦ Resume ♦ •

 Select Cancel to open Main Menu and keep the S! Application paused.
 (Additional function activation may be

disabled depending on the S! Application.)

Select *End* to exit the S! Application.

<u>Advanced</u>

⑤ Downloading S! Applications ⑤ Adjusting S! Application sound volume ⑥ Canceling surround effect ⑥ Setting handset responses to incoming transmissions, etc. ⑥ Setting S! Application to activate in Standby ⑥ Setting Permissions ⑥ Opening properties ⑥ Moving S! Applications to Memory Card ⑥ Changing S! Application settings ⑥ Deleting S! Applications ⑥ Restoring default S! Application settings ⑥ Permissions ⑥ Restoring default S! Application settings ⑥ Permissions ⑥ Restoring default S! Application settings ⑥ Permissions ⑥ Per



Media Playback ■ Music & Video Resuming from ● → Media → ● → Music or Videos → ● stopped point Last Played Music or Last Played Video ● ■ During playback, → Time Search → → Specifying start point Accessing linked information → Yes → • ● → Media → ● → Music or Videos → ● → Switching audio output to wireless Bluetooth Device ⇒ • device

Music

	Start Here During playback, → Playback Mode → See below
	Repeat One File Repeat ●
Playing repeatedly or randomly	Repeat All Files Repeat All
	Play Randomly Random
	Repeat Randomly Random Repeat ●
Changing Sound Effects	During playback,

■ Video

	- video	
		Start Here During playback, → Settings → Playback Mode → → See below
Playing	Playing repeatedly	Repeat One File Repeat ●
	or randomly	Repeat All Files Repeat All
		Play Randomly Random
	Changing Sound Effects	During playback, → Settings → → Sound Effects → ● → Select effect → ●
	Changing playback size	During playback, → Settings → → Display Size → → Select size → ●
	Setting Backlight status	During playback,
	Hiding linked information	During playback, → Settings → → Web Link Setting → → Off →



Managing Music Files Start Here Media Music My Music ⇒ • Select tab (folder) ⇒ See below Adding New Playlists Add New Playlist ■ Enter name **▶** • **Deleting Playlists Organizing Playlists** Yes ⇒ • **Deleting Playlist Files** Delete ⇒ • Yes ⇒ • **Changing File Order** Change Order ⇒ • Select target location ▶ ● ● → Media → ● → Music → ● → My Music → Image: Property of the Sorting files ● ⇒ Sort ⇒ • Select option ⇒ • ● → Media → ● → Music → ● → My Music → Image: Playlist → Opening properties ⇒ Select file ⇒ □ ⇒ Details ⇒ • ● → Media → ● → Music → ● → My Music Downloading → Image: Plant Select Plan **Contents Keys** ⇒ Select file (with) ⇒ Yes ⇒ • Follow onscreen instructions.

	Managing video Files		
	Organizing Playlists	Start Here	
		Adding New Playlists	
		Deleting Playlists Select Playlist → □ → Delete Playlist → ● → Yes → ●	
		Deleting Playlist Files Select Playlist ■ Select file Delete • Yes ■	
		Changing File Order Select Playlist ■ Select file □ Change Order ■ Select target location ■ ■	
	Sorting files	● Media ● Wideos ● My Videos ● Memory Card or Phone Memory ● All Videos ● Sort ● Select option ●	
	Downloading Contents Keys	● Media ● Wideos ● My Videos ● Memory Card or Phone Memory ● All Videos ● Select file (with 10) ● Yes ● ● • Follow onscreen instructions.	
	Opening properties	● Media → Videos → My Videos → Memory Card or Phone Memory → Select Playlist → Select file → Details → ●	



S! Applications		
Downloading S! Applications	● \$! Appli ◆ ● \$! Appli Library ◆ ● Download \$! Appli ◆ ● Follow onscreen instructions.	
Adjusting S! Application sound volume	S! Appli Settings Application Volume Adjust level	
Canceling surround effect	● ⇒ S! Appli ⇒ ● ⇒ Settings ⇒ ● ⇒ Surround ⇒ ● ⇒ Off ⇒ ●	
	Start Here ● ⇒ S! Appli ⇒ ● ⇒ Settings ⇒ ● ⇒ Calls & Alarms ⇒ ● ⇒ See below	
Catting handast	Showing Calls Select item	
responses to incoming transmissions, etc.	Pausing S! Application for Incoming Mail Incoming Message	
	Showing Alarm Notice Alarm	
	Showing S! Appli Notice Notification	

	Start Here Star
Setting S! Application to activate in Standby	Activating Screensaver Settings Screensaver Switch On/Off On On On On On On On On On O
	Setting Screensaver S! Appli Library Select application As Screensaver Switch On/Off is set to On. As Screensaver appears for compatible S! Applications. Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.
	Changing Screensaver Activation Time Settings Screensaver Activation Time Find the screen in
	Disabling Automatic Screensaver Restart Settings Screensaver Stop Auto Start On On On On On On On On On
	Start Here ● ⇒ S! Appli ⇒ ● ⇒ S! Appli Library ⇒ ● ⇒ Select application ⇒ □ ⇒ Permission ⇒ ● ⇒ See below
Setting Permissions	Customizing Permissions for S! Appli Operations Select item Select option
	Resetting Permission Settings Reset Settings
Opening properties	S! Appli → S! Appli Library → Select application → Details →
•	

Moving S! Applications to Memory Card	S! Appli S! Appli Library Select application O(I/V) Complete selection OM Move to Card When an older version of the S! Application is saved, choose Yes or No and press OM S! Applications may not be moved to Memory Card.	
	Start Here ● ⇒ S! Appli ⇒ ● > Settings ⇒ ● ⇒ See below	
Changing S! Application settings	Setting Backlight Status Backlight → ● → Switch On/Off → ● Select option → ● • Selecting Normal Settings applies Display Backlight settings.	
-	Disabling Backlight Flashing Backlight	
	Disabling Vibration Vibration	
Deleting S! Applications	S! Appli Select application Delete Select application Delete Select application Delete	

Restoring default S! Application settings	S! Appli Settings Set to Default Yes
Restoring default S! Appli Library	S! Appli Step Settings Memory All Clear Memory All Clear Memory All Clear deletes all downloaded S! Applications.
Synchronizing Memory Card S! Applications with 001SH	S! Appli Settings Synchronization Yes O O O O O O O O O O O O O
Opening Java [™] license information	● ⇒ S! Appli ⇒ • Information ⇒ •



Music



How do I delete files in All Music?

• Delete All Music files in My Music via Data Folder (Music or Ring Songs-Tones).

Video



How do I delete files in All Videos?

 Delete All Videos files via Data Folder (Videos).



Cannot play video files

• Files created with PC software, etc. may not play.

S! Applications



Cannot move S! Applications to **Memory Card**

• Memory Card memory may be low.



S! Applications do not pause for incoming transmissions despite Calls & Alarms settings

• Regardless of setting, a notice appears for Screensaver S! Applications.



(S! Appli Notification indicator) does not disappear

- To delete 🕵, open the corresponding Information item as follows:
 - Phone > Information





Calendar & Tasks	9-2
Calendar	9-2
Tasks	9-6
Alarms	9-8
Using Alarms	9-8
Wakeup TV	9-10
Using Wakeup TV	9-10
Relaxation Time	9-12
Playing Animation with Music &	
Illumination	9-12
Household Accounts	9-13
Managing Household Expenses	9-13
Calculator	9-17
Using Calculator	9-17
Expenses Memo	9-18
Adding Expenses	9-18
Simulated Call	9-19
Faking Incoming Calls	9-19
Stopwatch	9-20
Using Stopwatch	9-20
Countdown Timer	9-21
Using Countdown Timer	9-2

World Clock	9-22
Opening World Clock	9-22
Hour Minder	9-23
Using Hour Minder	9-23
Notepad	9-24
Saving Text	9-24
ASCII Art	9-25
Using ASCII Art	9-25
Voice Recorder	9-26
Recording/Playing Voice	9-26
Barcode Reader	9-27
Scanning Barcodes	9-27
Create QR Code	9-28
Creating QR Codes	9-28
Scan Card	9-29
Scanning Business Cards	9-29
Scan Text	9-30
Scanning Text	9-30
Kanji Grabber	9-31
Using Kanji Grabber	9-31
Additional Functions	9-32
Troubleshooting	

9

Handy Extras



Calendar

Opening Calendar





Calendar Window

Toggling View

Press v to toggle Calendar window:



1Month View



2Month View



All Views

Open Previous Page	¥***
Open Next Page	# 5
Go to Current Date	5 m
Open Help	0 pg

■ 1Month/2Month View

Select Date	· ় •

■ Week View

Select Date	••
Select Time Block	•



Week View





Changing default view Jumping to specified date Changing date color Selecting task view option Adding stamps (1Month View) Hiding schedules Saving/editing additional holidays Hiding/showing holidays (P.9-32)

Follow these steps to save subject, Category, start/end date/time, Alarm and schedule details:


(Enter Subject or Description to save entry.)

In Calendar window, select date

●



<Add New Entry> ▶ •

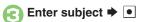



- Preset ⇒ Select Category **▶** •
- Enter start date/time

 ▶ •




End:


■ Enter end





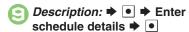



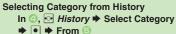

Selecting Custom Category In @. . Definable → Select All-Day Schedule

In ⑤. 🖻 **▶** • From ⓒ **Custom Alarm Time**

In ②, Alarm Time: → • Other → ● ► Enter date/time ► ● ► ►

From (3)





At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm to Return to Standby

● While Alarm sounds/vibrates, press ●,
③ or .

Stopping Alarm to Open Schedule

 While Alarm sounds/vibrates, press a key other than ●, ③ or .

When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

Opening Schedules/Tasks

In Calendar window, select date ▶ •



Schedule List

- 🕟 Select schedule or task Ϸ 💽
- Standby returns

Opening Task List In ⊘, select task ▶ □ ▶ Go to Tasks ▶ •

Temporarily

■ Enter Handset

Code

■

Opening Related Message

Open schedule-related messages saved from Messaging message list.

- In schedule list, select schedule ▶ •
- Related Mail
 Rel
 - Related message opens.
 To return to schedule winder
 - To return to schedule window, press

Deleting Message from Schedule

After ①, ● → Related Mail: → ● →

Yes → ● →

□



Advanced

Information Link

Set to show or hide the following information in Calendar.

Reservation	TV Timer and TV
List	Recording Timer entries
Birthday	Birthdays entered in Phone Book
What is today?	Preset anniversaries,
(Japanese)	commemorative days, etc.

- በ In Calendar window, 🖻
- Calendar Settings ▶ ■
- 🕟 Data to Show 🖈 💽
- Select item → (□/☑)
- 6

- Editing TV Timer/TV Recording Timer
- In schedule list, select entry
- Edit → ●
- Edit ▶ 🗹

Deleting Entries

In ②, Delete → • Yes → •

- Making Birthday Calls
- Call

 Select phone number

 Output

 Figure 1. Select phone pumber

 Output

 Figure 1
 - Omit number selection step if only one number is saved.

Sending Birthday Messages

In ②, Mail ⇒ ● ⇒ Select number/
address ⇒ ● ⇒ Complete message
⇒ ☞

- Omit number/address selection step if only one number or address is saved.
- For phone numbers, select *S! Mail* or *SMS* and press ●.

Deleting Schedules


- One Entry
- In schedule list, select schedule ▶ □
- Delete ▶ → This
 Appointment ▶ → Yes

 → ●
- All Entries of the Day
- In Calendar window, select date ▶ □
- Delete ⇒ ⇒ All This Day
 ⇒ ⇒ Yes ⇒ ●



Saving Tasks

Follow these steps to save subject, due date/time, Alarm and task details: (Enter Subject or Description to save entry.)

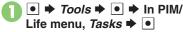



∠Add New Entry>

●





Enter due date/time



Alarm: 🖈 🖸

- Alarm Time:

 Select time

 Select
- Saved → Saved



Handy Extras

Advanced



At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm to Return to Standby

While Alarm sounds/vibrates, press ●,
 or ■

Stopping Alarm to Open Task

 While Alarm sounds/vibrates, press a key other than ○, ⑤ or .

When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

Opening Tasks





Task List

- Use to open Completed or Incomplete task list.
- Select task ⇒



Accessing Secret Entries

After ①, □ ♦ Unlock Temporarily ♦
□ ♦ Enter Handset Code ♦ □

Marking Tasks as Completed

After ①, select task ♦ □

Deleting Tasks

- One Entry
- \rceil In task list, select task 🕈 🖻
- Delete → ●
- This Task ⇒ Yes ⇒ ●
- All Completed Tasks
- In task list, □
- Delete → → All Comp.


 Tasks → → Yes → ●

Advanced



Setting Alarm

Follow these steps to set Alarm to sound at a specific time on a specific day of the week: (Set Snooze--Alarm repeats at set interval--Alarm Volume and Duration.)

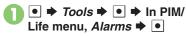



Alarm List









- Selected Days ▶ •
- Complete selection **⇒** 🔄
- • For custom intervals, select Other.
- Alarm Volume: ▶ •
- Adjust level **▶** •

- Select time **▶**
 - For custom Duration, select Other.
- y ⇒ Saved • For more settings, repeat @ - @.
- Standby returns

Activating Alarm Once or Daily In ②, Once or Every Day (All) ⇒ • From 🕞

- Selecting/Canceling All Days In ⑤. ☐ → Check All or Uncheck All
- **Excluding Holidays** In ⑤, select day ▶ ● (// /) ▶
 - Complete selection **⇒** Except
 - Holidays $\Rightarrow \bullet (\lor) \Rightarrow \lor \Rightarrow \mathsf{From} \ \bigcirc$

Duration: **▶** •



Advanced



Handy Extras

🖑 🌑 Editing entries 🜑 Saving entry name 🔍 Changing Alarm tone/video 🔍 Setting handset to vibrate at Alarm Time 🔍 Sounding Alarm tone even in Manner mode Activating Alarm based on World Clock time (P.9-36)

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm

• Press a key.

When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

When Snooze is Set

Alarm repeats at the set interval. Other Alarms do not activate while handset is Snoozing.

Canceling Snooze

While Snoozing, ● **Yes ●**

Snooze is automatically canceled after a period of time.

Canceling Alarm





 Reactivate entry to use the same settings.

Reactivating Entry

In ②, Switch On ▶ •

Deleting Alarm


■ One Entry

\rceil In Alarm list, select entry 🖈 🖻



🛐 Yes 🕈 💽

All Entries

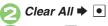



Setting Wakeup TV

Follow these steps to activate TV at a specific time on a specific day of the week:

- Complete TV Area setup beforehand.
- TV may not activate in poor signal conditions.



Wakeup TV List





Wakeup TV Menu

- 📵 Repeat: 🖈 💽
- Selected Days ⇒ ■
- Select day

 (□/☑)

 Complete selection

 □
- Channel: ▶ •
- Select channel 🖈 💿
- ► Saved For more settings, repeat ② - ③.
- Standby returns

Activating TV Once or Daily
In ②, Once or Every Day (AII) ▶ •

From ©

Selecting/Canceling All Days

In ⑤, ☑ **→** Check All or Uncheck All **→** ●

Excluding Holidays

Holidays $\Rightarrow \bullet (\bigvee) \Rightarrow \bigvee \Rightarrow \text{From } \bigcirc$

Canceling Alarm

 Alarm activates at Wakeup TV time. To cancel Alarm, follow these steps:

[Wakeup TV Menu] Alarm On/Off: →

• → Off → • From •

Adjusting Alarm Volume

[Wakeup TV Menu] Alarm Volume: →

■ Adjust level
■ From
⑤

Handy Extras

At Wakeup TV Time

TV activates after Alarm.



Stopping Alarm Instantly

- While Alarm sounds/vibrates, press a key.
 When Another Function is Active
- TV may not activate depending on the function.

After TV is On for a Period of Time

A confirmation appears. Choose *Yes* and press to exit TV.

Incoming Calls

- Active Alarm stops for incoming calls.
 - End the call to activate TV

Canceling Wakeup TV

- In Wakeup TV list, select entry ▶ □
- Wakeup TV Off → Reactivate entry to use the same

In ②, Wakeup TV On ▶ •

settings.

Reactivating Entry


Deleting Wakeup TV

- One Entry
- In Wakeup TV list, select entry ▶ □
- Reset Alarm → ■
- Yes **→** •
- All Entries
- In Wakeup TV list, select entry ▶ □
- Clear All → •
- 🍞 Yes 🕈 💽

Playing Animation with Music & Illumination

Play preset animations or downloaded Flash® files with music and illumination. Set playback time and volume as needed.



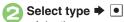

- Animation appears.
- For *Flash*®, select a file and press •.
- Message appears when Playback Time is set to *Continuous Play* (except when charging battery); press • to proceed.

Setting Relaxation Time

Follow these steps to set playback time and volume:

- → Tools → In PIM/ Life menu, Relaxation Time • ●
- Settings ⇒ •



- 😱 Playback Time 🖈 💽
- Select time
 For custom playback time, select Other.
- 🕞 Volume 🖈 💽
- 🖺 Adjust level 🕈 💽



Managing Household Expenses


Saving Entries

Scanning Receipts

Scan receipts with mobile camera to enter date, expense items, fees/prices and total amount automatically.

Scan may fail if receipt is too long, folded, faded, etc.; some formats are not supported.

• **→** *Tools* **→** • **→** In PIM/ Life menu, Household

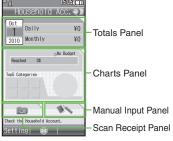

Household Accounts Window



Frame receipt on Display



Scan Window

• Frame date, expense items and total amount. Align text parallel to reference lines.



• To cancel, press 🗹.

Scan results appear



• To add, delete or edit expense items, see P.9-14 "Entering Manually."



• Entry is saved.

Opening Operation Guide [Scan Window] 2

■ Press • to return to scan window.

Kev Assignments in Scan Window

_ ,	
Toggle Focus Mode	3 .#
Focus Lock	T.
Adjust Brightness	•
Open Help	0 ₉ ¢



Handy Extras

In Household Accounts window, select manual input panel ▶ ●



Expense Input Window

- Select date panel

 Enter date

 ■
- Shop

 Select shop/ facility

 Select shop/
- Paid ⇒ Select payment method ⇒ •





- Item → ► Enter name
- Value → ► Enter amount
- 连 🖻 ♦ Saved

Adding Expense Items

After ③, select item field → □ →

Add Items → ■ → From ⑤

Deleting Expense Items

After ⑤, select item → □ → Delete

→ ■ → Yes → ■ → ⑤

Changing Categories of All Items at Once

[Expense Input Window] Change →

Select Category → ● → ⑤


Changing Settings

Specify closing day, closing month and budget for the month.

In Household Accounts window, □



Account Setup Menu

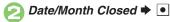





- Yes → •
- Budget → ★ Enter amount → ●
- ► Household Accounts window returns

Restricting Access to Household
Accounts by Handset Code

[Account Setup Menu] Locks

On

Resetting Household Accounts

[Account Setup Menu] Master Reset

Port Pyes

One Pyes

One



Opening Expense Records

- **Opening Entries**
- In Household Accounts window, select totals panel
- Select date

 ▶ •



Daily Expense Log

- Select entry **▶**
 - Details appear.

Yes **▶** •

Deleting an Entry [Daily Expense Log] Select entry > | | | Delete Receipt → • Yes → • **Deleting All Entries** [Daily Expense Log] → Delete Day Data or Delete Month Data ▶ • •

Viewing Expense Trends

Follow these steps to view monthly expenses, budgets and balances:

- In Household Accounts window, select charts panel **▶** •
- Results by Month **▶** •



Results by Month Window

- Press to toggle budget and balance.
- Use to open previous or next year.

Viewing Other Expense Trends In ②, select item ▶ •


Monthly Result Charts



Balances

- In Balance chart, gray area of each bar represents balance; bar turns pink when balance is zero or less
- In Expenses chart, orange bar extends to the left as monthly expense increases, with the middle of the chart indicating average monthly expense for the year.

Using Calculator

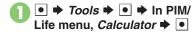



Calculator Window

- Use Keypad to enter digits

 → Calculate
- Standby returns

Key Assignments	
+ (Add)	•
- (Subtract)	•
× (Multiply)	ं
÷ (Divide)	Ç
= (Sum)	•
C·CE (Clear)	SECTION OF
CM (Clear Memory)	0.19
RM (Recall Memory)	1.7
M+ (Add to Memory)	¥7
. (Decimal)	¥***
+/- (Positive/Negative Value)	# ×
% (Percentage)	(A)

Memory Calculation

- Clear Memory before starting new Memory calculations.
- Numbers saved in Memory remain until powering off.

Incoming Calls

 Calculations are not affected. End the call to return to Calculator.

Using % Function

Use to find definite percentage of a known value

Example: Calculate 30% of 800,000

Enter 800,000 → x → 30 → %

240,000 appears.

Advanced

Entering Expenses

● **→** Tools **→** • In PIM/ Life menu, Expenses Memo • •



Expenses Memo Menu

- Select list ▶ •
- Add New ⇒ ■
- Enter amount → ●



Select Category ▶ ● ▶
Saved

Saving under Custom Category
In ⑤, Other ▶ ● ▶ Enter name ▶ ●
Renaming Lists
[Expenses Memo Menu] Select list
▶ ◎ ▶ Edit Title ▶ ● ▶ Enter

name

Resetting All List Names

[Expenses Memo Menu]

Reset

Title

New Yes

New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New Yes
New

Checking Entries

In Expenses Memo menu, select list ▶ •



Expenses Memo List

Saving Entries to Notepad

[Expenses Memo List] Select entry

⇒ □ → Save to Notepad → •

Deleting Entries


- One Entry
- In Expenses Memo list, select entry ▶ □
- 🔁 Delete Item 🕈 💽
- 🚱 Yes 🕈 💽
- All Entries
- In Expenses Memo list, select entry ▶ □
- Delete All → ■
- 😱 Yes 🖈 💽
 - All entries on the list are deleted.

Faking Incoming Calls

Handset rings to emulate an incoming call.

- Save name and phone number to show as Caller ID.
- Ringer may be muted by handset settings.
 To override Silent setting, see P.9-37.

Setting Simulated Call

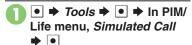



Simulated Call Menu







- Name: → Enter name
 → ●
- Assign Tone

 Select tone/file

 Output

 Figure 1.5

 Figure 2.5

 Figure 2.5

 Figure 3.5

 Fi
- ► PIM/Life menu returns

When Name and Phone Number are Unset

• Handset rings with Caller ID "Withheld."

Canceling Simulated Call

[Simulated Call Menu] Switch On/Off

• • • • Off • • • □

Setting Wait Time

[Simulated Call Menu] Receive Timing

→ • • Select time • • • □

Using Simulated Call

- With handset closed, ■ (Long)
 - Handset rings and incoming Voice Call window opens.
 - Ringtone stops after a period of time.
- In incoming Voice Call window, press
 - Voice Call window opens. (Softkeys are dummies.)
- Standby returns

When Receive Timing is Not Immediately

- Press or during wait time to cancel Simulated Call activation.
- Simulated Call activation is canceled by incoming calls, Alarms, etc. during wait time.

Advanced







Stopwatch Window









• Records are deleted when Stopwatch ends.

Recording Lap Times While Stopwatch is running, Saving Records to Notepad After €,

Save to Notepad

Solution Resetting Records After €, 🗹 **>** From ⊘ **Incoming Calls** Stopwatch is not affected by incoming calls. End the call to return.



Using Countdown Timer

● **→** Tools **→** • **→** Clock/Gauge

→ Countdown



Timer Entry Window


Enter minutes **→** Enter seconds **→** •



Countdown Timer Window

Press
 ☐ to change time.

- Countdown starts
 - Press to stop/resume countdown.
- Set time elapses **→** Tone sounds

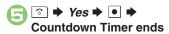

Using Timer Records

After ①, □ → Select record → ● ● **From** ⓒ

Resetting Countdown Timer Stop countdown and **Incoming Calls**

 Countdown is not affected by incoming calls. End the call to return.

When Set Time Elapses

Tone sounds.



Stopping Tone Instantly

- Press or . (Tone stops automatically after a period of time.)
- When Timer Time Elapsed during a Call
- Tone sounds after the call.

Auto World Clock

Powering on outside Japan automatically sets World Clock; the local time for your current location appears in Standby. Upon returning to Japan, original World Clock setting and Clock view will return.

- Disabling Auto World Clock
- Settings ● In Sound/Display menu, Date & Time ●
- 🔁 Auto World Clock 🖈 💽
- Bisabled → •

Setting World Clock Manually





0



Set Time Zone Window

- 💽 🗠 Select area 🖈 💿

Advancing One Hour (Daylight Saving)

[Set Time Zone Window]
■ To cancel, press
□.

Adding Custom Time Zone

[Set Time Zone Window]
□ ▶ Enter

city name ▶ □ ▶ ○ + or - ▶ ○ ▶

Enter time difference ▶ □

Opening World Clock in Standby Manually

- → Settings → In Sound/Display menu,
 Display → ●
- Standby Display ▶ •



- 👔 Clock/Calendar 🕈 💽
- World Clock (L), etc. ⇒ ■
- 🕞 💿 🖈 Standby returns

Handy Extras



Using Hour Minder

Setting Hour Minder

Follow these steps to activate the hourly time signal at selected hours:





Hour Minder Menu

- Switch On/Off → → On
- Select Time ▶ •





ƴ **♦** Saved



Standby returns

Adjusting Hour Minder Volume
In ②, Advanced ▶ ■ → Volume: →
■ → Adjust level → ■ → □ →
From □

Changing Hour Minder Duration

In \bigcirc , Advanced \Rightarrow \bigcirc \Rightarrow Duration: \Rightarrow \bigcirc \Rightarrow Select time \Rightarrow \bigcirc \Rightarrow \bigcirc

■ For custom Duration, select *Other*.

Selecting/Canceling All Hours

In ②, □ → Check All or Uncheck All

At Hour Minder Time

Hour Minder activates; sounds/vibrates by related settings.



Stopping Tone Instantly

Press a key.


When Another Function is Active

Hour Minder does not activate.
 Incoming Calls

Active Hour Minder stops for incoming calls.

Canceling Hour Minder



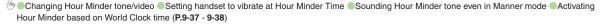

New Notepad Entry





Notepad List



💽 Enter text 🖈 💽



Sorting Entries Temporarily [Notepad List] [9]

Select entry ▶ •

 Press to toggle sort options (Modified, Created, Category and Accessed).

■ Not available in Notepad text entry window.

Opening Notepad

- In Notepad list, select entry

 →
 - Text appears.
- 🔁 🗫 レ List returns

Deleting Entries

- One Entry
- In Notepad list, select entry

 ⇒ □
- Delete Item → Yes → •

Selected Entries

- In Notepad list, select entry →

 Setting/Manage →

 ■
- Multiple Selection

 Select entry

 (□/√)

 Complete selection

 □
- Pelete → Yes → •

Unchecking All In €, Uncheck All ▶ •

- All Entries
- In Notepad list, select entry →

 Setting/Manage →

 ■
- Delete All ♦ Yes ♦ •

Advanced



Handy Extras

© Editing Notepad Searching text within all entries Inserting Notepad text into message text Sending entries via S! Mail Creating text files Importing text files Checking memory status Opening properties (P.9-38)

Using ASCII Art

Inserting ASCII Art

- Select entry ▶ •



Previewing ASCII Art
In ⊘, select entry ▶ □
■ Press ● to insert ASCII Art.

Editing Entries





ASCII Art List

Opening Entries
In ⊘, select entry ▶ □ ▶ View ▶ ■
Adding New Entries
In ⊘, <Empty> ▶ ■ Create ASCII
Art ▶ ■

Deleting Entries

- In ASCII Art list, select entry

 → □ → Delete → •
- Yes → •

Recording/Playing Voice

Recording

- Recording stops if battery runs low while recording.
- Record conversations during calls via Record Caller Voice.





Recording Window





 For Extended Voice, recording is saved automatically.





- Select file → •

Playback Operations

Volume Control	٥
Pause/Resume	•
Stop	Section on



Scanning Barcodes

Scan UPC/JAN (1D barcodes) or QR Codes (2D barcodes).

- Membership file or password may be required when scanning barcodes.
- Some barcodes may not be scanned.







Frame barcode in center of Display



Scan Window

• Use Focus Adjustment Bar as a guide (better focus in darker blue).



- If recognition takes time, slowly adjust the distance between handset and barcode
- To cancel, press 🗹.


Tone sounds ◆ Scan results appear



Split Data

- After scanning, a confirmation appears. Follow onscreen prompt(s).
- Scan results do not appear until all split data is scanned.

Starting Over

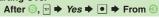

Key Assignments in Scan Window


Toggle Focus Mode	3 .**
Switch to Photo Camera	7,3s
Focus Lock	1.0
Adjust Brightness	••
Open Help	O 2-2





Creating QR Codes

Create QR Codes from these items on handset:

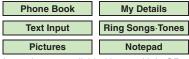

Large items are divided into multiple QR Codes.

Procedure

Follow these steps to create QR Codes from Data Folder files:



- Create QR Code → •
- 🕟 Data Folder 🖈 💽
- Select folder

 Select file or entry

 OR Code is created.
- 3
 - QR Code is saved to Data Folder (Pictures).

From Phone Book Entries
In ⊕, Phone Book ▶ ● ▶ Select
entry ▶ ● ▶ ⊕

From My Details
In ⊕, My Details ▶ ● ▶ □ ▶ ⊕

From Entered Text
In ⊕, Text Input ▶ ● ▶ Enter text
▶ ● ▶ ⊕

Switching Storage Media
In ⊕, □ ▶ Save to ▶ ● ▶ Phone or
Memory Card ▶ ● ▶

Attaching to S! Mail
In ⊕, □ ▶ Send As Message ▶ ●

Complete message ▶ □

Incoming Calls

 QR Code creation is not affected by incoming calls. End the call to return.



Scanning Business Cards

Scan business cards and save names. addresses, etc. to Phone Book.

- English business cards may not be scanned correctly.
- Some cards may not be scanned.



- Scan Card **→** •
- Frame card on Display











New Phone Book entry is saved.

If Text Exceeds Phone Book Entry Item **Character Limit**

 A confirmation appears. Follow these steps to delete overage:

After ⑤, ⋈ ≯ Yes ≯ • From ⑥ Saving as vCard

⇒ Select storage media ⇒ •

- Saved to Data Folder (Other Documents). Saving Scanned Image as Phone Book **Picture**

[Scan Results Window]

→ Add Image **→** • **→** On **→** • **→** •

Key Assignments in Scan Window

Toggle Focus Mode	3 **
Switch to Photo Camera	7 nuis
Focus Lock	1.7
Adjust Brightness	••
Open Help	O = #





Scanning Text

Scan text and save it to Notepad, etc. Available Modes:

	Capture text in full screen and scan a selected line
Line	Capture a few lines of text and scan a selected line


- To toggle mode, press 🗹 in scan window.
- Some text may not be scanned.





To change mode, press
in scan window.

Frame text in center of Display

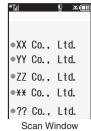


- To cancel, press 🗹
- Select line

 Scan results appear





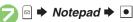

Correcting Text Type After ⑤, ⑩ ➡ Change Mode ➡ ● ➡ Select type ➡ ⑥ ➡ ⑥ Editing Scanned Text After ⑥, ⑩ ➡ Select/Edit ➡ ● ➡ Select character ➡ Select alternative from list or edit directly ➡ ⑥ Starting Over In ⑥, № ➡ Yes ➡ ● ➡ From ⑥

Key Assignments in Scan Window

Toggle Focus Mode	3 *
Switch to Photo Camera	7 nas
Focus Lock	F.
Adjust Brightness	•
Open Help	0 p.#

Advanced



Scanning and pasting during text entry Scanning more text Saving scan results Saving linked info to Phone Book Opening saved scan results Using linked info Pasting to message text Copying text (P.9-41 - 9-42)

Using Kanji Grabber

Scan a kanji compound and look it up in dictionaries.

Some kanji may not be scanned.



- 🔼 Kanji Grabber 🕈 💽
- Frame kanji in Loupe





- Select dictionary ▶ ▶
 Search ▶ ●
- Select word, etc.

 Definition/translation window opens.

Starting Over In ⑤, ☑ ➡ From ⓒ

Key Assignments in Scan Window

Toggle Focus Mode	3 🕏
Switch to Photo Camera	7 rds
Focus Lock	¥.
Zoom In/Out	٥
Adjust Brightness	••
Open Help	0 0.5

Calendar	
■ View Settings	
Changing default view	■ Tools ■ In PIM/Life menu, Calendar ■ □ □ Calendar Settings ■ Default View ■ Select type ■
Jumping to specified date	→ Tools →
Changing date color	Start Here ● → Tools → ● → In PIM/Life menu, Calendar → ● → See below
	By Days of the Week □ → Calendar Settings → ● → Set Color → ■ → By Week → ● → Select day → ● → Select color → ●
	By Date Select date → 4△ → Select color → ●
	Resetting "By Date" Colors □ → Calendar Settings → ● → Set Color → ■ → Reset Color → ● → Select option → ● → Yes → ●
Selecting task view option	■ Tools ■ In PIM/Life menu, Calendar ■ □ □ Calendar Settings ■ Tasks View ■ Select option ■
Adding stamps (1Month View)	● → Tools → ● → In PIM/Life menu, Calendar → ● → Select date → 2≥ → Select stamp → ●
Hiding schedules	■ * Tools * ■ * In PIM/Life menu, Calendar * ■ * Select date * ■ * Select entry * ■ * ■ * Secret: * ■ * On * ■ *********************************

	Start Here ● → Tools → ● → In PIWLife menu, Calendar → ● → □ → Calendar Settings → ● Set Holiday → ● → ○ Private → See below
	Adding Holidays
Saving/editing	<empty> ⇒ ● ⇒ Enter name ⇒ ● ⇒ Enter</empty>
additional holidays	date ⇒ ● ⇒ Select frequency ⇒ ● ⇒ 🗹
	Editing Added Holidays
	Select holiday ⇒ 🖻 ⇒ Edit ⇒ • Name: ⇒
	Date: Enter name Date: Enter
	date ⇒ ● ⇒ Select frequency ⇒ ● ⇒ 🗹
	● → Tools → ● → In PIM/Life menu,
Hiding/showing	Calendar →
holidays	Set Holiday Private or Public
	Select holiday ⇒ ● (/ ✓)

■ Saving/Editing Schedules

_ ouving/Luiting c	
Setting Location	● → Tools → ● → In PIM/Life menu, Calendar → ● → Select date → ● → Select entry → ● → ● → Location: → ● ← Enter location → ● → ←
Creating Categories	Start Here ● → Tools → ● → In PIM/Life menu, Calendar → ● → □ → Calendar Settings → ● → Set Category → ● → See below
	Renaming Categories Select Category ■ Edit Category Name ■ Enter name ■
	Changing Icons Select Category
	Resetting
Saving repetitive schedules	■ Tools ■ In PIM/Life menu, Calendar ■ Select date ■ Select entry ■ ■ Repeat: ■ Select frequency ■ Enter repeat time ■ ■ □ ■ Repeat time is not available for Every Year.

Saving S! Friend's Status information	
	Availability Answer Status: ◆ ► Edit → ¬ → ¬ • Set Category first.
	Comment Comment:
Editing entries	● → Tools → ● In PIM/Life menu, Calendar → ● → Select date → ● → Select entry → ● → ● → Select item → ● → Edit in the same manner as saving schedules → ▷
	Start Here ● → Tools → ● → In PIM/Life menu, Calendar → ● → Select date → ● → Select entry → ● → ● → Alarm: → ● → See below
Changing Alarm tone/video & duration	Alarm Tone/Video Assign Tone/Video: Select folder Select tone/file Select start point if required.
	Duration Duration: Select time V For custom Duration, select Other and press ■.
Changing Alarm volume	■ Tools ■ In PIM/Life menu, Calendar ■ □ → Alarm Settings ■ ■ Alarm Volume: ■ ■ Adjust level ■

	Searching entries	Start Here ● → Tools → ● In PIM/Life menu, Calendar → ● → See below
		By Part of Subject
		By Category Select Category
	Checking memory status	● → Tools → ● → In PIM/Life menu, Calendar → ● → Select date → □ → Memory Status → ●
	Deleting all entries	■ → Tools → ■ In PIM/Life menu, Calendar → ■ → □ → Delete → ■ → All Appointments → ■ → Yes → ■
		Start Here ● ⇒ Tools ⇒ ● ⇒ In PIM/Life menu, Calendar ⇒ ● ⇒ See below
	Deleting entries by specifying week (Week View)	Within One Week Select date □ → Delete → ■ → All This Week → ■ → Yes → ■
		Up to the End of Previous Week Select date ⇒ □ → Delete ⇒ ● → Up to Last

Week ⇒ • Yes ⇒ •

Deleting entries by specifying month (1Month View)	Start Here ● → Tools → ● In PIM/Life menu, Calendar → ● → See below
	Within One Month Select date
(imenai veu)	Up to the End of Previous Month Select date ⇒ □ → Delete → ● → Up to Last Month → ● → Yes → ●
Deleting entries in two months (2Month View)	● → Tools → ● In PIM/Life menu, Calendar → ● → □ → Delete → ● → All This 2Months → ● → Yes → ●

Tasks

Task List

	→ Tools →
Hiding tasks	● ⇒ Select task ⇒ □ ⇒ Edit ⇒ ● ⇒ Secret:
	$\Rightarrow \bullet \Rightarrow On \Rightarrow \bullet \Rightarrow \nabla$

■ Saving/Editing Tasks

Editing tasks	→ Tools →
	● ⇒ Select task ⇒ □ ⇒ Edit ⇒ ● ⇒ Select
	item Edit in the same manner as
	saving tasks ⇒ 🗹
	● → Tools → ● In PIM/Life menu, Tasks →
Setting priority	● ⇒ Select task ⇒ □ ⇒ Edit ⇒ ● ⇒ Priority:
	⇒ Select priority ⇒ • □ ⇒ □

Searching tasks	
	By Part of Subject By Subject ■ Enter text ■
	By Due Date
	By Due Date ⇒ ● ⇒ Enter date ⇒ ●
Sorting tasks by priority	
Checking memory status	→ Tools →
Deleting all tasks	● ★ Tools ★ ● ★ In PIM/Life menu, Tasks ★ ● ★ □ ★ Delete ★ ● ★ All Tasks ★ ● ★ Yes ★ ●

■ Managing Tasks

	Start Here
Changing Alarm tone/video & duration	Alarm Tone/Video Assign Tone/Video: Select folder Select tone/file Select start point if required.
	Duration Duration: Select time Duration: For custom Duration, select Other and press ■.
Changing Alarm volume	● Tools ● ● In PIM/Life menu, Tasks ● ● ○ Alarm Settings ● ● Alarm Volume: ● ● Adjust level ● ●
Selecting Vibration option	● * Tools * ● * In PIM/Life menu, Tasks * • • * Alarm Settings * • * Vibration: * • * Select option * •
Sounding Alarm	→ Tools →
tone even in	▶ Alarm Settings For Manner
Manner mode	Mode: → • Ring → • Yes → •

Alarms

Editing entries	● → Tools → ● → In PIM/Life menu, Alarms • → Select entry → ● → Select item → ● • Edit in the same manner as saving entries • □
Saving entry name	● → Tools → ● In PIM/Life menu, Alarms → ● → Select entry → ● → Subject: → ● → Enter name → ● → □
	Start Here
Changing Alarm	Using Preset Tone or Data Folder File
tone/video	Select folder ⇒ ● ⇒ Select tone/file ⇒ ● ⇒ 🗹
	Select start point if required.
	Using Customized Screen Tone/Video
	Customized Screen ⇒ • • •
Setting handset to vibrate at Alarm Time	● * Tools * • * In PIM/Life menu, Alarms • • Select entry * • * Vibration: * • • On * • * * * * * * * * * * * * * * * * *
Sounding Alarm	● → Tools → ● → In PIM/Life menu, Alarms
tone even in	→ Settings → ● → For Manner Mode →
Manner mode	⇒ Ring →
Activating Alarm	● → Tools → ● → In PIM/Life menu, Alarms
based on World	⇒
Clock time	● ⇒ On ⇒ ●

Wakeup TV

Editing entries	● → Tools → ● In PIM/Life menu, Wakeup TV → ● → Select entry → ● → Select item → ● → Edit in the same manner as saving entries → □
	Start Here
Changing Alarm tone/video	Using Preset Tone or Data Folder File Select folder ■ Select tone/file ■ □ Select start point if required.
	Using Customized Screen Tone/Video Customized Screen
Sounding Alarm tone even in Manner mode	■ * Tools * ■ In PIM/Life menu, Wakeup TV * ■ * For Manner Mode * ■ * Ring * ■ * Yes * ■

Household Accounts

	Start Here ● → Tools → ● → In PIM/Life menu, Household Accounts → ● → Select manual input panel → ● → See below
	Shops
	Shop ⇒ ● ⇒ Select icon ⇒ □ ⇒ Enter name
Renaming icon	→ •
labels	Payment Methods
	Paid → • Select icon → • Enter name • •
	Categories
	Change ⇒ • Select icon ⇒ □ ⇒ Enter
	name ●

	→ Tools →
Exporting Household Accounts data	Household Accounts ⇒ • • Export All
	→ Yes → •
	Data is exported as a CSV file and saved to handset
	Data Folder (Other Documents).
	Files are saved to Memory Card, if inserted.

Calculator	
Copying calculation results	While result appears,
Changing exchange rate for currency conversion	■ Tools ■ In PIM/Life menu, Calculator ■ ■ Money Converter ■ ■ Exchange Rate ■ Domestic or Foreign ■ Enter rate ■
Converting currencies	■ Tools ■ In PIM/Life menu, Calculator ■ Enter amount of money ■ Money Converter ■ To Domestic or To Foreign ■ ■ Set Exchange Rate first.

Expenses Memo	
Changing Category of saved entry	● → Tools → ● In PIM/Life menu, Expenses Memo → ● → Select list → ● → Select entry → ● → Select Category → ●
Changing amount	■ Tools ■ In PIM/Life menu, Expenses Memo ■ Select list ■ Select entry ■ Change Amount ■ Edit ■ ■

•	
Renaming Categories	● → Tools → ● In PIM/Life menu, Expenses Memo → ● → Edit Category → ● → Select Category → ● → Enter name → ●
Simulated Call	
Starting via Simulated Call menu	■ Tools ■ In PIM/Life menu, Simulated Call ■ Receive Simulated Call ■ Yes ■ ■ Simulated Call starts immediately regardless of Receive Timing setting. ■ Settings remain even after starting Simulated Call during setup.
Clearing caller information	● → Tools → ● → In PIM/Life menu, Simulated Call → ● → Set Caller → ● → Yes → ● → → →
Overriding Silent volume setting	Simulated Call For Silent Mode

Hour Minder

Changing Hour Minder tone/video	● Tools ● Advanced ● Assign Tone/Video: ● Select folder ● ● Select tone/file ● ● ♥ Select start point if required.
Setting handset to vibrate at Hour Minder Time	■ Tools ■ Clock/Gauge Hour Minder ■ Advanced ■ Vibration: ■ On ■ W W

Ring ⇒ • Yes ⇒ • □



Sounding Hour	→ Tools →
Minder tone even	Minder ⇒ ● → Advanced ⇒ ● → For Manner
in Manner mode	Minder → • → Advanced → • → For Manner Mode: → • → Ring → • → Yes → • → □ → □
Activating Hour	● ⇒ Tools ⇒ ● ⇒ ⊡ Clock/Gauge ⇒ Hour
Minder based on	Minder ⇒ ● → Advanced ⇒ ● → Link to
World Clock time	World Clk: \Rightarrow \bullet \Rightarrow On \Rightarrow \bullet \Rightarrow \checkmark

Notepad

Editing Notepad	Start Here ● → Tools → ● → Doc./Rec. → Notepad → ● → Select entry → □ → See below Editing Text Edit Text → ● → Edit → ●
	Changing Category
	Change Category
Searching text within all entries	● → Tools → ● → ✓ Doc./Rec. → Notepad → ● → Select entry → □ → Search → ● → Enter text → ●
Inserting Notepad text into message text	■ Tools ■ Doc./Rec. Notepad ■ Select entry ■ Send ■ As Message Text ■ SI Mail or SMS ■ Complete message ■ SI Mail Composition window opens automatically depending on character count.
Sending entries via S! Mail	● ▶ Tools ▶ ● ▶ • Doc./Rec. ▶ Notepad • • ▶ Select entry ▶ □ ▶ Send ▶ ● ▶ Via **Message ▶ ● ▶ Complete message ▶ □
Creating text files	■ Tools ■ Doc./Rec. Notepad ■ Select entry ■ Setting/Manage ■ Create Text File ■ Enter name ■ Save here ■

Importing text files	● * Tools * • * • Doc./Rec. * Notepad • • Select entry * • Setting/Manage * • Import Text File * • Select file * •
Checking memory status	● Tools → ● Doc./Rec. Notepad • Select entry → Setting/Manage • Memory Status → ●
Opening properties	→ Tools →

Voice Recorder

voice mederaci	
Saving longer recordings	■ * Tools * •
Sending Voice files via S! Mail	● * Tools * ● * Doc./Rec. * Voice Recorder * ● * ● Recording starts * ● * Recording ends * Save and Send * ● * Complete message * * • Available in For Message mode.
Switching storage media	■ Tools ■ Doc./Rec. Voice Recorder ■ Doc./Rec. Voice Recorder ■ Save Recording to ■ Select option ■ Available in For Message mode. Set to Ask Each Time to select media after every

recording.

Barcode Reader	
	Start Here In a text entry window, → Scan → Oo → Frame barcode in center of Display → Oo → See below
Scanning during text entry	Pasting All Scan Results
	Pasting a Part of Scan Results
Scanning continuously	■ Tools ■ Doc./Rec. ■ Barcode/ Scan ■ Barcode Reader ■ ■ □ Continuous Scan ■ On ■ Frame barcode in center of Display ■ ■ Choose Yes to continue scanning or No and press ■ to view scan results.
Reading saved barcode images	● → Tools → ● → ○ Doc./Rec. → Barcode/ Scan → ● → Open Barcode → ● Select file → ●
Saving scan results	■ * Tools * ■ * Doc./Rec. * Barcode/ Scan * ■ * Barcode Reader * ■ * Frame barcode in center of Display * ■ * □ * Save * ■
Saving to Notepad	■ * Tools * • * • Doc./Rec. * Barcode/ Scan * • * Barcode Reader * • * Frame barcode in center of Display * • * • Notepad * •

Saving linked info to Phone Book	■ Tools ■ Doc./Rec. Barcode/ Scan ■ Barcode Reader ■ Frame barcode in center of Display ■ Select number or mail address ■ Save to Ph.Book ■ As New Entry ■ ■ Complete other fields ■ ■ To add to an existing entry, select As New Detail. ■ When MEMORY: appears in scan results, press ■ to enter the items underlined with a dotted line (NAME1:, TEL1:, etc.) automatically in Phone Book entry window.
Opening saved scan results	● ▼ Tools ▼ ● ▼ ○ Doc./Rec. ▼ Barcode/ Scan ▼ ● ▼ Scanned Results ▼ ● ▼ Select file ▼ ● • Select a file and press □ to rename files, open properties or delete files. • Some files may not open.
	Start Here ● ⇒ Tools ⇒ ● ⇒ Doc./Rec. ⇒ Barcode/Scan ⇒ ● ⇒ Barcode Reader ⇒ ● ⇒ Frame barcode in center of Display ⇒ ● ⇒ See below Dialing Numbers
Using linked info	Select phone number • • • • • • • • • • • • • • • • • • •
	Accessing Websites Select URL



Using images as Wallpaper	■ Tools ■ Doc./Rec. ■ Barcode/ Scan ■ Barcode Reader ■ Frame barcode in center of Display ■ Select image ■ Set as Wallpaper ■ ■ ■ For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.
Saving images & melodies	■ Tools ■ Doc./Rec. ■ Barcode/ Scan ■ Barcode Reader ■ Frame barcode in center of Display ■ Select file ■ To Data Folder ■ ■
Opening or playing files	■ Tools → ODOC./Rec. → Barcode/ Scan → DESCRIPTION → Frame barcode in center of Display → DESCRIPTION → Select file ■ DESCRIPTION → DESCRIPTI
Using images for System Graphics	■ Tools ■ Doc./Rec. ■ Barcode/ Scan ■ Barcode Reader ■ Frame barcode in center of Display ■ Select image ■ As System ■ Select item ■ Specify image area ■ Select item ■ Specify image area ■ Image area ■ Select item

Pasting to message text	Start Here ● → Tools → ● → ○ Doc./Rec. → Barcode/Scan → ● → Barcode Reader → ● → Frame barcode in center of Display → ● → Send Message → ● → See below
	All Text ■ ⇒ S! Mail or SMS ⇒ ■ Complete message ⇒ □ ■ S! Mail Composition window opens automatically depending on character count.
	Selected Text Select first character → ● → Highlight text range → ● → S! Mail or SMS → ● → Complete message → □ S! Mail Composition window opens automatically depending on character count.
Copying text	Start Here ● → Tools → ● → ○ Doc/Rec. → Barcode/Scan → ● → Barcode Reader → ● → Frame barcode in center of Display → ● → See below
	Text □ → Copy → ● → Select first character → ● → Highlight text range → ●
	Number, Address or URL Select number, mail address or URL Copy Telephone, Copy Address or Copy URL ■

Scan Card ● → Tools → ● → • Doc./Rec. → Barcode/ Scan ⇒ • Scan Card ⇒ • Frame card Saving to Notepad Notepad ⇒ • Start Here Tools Tools Doc./Rec. Tools Barcode/Scan ⇒ • Scan Card ⇒ • ⇒ Send Message ⇒ ● See below All Text ● *S! Mail* or *SMS* ⇒ ● Complete message 🗼 🔽 Pasting to S! Mail Composition window opens automatically message text depending on character count. **Selected Text** Select first character ⇒ ● ⇒ Highlight text range ⇒ • ⇒ S! Mail or SMS ⇒ • ⇒ Complete message ▶ 🔽 • S! Mail Composition window opens automatically depending on character count. ● → Tools → ● → Poc./Rec. → Barcode/ Scan ⇒ • ⇒ Scan Card ⇒ • ⇒ Frame card Copying text ⇒ Select first character ⇒ • ⇒ Highlight text range ⇒ •

Scan Text	
Scanning and pasting during text entry	In a text entry window, Scan Scan Text Frame text in center of Display Select line Solution
Scanning more text	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Text ● Frame text in center of Display ● Select line ● ● ● Continue Part or Scan More ● ● Select Continue Part to enter additional text or Scan More to enter text after a line break.
Saving scan results	■ Tools ■ Doc./Rec. ■ Barcode/ Scan ■ Scan Text ■ Frame text in center of Display ■ Select line ■ ■ ■ Save ■ ■
Saving linked info to Phone Book	■ Tools ■ Doc./Rec. ■ Barcode/ Scan ■ Scan Text ■ Frame text in center of Display ■ Select line ■ ■ ■ Select number or mail address ■ □ Save to Ph.Book ■ As New Entry ■ ■ Complete other fields ■ □ ■ To add to an existing entry, select As New Detail.
Opening saved scan results	● ★ Tools ★ ● ★ ⊙ Doc./Rec. ★ Barcode/ Scan ★ ● ★ Scanned Results ★ ● ★ Select file ★ ● • Select a file and press ☐ to rename files, open properties or delete files. • Some files may not open.

Soon Toyt

	<u> </u>
Using linked info Pasting to message text	Start Here
	Dialing Numbers Select phone number
	Sending Messages Select mail address
	Accessing Websites Select URL ●
	Start Here ● → Tools → ● → Doc./Rec. → Barcode/Scan → ● → Scan Text → ● → Frame text in center of Display → ● → Select line → ● → ● → Send Message → ● → See below
	All Text ■ ★ S! Mail or SMS ★ ■ ★ Complete message ★ ★ ■ S! Mail Composition window opens automatically depending on character count.
	Selected Text Select first character Highlight text range S! Mail or SMS Complete message S! Mail Composition window opens automatically
	3: Mail Composition window opens automatically

	Start Here \blacksquare → Tools → \blacksquare → \bigcirc Doc./Rec. → Barcode/Scan → \blacksquare → Scan Text → \blacksquare → Frame text in center of Display → \blacksquare → Select line → \blacksquare → \blacksquare → See below
	Text
Copying text	□ ⇒ Copy ⇒ • Select first character ⇒ •
	→ Highlight text range → •
	Number, Address or URL
	Select number, mail address or URL 🗼 🖻 🖈
	Copy Telephone, Copy Address or Copy URL
	→ •
Kanii Onabban	
Kanji Grabber	
Scanning and	In a text entry window, → Scan → →
pasting during text	Kanji Grabber ⇒ 💽 ⇒ Frame kanji in Loupe ⇒
entry	Scan results appearImage: Image: Image:

Wakeup TV



TV does not activate with specified channel

• If Wakeup TV Time arrives while TV is active, channel does not switch to the specified one.

Auto World Clock



World Clock does not appear automatically

- Daylight Saving in Date & Time may be set to On.
- Set Time Zone in Date & Time may be set to a city other than Tokyo.
- Local time does not appear if time information cannot be obtained via the Network.



Local time does not appear

- · Local time disappears when:
- Auto World Clock setting is changed to Disabled
- World Clock setting is changed
- Clock/Calendar setting in Date & Time is changed from World Clock (L)

Voice Recorder



Cannot record properly

• If incompatible microphone is connected, recording may fail.



Noise/skipping occurs

 Avoid shocks to handset while recording; may cause noise or skipping.



Recording takes time to start

• Recording window may take longer to open as more Voice files are saved on Memory Card.

Scanning Barcode/Card/Text



Cannot read barcodes properly

- Scan may fail if barcode is dirty or unclear.
- · Scan may fail if barcode is scanned under inadequate light.
- Scan may fail if multiple barcodes are captured at one time.



Cannot read split QR Codes in **Data Folder automatically**

 When scan fails, follow onscreen instructions and select next barcode image manually.



Cannot scan business cards properly

- Scan fails if business card is printed in light-colored text on a dark background. handwritten or printed in casual/ decorative fonts, decorated with a background pattern, or designed with both vertical and horizontal text.
- . Scan may fail if business card is printed in light-colored text on a light background, printed in italics or extremely small fonts, decorated with a logo or logo-like text, printed on a glossy paper or other material, or dirty/folded.



Cannot scan text properly

- · Scanning over 35 characters at one time may yield poor results.
- In Line mode, adjust to frame text in []. Letters at the ends may be distorted.



Mobile Widget	10-2
Customizing Standby Display	
(Japanese)	10-2
S! Quick News	10-5
Receiving Content Updates (Japar	iese)
	10-5
S! Information Channel	10-6
S! Information Channel & Weather	
Indicator (Japanese)	10-6
Content Downloads	10-7
Downloading Content (Japanese)	10-7

e-Books	10-8
Reading e-Books (Japanese)	10-8
S! Friend's Status	10-9
Using S! Friend's Status	10-9
S! Circle Talk	. 10-12
Using S! Circle Talk	10-12
Blog Tool	10-14
Blogging	10-14
Additional Functions	10-16
Troubleshooting	10-22

Widgets & Entertainment



Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/ functions immediately from Standby.



Obtaining Widgets





Mobile Widget Menu



Installing Widgets

 Some widgets may need to be installed manually; follow these steps:

[Mobile Widget Menu] Widget Contents ⇒ • Select widget ⇒ □ → Install → • Yes → • **Activating Widgets Not Saved in Standby**


[Mobile Widget Menu] Widget Contents ⇒ • Select widget ⇒

Saving Widgets to Standby








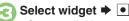

Corresponding icon appears.

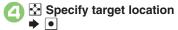

Using Pointer

- After ①, Long Press 🗹 to activate pointer navigation; select widgets, etc.
- To cancel pointer navigation, Long Press 🖳

Advanced



🖑 🌑 Opening properties 🜑 Canceling automatic updates 🜑 Receiving updates automatically while outside Japan 🔘 Hiding confirmation outside Japan Disabling cookies Deleting cookies (P.10-16)

Using Widgets







 Widget activates; follow onscreen instructions.

Using Sheets

Paste widgets and Standby Shortcuts on each sheet; toggle sheets to use them.

- Saving Widgets on Other Sheets
- In Mobile Widget menu, Widget Contents ▶ •
- Select widget **▶** □
- Paste to Standby Display •
- Select sheet **▶** •



Specify target location **▶** •

Toggling Sheets





- To toggle further, press v or v.
- Sheet name appears at the top, then disappears.
- Save widgets as needed; corresponding icons appear on the current sheet.







Removing Widgets from Standby







Remove **▶** •



Deletina Widaets

- In Mobile Widget menu, Widget Contents **▶** •
- Select widget **▶** □ ● S!速報ニュース/S!ともだち状況 cannot be deleted.

Deleting All Widgets

In ②. S!速報ニュース/S!ともだち状況 ➡ 🖾 Delete All ⇒ • Yes ⇒ •

■ If there is a widget saved in Standby, a confirmation appears: follow onscreen prompt.

Using S! Quick News & S! Friend's Status Widget

001SH is preloaded with S!速報ニュース/S!とも だち状況 (S! Quick News & S! Friend's Status widget) that shows S! Quick News and S! Friend's Status information in Standby.



- View Settings
- Setting View Pattern
- News & S! Friend's Status widget 🖈 🖾
- Settings

 ▶ Pattern Settina **→** •
- Select item **▶** (□/✓)
- Switching View
- Select S! Quick News & S! Friend's Status widget 🖈 🖾
- Operation **→** Switch
 - Repeat the steps above to switch the view.



Advanced

🖄 Removing multiple widgets at once Adding news items Changing news scroll speed Showing unread news only Assigning members Managing members (P.10-17)

Receiving Content Updates (Japanese)

View content updates or breaking news. Packet transmission fees apply.


Registering S! Quick News Items







S! Quick News List

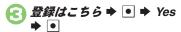


Handset connects to the Internet.




Follow onscreen instructions.

Opening Information

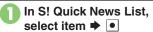

Title list appears.

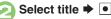

- Information appears.
- Press of to return to title list, or by to open next title.

Updating Items Manually

[S! Quick News List] Select item ▶

Indicators				
	Unread Special news		Unread General news	
	Read Special news		Read General news	
	Unread News Flash	×	Auto update disabled	
*	Read News Flash			

S! Information Channel & Weather Indicator (Japanese)

Subscribe to Japanese mobile periodicals that download to handset automatically; use Weather Indicator as needed. Packet transmission fees apply.

Service Registration & Content Subscription





S! Information Channel Menu



Handset connects to the Internet.
 Follow onscreen instructions.

New Received Information

Information window opens for new S! Information Channel info delivery.

- While Information window appears, S! Info. Channel
 - S! Information Channel page opens.
 Follow onscreen instructions.
 - S! Information Channel page handling is similar to that of Yahoo! Keitai.

🔁 🗈 🕈 Standby returns

Opening Unread Latest Issue

[S! Information Channel Menu]

What's New

Opening Back Issues

[S! Information Channel Menu] F

[S! Information Channel Menu] Back
Issue

Select date

Issue

Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue
Issue

Using Weather Indicator

After S! Information Channel registration, local area weather indicator appears in Standby.

Manual Update



Downloading Content (Japanese)

Download media content via Yahoo! Keitai.

Via Free Content Providers

Download free Graphic Mail templates, e-Books, games, etc.

Content downloads are free, however, they require Internet connection incurring packet transmission fees.









Entertainment Menu

Free Contents **→** •

- - Handset connects to the Internet. Follow onscreen instructions.

Via S! Contents Store

- In Entertainment menu, S! Contents Store >
 - Handset connects to the Internet. Follow onscreen instructions.

Reading e-Books (Japanese)

Downloading e-Books





Entertainment Menu



- Handset connects to the Internet. Follow onscreen instructions.
- Downloaded e-Books are saved to Data Folder (Books).

Note

 Alternatively, go to SH-web Mobile Internet site (シャープ・メーカーサイトSH-web in Bookmarks; see P.5-8) for e-Books.

Downloading Free e-Books

In ②. Free Contents → • → Tada-Hon or Tada-Komi

■ Follow onscreen instructions

e-Book Viewer


Read XMDF books and dictionary files. Some files may not be supported.



· e-Book Viewer starts. Refer to the e-Book Viewer help menu for operational instructions.

BookSurfing®

Download Contents Keys and read CCF files. Some files may not be supported.

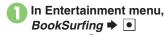

 BookSurfing[®] S! Application starts. Refer to the BookSurfing® help menu for operational instructions.

Moving CCF Files via Memory Card

• When purchasing a new handset, move CCF files and retrieve Contents Kevs to open the files. Some files may need to be re-downloaded



Using S! Friend's Status

Exchange current usage status, mood, etc. with compatible handsets.

- Save and organize members in Groups.
- S! Friend's Status requires a separate contract and basic monthly fee.
- Set IP Service Setting to On.
- Set Connection status to Online

First S! Friend's Status Use

Follow these steps to register a number saved in Phone Book; Status, Availability and Comment are sent to the members.









- Yes **▶** •
- Phone Book **▶** •
- Select entry

 Select

 Select phone number **▶** •
 - Omit number selection step if only one number is saved
- Yes **▶** Registration request is sent to the number.

When Request is Accepted

 An acceptance notice arrives; My Status is sent and member's status appears on handset.

Direct Entry

phone number **→** • • •

If IP Service Setting is Off

After ①, On ▶ • \$! Friend's Status **→** • From ②

10

Opening Member Status





- Select member **→**
 - Member status details appear.

When Cancellation Notice Arrives


 Member is deleted from S! Friend's Status member list.

Changing My Status

Follow these steps to change Status, Availability and Comment; new status is sent to the members.





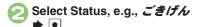



Status Template Window

- Select new Status ▶ •
- Select Availability, e.g., new Availability **▶** •
- <Add Comment> ▶ • Enter text **→** •
- Update starts





Receiving Request from Unsaved **Numbers**

When a registration request arrives, a confirmation appears.





 Acceptance notice is sent: the number is registered.

Rejecting

In ①, No → • → Yes → •

- Rejection notice is sent; the number cannot be registered for 24 hours.
- For *ConfirmLater*, Information window opens.

Creating Status Templates

Save custom combinations of Status Icon and Status Label to each template.



- In Status Template window, New Entry ⇒ •
- Enter name **→** •
- <未定> ▶ ●
- Status Icon → Select Pictogram **→**
- Status Label

 ◆

 Enter text **→** | • | **→** | ½7
- Repeat € 5 → 🗹 → Saved

Saving to Data Folder

[Status Template Window] Select template

Save to DF

template

Save to DF

Template

Temp Save here

Loading Templates via Data Folder [Status Template Window]

→ Add

Renaming Templates

[Status Template Window] - Select template → 🖃 → Edit Temp. Name → Intername →

Using S! Circle Talk

Use handset like a walkie-talkie to speak to multiple parties simultaneously.

- A subscription to S! Friend's Status is required.
- Packet transmission fees apply during St Circle Talk
- Set IP Service Setting to On.

Registering Members

Follow these steps to register a number saved in Phone Book:



• When registering a member for the first time, member registration confirmation appears. Choose Yes and press , then skip ahead to .









- Select number, e.g., No.1:
- Phone Book **⇒** | |
- Select entry **→** Select phone number **→** •



- Omit number selection step if only one number is saved.
- Repeat 4 5 to add members.



Saving as Individuals Saving from S! Friend's Status Member List In ⑤. Members List ▶ • Select member **→** • **→** ⊘ ■ Omit when *Individual* is selected in If IP Service Setting is Off After ①. On ⇒ • S! Circle Talk ⇒





Initiating S! Circle Talk

Follow these steps to send S! Circle Talk requests to members:

(Set Connection status to Online (P.10-10) first.)





- Select member or Group
- Transmission starts
 - S! Circle Talk starts when request is accepted by a receiver.
 - Loudspeaker activates automatically.

Direct Entry

Enter phone number **→** • Call

S! Circle Talk Operations

- Speaking
- Press and hold when Press and Hold appears
 - You have the floor





- [7]:My Turn appears when you have the floor.
- Keep holding **▶** to speak Release Floor is released
 - Warning tone sounds before time limit.


Incoming Calls during S! Circle Talk

• Incoming calls are rejected. Set handset to exit S! Circle Talk to answer incoming calls as needed

Canceling Loudspeaker During S! Circle Talk,

- To reactivate, follow these steps:
- While message appears. ■

Exiting S! Circle Talk

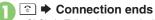

 S! Circle Talk ends automatically when there is only one participant left, including yourself.

Rejoining S! Circle Talk

Select most recent S! Circle Talk record **→** □ **→** Rejoin Circle Talk **→**

■ Not available when S! Circle Talk has ended or maximum number of participants are already engaged.

Accepting S! Circle Talk Request

- While handset is ringing/ vibrating, • **⇒** S! Circle Talk starts
 - Alternatively, press [17].
 - S! Circle Talk Operations: left

Blogging

Save blog details to view or update blogs easily on handset.

Saving Blog Details

Setup for Posting via Mail

Follow these steps to save blog name and address for posting:










Blog Setting Menu



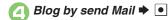



- Blog's Email Address

 ▶ ▶ Enter mail address
 ▶ ●

Saving Title/Text for Posts

After , Blog's Title or Blog's Text ■ Saved title/text is entered automatically

when posting. Setting Image Size for Posting After ⑤, Picture Size ▶ ● Select

size **▶** • **♦** 🕞

Setup for Posting via the Internet

Save URL for Yahoo! Keitai or PC sites, or both.

- In Blog Setting menu, Blog Title

 ■ Enter name **▶** •
- Refer/Send by Yahoo! Keitai or Refer/Send by
- Blog's URL → Enter URL **⇒** •
- Refer Blog's URL ▶ ▶ Enter URL **→** •




Complete setup for posting via mail/ Internet beforehand.



- In Blog Tool window, select entry ▶ •
- Blog by send Mail

 S! Mail Composition window opens
 - with address entered.
 - Omit @ if no URL is saved for posting.

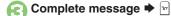

Posting via the Internet

- In Blog Tool window, select entry ▶ ●
- 🛜 Blog by send Browser Þ 💽
 - Page of URL saved in Blog's URL opens.
 - Omit ② if no address is saved for posting.
 - If PC Site Browser message appears, follow onscreen prompts.

When URLs for Yahoo! Keitai & PC Sites are Saved

After ②, select browser ▶ •

Opening Blog Page

- In Blog Tool window, select entry ▶ ☑
 - Page of URL saved in Refer Blog's URL opens.
 - If PC Site Browser message appears, follow onscreen prompts.

When URLs for Yahoo! Keitai & PC Sites are Saved

After ①, select browser ▶ •

Mobile Widget	
■ Managing	
Opening properties	● Widget → ● Widget Contents → ● Select widget → □ → Details → ● ● Select widget other than SI連報ニュースSIともだち状況.
■ Settings	
Canceling automatic updates	● → Widget → ● → Settings → ● → Auto Refresh → ● → Off → ●
Receiving updates automatically while outside Japan	Widget Settings AutoConnect Abroad On
Hiding confirmation outside Japan	● Widget ● ● Settings ● ● Set Use Abroad ● ● Off ● ●
Disabling cookies	● → Widget → ● → Settings → ● → Cookies → ● → Disabled → ●
Deleting cookies	● Widget ● Settings ● Delete

Operations in Standby

Operations in Standby	
Selecting widget display option	 Select option Select option Choose Off to disable widget display even when one is pressed; re-enable via Show Widget in Standby Display menu.
Logging in to Yahoo! JAPAN	 S → S Yahoo!JAPAN log in → ● Follow onscreen instructions. To log out, select Yahoo!JAPAN log out in the steps above.
Moving widgets	 ♦ Select widget • • Poperation • • Change Layout • Specify target location • •
Moving widgets to front/back	→ Change Layout → ● Specify target
Moving widgets to	 Change Layout Iocation Select widget Operation Operation

■ Sheets

Editing sheet names	Start Here
	Renaming Select sheet
	Resetting All Sheet Names □ → Yes → ●
Locking sheets	Start Here
	Activating Lock Select sheet
	Changing Method for Temporary Access Unlock Method → ● → No Password → ● • Press 🔄, then select 📵 and press ● to unlock sheet temporarily.

■ Removing Widgets

	Start Here	
	Removing multiple widgets at once	All Widgets Remove All Select sheet Yes Yes
		Selected Icons Select & Remove ▶ ● ▶ Select widget ▶ ● (▼) ▶ Complete selection ▶ ♥ ▶ Yes ▶ ●

S! Quick News & S! Friend's Status Widget (S! Quick News)

Adding news items	Select S! Quick News & S! Friend's Status widget ・ Operation ・ Ocontent Menu ・ Add News ・ ・ S! Quick News List ・ ● 登録はこちら ・ Yes ・ Select genre ・ Select item ・ ●	
Changing news scroll speed	Select S! Quick News & S! Friend's Status widget	
Showing unread news only	Select S! Quick News & S! Friend's Status widget → ⊕ → Operation → • → Content Menu → • → News Display → • Target News → • Unread Only → •	
SI Quick News & SI Friend's Status Widget (SI Friend's Status)		

: :::::::::::::::::::::::::::::::::		
Assigning members	Select S! Quick News & S! Friend's Status widget Operation Content Menu Select category Select entry/ member (Empty) (Empty) Select entry/ Operation Select entry/ Member Operation Op	
	Start Here Steet S! Quick News & S! Friend's Status widget Status widget Content Menu See Select	
Managing members	Deleting Members Delete → • → Yes → •	
	Changing Member Order Move → □ → □ (Up) or □ (Down) → □	
	Changing Member Icons Change Icon Select Pictogram ■	



S! Quick News

Opening/Updating Items

Setting S! Quick News automatic update	Select item Select update interval, On or Off If a message appears, press When Special is set to On, items are updated every four hours. When General is set to On, items are updated once a day. Updating items may incur high packet transmission fees. Only available in Japan.
Checking update schedule	
	Start Here ● ⇒ Entertainment ⇒ ● ⇒ S! Quick
Dalatina Cl Oviale	News Select item Select i
Deleting S! Quick News items	
	Select item See below One Entry
	Select item → □ → See below One Entry -件 → □ → Yes → □ All Entries

Other

Changing background image	● Description ● Description
Accessing source sites	■ Entertainment ■ S! Quick News ■ S! Quick News List ■ Select item ■ Select title ■ Select linked title ■ Yes ■ ■
Disabling image download	Entertainment S! Quick News Settings Show Image

S! Information Channel

■ Receiving Information

Suppressing Information window for new received info	● Description Des
Requesting re-delivery	● ★ Entertainment → ● → S! Information Channel/Weather → ● → Get Latest Contents → ● → Yes → ●

■ Information Pages

Changing Display Size	On a page, → Settings → → Display Size → Select size →
Changing scroll unit	On a page, → Settings → → Scroll Unit → → Select unit → ●

Copying text	On a page, → Copy Text → → Select first character → → Highlight text range →
Saving files to Data Folder	On a page,
Opening page properties	On a page,
Weather Indicators	

weather indicators

Checking weather forecast	Entertainment
Changing weather forecast page font size	On a page, □ → Settings → ● → Font Size → ● → Select size → ●
Hiding Weather Indicator in Standby	■ Entertainment ■ S! Information Channel/Weather ■ Weather Indicator ■ Settings ■ Standby Setting ■ ■ Off ■
Canceling Weather Indicator automatic updates	● ► Entertainment ► ● → S! Information Channel/Weather ► ● → Weather Indicator ► ● → Settings → ● Icon Update → ● Off ◆ ●
Suppressing Information window for weather updates	● ► Entertainment ► ● → S! Information Channel/Weather ► ● → Weather Indicator ► ● → Settings → ● → Weather Notif. → ● Off ● ●

e-Books	
Copying text	In open page, ♥ ◆ 文字列を北* - ◆ ● ◆ Select first character ◆ ● ◆ Highlight text range ◆ ●
Opening non-001SH e-Books (Library)	● ★ Entertainment → ● ◆ e-Book Viewer → ● → Select file → ● ● Some files may not open.
	Start Here ● ⇒ Entertainment ⇒ ● • Book Viewer ⇒ □ ⇒ See below
	Adding Folders
	Switching Folders Switch Folders Select folder Select folder ■
Using Library	Renaming Folders/Files Select folder/file → □ → Rename → ● Enter name → ●
	Moving Files Select file ⇒ □ → Move → ● Select folder ⇒ ● → Move here ⇒ ●
	Deleting Folders/Files Select folder/file
	Opening File Properties Select file ⇒ □ → Details ⇒ ●

S! Friend's Status

Members & Groups

Intellibers & GIO	ups
Adding members	● ★ Entertainment ★ ● ★ S! Friend's Status ◆ ● ★ ☑ Select Group ★ ☑ ★ Add Member ◆ ● ★ Select method ★ ● ★ Select entry or enter phone number ★ ● ★ Yes ★ ●
Deleting members	● Entertainment ● S! Friend's Status ● Select Group Select member ● Registration Release ● Yes ● Yes ● Cancellation notice is sent; deleted members cannot be re-registered for 24 hours.
Moving members	● ★ Entertainment ★ ● ★ S! Friend's Status ★ ● ★ Select Group ★ Select member ★ □ ★ Change Group ★ ● ★ Select target Group ★ ●
Renaming Groups	● ► Entertainment ◆ ● → S! Friend's Status → ● → Select Group → □ ► Edit Group Name → ● → Enter name → ●
	Start Here ● Description Start Here ■ Desc
Rejecting requests	Rejecting Requests from Unsaved Numbers Confirm if Registered ■ Rejection notice is sent to rejected numbers automatically.
	Rejecting All Requests Always Ignore • • • Rejection notice is sent to all requesters automatically.

■ Status & Availability

Availa	g custom ability inations	■ Entertainment ■ SI Friend's Status ■ Settings ■ Answer Status ■ User Setting ■ Select type ■ Select Availability ■ □
		▶ Entertainment ▶ ●
Chan	ging Status	Status ⇒ • ⇒ Settings ⇒ • Status
Icon I	Pictogram or	Setting ⇒ • Select template ⇒ Select
Statu	s Label	Status ⇒ ● ⇒ Status Icon ⇒ ● ⇒ Select
descr	iption	Pictogram ⇒ ● ⇒ Status Label ⇒ ● ⇒ Enter
		text 🏓 🔍 🔛

■ Status Templates

Resetting templates	Start Here ● → Entertainment → ● → S! Friend's Status → ● → 私の状況 → ● → Select Status → ● → See below
	One Template → Select template → □ → Reset → ● → Yes → ●
	All Templates □ → Reset All → ■ → Yes → ■
Member Status & Notices	

Member Status & Notices

Updating manually	● Entertainment → ● → S! Friend's Status → ● → Settings → ● Status Update → ●
Opening notices	● ◆ Entertainment ◆ ● ◆ S! Friend's Status ◆ ● ⇒ ⇒ Status Notif. List ◆ ● Select notice ◆ ●

■ Sending Image

Sending M image	ly Details	● Entertainment ● ● S! Friend's Status ● ● Select Group ● Select member ● ■ Send Image ● ● Yes ● ● Available when your handset number is saved in Phone Book on member's handset.

S! Circle Talk

■ Member List		
Editing individual members	Start Here ● ⇒ Entertainment ⇒ ● ⇒ S! Circle Talk ⇒ ● ⇒ Select member ⇒ □ ⇒ See below	
	Replacing Members Edit	
	Deleting Members Delete → ● → Yes → ●	
	Start Here ● ⇒ Entertainment ⇒ ● ⇒ S! Circle Talk ⇒ ● ⇒ Select Group ⇒ □ ⇒ See below	
Editing Groups	Editing Group Name/Members Edit → ● → Select target → ● Edit/enter → ● → □	
	Deleting Group Members Edit → ● → Select member → □ → Delete → ● → Yes → ● → □	
	Deleting Groups Delete → ● → Yes → ●	

■ Settings

Disabling	▶ Entertainment ▶
Loudspeaker	● ⇒ □ → Loudspeaker ⇒ ● → Off ⇒ ●
Exiting S! Circle	▶ Entertainment
Talk for incoming	▶
calls	or Video Calls ⇒

Blog Tool

Editing entries	Description Description
	Select entry ⇒ □ ⇒ Edit ⇒ ● ⇒ Select
	item ⇒ • Edit/enter ⇒ • ⇒ ⇒ 🗹
	Select entry
	● ⇒ Entertainment ⇒ ● ⇒ Blog Tool ⇒ ● ⇒
	Select entry ⇒ □ ⇒ Delete ⇒ • → Yes ⇒ •



S! Quick News



Cannot receive content updates

- Update may fail out-of-range or in poor signal conditions.
- Auto Refresh does not affect S! Quick News List News Flash update items overnight.
- USIM Card replacement cancels Auto Refresh.

S! Friend's Status



Cannot use S! Friend's Status

• Set IP Service Setting to On.



Handset rejected a registration request automatically

 Rejection notice is sent automatically when 30 members are already registered or handset fails to respond within two hours.



Registration request arrived from a deleted member

· Registration request arrives when a member fails to receive cancellation notice within 24 hours.



Registration request was sent to a member automatically

· Registration request is sent automatically when handset fails to receive rejection/cancellation notice within 24 hours.



Cannot create Status Templates

• Three templates may already be added; reset one and retry.

S! Circle Talk



Cannot use S! Circle Talk

• Set IP Service Setting to On.



S! Circle Talk starts automatically

• Check My Status; handset accepts S! Circle Talk requests automatically if S! Circle Talk Availability is set to Auto Join.



Cannot accept S! Circle Talk requests

• Check My Status; handset rejects S! Circle Talk requests automatically if S! Circle Talk Availability is set to Join NG.



Handset Security	11-2
Operations Security	11-2
Information Security	11-3

Function Control	. 11-
Using Function Control	11
Additional Functions	. 11-





Operations Security

Function Lock

Restrict access to handset functions.


Auto	Lock when Display turns off or handset is closed
Once	Lock immediately; setting is canceled once handset is unlocked
At Power On	Lock when powering on; Handset Code entry window opens





Locks Menu



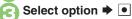

Unlocking Temporarily

While handset is locked, enter

Handset Code

●

Available Operations while Function Lock is Active

 Power on/off, answer calls, place callers on hold, end calls, etc.

PIN Entry

Activate PIN Entry to require PIN entry each time handset is powered on.





Secure Remote Lock

Lock a lost handset remotely via PC or another handset. Secure Remote Lock disables all operations except powering on. For more about Secure Remote Lock, see SoftBank Mobile Website (P.15-22) or contact SoftBank Mobile Customer Center, General Information (P.15-39).



Information Security

Application Lock

Restrict access to these functions:

Phone Book Calendar/Tasks

Mail Notepad


Yahoo! Keitai





Locks Menu



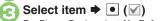

For Phone Book, select No Refer (to hide entry names in message lists. Call Log, etc.) or *Refer* and press .



Temporary Access to Functions

· When accessing functions, enter Handset Code and press .

History Lock

Restrict access to Call Log and sent/ received mail records.

- In Locks menu, *History* Lock **⇒** •
- Select item **▶** (☑)
- **▶** Enter Handset Code

Temporary Access to Records

 When accessing records, enter Handset Code and press .

Show Secret Data

Activate Show Secret Data to access Secret entries.

- In Locks menu, Show Secret Data **▶** •
- **▶** Enter Handset



Using Function Control

Restrict access to the following functions remotely. (Available for administrators.)



- A message appears while Function Control is in progress.
- May be unavailable depending on subscription. For details, contact the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (P.15-39).

■ When Accessing Restricted Functions A message (example shown below) appears; the function is inaccessible.



Message may not appear for some functions.

Checking Restriction Status







 Restriction status appears for each function.



PIN Entry ● ⇒ Settings ⇒ ● ⇒ • Phone/ Locks → PIN Entry → Ohange PIN → **Changing PIN** Enter current PIN → ● Enter new PIN → ● ⇒ Re-enter new PIN ⇒ ● Activate PIN Entry first. Secure Remote Lock Start Here ● ⇒ Settings ⇒ ● ⇒ № Phone/₽ See below **Saving Message Setting Secure** Message → • Enter message → • Yes Remote Lock ▶ • activation message **Checking Message** Check Message ⇒ • **Hiding Message** Display Setting ⇒ ● Don't Show ⇒ ●

Data Folder	12-2
Opening Files	12-3
Managing Files & Folders	12-4
Memory Card	12-5
Using Memory Card	12-5

Additional Functions	12-7
Troubleshooting	12-9

Data Folder & Memory Card



Data Folder

Handset files are organized in folders by file format.

■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Still images on Memory Card (images captured with save location set to DCIM)
Ring Songs-Tones	Downloaded melodies and other sound files
S! Appli	S! Applications
Widget*	Widgets
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Books [*]	Downloaded e-Books, etc.
Customized Screen*	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Flash®	Downloaded Flash® (animation) files
Other Documents	Other files (Dictionary files, etc.)

*Contains corresponding Yahoo! Keitai menu shortcut.

Checking Memory Status

- Data Folder Data Folder Data Folder Data Folder Data Folder Phone Memory or Memory Card Data Folder Data Folder
- The category *Others:* includes Data Folder management files, Saved Pages, etc.
- Delete messages/files when memory is low. Handset performance may be affected when memory is full.




Opening Files





- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press .

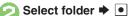

To open a sub folder, select it and press .



File List

Select file **→** •



- The content plays or appears.
- To return to file list, press

Handling Open Images

• Press • to enlarge, or press # "/ o or to open next or previous image. Press related to rotate 90 degrees clockwise. Attaching to Mail

After ②, select file ▶ □ ▶ Send/


■ If a confirmation appears, follow onscreen instructions.

Copy Protected Files () or 90)

Some functions may be unavailable.

Slide Show

Available for Pictures or DCIM folder.

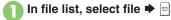



➡ Slide Show stops


Changing Interval

After ②, □ → Speed → • Select speed **▶** •

■ When Speed is set to *Manual*, press •/ # or kind to advance or reverse frame.

Note

 Backlight stays on during Slide Show; exit to save battery power.

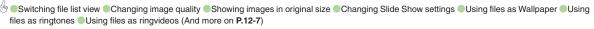

Managing Files & Folders

Adding Folders

May be unavailable for some folders.





File List




If **Download** is selected or folder is empty, skip ahead to ②.





Moving/Copying Files

Some files may not be moved/copied.

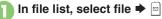



- folder and press •.

Selecting Multiple Files





Hiding Folders

Restrict access to created folders.

Only handset folders can be hidden.

\rceil In file list, select folder 🕈 🖂

Set Secret → •

Accessing Secret Folders (Unlock Temporarily)

[File List]

→ Unlock Temporarily

→ → Enter Handset Code → •

Canceling Secret

Unlock Secret folders temporarily and select Secret folder

□

Unset Secret

□



Using Memory Card

Use microSD/microSDHC Memory Card (hereafter "Memory Card") to save and organize files for use on 001SH.

- Use recommended Memory Cards only. For details, see P.15-22 "microSD Memory Card Compatibility."
- If inserted, captured images, downloads and other files save to Memory Card. (My Pictograms and Graphic Mail templates save to handset.)

Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset
- Keep Memory Cards out of infant's reach: may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/ alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never power off or remove battery while files are being accessed.
- Be careful not to erase or overwrite files. accidentally.

Inserting & Removing

Power off first.



Remove battery (P.15-4)



Insert card



- With terminal side down, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.



If Appears after Power On

 Memory Card may not be inserted properly: reinsert the card.

Removing Memory Card

 Gently push in card and release it: card pops out. Pull card straight out gently.





Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.





- Offline Mode is set. Handset transmissions are suspended until format is complete.
- Yes

 To cancel, choose No and press

 I. To cancel, choose No and press

 II. To cancel the context of the context


Precaution

 Never power off or remove battery while formatting; may cause damage.

Opening Memory Card Files

Follow these steps to open files via Data Folder:



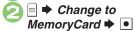



• [2] (Memory Card indicator) appears.









File/Folder View Settings ● Data Folder → ● Select folder → ● Switching file list → Manage Items → Ohange List View ⇒ • Select option ⇒ • view Not available for some folders. Changing image Select file ⇒ • □ ⇒ Image Quality (Picture Quality for Flash® files) → ● Select quality quality 🗼 🔳 Data Folder → Select folder → Showing images in Select file ⇒ • □ ⇒ Switch Display ⇒ original size Original Size Original Size Start Here Data Folder Select folder ⇒ Select file ⇒ □ ⇒ Slide Show ⇒ • ⇒ See below **Playing Once** Repeat ⇒ • • • • • **Changing Slide** Plaving Music Show settings BGM Settings ⇒ • Switch On/Off ⇒ • ⇒ On ⇒ • **Changing Music** Select folder ⇒ • Select file ⇒ • ● Data Folder → ● Select folder → ● Hiding Softkeys in ⇒ Select file ⇒ • ⇒ SW Guide Display image view → Off → ●

Using Files/Folders	
Using files as Wallpaper	Data Folder Select folder Select file Select file Set as Wallpaper For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.
Using files as ringtones	■ Data Folder ■ Select folder ■ Select file ■ Select file ■ Set as Ringtone ■ Select item ■ If prompted, enter ring time and press ■. If a confirmation appears, follow onscreen instructions.
Using files as ringvideos	■ Data Folder ■ Videos ■ Select file ■ Set as Ring Video ■ Select item ■ If prompted, enter ring time and press ■.
Saving Phone Book entries	■ Data Folder ■ Select folder ■ Select file ■ Save to Phone Book ■ As New Entry ■ Complete other fields ■ □ ■ To add to an existing entry, select As New Detail.
Activating mobile camera, etc. in corresponding folders	● Data Folder → ● Select folder → ● → Take Picture, Record Video or Record Voice → ●

Managing Files/Folders	
Renaming folders	● Data Folder ● Select folder ● Select folder ● Manage Items ● Maname ● Enter name ● Assign different names to folders within a layer.
Opening file properties	● → Data Folder → ● → Select folder → ● → Select file → □ → Details → ●
Renaming files	Data Folder → ● → Select folder → ● Select file → → Manage Items → ● → Rename → ● → Enter name → ●
Sorting files	● Data Folder ● ● Select folder ● ● ● Select folder ● ● ● Sort ● ● ● Select method ● ●
	Start Here ● → Data Folder → ● → Select folder → ● → See below
Deleting files & created folders	Single Files Select file
	Select folder ⇒ □ ⇒ Delete ⇒ • Yes ⇒ •

	Start Here ● ⇒ Data Folder ⇒ ● → Other Documents ⇒ ● ⇒ Select file ⇒ ● ⇒ See below
	Line Scroll ☑
	Page Scroll 2 (Up), 8 (Down), 6 (Right), 4 (Left)
Handling SVG files	Zoom 13 (Zoom out), 34 (Zoom in)
	Rotate 7-4 (Counterclockwise), 9-4 (Clockwise)
	Key Action Mode
	Default View
Memory Card	
Using HTML files on Memory Card	● Settings ● ● Memory Card ● SD Local Contents ● Select title ● ●



Managing Files/Folders



Cannot copy files

• Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)



Copied/moved files cannot be used on PCs, etc.

• Some files may not be usable on other SoftBank handsets or PCs, etc.



Cannot sort files properly

• Check the number of files/folders in the folder. Files/folders in folders containing 961 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.



Cannot use some characters in file/folder names

• Single-byte Symbols \(\xeta \), \(\tau \), \(\zeta \ ?, #and " are not supported.



Infrared	13-2
Transferring Files via Infrared	13-3
Exchanging Contact Information	13-4
Bluetooth®	13-5
Bluetooth [®]	13-5
Transferring Files via Bluetooth®	13-6
PC Connection	13-9
Connecting PC	13-9

Backup	13-10
Basics	
Backup & Restore	.13-11
S! Addressbook Back-up (SAB)	13-13
About SAB	.13-13
Using Sync Commands	.13-15
Additional Functions	13-17
Troubleshooting	13-20

Connectivity & File Backup



Infrared

Wirelessly transfer files between 001SH and compatible devices.

Transferable Files

Phone Book	Received Msg.
Calendar	Sent Messages
Tasks	Drafts
Notepad	Templates (Messaging)
Bookmarks	Data Folder

- Copy/forward protected files are not transferable.
- Some files may not be transferable; some settings may be lost, or files may not be saved properly. For details, see "Troubleshooting" at the end of this chapter.


Getting Started



Infrared Precautions

Align Infrared Ports of both devices.

• Handset cannot receive connection requests during Software Update.

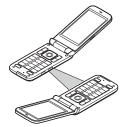

- Do not place objects between devices.
- Keep Infrared Ports aligned during transfer.
- Do not look into Infrared Port during infrared transmissions. Eyesight may be affected.
- 001SH complies with IrMC 1.1, however, some files may not transfer properly.

Transfer Options

One File Transfer	Transfer single files
All File Transfer	Transfer all files by function

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

Authorization Code

 Four-digit code required for Infrared transfers. All File Transfers are possible when codes match. (Authorization Code is changeable for each transfer.)



Receiving Files





- Infrared is activated. (Alternatively, activate it via Main Menu.)
- Handset receives files if sent within three minutes.
- Handset must be in Standby to accept connection requests.
- To cancel Infrared, Long Press .

Connection request arrives



Request Window

Perform subsequent operations

• To cancel transfer, press 🗹.

Subsequent Operations

- One File Transfer
 - If storage media confirmation appears, select media and press .
- All File Transfer (Adding Files) Yes

 ■ Enter Authorization
- All File Transfer (Overwriting **Existing Files**) Yes

 ■ Enter Authorization Code

 Delete All & Save

 Delete All & Save • **▶** Yes **▶** •
 - For Phone Book, My Details except handset phone number is overwritten as well.

Sending Files

One File Transfer

Example: Phone Book entry



- Transfer starts

 When complete, entry search window returns.

All File Transfer



- Yes

 Enter Handset
- Complete selection **▶** [12]
- Enter Authorization Code **→** → Transfer starts → •

Sending Phone Book

• In . Picture transfer confirmation appears; choose **Yes** or **No** and press .

Exchanging Contact Information

Exchange name, phone numbers, mail addresses, and other contact info with other compatible handsets via infrared. Read P.13-2 "Infrared Precautions" beforehand.

Receiving Profiles



(Long)



Exchange Profile Menu



Receive **→** •



Profile received



 Received profile is saved to Phone Book.

Sending Profiles



Changing Profile Items to Send [Exchange Profile Menu] Send Settings → • Select item → • (/V) → Complete selection → V **Opening My Details** [Exchange Profile Menu] My Details **▶** •



Bluetooth®

Wirelessly transfer files/data between 001SH and compatible devices (watches, handsfree devices, etc.).

- For transferable files, see P.13-2.
- 001SH supports simultaneous connection with two devices. (May be unavailable depending on the device type.)
- Bluetooth® connection may not be possible with some Bluetooth® devices.
 - Handset shall be connected to certified Bluetooth® devices that meet the specification standards developed by the Bluetooth SIG.
 - Data transfers may fail depending on characteristics or specifications of the certified Bluetooth® devices.
- Noise may interfere with wireless or handsfree conversations
- TV audio is supported only on SCMS-T DRM scheme compliant Bluetooth® devices.

Getting Started

Bluetooth® Precautions

Check transmission range of your Bluetooth® device to use with handset properly. Maximum transmission range for transfers between 001SH handsets is ten meters. (Bluetooth® connection/transfer rate may vary depending on conditions.)

Important Handsfree Device Usage Note

- Handle call operations on the device in use. Bluetooth® Watches
- Compatible Bluetooth® watches support these functions:
 - Clock svnc
- Alarm notice
- Mail notice News notice ■ Remote Shutter ■ Mode Settings
- Quick Silent ■ Caller ID notice
- Hold calls
- Show Operator Name
- For details about functions/operations. see the Bluetooth® watch guide.

Bluetooth® Connection Recipient Sender Search for devices Activate Select device Bluetooth® Request connection

Connection complete

Accept

Authorization Code

- 4 to 16-digit code required for Bluetooth® connections with devices not compliant with Bluetooth® specification Ver. 2.1. Pairing is possible when codes match.
 - For handsfree devices, enter specified Authorization Code

Advanced

🎂 🌑 Cloaking handset to avoid connection requests 🌑 Setting idle time after which Bluetooth® is canceled 🜑 Switching audio output to wireless device Changing Bluetooth® name for handset 🗓 Opening Bluetooth®-related handset properties 🌑 Synchronizing Bluetooth® watch with handset Clock Enabling/disabling Bluetooth® watch responses (And more on P.13-17 - 13-18)



Transferring Files via Bluetooth®

Activating Bluetooth®

- (Long)
 - Bluetooth[®] is activated.
 - Handset must be in Standby to accept connection requests from unpaired handsfree devices, etc.
 - ullet To cancel Bluetooth[®], Long Press ullet.

Connecting Bluetooth® Devices

Device Search & Pairing

Activate Bluetooth® on devices to be paired with first.





Bluetooth Menu





- **B**
 - Found devices are listed after search.
 - To cancel search, press 🔄.
- Select device ⇒ ■

If a confirmation appears, choose Yes and press \blacksquare .



 If the other device is a keyboard, follow onscreen instructions.

Connecting Devices Not Compliant with Bluetooth® Specification Ver. 2.1
In ⑤, enter the same Authorization
Code for handset and the other
device ▶ ● Paring complete

- On the other device, complete code entry within 30 seconds.
- Code entry is omitted for paired devices.



- Activating Bluetooth® via Main Menu (P.13-17)
- Editing Paired Device list Disconnecting handsfree devices, etc. Connecting devices supporting handsfree telephony and audio output by service Specifying a preferred device for wireless connection (P.13-18)



In Bluetooth menu, Paired



Paired Device List

If handset is already connected to another device, disconnection confirmation may appear; choose Yes and press .

 The device is connected and ✓ (preferred) appears.

Accepting Connection Requests

Follow these steps to accept connection requests from unpaired devices:

Connection request arrives



Request Window



- Yes **▶**
 - If the other device is a keyboard, follow onscreen instructions.

Connecting Devices Not Compliant with Bluetooth® Specification Ver. 2.1 In ⁽³⁾, enter the same Authorization Code as sender's ▶ • ■ Complete code entry within 30 seconds.



Transferring Files

Follow the steps below to exchange files with paired devices.

- For transferable files, see P.13-2.
- When requested, enter Authorization Code.
- **Receiving Files**
- Connection request arrives



Request Window

- Perform subsequent operations
 - To cancel transfer, press 🔄

Subsequent Operations

One File Transfer

Yes **▶** • **>** *Yes* **▶** •

- If storage media confirmation appears, select media and press .
- All File Transfer (Adding Files)
- All File Transfer (Overwriting) **Existing Files)**

• **→** Yes **→** •

- For Phone Book, My Details except handset phone number is overwritten as well.
- Sending Files
- One File Transfer

Example: Phone Book entry

- Select entry → □ →
- Via Bluetooth ▶ •
- Select device **→** •
- Yes

 Transfer starts

 Yes

 Transfer starts
 - When complete, entry search window returns.

- All File Transfer
- In Bluetooth menu, Send All •
- **▶** •
- Enter Handset Code

 ●
- Select item **→** (/ / /) **→** Complete selection **→** 🗹 **→**

Sending Phone Book

• In <a>\textit{\textit{Q}}\$. Picture transfer confirmation appears: choose **Yes** or **No** and press .




Connecting PC

Accessing Memory Card


Connect handset to a PC via USB Cable to access Memory Card from the PC without removing card from handset. USB Cable may be purchased separately.





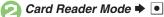

Use PC to access Memory Card.

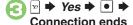

Disconnect USB Cable.

If Menu in 1 Does Not Appear

• Follow these steps:

● **Tools** • • • Connectivity **▶** From ⊘

Operations on the PC may be required; if prompted, follow onscreen instructions.

Utility Software (Japanese)

For more PC-related operations, download Utility Software (including USB Cable driver) from the following URL.

Utility Software

http://k-tai.sharp.co.jp/download/tools/utility/

Mobile Data Communication Fees

 Using the Internet by connecting handset to PC/PDA via USB Cable or Bluetooth® may incur high charges as large-volume packet transmissions tend to occur in a short period of time.



Basics

Back up information to Memory Card, and restore to handset as needed.

Specify frequency for Auto Backup.

Auto Backup requires a subscription to S! Addressbook Back-up.

Supported Items

Phone Book

In manual backup, items with are selectable at once via *Check Selection* in Options menu.

Sent Messages

1 Hono Book	Cont moccagos
Calendar [*]	Drafts [*]
Tasks [*]	Templates (Messaging)
Bookmarks*	Contents Keys
Notepad*	Data Folder
Mail Groups	User Dictionary
Received Msg.*	

Auto Backup Compatibility

- These items are not backed up automatically:
 - Mail Groups
 - Templates (Messaging)
 - Data Folder
 - User Dictionary

Precautions

- Not available if battery is low.
- Backup may fail if Memory Card memory is low.
- Some items may not be transferable; some settings may be lost, or files may not transfer properly. For details, see
 "Troubleshooting" at the end of this chapter.

Auto Delete (Auto Backup Files)

 Auto Backup saves up to three backup files for each item; when full, oldest files are deleted automatically to save new ones.

Contents Keys

- Manual backup overwrites Contents Keys in Memory Card. Perform Restore beforehand to keep previous Keys.
- In Auto Backup, Contents Keys are added to Memory Card.

Restoring Backed Up Content

• Corresponding handset content is overwritten depending on Restore option.



Manual Backup

Follow these steps to back up selected items at once:






Backup/Restore Menu








 For *Phone Book*, a confirmation appears. Choose *Yes* or *No* and press .

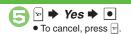



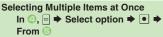

Selecting/Canceling All Items

In ②, □ → Check All or Uncheck All → ■

Auto Backup

Back up information to Memory Card at a specified frequency automatically. To enable Auto Backup, set Auto Sync Settings (S! Addressbook Back-up) to *On*; Auto Backup will be performed at 2:00 AM

on the same day of the week by default.

Precautions

- Auto Backup does not start when:
- Memory Card is not inserted
- Battery is low/dead and not being charged
- Another function is active (end it and return to Standby)

At Auto Backup Time

Backup starts; Information window opens upon completion.

Select *Complete Auto Save* and press • to open backup result.

13

Changing Settings

Follow these steps to back up once a week automatically:

- In Backup/Restore menu, Settings/Manage ▶ •
- Auto Backup

 Enter Handset Code **→** •



Auto Backup Menu

- Frequency Settings **▶** •
- Select day


 ● ■ Enter time **→** •
- Select item (/√) → Complete selection **→** 🖾



Memory Card to Handset

Follow these steps to restore selected items:

- In Backup/Restore menu, Restore Selected Items > | • | **→** Yes **→** | • |
- Select item **→** (// //) **→** Complete selection
- - If no file list appears, skip ahead to 3.
- Select file **▶** Repeat ② to complete selection.

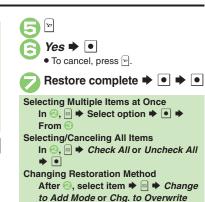


Mode → • From ⓒ



About SAB

Back up Phone Book content in SAB; add Phone Book changes to SAB anytime. Edit SAB online via PC; add SAB changes to Phone Book anytime. Restore lost or altered Phone Book content from SAB. Set auto synchronization frequency as needed.

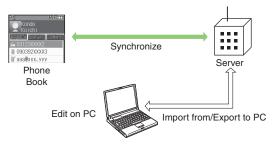

- SAB requires a separate contract and basic monthly fee.
- Use SAB to add Phone Book content to a new compatible SoftBank handset; some conditions apply (P.13-14).
- Use a PC to edit SAB online
- For more about SAB, see SoftBank Mobile Website (P.15-22).
- Synchronization incurs packet transmission fees.

Auto Synchronization

- After subscription to SAB, receiving subscription confirmation message or retrieving Network Information activates auto synchronization (Auto Sync Settings: On, Set Frequency: After Editing Ph.Book(10 min.), Sync Mode Setting: Normal); Phone Book changes are added to SAB automatically.
- Cancel auto synchronization as needed. However, it reactivates after Network Information retrieval.
- Handset makes up to three attempts to synchronize automatically.

SAB Sync Co	nmands & Features
-------------	-------------------

Synchronization	Normal	Synchronize Phone Book and SAB ¹
	Sync from Client	Add Phone Book changes to SAB ²
	Backup	Export Phone Book content to SAB ³
	Sync from Server	Add SAB changes to Phone Book ⁴
	Restore	Import SAB content to Phone Book ⁵
Edit on PC	Import from PC	Upload PC address book info to SAB
	Export to PC	Export SAB content to PC address book
	Sync Lock	Prevent synchronization from handset
Send Notice ⁶	Birthday Notification	SAB sends reminders via SMS to handset
	Email Address Notification ⁷	Send new handset mail address to specified addresses
	"Disaster Message Board" Message Notification ⁸	Send emergency message board update to specified addresses
Spam Filter	Tomodachi Email Filter ⁹	Always accept messages from mail addresses saved in SAB

¹ If the same entry item is edited in Phone Book and SAB, SAB content is referenced.



²Unrelated SAB changes remain.

³Any existing SAB content is deleted.

⁴Unrelated Phone Book changes remain.

⁵Any existing Phone Book content is deleted.

⁶Access this function via handset (My SoftBank; Japanese) or a PC.

⁷Backup resets notification setting; handset address is sent to all addresses.

 $^{^{\}rm 8}\textsc{Backup}$ resets notification setting; updates are not sent to any address.

⁹Export Phone Book content to SAB beforehand.

Service Usage Outline

Complete Contract

Visit a SoftBank Shop, dial 157 from a SoftBank handset for SoftBank Mobile Customer Center, General Information or access My SoftBank (Japanese).



Receive Notice

After subscription, password information arrives via SMS.

 Your handset number and password are required to access SAB via a PC.



Use SAB

Export Phone Book content to SAB.

Precautions

Unsynchronizable Items

These Phone Book settings are lost:

- Picture, Tone, Vibration
- Unintentional Phone Book or SAB Content Deletion
- When no Phone Book content exists, performing synchronization via *Normal, Sync from Client* or *Backup* deletes all SAB content.
- When no SAB content exists, performing synchronization via *Normal, Sync from Server* or *Restore* deletes all Phone Book content.
- Phone Book ⇔ SAB Content Capacity Disparities

When the number of savable items varies between Phone Book and SAB entries, synchronization reflects lower limit.

■ Contract Termination

SAB content is deleted upon contract termination.

- SAB Transfers to New Handsets
- SAB-Compatible 3G Handsets
 SAB remains as last saved and is fully accessible.
- Other SoftBank 3G Handsets
 SAB remains as last saved and is accessible via PC.
- V8 Series
 Service contract is terminated and SAB content is deleted.
- When Double Number is Active

Regardless of usage mode setting, all Phone Book content is backed up.



Using Sync Commands


Normal (Start Sync)

Synchronize Phone Book and SAB via Normal.





S! Addressbook Menu

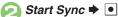

 Synchronization starts; when complete, details appear.



Canceling Synchronization Yes → • • • •

Other Sync Commands

Available Commands:

- Transport		
Sync from Client	Add Phone Book changes to SAB	
Backup	Export Phone Book content to SAB; any existing SAB content is deleted	
Sync from Server	Add SAB changes to Phone Book	
Restore	Import SAB content to Phone Book; any existing Phone Book content is deleted	


If this is your first use of SAB (new handset), synchronization is performed via Normal regardless of selection.









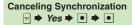



Changing Auto Sync Settings

Follow these steps to synchronize once a week automatically:

- In S! Addressbook menu, Details **▶** •
- Auto Sync Settings ▶ •
- Set Frequency **▶** •
- Weekly

 ▶ Select day → Enter time → •
- Select command **▶** ● **▶** 🗹

Synchronizing Once a Month

- In ②, Monthly → Enter date →
- **♦** Enter hour **♦ ♦** ⑤

Disabling Auto Synchronization

- In €, Set On/Off ⇒ • Off ⇒ •
- To re-enable, choose *On* and press then press [x]; synchronization starts.

Infrared **Activating Infrared** via Main Menu ⇒ Switch On/Off ⇒ • On(3 min.) ⇒ • ● ⇒ 0¹ ⇒ □ ⇒ Send My Card ⇒ ● ⇒ Via Sending My Details Infrared ⇒ • Yes ⇒ • Transfer starts In file list, select file → □ → Send (or Send/ Sending non-Phone Blog) → • Via Infrared → • Yes → • **Book files** Transfer starts

Bluetooth®

General

Cloaking handset to avoid connection requests	■ Tools ■ Connectivity ■ Bluetooth ■ My Device Settings ■ Wisibility ■ Hide My Phone ■
Setting idle time after which Bluetooth® is canceled	■ * Tools * • * • Connectivity * Bluetooth * • * My Device Settings * • * Bluetooth Timeout * • * Select time * •
Switching audio output to wireless device	■ Tools ■ Connectivity ■ Bluetooth ■ My Device Settings ■ ■ Sound Output ■ Bluetooth Device ■ Bluetooth Device is set automatically when connecting to wireless Headphones.
Changing Bluetooth® name for handset	■ Tools ■ Connectivity ■ Bluetooth ■ My Device Settings ■ Device Name ■ Enter name ■ ■

Using handsfree device as primary means of conversation	■ Tools ■ Connectivity ■ Bluetooth ■ My Device Settings ■ Handsfree Mode ■ Handsfree Mode ■ ■
Avoiding connection requests from Bluetooth®-compatible S! Applications in Standby, etc.	■ Tools ■
Receiving connection requests while connected to a device	■ Tools → O Connectivity → Bluetooth → My Device Settings → O Plural Connect Standby → O → O
Opening Bluetooth®-related handset properties	■ Tools ■ Connectivity ■ Bluetooth ■ My Device Details ■ • Press ¬ to view service details.
Activating Bluetooth [®] via Main Menu	■ → Tools → ● → ○ Connectivity → Bluetooth → ■ → Switch On/Off → ● → On → ■

■ Bluetooth® Watches

Synchronizing Bluetooth® watch with handset Clock	■ Tools ■ Connectivity ■ Bluetooth ■ Setting Watch ■ Set BT-Watch Time ■ Yes ■ Connect handset to a Bluetooth® watch beforehand.
Enabling/disabling Bluetooth [®] watch responses	■ Tools ■ Connectivity ■ Bluetooth ■ Setting Watch ■ Notification ■ Select item ■ Permit or Prohibit ■ Register a Bluetooth® watch beforehand.

Paired Devices

	Paired Devices		
	Editing Paired Device list	Start Here	
		Renaming Paired Devices Change Name	
DOTICE HOL	Deleting Paired Devices Delete → ● → Yes → ● To delete a device connected to handset, choose Yes and press ●.		
	Disconnecting handsfree devices, etc.	● → Tools → ● → ○ Connectivity → Bluetooth → ● → Paired Devices → ● Select connected device → ●	
	Connecting devices supporting handsfree telephony and audio output by service	■ Tools ■	

Specifying a preferred device for wireless connection	Start Here
	For Handsfree Telephony Handsfree On ■ ■ For Handsfree On, specified device reconnects to handset when placing/receiving calls.
Commodation.	For Audio Output Audio On ● For Audio On, Media Player audio output is redirected to specified device automatically when Sound Output is set to Bluetooth Device.
Sonding Files	redirected to specified device automatically when

Sending Files

Sending My Details	● ♦ ○ □ ♦ Send My Card ♦ ● Via Bluetooth ♦ ● Select device ♦ ● Yes • • Transfer starts
Sending non-Phone Book files	In file list, select file □ Send (or Send/ Blog) □ Via Bluetooth □ Select device □ Yes □ Transfer starts



Backup

■ Backup & Restore

Backing up all items	■ Settings ■ Phone/ Backup/Restore ■ Backup All Items ■ Enter Handset Code ■ Yes ■ Yes ■ Backup complete ■ ■
Encoding data for backup	■ Settings ■ Phone/ Backup/Restore ■ Settings/Manage ■ Encode Settings ■ Select item ■ On ■ Available for Phone Book, Calendar, Tasks and Messaging folders.
Restoring all items	■ Settings ■ Phone/ Backup/Restore ■ Restore All Items ■ ■ Yes ■ Yes ■ Restore complete ■ ■

■ Backup Files

Deleting backup files

S! Addressbook Back-up

Opening log	● → Phone → ● → S! Addressbook Back-up → ● → Details → ● → Sync Log → ● → Select record → ●
Deleting log records	
	One Record
	Select record ⇒ □ → Delete → • Yes → •
	All Records
	Delete All ⇒ • Yes ⇒ •

File Transfer



Some files are not received

• If storage limit is reached during transfers, remaining files will not be received.



Cannot receive/accept connection requests even when Infrared/ Bluetooth® is On

- · Handset may not be in Standby.
- Keypad Lock/Function Lock may be active
- Software Update may be in progress.



Phone Book settings are lost

- One file transfer resets these settings:
- Category, Tone, Vibration, Secret
- Picture setting may be lost depending on image: reassign it.



Calendar/Tasks settings are lost

- One file transfer resets these settings:
 - Alarm tone/video. Secret. S! Friend's Status



Bookmarks are not saved properly

- · Large Bookmarks may not be received correctly.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.



Messages are not saved properly on handset

- Messages may not be received depending on the size.
- Messages received via One File Transfer are saved to Data Folder (Other Documents) and cannot be used as messages.
- In All File Transfers, overwriting existing messages deletes sort keys.



Messages are not saved properly on recipient devices

- Mail Notices are saved as messages. invalidating complete message retrieval.
- · When sending messages to other handset models via All File Transfer Spam Folder messages may be saved to the incoming message folder.
- When sending messages in Drafts to other handset models via All File Transfer, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.



Cannot find files in DCIM folder

· Received files in DCIM folder are saved to Pictures folder.

Infrared



Infrared transfer fails

- Infrared Port may be obstructed by dust, etc.: clean with soft cloth.
- · Transfers may fail in direct sunlight, under fluorescent lighting or near infrared equipment.



Backup & Restore



Backup fails

 Check handset/Memory Card memory; backup may fail if the memory is low.



Some files are not restored

 If storage limit is reached during Restore, remaining files will not be restored.



Cannot use backup files on other SoftBank handsets or PCs

 Some backup files may not be usable on other SoftBank handsets or PCs.



Cannot open backup files

 Some backup files may open only after being restored to handset.



Phone Book settings are lost

 Picture setting may be lost depending on image; reassign it.




Messages are not saved properly

- Transfer may delete sort keys.
- Mail Notices are restored as messages, invalidating complete message retrieval.



Bookmarks are not saved properly

- Yahoo! Keitai, Streaming and PC Site Browser Bookmarks are all backed up as a single file.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

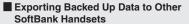



Messages are not saved properly

- If spam filter is available on recipient handset, Spam Folder messages are saved in spam folder regardless of the setting. (If unavailable, they are saved as normal received messages.)
- When restoring draft messages, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

■ Importing Data Backed Up on Other SoftBank Handsets



Messages are not saved properly

 Messages may not be restored depending on the size.



Date & Time	14-2
Display & Illumination	14-3
Language	14-3
Image & Text	14-3
Display & Backlight	14-3
Sub Display	14-4
Standby Display	14-4
Key Backlight	14-4
Incoming Transmissions	14-5
Handset Response	14-5
Handset Response (Lights)	14-5

Sounds	14-6
System Sounds	14-6
Additional Sound Settings	14-6
Connectivity	14-7
Network	
IP Service	14-8
Location Information	14-8
Reset	14-9
Restoring Default Settings	14-9

14


Handset Customization

□ X Date & Time Settings-

Date & Time Start Here → Settings → In Sound/Display menu, Date & Time		
Setting the date and time	Set Date/Time ■ Enter the year Enter the month Enter the day Enter the time ■	
Correcting Clock manually	Time Correction	
Disabling auto Clock correction	Time Correction Auto Corr. Setting Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off Off	
Setting auto Clock correction timing	Time Correction \Rightarrow ● \Rightarrow Auto Corr. Setting \Rightarrow ● \Rightarrow On \Rightarrow \Rightarrow Select item \Rightarrow ● $(\ \ \ \ \)$ \Rightarrow $\ \ \ \ \ \ \)$ \Rightarrow $\ \ \ \ \ \ \ \ $	
Activating Daylight Saving	Daylight Saving ▶ ● → On → ● • Auto World Clock is disabled when Daylight Saving is set to On.	
Changing Time Zone	Set Time Zone → ● → Select area → ● • Auto World Clock is disabled when Set Time Zone is set to a city other than Tokyo.	
Adding custom Time Zone	Set Time Zone → ● → □ → Enter city name → ● ↑ ↑ + or - → ○ → Enter time difference → ● • Auto World Clock is disabled when custom Time Zone is in use.	
Changing time format to 12 hour	Time Format	
Changing date format	Date Format → ● Select option → ●	
Starting the Calendar week on Monday	Calendar Format Monday-Sunday ■	



🏅 Display & Illumination Settings 💵

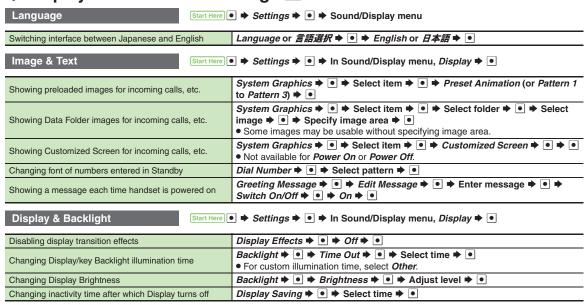

Display & Illumination Settings 2 **Sub Display** Start Here Star Changing inactivity time after which Sub Display turns off Duration Select time ■ Hiding new received messages Changing Clock view Clock Type Select pattern Output Description: Changing Clock font Hiding caller info Standby Display Start Here Star Changing Clock/Calendar Selecting Mobile Widget display option Showing Network service provider name in Standby **Key Backlight** Start Here Settings Phone Phone Set Key Light ● ● Off ● ● Disabling key Backlight illumination



Handset Response Start Here ● → Settings → ● → In Sound/Display menu, Sounds & Alerts → ● Changing ringtone volume Answering calls with other keys Any Key Answer → ● → On → ● Use [0.7] - [2.3], [4.3], [4.3], [4.3], [4.3], [4.3] (1.3) Muting ringer with other keys Any Key Answer → ● → Only Mute → ● Use [0.7] - [2.3], [4.3], [4.3], [4.3], [4.3] (1.3) Handset Response (Lights) Start Here ● → Settings → ● In Sound/Display menu, Sounds & Alerts → ● Selecting illumination option

Status Light

Select item

On or Off

One of the other contents of the other conten

Enabling/disabling illumination for missed transmissions


Disabling Speaker when using Headphones

Activating Speaker surround

X Sound Settings System Sounds Start Here → Settings → In Sound/Display menu. Sounds & Alerts → Output Display menu. Sounds & Output **Enabling Keypad Tones** Changing S! Circle Talk tone System Sounds → • Select item → • Tone or Sound → • Select Changing other System Sounds • For files with limited usage period, choose **Yes** and press •. Disabling System Sounds Not available for S! Circle Talk • For Keypad Tones, omit Tone or Sound selection step. time **→** Changing System Sound duration • Not available for Keypad Tones or S! Circle Talk. Changing System Sound volume Additional Sound Settings Start Here Settings Sound/Display menu




🗸 Connectivity Settings 💵

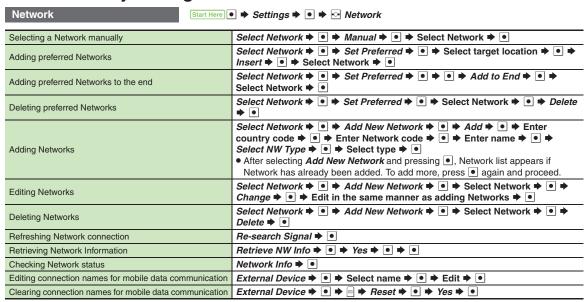

Connectivity Settings **IP Service Enabling IP Service** • Enable IP Service to use S! Friend's Status and S! Circle Talk. **Location Information** Start Here Settings Network Location Info Output Description: URL Setting → • < Empty> (or select URL) → □ → Edit → • Finter URL **▶** • Adding/editing Location Information destination URLs • Default URL is not editable. URL Setting → • Select URL → • Specifying Location Information destination URL Viewing Location Information destination URL Deleting Location Information destination URLs Hiding Location Information Datum On/Off ⇒ • • • • • • Changing Location Information confirmation option Suppressing Information window after sending Location Information automatically Opening sent Location Information records Offer Loc. Logs ●



X Reset Settings

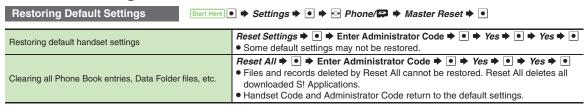

- A confirmation may appear before entering Administrator Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

USIM Card	15-2
About USIM Card	15-2
USIM Card Installation	15-3
Battery	15-4
Battery Installation	15-4
Software Update	15-5
Troubleshooting	15-6
Text Entry Key Assignments	15-8
Pager Codes	15-10
Pager Code List	15-10

Character Codes	15-11
Character Code List	15-11
Weather Indicators	15-17
Weather Indicator List	15-17
Specifications	15-18
Memory Card Structure & Contents .	15-23
Menu List	15-24
Index	15-31
Warranty & Service	15-38
Customer Service	15-39


15

Appendix

About USIM Card

USIM Card is an IC card containing customer and authentication information, including the handset number. USIM Card must be inserted to use this handset. Save Phone Book entries on USIM Card Phone Book to use them on other SoftBank handsets. Depending on the USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

Precautions

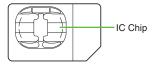

- Do not insert USIM Card into any other IC card device. SoftBank Mobile is not liable for resulting damages.
- Keep the USIM Card IC chip clean; malfunction may result. Clean with soft dry cloth.
- Do not attach labels to USIM Card.
 Malfunction may result.

Important

- USIM Card is the property of SoftBank Mobile.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to SoftBank Mobile upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Back up USIM Card files. SoftBank Mobile is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P.15-39).

USIM PIN

Four- to eight-digit code (9999 by default); activate PIN Entry to restrict handset use.

PIN Lock

• Entering incorrect PIN three consecutive times activates PIN Lock, limiting handset use.

Canceling PIN Lock

- Contact SoftBank Mobile Customer Center, General Information (P.15-39) for your Personal Unblocking Key (PUK Code) and follow these steps:
- Write down PUK code.

PUK Lock

 Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. For recovery, USIM Card must be reissued at a SoftBank Shop (fees apply).




USIM Card Installation

- Do not apply excessive force to insert/remove USIM Card.
- USIM Card must be inserted to use this handset.

Inserting

- Remove battery (P.15-4)
- Using Tab, pull out Tray

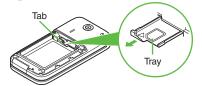

Slide in USIM Card with IC chip facing up








• Reinstall battery (P.15-4).

Removing

- Remove battery
- Using Tab, pull out Tray

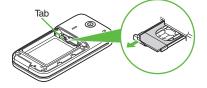

Lift and slide out USIM Card as shown



- Reinstall battery.
- Take care not to lose removed USIM Card

After Repairs, USIM Card Replacement or Handset Upgrade/Replacement

 Some downloaded files may be inaccessible. In addition, S! Applications and BookSurfing® may be disabled after USIM Card replacement.



Battery Installation

About Battery

- Charge battery at least once every six months; an uncharged battery may become unusable or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with a dry cotton swab.

Lithium-ion Battery

 This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.



- To recycle a used Li-ion00 lithium-ion battery, take it to any shop displaying the symbol shown above.
- To avoid fire or electric shock, do not short-circuit or disassemble battery.

Inserting & Removing





Press and slide as shown.

Insert battery



 With logo side up, align battery terminals with contact pins.

3

Close Battery Cover



 Position and slide Cover gently as shown until it stops.

Removing

Power off and lift battery as shown.





Software Update

Check for firmware updates and download as required.


Precautions

- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Update failure may disable handset. To reduce failure risk, make sure signal is strong and stable, and charge battery beforehand
- Update will not start if another function is in use. Before updating software (or before scheduled update time), end all active functions/applications.
- Disconnect USB Cable beforehand to reduce failure risk
- Always back up important information. SoftBank Mobile cannot be held liable for damages from lost information, etc.

Updating Software

Packet transmission fees do not apply to updates (including checking, downloading and rewriting).



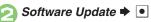





Follow onscreen instructions.

Update Result

In ②, Update Result ▶ •

Scheduled Update (Japanese)

SoftBank Mobile sends update notice via SMS; read and change preset update schedule as needed. A confirmation appears at scheduled update time. Press or wait a while for update to start.

When Updated

Update success notification appears and handset reboots.

After reboot, completion message appears and Information window opens.

Update Result

While Information window appears. Update Result ▶ •

Reboot Failure

 If handset does not return to Standby after update, power off, reinsert battery, then restart it. If it still does not restart contact SoftBank Mobile Customer Center, Customer Assistance (P.15-39).



■ General

Problem	Possible Cause	Solution
	Was opressed long enough?	Press S longer.
Handset won't power on	Battery may need to be charged or replaced.	Charge battery or install a charged battery.
	Battery may not be properly installed.	Install battery properly (P.15-4).
Operation is restricted after power on	Is Switch On/Off in PIN Entry <i>On</i> ?	If <i>On</i> , PIN is required. Enter PIN according to onscreen prompt.
Insert USIM Card	USIM Card may not be properly inserted.	Power off and check that USIM Card is properly inserted, then restart handset. If the message still appears, USIM may be damaged.
appears	The correct USIM Card may not be inserted.	Make sure the correct USIM Card is inserted. The inserted USIM Card may not be valid.
	There may be debris on IC chip/terminals.	Clean relevant parts with dry cloth and re-insert.
REFRESH appears and handset returns to Standby	Handset may have been dropped or subjected to shocks.	Handset failed to recognize USIM Card temporarily. This is not a malfunction.
Operation is	Keypad Lock may be active.	Cancel Keypad Lock (P.1-24).
restricted	Function Lock may be active.	Cancel Function Lock (P.11-2).

Problem	Possible Cause	Solution
Battery strength indicator flashes when not charging	Ambient temperature may be outside 5°C to 35°C.	Use within an ambient temperature of 5°C - 35°C.
Saved entry/folder does not appear on handset	Entry/folder may be set to Secret.	Activate Show Secret Data (P.11-3).
	Handset/AC Charger may warm while charging.	Unless handset/AC Charger is
Handset/AC Charger feels warm	Handset may warm during extended periods of use.	too hot to touch, warmth is considered normal. Always avoid prolonged skin contact to
	Handset may warm during Video Calls.	prevent burn injuries.
Cannot access Memory Card files	Memory Card may not be properly formatted.	Use 001SH-formatted Memory Cards.
Clock settings are lost	Did you leave handset without battery?	Clock settings remain even when removing battery for replacement, etc. However, if handset is left with no battery or an exhausted one for an extended period of time (approximately one hour), Clock will need to be reset.



Problem	Possible Cause	Solution
	Remaining charge shortens charging time.	This is normal.
Battery charges quickly	Battery may be terminally exhausted or defective. (Small Light flashes red.)	Replace battery with a new one.
Battery charges	Charging slows during Video Calls.	End the call to charge faster.
slowly	Battery may be charging via USB.	Use AC Charger.
	AC Charger may not be properly connected to handset.	Make sure connector is securely inserted and retry.
	AC Charger may not be firmly plugged in to AC outlet.	Remove plug from outlet, re-insert and retry.
Battery won't charge	Battery may not be properly installed.	Install battery properly (P.15-4).
	Battery, AC Charger, or Charging Terminals, or Device Port may be obstructed by dust, etc.	Clean terminals, connector and Port with a dry cotton swab and retry.
	Charger, etc. may not be supported.	Use specified AC Charger, etc. only; others may damage battery.

Problem	Possible Cause	Solution
	High power consuming operations are in use.	Keep handset closed in Standby; reduce S! Application, Media Player and camera use, and limit transmissions/external connections.
Battery Time seems shorter than usual	Using handset in poor conditions may shorten Battery Time.	Avoid prolonged use of handset out-of-range or in poor signal conditions.
	Power hungry settings may be active.	Lower Brightness, select shorter Display Saving/ Backlight time, etc.

Text Entry Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes		
1 8	あいうえお ぁぃぅぇぉ	アイウエオ ァイウェオ	@./1 [] (space)	1	1		
2 🔅	かきくけこ	カキクケコ	ABCabc2	2	2		
3 #	さしすせそ	サシスセソ	DEFdef3	3	3		
4 to	たちつてとっ	タチツテトッ	GHIghi4	4	4		
5 %	なにぬねの	なにぬねの ナニヌネノ JKLjkl5 5		5	5		
6 MMD	はひふへほ	はひふへほ ハヒフヘホ		へほ ハヒフへホ MNOmno6 6		6	6
7,8	まみむめも	マミムメモ PQRSpqrs7		7	7		
8 ∜	やゆよゃゅょ	ヤユヨャュョ	TUVtuv8	8	8		
9 witz	らりるれろ	ラリルレロ	WXYZwxyz9	9	9		
0.5	わをんー	ワヲンー	0	0	0		
X***	* •	* ° _1		★ + P (pause) ? -²			
× _{Hido}		Log, Pictogram List (do	uble-byte), Symbol List ³				
# 🖁	、。	x) ?! ☐ (space)	,. ∜ (line break) ?! 🏿 (space)	#			

¹- is available only in Single-byte Katakana mode.

² Available for phone number entry; some characters may not be enterable in some windows. ³ May not be enterable in some windows.

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes								
•	Conversion ⁴ Cursor up/down;												
*		•	Cursor left/right										
27 GE	Switch entry modes (except during conversion)												
	Search Word⁵ ————												
(Long)	Toggle Personal Mode ⁵		Toggle Personal Mode ^{5,6}										
	Tog	gle case (for some characte	ers)										
Alto			Toggle mode (upper/ lower and lower case)										
May as			Delete one character										
SACK -	Cancel conversion		Cancel conversion ⁶		Delete code								
(Long)		Dele	ete before or on and after cu	ursor									
Ţ		Reco	over characters deleted with) WE									
A+ 1	Re-convert ⁷		Re-convert ^{6, 7}										
•			Confirm/Done										
4	Non-Predictive suggestions ⁵				·								
29	Hiragana to Katakana/ Alphanumeric Conversion ⁵												

⁴Cursor moves up/down except during conversion.

⁵Available during conversion.

⁶ Available only in Single-byte Alphanumerics mode.

⁷ Press → immediately after inserting characters to re-convert them.

Gray background indicates upper and lower case available. Press 🗟 to switch immediately after character entry.

■ Double-byte Upper Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
		1	2	3	4	5	6	7	8	9	0
)	1	あ	()	う	え	お	Α	В	С	D	Ε
First)	2	か	も	\	け	IJ	F	G	Ι	_	J
這	3	ゎ	د	す	ャ	そ	K	┙	М	Z	0
(Press	4	た	5	n	٢	٢	Р	Q	R	S	Т
Pre	5	な	IJ	B	ね	の	כ	>	W	Χ	Υ
it (6	は	ひ	ふ	<	ほ	Z	٠:	-:	ı	
Digit	7	ま	み	む	め	も	¥	&			*1
	8	や	(ゅ)	よ	X	#	Space	9	*2
First	9	5	IJ	る	れ	ろ	1	2	3	4	5
	0	わ	を	И	٠	۰	6	7	8	9	0

■ Double-byte Lower Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
		1	2	3	4	5	6	7	8	9	0
	1	あ	(1	う	え	お	а	b	С	d	е
rst)	2						f	g	h	i	j
臣	3						k	_	m	n	0
SS	4			つ			р	a	r	S	t
Pre	5						u	٧	W	Х	У
) <u>;</u>	6						Z				
Dig	7										*1
First Digit (Press First)	8	や		ゆ		ょ					*2
i ii	9										
_	0										

■ Single-byte Upper Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
		1	2	3	4	5	6	7	8	9	0
	1	7	1	ġ	I	†	Α	В	С	D	Е
First)	2	Л	‡	ク	ታ	٦	F	G	Ι	_	J
	3	Ħ	ッ	λ	t	y	K	┙	М	Ν	0
(Press	4	9	£	ŋ	Ŧ	1	Р	Q	R	S	Т
Pre	5	t	П	Z	À	1	٦	٧	W	Χ	Υ
Ħ	6	Λ	بد	7	٨	*	Z	?		1	/
Digit (7	マ	111	۵	×	ŧ	¥	&			*1
st [8	þ	(1)	3	X	#	Space	9	*2
First	9	Ē	IJ	ŀ	٧	П	1	2	3	4	5
	0	7	7	ン	٠	۰	6	7	8	9	0

■ Single-byte Lower Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
	l Ī		2	3	4	5	6	7	8	9	0
£	1	7	1	ġ	I	t	а	b	С	d	е
First)	2						f	g	h	-	j
证	3						k	_	m	n	0
SS	4			ッ			р	q	r	s	t
Pre	5						u	٧	w	×	У
 =	6						z				
Dig	7										*1
] t	8	t		1		3					*2
First Digit (Press	9										
	0				,						

^{*1}Press 74 0 1 to insert ≠ (line break) in mail message text, Notepad, etc.

^{*2}Press to toggle upper and lower case modes.

Character Code List

First Three			ī	ast	Di	git					First Three	П			La	st C	Digi	t				First Three	П			La	st C	Digit	t			First Three	П			Las	t Di	git			П
Digits	0	1 :	2 3	3 4	1 5	5 (6	7	8	9	Digits	0	1	2	3	4	5	6	7	8	9	Digits	0	1	2	3	4	5	6	7	8 9	Digits	0	1	2	3 4	4 5	5 6	5 7	8	9
010	8	Space .						:	;	?	043			だ	ち	ぢ	つ	つ	ブ	て	で											171	迂		卯			丑 硝			
011	! '	0		- '			^ '		_	\	044					ぬ						080		-		г	٦.	_	L	+	-+	172				鰻媽	老匠	既泝	自瓜	(閏)	噂
012	1,	: ۷	7,,	" <u>{</u>	2	7 1	X	0	-	-	045					131			ベ	ペ	ほ	081	_	+	—		г	7	_	ᆫ	+	173	굸	運	雲						- 1
013	- ,	/ \	\ -	~		-	• •	٠.	•	,	046	ΙĔ				む						082	Н	ㅗ	+	+	_	-	_	+	\vdash	-		_			え	_		_	- 1
014	**	"	())]]	{	}	047	ゆ	ょ	ょ	5	1)	る	れ	3	わ	わ	083	Н	ㅗ	+							173				荏食	耳霍	叙宫	主要	影	映
015	(> .	()	» I	١.	J	ſ	J	[048	ゐ	ゑ	を	h						- 1											174	曳	栄 :	永	泳	曳耳	英層	計解	頴	英
016	+	- :		× -	- =	= =	#	<	>	≦											- 1	130		1	2	3	4	5	6	7	89	175	衛	詠翁	鋭	液光	支主	益易	尺悦	認	越
017	\geq	∞ .	٠. ;	3 5	P°	,	ľ	"	$^{\circ}$ C	¥	050		ア	ア	1	1				I	ォ	131	10	1	12	13	14)	15	16	17)	18 (19	176	閱	榎ル	厭	円屋	圆土	夏有	宴至	延	怨
018	\$	¢ ;	£ 9	% \$	# 8	<u> ب</u>	X	@	§	☆	051	オ	力	ガ	丰	ギ	ク	グ	ケ	ゲ	ا⊏	132	20)	\parallel	Ш	IV	V	VI	VII	VIII IX	177	掩	援	沿	演多	烂火	6 烟	燕雪	猿	縁
019	*	0) (>						052	ゴ		ザ		ジ	ス	ズ	セ	ゼ	꾀	133	X		≥ں		ギン	メー	グラム	トシ	アーヘクルター	178	艶	苑	蒉	遠釒	台角	黑坩	Ē		ı
020		• [\ 4	7	abla	▼	Ж.	ᆕ	053	ゾ	タ	Ť	F	ヂ	'n	ツ	ヅ	テ	デ	134	忧	77	賀	ドル	だ	がした	채	3- I	mm cn			_	_		お	_		_	- 1
021	\rightarrow	← ′	Î.	↓ :							054		ド	ナ	=		ネ	1	/\	バ	パ	135	km	mg	kg	СС	m²					178							於	污	甥
022						0	Ξ	∋	\subseteq	\supseteq	055		Ľ	Ľ			プ	\wedge	ベ	ペ	ホ	136				嘁	"				TEL (£					往后					- 1
023	\subset	$\supset l$	J	٦							056	ボ				Δ				t		137	\oplus	1	圉	a	(株)	(有)	(代)	眦	椰缸	180								襖	
024		/	1	/ -	¬ =	⇒ <	\Rightarrow	\forall	\exists		057	그				IJ				ワ	기	138	⊨	Ξ	S	9	Σ	$\sqrt{}$	\perp	_	$L \angle$	181	鴎							臆	桶
											058	ヰ	ヱ	ヲ	ン	ヴ	カ	ケ				139		\cap	\cup							182	牡	Z	俺	卸点	思》	显积	哥音	Ī	١
026	4				7 E	≣ ≐	= -	«	\gg	$\sqrt{}$											- 1													-			か	_		_	- 1
	∞	∞ .									060					Δ								-			− ā.			_		182								下	
028		,	å 9	60 ‡	‡	,	Þ	†	‡	1	061					Ξ	0	П	Р	Σ	Т	160									姶逢								」嘉	夏	嫁
029				$\overline{}$	\supset						062	Υ	Φ	Χ		Ω						161		茜							芦鮗					暇り			欠河		
											063				α	β	γ	δ	3	ζ	η	162									絢綾			禾和			古言		古荷	華	菓
031							0	1	2	3	064					μ			0	π	ρ	163			粟	袷	安	庵	按	暗	案 階		蝦			貨道			夏蚊		
032	4	5 (ŝ :		3 9						065	σ	τ	υ	φ	χ	ψ	ω				164	鞍	杏								187	我		画					餓	
033				A E		0 0			F	G											- 1			-		_	ーし	۱ —		_		188	介		解			喪 延	回快	怪	悔
034	Н		J		_ N		Ν	0	Ρ	Q	070					Γ			Ë	Ж	3	164			以						夷委	189	恢	懐	戒	拐己					- 1
035	R	S :	Τl	J١	/ V	٧)	Χ	Υ	Ζ		071					Μ					C	165	威		惟						畏舞			魁E					引皆	絵	芥
036					á	a l	b	С	d	е	072	T	У	Φ	Χ	Ц	Ч	Ш	Щ	Ъ	Ы	166	移				萎		謂		遺医		蟹			貝豈		カタ	╽咳	害	崖
037	f	g l	1	i j	į k	<		m	n	0	073	Ь	Э	Ю	Я						- 1	167	井	亥	域	育	郁	磯	—	壱	溢逸	192	慨	概》	涯	碍書	藍 往	訂該	亥鎧	骸	浬
038	р	q	r	s 1	tι	١,	V	W	Х	У	074										a	168						ED	咽	員	因姬	193	馨	蛙ょ	垣	柿虫	厉鱼	勾畫	則嚇	各	廓
039	Z										075	б	В	Γ	Д	е	ë	ж	3	И	й	169	引	飲	淫	胤	蔭					194	拡	撹札	格	核点	设 狂	蒦 硲	崔穫	覚覚	角
040		ある	あし	16	1 -	5	う	à	え	お	076	К	Л	М	Н	0	П	р	С	Т	у	170		院	陰	隠	韻	时				195	赫	較	郭	閣區	売さ	草学	∮岳	楽	額
041		かり							げ		077	ф	Χ	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	э			-		-	- 글			-		196	顎		笠				火源		
042	Ĵ	5 5	Ť (υl	ج ز	J 3	ď.	t	ぜ	そ	078	Ю	Я									170							右	宇	烏羽	197	恰	括》	活	渴光	7	高 裕	引轄	且	鰹

First Three	Last Digit	First Three	Last Digit	First Three	Last Digit	First Three	Last Digit
Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9
	叶椛樺鞄株兜竃蒲釜鎌	230	掘窟沓靴轡窪熊隈粂		——·	294	夙 宿 淑 祝 縮 粛 塾 熟 出 術
	噛 鴨 栢 茅 萱		栗繰桑鍬勲君薫訓群軍	261	些	295	述俊峻春瞬竣舜駿准循
200	粥刈苅瓦乾侃冠寒刊	232	郡		佐叉唆嵯左差査沙瑳砂	296	旬楯殉淳準潤盾純巡遵
	勘勧巻喚堪姦完官寬干		け		詐鎖裟坐座挫債催再最		醇順処初所暑曙渚庶緒
	幹患感慣憾換敢柑桓棺	232	卦 袈 祁 係 傾 刑 兄 啓 圭		哉塞妻宰彩才採栽歳済	298	署書薯藷諸助叙女序徐
	款歓汗漢澗潅環甘監看		珪型契形径恵慶慧憩掲		災采犀砕砦祭斎細菜裁	299	恕鋤除傷償
	竿管簡緩缶翰肝艦莞観		携敬景桂渓畦稽系経継		載際剤在材罪財冴坂阪	300	勝匠升召哨商唱嘗奨
	諌貫還鑑間閑関陥韓館		繋罫茎荊蛍計詣警軽頚		堺榊肴咲崎埼碕鷺作削	301	妾娼宵将小少尚庄床廠
	館丸含岸巌玩癌眼岩翫		鶏芸迎鯨劇戟撃激隙桁		咋搾昨朔柵窄策索錯桜	302	彰承抄招掌捷昇昌昭晶
207	贋雁頑顔願		傑欠決潔穴結血訣月件		鮭笹匙冊刷	303	松梢樟樵沼消涉湘焼焦
	き	238	俟 倦 健 兼 券 剣 喧 圏 堅 嫌	270	察拶撮擦札殺薩雑皐	304	照症省硝礁祥称章笑粧
207	企伎危喜器		建憲懸拳捲		鯖捌錆鮫皿晒三傘参山	305	紹肖菖蒋蕉衝裳訟証語
	基奇嬉寄岐希幾忌揮机	240	検権牽犬献研硯絹県		惨撒散栈燦珊産算纂蚕	306	詳象賞酱鉦鍾鐘障鞘上
	旗既期棋棄	241	肩見謙賢軒遣鍵険顕験	273	讃賛酸餐斬暫残	307	丈丞乗冗剰城場壌嬢常
210	機帰毅気汽畿祈季稀		鹼 元 原 厳 幻 弦 減 源 玄 現		U	308	情擾条杖浄状畳穣蒸譲
	紀徽規記貴起軌輝飢騎	243	絃舷言諺限	273			醸錠嘱埴飾
	鬼亀偽儀妓宜戯技擬欺				使刺司史嗣四士始姉姿	310	拭植殖燭織職色触食
	犠 疑 祇 義 蟻 誼 議 掬 菊 鞠	243	- 平個古呼固		子屍市師志思指支孜斯		触辱尻伸信侵唇娠寝審
	吉吃喫桔橘詰砧杵黍却		姑孤己庫弧戸故枯湖狐		施旨枝止死氏獅祉私糸	312	心慎振新晋森榛浸深申
	客脚虐逆丘久仇休及吸		糊袴股胡菰虎誇跨鈷雇		紙紫肢脂至視詞詩試誌	313	疹真神秦紳臣芯薪親診
216	宮弓急救朽求汲泣灸球		顧鼓五互伍午呉吾娯後		諮資賜雌飼歯事似侍児	314	身辛進針震人仁刃塵壬
	究窮笈級糾給旧牛去居		御悟梧檎瑚碁語誤護醐		字寺慈持時	315	尋甚尽腎訊迅陣靭
218	巨拒拠拳渠虚許距鋸漁		乞鯉交佼侯候倖光公功	280	次滋治爾璽痔磁示而	045	す
	禦魚亨享京		効 勾 厚 口 向	281	耳自蒔辞汐鹿式識鴫竺	315	
220	供使僑兇競共凶協匡	250	后喉坑垢好孔孝宏工		軸宍雫七叱執失嫉室悉	316	須酢図厨逗吹垂帥推水
	卿叫喬境峡強彊怯恐恭		巧巷幸広庚康弘恒慌抗		湿漆疾質実蔀篠偲柴芝		炊睡粋翠衰遂酔錐錘随
	挟教橋況狂狭矯胸脅興		拘控攻昂晃更杭校梗構	284	屡蕊縞舎写射捨赦斜煮	318	瑞髓崇嵩数枢趨雛据杉
	蕎鄉鏡響饗驚仰凝尭暁		江洪浩港溝甲皇硬稿糠		社紗者謝車遮蛇邪借勺	319	相菅頗雀裾
	業局曲極玉桐粁僅勤均		紅紘絞綱耕考肯肱腔膏		尺杓灼爵酌积錫若寂弱	320	澄摺寸 4
	巾錦斤欣欽琴禁禽筋緊		航荒行衡講貢購郊酵鉱		惹主取守手朱殊狩珠種	220	——t—
226	芹菌衿襟謹近金吟銀		砿鋼閣降項香高鴻剛劫		腫趣酒首儒受呪寿授樹	320	世瀬畝是凄制
220		257	号合壕拷濠豪轟麹克刻		緩需囚収周 京就制修秋 5 川 香砂	321	勢姓征性成政整星睛棲
226	月	258	告国榖酷鵠黒獄漉腰甑	290	宗就州修愁拾洲秀秋	322	栖正清牲生盛精聖声製
	俱句区狗玖矩苦躯駆駈		忽惚骨狛込		終繍習臭舟蒐衆襲讐蹴	323	西越誓請逝醒青静斉稅
	駒具愚虞喰空偶寓遇隅	260	此頃今困坤墾婚恨懇		輯週酋酬集醜什住充十		脆隻席惜戚斥昔析石積
229	串櫛釧屑屈	261	昏昆根梱混痕紺艮魂	293	従戎柔汁渋獣縱重銃叔	325	籍績脊責赤跡蹟碩切批



First Three	Last Digit	First Three	Last	Digit		First Three			Las	t Digit		First Three	Last Digit
Digits	0 1 2 3 4 5 6 7 8 9		1 2 3 4			Digits	0	1 2	2 3 .		5 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9
326	接摂折設窃節説雪絶舌	357 🗗	中宙忠抽	昼柱	主虫衷			_		なー		413	評豹廟描病秒苗錨鋲蒜
327	蝉仙先千占宣専尖川戦		主酎 鋳 駐 樗		苧 著 貯	386					勺乍凪薙		蛭鰭品彬斌浜瀕貧賓頻
328	扇撰栓栴泉浅洗染潜煎		「兆凋喋寵							酋馴糹	電畷南標	415	敏 瓶
	煽 旋 穿 箭 線	360	帖帳庁弔	張彫	敦 懲 挑	388	軟	難汐	ケ				
330	繊羨腺舛船薦詮賎践	361 暢	易朝潮牒町	眺聴	張腸蝶			_		-ات —		415	不付埠夫婦富冨布
331	選遷銭銑閃鮮前善漸然	362 課	問諜超跳銚	長頂	鳥勅捗	388			/	已武道	5 包賑肉	416	府怖扶敷斧普浮父符腐
332	全禅繕膳糎	363 値	直朕沈珍賃	鎮陳		389	虹‡	H E	1乳	λ		417	膚芙譜負賦赴阜附侮撫
	――そ――			っ—	_	390	ţ	如反	尼韮伯	壬妊剂	🛚 認	418	武舞葡蕪部封楓風葺蕗
332	噌 塑 岨 措 曾	363			聿墜 椎		-		— దు	~ Ø		419	伏副復幅服 📗
333	曽 楚 狙 疏 疎 礎 祖 租 粗 素	364 棋	追追鎚痛通	塚栂	国槻 佃	390					濡禰	420	福腹複覆淵弗払沸仏
334	組蘇訴阻遡鼠僧創双叢	365 漬	責柘辻蔦綴	鍔椿?	貴坪壷						🗟 捻 撚 燃		物鮒分吻噴墳憤扮焚奮
335	倉喪壮奏爽宋層匝惣想	366 婦	嘉紬 爪 吊 釣	1鶴		392	粘力	乃延	5 之 5	李 義 竹	凶濃納能	422	粉糞紛雰文聞
336	搜掃挿掻操早曹巣槍槽			て	_	393	脳周	農農	是 覗 3				│
337	漕燥争痩相窓糟総綜聡	366			医停偵			_		はー		422	丙併兵塀
338	草荘葬蒼藻装走送遭鎗		則貞呈堤定			393				巴扌	巴播覇杷	423	幣平弊柄並蔽閉陛米頁
339	霜騒像増僧	368 悄	第抵 挺 提 梯	汀碇	禎程 締						古馬 俳 廃	424	僻壁癖碧別瞥蔑箆偏変
340	臓 蔵 贈 造 促 側 則 即 息	369 艇	廷訂諦蹄逓			395				盃牌書		425	片篇編辺返遍便勉娩弁
	捉束測足速俗属賊族続	370	邸鄭釘鼎			396					貝買売賠	426	鞭
342	卒袖其揃存孫尊損村遜		的笛 適 鏑 溺			397	陪ì	宣 螅	11 秤	引萩伯	白剥博拍		ほ
1	<i>†</i> =		共典 填天展			398	柏氵	白白	1 箔 料	伯舶薄	事迫 曝 漠	426	保舗鋪圃捕歩甫補輔
343	他多太汰詑唾堕妥惰打	373 転	云顛点伝殿	澱田	€	399	爆約	縛剪	き駁き	麦		427	穂募墓慕戊暮母簿菩倣
	柁舵 橢陀駄騨体堆対耐			ـــــــ	_	400					窖櫨 幡 肌	428	俸包呆報奉宝峰峯崩庖
	岱帯待怠態戴替泰滞胎	373			兎吐					発発		429	抱捧放方朋
346	腿苔袋貸退逮隊黛鯛代		皆塗 妬 屠 徒							新塙虫			法泡烹砲縫胞芳萌蓬
347	台大第醍題鷹滝瀧卓啄		者途都 鍍砥								反氾 汎版	431	蜂褒訪豊邦鋒飽鳳鵬乏
348	宅托択拓沢濯琢託鐸濁	376 怒	器 倒 党 冬 凍	刀唐均	苔塘套	404	犯王	班 睜	半繁星	投藩貝	反範来煩	432	亡傍剖坊妨帽忘忙房暴
349	諾茸凧蛸只		吕島嶋悼投			405	頒負	扳抄	免晚者	番盤 磐	路蕃 蛮	433	望某棒冒紡肪膨謀貌貿
350	叩 但 達 辰 奪 脱 巽 竪 辿		品淘湯 涛灯		豆祷等			_		ひ—		434	鉾防吠頬北僕ト墨撲朴
351	棚谷狸鱈樽誰丹単嘆坦	379 答	答筒糖統到			405					匪	435	牧睦穆釦勃没殆堀幌奔
	担探旦歎淡湛炭短端箪	380	董蕩藤討		踏逃透	406	卑る	否如	已庇行	皮悲厚	雇批 披斐	436	本翻凡盆
353	綻耽胆蛋誕鍛団壇弾断	381 錢	登陶頭騰闘	動動[司堂導	407	比》	必扼	皮皮	俾秘絲	非罷肥被		ま
354	暖檀段男談		撞撞洞瞳童		首銅峠	408	誹了	費通	连非声	飛樋魚	6 備尾微	436	摩磨魔麻埋妹
	<u> </u>	383 期	鳥匿得徳涜	特督	禿篤毒	409	批	型 吾	100	美		437	昧枚毎哩槙幕膜枕鮪柾
354	值 知 地 弛 恥	384 独	由読栃橡凸	突椴	 高二	410					尾彦膝菱		鱒桝亦俣又抹末沫迄侭
355	智池痴稚置致蜘遅馳築		頁西 瀞 噸 屯			411					会姫媛紐		繭磨万慢満
356	畜竹筑蓄逐秩窒茶嫡着	386 룧	頁吞曇鈍							票氷湯		440	漫蔓



First Three

Digits

Last Digit

0 1 2 3 4 5 6 7 8 9

441 442 442 443	蜜湊養稔脈妙粍民眠 	461 462 463 464 465 466 467	東聖 里離陸律 室立 立 粒 管 報 密 報 密 経 密 流 旅 旗 衛 原 原 原 原 原 原 原 原 原 原 原 原 原 原 原 原 原 原	492 493 494 495 496 497	僅價僵優機偶們 價值優機 關稅 一 工 門 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一	528 529 530 531 532 533	壻丟壽 人 英國 美國 医克克曼 医克克曼 医克克曼 医克克曼 医克克曼 医克克曼 医克克曼 医克克
442 442 443 4	夢無牟矛霧鵡椋婿娘 	463 464 465 466 467	隆竜龍侶慮旅虜了亮僚 両凌寮料梁涼猟力 糧良林藻 運 大 大 大 大 大 大 大 大 大 大 大 大 大 大 大 大 、	494 495 496 497	兢競兩兪兮冀门囘册冉 冏胄冓冕「冤冦冢冩冪 〉决冱冲冰况冽涸凉凛 几處凩凭凰凵凾刄刋刔	530 531 532	奸妁妝 佞 侫 妣 妲 姆 姨 姜 妍 姙 姚 娥 娟 娑 娜 娉 娚 婀 婬 婉 娵 娶 婢 婪 媚 媼 媾
442 442 443 4	め 冥 名命明盟迷銘鳴姪牝滅 免棉綿緬面麺 も	464 465 466 467	両凌寮料梁涼猟療瞭稜糧良諒遼量陵領力緑倫 厘林淋燐琳臨輪隣鱗鱗 	495 496 497	冏胄冓冕「冤冦冢冩冪 〉决冱冲冰况冽凅凉凛 几處凩凭凰凵凾刄刋刔	531 532	姜妍姙姚娥娟娑娜娉娚婀婬婉娵婜婢婪媚媼媾
442 443 1	め 冥 名命明盟迷銘鳴姪牝滅 免棉綿緬面麺 も	465 466 467	糧良諒遼量陵領力緑倫 厘林淋燐琳臨輪隣鱗鱗 	496 497	〉 决 冱 冲 冰 况 冽 凅 凉 凛 几 處 凩 凭 凰 凵 凾 刄 刋 刔	532	姜妍姙姚娥娟娑娜娉娚婀婬婉娵婜婢婪媚媼媾
443 4	名命明盟迷銘鳴姪牝滅 免棉綿緬面麺 	466 467	――る~れ―― 瑠塁涙累類令伶例冷励	497			
443 4	名命明盟迷銘鳴姪牝滅 免棉綿緬面麺 ———も———	467	瑠墨涙累類令伶例冷励		加却刪刮劑刹剏剄萴剌	EGG	Tom 1 do 100 100 100 100 110 111 100 100 100
	名命明盟迷銘鳴姪牝滅 免棉綿緬面麺 ———も———	467				೦೦೦	嫋 嫂 媽 嫣 嫗 嫦 嫩 嫖 嫺 嫻
444 5	——ŧ——			498	剞剔剪剴剩剳剿剽劍劔	534	嬌嬋嬖嬲嫐嬪嬶嬾孃孅
		100	嶺怜玲礼苓鈴隷零霊麗	499	劒 剱 劈 劑 辨	535	孀子孕孚孛孥孩孰孳孵
	古 井 井 本 亡	468	齢暦歴列劣烈裂廉恋憐	500	辦劬劭劼券勁勍勗勞	536	學多孺宀它宦宸寃寇寉
444	探 保 仄 女	469	漣 煉 簾 練 聯	501	勣 勦 飭 勠 勳 勵 勸 勹 匆 匈	537	是寐寤實寢寞寥寫寰寶
445	孟毛猛盲網耗蒙儲木黙	470	蓮 連 錬	502	甸匍匐匏匕匚匣匯匱匳	538	寶 尅 將 專 對 尓 尠 尢 尨 尸
	目 杢 勿 餅 尤 戻 籾 貰 問 悶		——ろ——	503		539	尹屁屆屎屓
447 糸	紋門勾	470	呂魯櫓炉賂路	504	卮夘卻卷厂厖厠厦厥厮	540	展 屏 孱 屬 屮 乢 屶 屹 岌
	——++——	471	露労婁廊弄朗楼榔浪漏	505	厰厶參篡雙叟曼燮叮叨	541	岑 岔 妛 岫 岻 岶 岼 岷 峅 岾
447	也冶夜爺耶野弥	472	牢狼篭老聾蝋郎六麓禄	506	叭叭吁吽呀听吭吼吮吶	542	峇 峙 峩 峽 峺 峭 嶌 峪 崋 崕
	矢 厄 役 約 薬 訳 躍 靖 柳 薮	473	肋録論	507	吩 吝 呎 咏 呵 咎 呟 呱 呷 呰	543	崗嵜崟崛崑崔崢崚崙崘
449 🖺	譴		ゎ	508	咒呻咀呶咄咐咆哇咢咸	544	嵌嵒嵎嵋嵬嵳嵶嶇嶄嶂
		473	倭和話歪賄脇惑	509	咥 咬 哄 哈 咨	545	嶢嶝嶬嶮嶽嶐嶷嶼巉巍
449	愉 愈 油 癒	474	枠 鷲 亙 亘 鰐 詫 藁 蕨 椀 湾	510	咫哂咤咾咼哘哥哦唏	546	巓 巒 巖 巛 巫 已 巵 帋 帚 帙
450	諭輸唯佑優勇友宥幽	475	碗 腕	511	唔 哽 哮 哭 哺 哢 唹 啀 啣 啌	547	帑 帛 帶 帷 幄 幃 幀 幎 幗 幔
	悠憂揖有柚湧涌猶猷由	476		512	售啜啅啖啗唸唳啝喙喀	548	幟幢幣幇幵并幺麼广庠
452	祐裕誘遊邑郵雄融夕	477		513	咯喊喟啻啾喘唧單啼喃	549	廁 廂 廈 廐 廏
	よ	478		514	喩喇喨嗚嗅嗟嗄嗜嗤嗔	550	廖廣廝廚廛廢廡廨廩
452		479		515	嘔嗷嘖嗾嗽嘛嗹噎噐營	551	廬廱廳廰廴廸廾弃弉彝
	余与誉輿預傭幼妖容庸	480		516	嘴嘶嘲嘸噫噤嘯噬噪嚆	552	彜 弋弑 弖 弩 弭 弸 彁 彈 彌
	揚摇擁曜楊様洋溶熔用	481	乖乘亂」豫亊舒弍于亞	517	嚀 嚊 嚠 嚔 嚏 嚥 嚮 嚶 嚴 囂	553	彎弯旦彖彗彙彡彭彳彷
	窯羊耀葉蓉要謡踊遥陽	482	亟 一 亢 京 亳 亶 从 仍 仄 仆	518	嚼囁囃囀囈囎囑囓□囮	554	性 徂 彿 徊 很 徑 徇 從 徙 徘
456 1	養慾抑欲沃浴翌翼淀	483	仂仗仞仭仟价伉佚估佛	519		555	來 徨 徭 徼 忖 忻 忤 忸 忱 忝
		484	向佗佇佶侈侏侘佻佩佰	520	圈國圍圓團圖嗇圜圦	556	惠忿怡恠怙怐怩怎怱怛
456	羅	485	侑 佯 來 侖 儘 俔 俟 俎 俘 俛	521		557	怕怫怦怏怺恚恁恪恷恟
	螺裸来莱頼雷洛絡落酪	486	俑俚俐俤俥倚倨倔倪倥	522	坿垉垓垠垳垤垪垰埃埆	558	協恆恍恣恃恤恂恬恫恙
458	乱卵 嵐 欄 濫 藍 蘭 覧	487	碎	523	埔埒埓堊埖埣堋堙堝塲	559	悁悍惧悃悚
	n	488	偃假會偕偐偈做偖偬偸	524	堡塢塋塰毀塒堽塹墅墹	560	悄悛悖悗悒悧悋惡悸
458	利吏	489	傀 傚 傅 傴 傲	525	墟墫墺壞墻墸墮壅壓壑	561	惠惓悴忰悽惆悵惘慍愕

First Three

Digits

Last Digit

0 1 2 3 4 5 6 7 8 9

Last Digit

0 1 2 3 4 5 6 7 8 9

First Three Digits

Last Digit

0 1 2 3 4 5 6 7 8 9

First Three Digits

459

Last Digit

0 1 2 3 4 5 6 7 8 9

First Three

502	心怪怠恢而怪惶惚恻恼	598		034		6/0	頃 嘚 院 愷 傸 嬢 幅 儗 著
563	愍 愎 慇 愾 愨 愧 慊 愿 愼 愬	599	椢 椦 棡 椌 棍	635	激灑灣炙炒炯烱炬炸炳	671	礫祀祠祗祟祚祕祓祺禄
564	愴愽慂慄慳慷慘慙慚慫	600	棔棧棕椶椒椄棗棣椥	636	炮烟焦烝烙焉烽焜焙煥	672	禊禝禧齋禪禮穰禹禺秉
565	慴惕慥傳慟慝慓慵憙憖	601	棹棠棯椨椪椚椣椡棆楹	637	熙熙煦煢煌煖煬熏燻熄	673	秕 秧 秬 秡 秣 稈 稍 稘 稙 稠
566	憇憬憔憚憊憑憫憮懌懊	602	楷糊楸楫楔楾楮椹楴椽	638	熕 熨 熬 燗 熹 熾 燒 燉 燔 燎	674	稟禀稱稻稾稷穃穗穉穡
567	應懷懈懃懆憺懋罹懍懦	603	楙椰楡楞楝榁楪榲榮槐	639	燠燬燧燵燼	675	穢穩龝穰穹穽窈窗窕窘
568	懣 懶 懺 懴 懿 懽 懼 懾 戀 戈	604	榿槁槓榾槎寨槊槝榻槃	640	燹 燿 爍 爐 爛 爨 爭 爬 爰	676	窖窩竈窰窶竅竄窿邃竇
569	戉 戍 戌 戔 戛	605	榧 樮 榑 榠 榜 榕 榴 槞 槨 樂	641	爲爻爼爿牀牆牋牘牴牾	677	竊 竍 竏 竕 竓 站 竚 竝 竡 竢
570	憂戡截戮戰戲戳扁扎	606	廖 槿 權 槹 槲 槧 樅 榱 樞 槭	642	犂犁犇犒犖犢犧犹犲狃	678	竦竭竰笂笏笊笆笳笘笙
571	扞扣扛扠扨扼抂抉找抒	607	樔 槫 樊 樒 櫁 樣 樓 橄 樌 橲	643	种 狄 狎 狒 狢 狠 狡 狹 狷 條	679	笞 笵 笨 笶 筐
572	抓抖拔抃抔拗拑抻拏拿	608	撮 橸 橇 橢 橙 橦 橈 樸 樢 檐	644	猗 猊 猜 猖 猝 猴 猯 猩 猥 猾	680	管 笄 筍 笋 筌 筅 筵 筥 筴
573	拆擔拈拜拌拊拂拇拋拉	609	檍 檠 檄 檢 檣	645	獎類默獗獪獨獰獸獵獻	681	筧 筰 筱 筬 筮 箝 箘 箟 箍 箜
574	格 拮 拱 挧 挂 挈 拯 拵 捐 挾	610	檗蘗檻櫃櫂檸檳檬櫞	646	獺珈玳珎玻珀珥珮珞璢	682	
575	捍搜捏掖掎掀掫捶掣掏	611	櫑櫟檪櫚櫪櫻欅蘗櫺欒	647	琅瑯琥珸琲琺瑕琿瑟瑙	683	箴篆篝篩簑簑篦篥籠簀
576	掉掟掵捫捩掾揩揀揆揣	612	欖鬱欟欸欷盜欹飮歇歃	648	瑁瑜瑩瑰瑣瑪瑶瑾璋璞	684	簇簓篳篷簗簍篶簣簧簪
577	揉插揶揄搖搴搆搓搦搶	613	歉歐 歙 歔 歛 歟 歡 歸 歹 歿	649	璧 瓊 瓏 瓔 珱	685	簟簷簫簽籌籃籔籏籀籐
578	攝搗搨搏摧摯摶摎攪撕	614	殀 殄 殃 殍 殘 殕 殞 殤 殪 殫	650	瓠瓣瓧瓩瓮瓲瓰瓱瓸	686	籘籟籤籤籥籬籵粃粐粤
579	撓 撥 撩 撈 撼	615	殯殲殱殳殷殼毆毋毓毟	651	瓷 甄 甃 甅 甌 甎 甍 甕 甓 甞	687	給粢粫粡粨粳粲粱粮粹
580	據擒擅擇撻擘擂擱擧	616	毬毫毳毯麾氈氓气氛氤	652	甦 甬 甼 畄 畍 畊 畉 畛 畆 畚	688	粽 糀 糅 糂 糘 糒 糜 糢 鬻 糯
581	舉擠擡抬擣擯攬擶擴擲	617	氣汞汕汢汪沂沍沚沁沛	653	畩 時 畧 畫 畭 畸 當 疆 疇 畴	689	糲糴糶糺紆
582	擺攀擽攘攜攢攤攣攫攴	618	汾汨汳沒沐泄泱泓沽泗	654	疊 疊 疂 疔 疚 疝 疥 疣 痂 疳	690	対 紜 紕 紊 絅 絋 紮 紲 紿
583	攵 攷 收 攸 畋 效 敖 敕 敍 敘	619	泅 泝 沮 沱 沾	655	痃 疵 疽 疸 疼 疱 痍 痊 痒 痙	691	紵 絆 絳 絖 絎 絲 絨 絮 絏 絣
584	敞敝敲數斂斃變斛斟斫	620	油泛泯泙泪洟衍洶洫	656	痣 痞 痾 痿 痼 瘁 痰 痺 痲 痳	692	經綉絛綏絽綛綺綮綣綵
585	斷旃旆旁旄旌旒旛旙无	621	治 洸 洙 洵 洳 洒 洌 浣 涓 浤	657	瘋 瘍 瘉 瘟 瘧 瘠 瘡 瘢 瘤 瘴	693	緇綽綫總綢綯緜綸綟綰
586	无 旱 杲 昊 昃 旻 杳 昵 昶 昴	622	浚浹浙涎涕濤涅淹渕渊	658	瘰 瘻 癇 癈 癆 癜 癘 癡 癢 癨	694	緘緝緤緞緻緲緡縅縊縣
587	易晏晄晉晁晞晝晤晧晨	623	涵淇淦涸淆淬淞淌淨淒	659	癩癪癧癬癰	695	に に に に に に に に に に に に に に に に に に に
588	晟哲晰暃暈暎暉暄暘暝	624	淅淺淙淤淕淪淮渭湮菏	660	癲癶癸發皀皃皈皋皎	696	縵縹繃縷縲縺繧繝糤繞
589	暨 暹 曉 暾 暼	625	渙 湲 湟 渾 渣 湫 渫 湶 湍 渟	661	皖 皓 晳 皚 皰 皴 皸 皹 皺 盂	697	繙繚繹繪繩繼繻纃緕繽
590	曄瞭曖曚曠昿曦曩曰	626	湃渺湎渤滿渝游溂溪溘	662	盍盖盒盞盡盥盧盪蘯盻	698	辦艦纈纉續纒纐纓纔纖
591	曳 曷 朏 朖 朞 朦 朧 霸 朮 朿	627	滉溷滓溽溯滄溲滔滕溏	663	眈眇眄眩眤眞眥眦眛眷	699	繊 纛 纜 缸 缺
592	杂 杁 朸 朷 杆 杞 杠 杙 杣 杤	628	溥滂溟潁漑灌滬滸滾漿	664	眸睇睚睨睫睛睥睿睾睹	700	罅罌罍罎罐网罕罔罘
593	枉杰枩杼杪枌枋枦枡枅	629	滲漱滯漲滌	665	瞎瞋瞑瞠瞞瞰瞶曖瞿瞼	701	罟 罠 罨 罩 罧 罸 羂 羆 羃 羈
594	枷柯枴柬枳柩枸柤柞柝	630	漾 漓 滷 澆 潺 潸 澁 澀 潯	666	瞽瞻矇矍矗矚矜矣矮矼	702	羇 羌 羔 羞 羝 羚 羣 羯 羲 羹
595	抵 柮 枹 柎 柆 柧 檜 栞 框 栩	631	潛潛潭澂潼潘澎澑濂潦	667	砌 砒 礦 砠 礪 硅 碎 硴 碆 硼	703	羹 羶 羸 譱 翅 翆 翊 翕 翔 翡
596	桀 桍 栲 桎 梳 栫 桙 档 桷 桿	632	澳澣澡澤澹濆澪濟濕濬	668	倍碌碣碵碪碯磑磆磋磔	704	翦翩翳翹飜耆耄耋耒耘
597	梟 梏 梭 梔 條 梛 梃 檮 梹 桴	633	濔濘濱濮濛瀉瀋濺瀑瀁	669	碾碼磅磊磬	705	耙耜耡耨耿耻聊聆聒聘
	-						

First Three

Last Digit

0 1 2 3 4 5 6 7 8 9 Digits

Last Digit

0 1 2 3 4 5 6 7 8 9 Digits

First Three

Digits

Last Digit

0 1 2 3 4 5 6 7 8 9

First Three

Digits



ter Co	odes																																		_
rst Three		L	ast I	Digi	t			ĪF	irst Three			L	ast	Digi	t			First Three			Las	st D	igit			Ī	First Three			Las	st Di	git		_	Т
Digits	0 1		3 4			7	8 9		Digits	0	1 .	2 3	3 4	5	6	7 8	3 9	Digits	0 1	2	3	4	5 6	3 7	8		Digits	0 1	2	3	4 5	6	7	8	S
706	聚智:	驴 毦	4 聳	聲	聰	聶」	聹 嬰	5	742	蟯	蟲虫	番蝉	星蠍	蟾	蟶	當帳	対 蟒	778	逅 辺	下洒	逑:	逕;	夋 追	当诣	主 逖 5	甫	814	馮颙	加	駛.	駝馬	台駑	駭	駮	馬
707	聿肄:						冒用		743						蠶		富蠻		逧邊							_	815	駲騳	展					騫	展
708	胛胥,	作服	五胄	胚	胖	脉	胯胎	ť.	744						衫事		多衰	780	遏	影遐	遑:	遒 i	酉追	負殖	(通)	遘		驅験	驀	驃	騾馬	喬 騎	驛	驗	馬
709	脛脩.							ı	745	衵:	衽者	任初	外袂	袗	袒衫	尓 礼	白袢	781	遞遠	女 遯	遶	隨流	厘 逍	罪 遽		敫		驢弱	襲	驩	驫馬	麗骭	骰	骼	
710	隋	碘那	排	腑	胼	腱	腮脂		746	袍:			ŧ 袱				美裙		邊邊		邨				了部员	園	818	髏腦	體	體	髞島	多髢	髣	髦	野井
711	腦腴	溫服	扇膊	膀	膂		11國 腥	9	747	裝	裹衫	卦衫			裲ネ		軍編	783	郛号	多鄒	鄙!	鄲刻	都面	丁酊	1 酸	魽	819	髫髮	影	髱	髷				
712	膣 腟	傷服	1 膰	膵	膾	膸	膽臀	ř	748	褓!	裹衫	品 補			襁	襄季	返 褶	784	酒種	踏艄	醒	醋酮	醉 顇	植材	醫語	醯	820	唇	影鬆	鬘	鬚髮	餐	鬛	鬥	1
713	臂膺						臚臙		749	褸									醪酢									鬨関			鬯声	3 魄	魆	魏	鬼
714	臠臧:						與舊		750					襯			可覃								r 鈔 釒			魎魋		魴.	鮓魚	平鮑	鮖	鮗	Ħ
715	舍舐						艙船	Ę	751						覦		視覲								遠銕釒			鮠鮨							
716	艝艚;	鐘艄	義艢	艨	艪	艫	舮顭	킰	752	覺!					觝角	鲜角	易觸						活動	卯釸	锈銹	鮹	824	鯣鯛	記鯤	鯔	鯡魚	參鯡	鯱	鯰	Ħ
717	艷艸!								753	計						可言		789	鋩鈏							- 1		鰔鮭						鰄	É
718	苣萄:	苒 直	i 苳	苺	莓	范	苻 苹	Ī	754	治:	抵言	置記	灰詭	詬	詢言	朱記	兆誄	790	銓	甾錢	錚:	錣釒	涝銷	花鉝	战鍜釒	諻		鰛鰕							
719	苞茆							ı	755	誨				誚		亨言			鍼銷							堅		鱠鰓							
720							荐苔		756					諱		宣記			鏨釿							譚		鴃鴆				島鴟	鵄	鴕	Ž.
721	茯 茫								757	諞	臾	哥看	₹ 謚				旁謠		鐓銵									鶟頜							
722	茣莎:								758						譁訁	爲説	幾譎		鑒錦								830	魏	景	鵤	鵑巫	島鵙	鵲	鶉	東
723	莨菴!						萋声		759	證	潛言	替話	更譫						鑷鐼							閊		鶇鵯					鷄	鷁	F
724	蒂萇:						萸淳		760	i	梁誓	警部	異譴	譽	讀	燕隹	誰讒		閔陽	閘	間	閨	閏月	目階				鶸覩			鷂蔦			鷦	
725	菻 葭						篘į		761	讓	鐵言	雚證	章翎	豁	谿。	豈 頭	宛豎		閥闘		濶		閣 陽					鷯鷿			鸞			麁	
726	蒂葩:						葢蒲		762	豐				豺	貂雞		体貊						呃肠	τΩ	上陂!	陌		麋麌			麑鲷				
727	蒿蒟!								763				比貘			貪貝			陏阷							- 1			黌		黏泵			點	
728	蒡 蔡			蔘	蔬	蔟	帶着	Ī	764	貳:							₹賺	800	网	で陟	陦	陲	取隆	皇隘	資			點黑			黴鸎			黻	
729	蓼蕀							ı	765				寶		贈則		笥 贓		險隊						性 !						鼕爿		鼾	齊	
730			語猶				薑魚		766								負跂		雋雉									齔斷				艮齧	齬	齪	故
731	薨 蕭						蕾 穆		767						跛足				霈貢									齲鄺							
732	藉 薺	蔵畫	墓藐				藜謔		768						踝	据员	笺 踟		霹靂	霾	靄	謎 3	藍 圂			靠し	840	善	植	遙	瑤月	飘			
733	蘊 蘓						蘰 嘉		769				自蹊					805	靤	需	勒	靫	钢鞘	內鄞	神神	被									
734			見虧				蚩蛇		770						蹙日		庶踪	806	靺革	5 鞋	鞏	鞐	踏 鞘	曷鞆	(鞣	榙									
735	蚋蚌!						蠣蛇		771	蹣							意 躋	807	鞴鞋	華韆	韈:	章章	直蹈	上 窟	韲	竟									
736	蛔蛞:						蜆蛸		772	躊		鄭即					本軆		韶彰				頂頡	頁館	種類	顒									
737	蜀蜃!						蜴蟛		773	躱.			無軋			铁車	0 17		顏思																
738	蜷蜻!			蝠	蝟	蝸!	蝌蜴	3	774						輓		叕輛	810							見飄月										
739	蝴蝗								775					轅			雪轉	811	飆飮	色飫	餃1	餉館	绥館		能餡	錺									
740							螯螺		776						轤		辛辣	812	餞飠	餅	餬	餐館	塊 館												
741	螽蟀!	嫦虽	整	蟄	螳	墓	蟆螻	Į.	777	辭	辯	二逆	Þ 迥	迢	迪記	外道	图 迴	813	饐饋	饑	饒	饌	變加	首前	1 馥	馭									



Weather Indicator List

■ Basic Status

*	Clear skies (day)
J)	Clear skies (night)
8	Cloudy
***	Rain
⊕	Snow
4	Thunder showers
Ď Dž	Chance of rain: 0%
0 102	Chance of rain: 10%
0 202	Chance of rain: 20%
302	Chance of rain: 30%
0 402	Chance of rain: 40%
50%	Chance of rain: 50%
60x	Chance of rain: 60%
0 702	Chance of rain: 70%
80%	Chance of rain: 80%
90%	Chance of rain: 90%
0 1002	Chance of rain: 100%
\triangleright	Then
/	Partly/chance of
	· · · · · · · · · · · · · · · · · · ·

■ Pollen Count

4	Low
A.	Moderate
	High
	Extreme

■ Cherry Blossom

	Flowering
	Almost full bloom
	Full bloom
8	Beginning of petal fall

■ Fall Foliage

ar an ronag	•
家	No color change
郊	Colors appearing
W	Peak
*	Defoliating

■ Ultraviolet

0	Low
	Moderate
	High
	Extreme

■ Typhoon

- гурпооп	
	Forming
	Approaching
\$	Caution necessary

Other		
Ê	Heavy rain	
H	Gale	
₩	Notification	

Specifications

SoftBank 001SH

Weight*	79.1 g (95.8 g with battery)	
Continuous Talk Time*	210 minutes	
Continuous Standby Time*	360 hours (handset closed)	
Continuous TV Reception Time	6 hours	
Charging Time (power off)	AC Charger: 140 minutes In-Car Charger: 140 minutes	
Dimensions (W x H x D)*	50 x 102 x 15.6-17.4 mm (handset closed, without protruding parts)	
Maximum Output	0.25 W	

- *Approximate value.
- Above values calculated with Backlight Brightness set to Level:2.
- Continuous Talk Time is an average measured with a new, fully charged battery, in strong signal conditions without moving handset.
- Continuous Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in strong signal conditions without moving handset. In Japan (3G service area), the value is calculated with IP Service Setting and Mobile Widget Auto Refresh set to Off.

- Continuous TV Reception Time is measured with a new, fully charged battery, with Set Brightness set to 2, Tone set to Normal and Screen Size set to Normal(Landscape) with Headphones connected to External Device Port, until battery runs low (10% of capacity).
- Talk Time/Standby Time/TV Reception Time may vary with environment, status, settings, etc.
- Display employs precision technology, however, some pixels may appear brighter/ darker.

■ Handset Materials

Parts	Materials/Finishing
Housing, Battery Cover	ABS resin/UV painting
Display window, lens cover	Acrylic resin
Infrared Port	ABS resin
Sub Display window	Acrylic resin/In-mold decorating
Multi Selector (Cursor Keys), Center Key	PC resin/Solid printing (back)
Mail Key, Yahoo! Keitai Key, Shortcuts & A/a Key, TV & Text Key, Start & Rakutomo Link Key, Clear/Back Key, Power On/Off & End Key, Keypad, ** Key, #* Key, Dictionary Key, Multi Job & Manner Key	PC resin/UV painting

Parts	Materials/Finishing
Side Key (Shutter Key), External Device Port Cover	PC resin & elastomer/ UV painting
Housing stop pads	Urethane resin
Screw cover	PET
Battery	PC resin & ABS resin
Battery contacts	Brass/Gold plating (sealer: nickel)
Screws	SWCH16A/Trivalent chromate
USIM Tray	POM resin

Accessory

Battery

Voltage	3.7V	
Battery Type	Lithium-ion	
Capacity	770 mAh	
Dimensions	35.4 x 46.3 x 4.6 mm	
(W x H x D) [*]	(without protruding parts)	
(W X II X D)	(without protituding parts)	

^{*}Approximate value.



Getting Started

■ Standby Shortcut

Savable Items 19 per sheet (shared with widgets)

Universal Operations, Etc.

■ Text Entry

User Dictionary	250 entries (5 per reading) Word: 30 characters Reading: 8 hiragana	
Acquire Dictionary	5 dictionaries	
Paste List	10 text strings	
Recoverable Deleted Characters	30,720 single-byte characters	
Dictionary	Meikyo Japanese Dictionary: Approximately 47,100 words/phrases Genius English-Japanese Dictionary: Approximately 45,700 words/phrases Genius Japanese-English Dictionary: Approximately 55,800 words/phrases	

■ Phone Book

Entry	1,000 entries	
Name/Reading	Last/First: 32 characters each	
Phone Number	5 numbers (32 digits each)	
Mail Address	5 addresses (128 characters each)	
Category	16 Categories	
Address	Postal Code: 20 characters Country: 32 characters Others: 64 characters each	
Office	Office Name/Division/Post: 32 characters each	
Homepage	1,024 bytes	
Note	256 characters	
Mail Groups	20 Groups (20 members each) Group name: 16 characters	

Calling		
Call Log Records	Dialed: 30 Dialed Ranking: 10 Received: 30	
Answer Phone/ Record Caller Voice	20 messages or 90 seconds	
Auto Answer List	10 numbers	
Speed Dial/Mail	100 numbers/addresses	

Messaging				
	Received	10 MB or		
	Msg.	3,000 messages		
	Drafts	5 MB (or		
	Sent	1,000 messages		
	Messages	between Drafts,		
Memory	Unsent	Sent Messages		
	Messages	and Unsent		
	moodagee	Messages)		
	T	61 MB (shared with Data Folder and		
	Templates			
PC Mail/S! Mail	S! Appli Library)			
Subject	512 single-byte characters			
PC Mail/S! Mail	Approximately 30,000 single-byte			
Message	characters			
SMS Message	160 single-byte alphanumerics			
Auto Resend	2 times			
Attachment	20 files or 2 MB [*]			
Send Reservation	10 messages			
Signature	256 single-byte characters			
Recipient	20 numbers/addresses			
Folder	20 folders (20 sort keys each)			
	Memory	300 messages per		
Chat Folder		folder		
Onat i older	Folder	10 folders		
		(20 members each)		

	Graphic Mail	1 sound or Flash® file, or 40 images/My Pictograms (with 1 sound or Flash® file)	
	Auto Reply	20 numbers/addresses Reply Message: 256 single-byte characters per mode	
	Sort Snam Mail		20 entries
		Permitted List	20 entries

*Limit may be lower depending on message text, etc.

■ PC Mail Settings

PC Mail	Account	3 accounts
Account	Account Name	20 characters
Set Receiving	User Name	128 characters
	Password	40 characters
	ReceivingServer	128 characters
	Port Number	1 to 65535
Set Sending	Sender Name	20 characters
	Mail Address	128 characters
PC Mail DL	Individual Address	20 addresses

Internet

Download	500 KB per page	
(Yahoo! Keitai)	10 MB for progressive	
(Talloo: Reital)	downloads	
Download	JPEG Images	3 MB
(PC Site Browser)1	Flash® Files	2 MB
History	300 pages for Yahoo! Keitai	
	300 pages for PC Site Browser	
URL Entry Log	10 URLs	
Bookmarks ² &	100 pages for Yahoo! Keitai	
Saved Pages	100 pages for PC Site Browser	
Tab	5 tabs at one time	
Input Memory	20 entries	
Streaming	OO LIDL -	
History	20 URLs	
RSS Feed	30 entries (60 KB per entry)	
	•	-

¹1 MB each for files other than JPEG images and Flash® files. (Some media files are playable beyond 1 MB.)
² Folders are counted as pages.

Digital TV

g		
	ISDB-T mobile Video profile	
	(SD-Video standard)	
Recording Time	80 minutes on 256 MB Memory	
(example)	Card	
Marker	99 Markers (10 per file)	
Split File	99 portions per file	
Reservation	5 entries (24 hours each on	
List	1 GB or larger Memory Card)	

Camera & Imaging

■ Mobile Camera

Effective Pixels	3.2 Megapixels
Auto Shut-off Time	Approximately 3 minutes

■ Photo Camera

Zoom	1x - 24.8x	
	3M	1536 x 2048
	Full HD	1080 x 1920
	2M	1200 x 1600
Picture Size	1.2M	960 x 1280
(W x H dots)	VGA	480 x 640
	Wallpaper	240 x 400
	QVGA	240 x 320
	QQVGA	120 x 160
File Format	JPEG	
Memory	Approximately 60 files (at 3M, High Quality) on handset with no other files	
File Name	yymmdd_hhmmss	
Shooting Distance	Macro: 10 cm	
Other	Use transparent PNG files of 40 KB or less as Frames	

■ Video Camera

Zoom	1x - 8.7x	
	Extended	320 x 240 (QVGA)
		240 x 176 (HQVGA)
Record Size (W x H dots)		176 x 144 (QCIF)
(W X II dots)	For Message	320 x 240 (QVGA)
		176 x 144 (QCIF)
File Format	3GP	
Recording Capacity per	Extended	Approximately
		30 minutes* on Memory Card
Shot	For Message	2 MB or 295 KB
File Name	yymmdd_hhmmss	
Recording Distance	1.5 m in good light	

*Varies with handset usage, location or settings.

Editing Images

Editing images		
Picture Editor	Resize (W x H dots)	Wallpaper (240 x 400) Power On/Off (240 x 400) Incoming Call (160 x 160) Alarm (240 x 104) Mail Art (96 x 96) QVGA (240 x 320) Cut
	Retouch	52 x 52 dots or larger JPEG/PNG images
	Paste	16 characters
	Correction	52 x 52 dots or larger JPEG/PNG images
Composite	Merge Panorama	JPEG images between W 48 x H 64 dots and 240 x 320 dots



Media Player

Supported Formats	AAC (.mp4/.3gp/.m4a) (Some files may not play depending on sampling frequency and bit rate)	
All Music List	Music	Shows up to
All Music List	Chaku-Uta®	350 files each

S! Applications

	100 items or 61 MB (shared with
Memory	Messaging Templates folder and
	other folders in Data Folder)

Handy Extras

■ PIM/Life

Alarms	5 entries, Subject: 9 characters		
Calendar ¹ /Tasks	Location: 126 characters Location: 16 characters Set Holiday: 10 holidays		
Wakeup TV	Auto Shut-off Approximately 30 minutes		
Household	3,285 entries ²		
Accounts	(9,999,999 yen each)		
Calculator	999,999,999,999		
Expenses Memo	50 entries (999,999.99 yen each) per list x 3 lists		
Dreast beliders are based as Januares calendar			

¹Preset holidays are based on Japanese calendar as of September 2010.

■ Clock/Gauge

Stopwatch	23 hours 59 minutes 59.9 seconds in 0.1-second increments Lap time: 4 records
	99 minutes 59 seconds in 1-second increments
World Clock	City name: 16 characters

Doc./Rec.

Notepad	500 entries (8,192 characters each)	
Voice Recorder	For Message	Approximately 20 minutes (message size limit: 2 MB) or 3 minutes (message size limit: 300 KB) per file
	Extended Voice	99 hours 59 minutes 59 seconds
Scan Barcode (Continuous	UPC/JAN	50 codes
Mode)	QR Code	16 codes
Create QR Code	Equivalent of 513 digits, 311 alphanumerics or 131 kanji	
Scan Text	256 characters	

Mobile Widget

6 widgets (S! Quick News &
S! Friend's Status: 1, others: 5) per
sheet x 4 sheets

Entertainment

S! Quick News

	1 item for Special
Items	5 items between News Flash and General

e-Books Text Conv

Text Copy	20 characters
SI Eriand's	Statue

S! Friend's Status

Member	30 members	
My Status	Name: 7 characters Comment: 15 characters Status Label: 4 characters	
	Template name: 12 characters	

S! Circle Talk

Participant	11 members
Speak Time	30 seconds each
Member List	30 entries (10 members per Group)

■ Blog Tool

Blog Details	5 entries	
Blog Title	16 characters	
Blog Settings (Mail)	Email Address	128 characters
	Title	32 characters
	Text	128 characters
	Picture Size	S (320 x 320) M (640 x 640) L (1024 x 1024) Send
Blog Settings (Yahoo! Keitai & PC Site Browser)	URL for Posting	1,024 characters
	URL for Viewing	1,024 characters

Data Folder

Momory	61 MB (shared with Messaging
Memory	Templates folder and S! Appli Library)

Memory Card

Backup File Name	yymmddXX* (XX: 2 digits/letters
---------------------	---------------------------------

yymmdd for Contents Keys.



²Limit may be lower depending on the number of items in each entry.

Connectivity & File Backup

■ Infrared

Infrared	IrMC 1.1	
Transfer	Range	Within 20 cm

■ Bluetooth[®]

Communication System	Bluetooth® specification Ver. 2.1
Supported Profiles	Headset Profile Hands-Free Profile Dial-Up Networking Profile Object Push Profile File Transfer Profile Basic Imaging Profile Advanced Audio Distribution Profile Audio/Video Remote Control Profile
Output	Bluetooth® Power Class 2
Range	Within 10 m
Device Search	16 devices
Pairing	32 devices
Device Name	16 characters
Printing	JPEG/PNG images

S! Addressbook Back-up

Log	10 synchronization records

Network

	5 Networks
Add Network	Country/Network code: 3 digits
	Name: 25 single-byte characters

Reference URLs

- SOFTBANK MOBILE Corp. http://mb.softbank.jp/en/
- S! Addressbook Back-up
 http://mb.softbank.jp/en/price_plans/basic_option.html
- Messaging Basics
 http://mb.softbank.jp/en/customer_support/mail.html
- Custom Handset Address
 - https://www.email.softbank.ne.jp/help/e/address.html
- Yahoo! Keitai http://mb.softbank.jp/en/customer_support/web.html
- Secure Remote Lock
 http://mb.softbank.jp/en/price_plans/basic_option.html
- microSD Memory Card Compatibility
 From PC (Japanese)
 http://k-tai.sharp.co.jp/peripherals/sd_support.html
 From Handset (Japanese)
 http://shweb.sharp.co.jp/
- SVG-T
 From Handset (Japanese)
 http://shweb.sharp.co.jp/svqt/index_pdc.html
- Association for Promotion of Digital Broadcasting

From PC http://www.dpa.or.jp/english/ From Handset (Japanese) http://www.dpa.or.jp/1seg/k/



Memory Card Structure & Contents

Memory Card Structure		'e	Contents (Location when Viewed on Handset)	
DCIM	XXXSHARP			Still images in Data Folder (DCIM)
		Local Contents	3	SD Local Contents
		Mail		Messaging folder backups (Received Msg., Sent Messages and Drafts)
			Book	e-Book files in Data Folder (Books)
			Bookmarks	Bookmark backup files
			Character	PNG files in Data Folder (Character)
			Custom Screens	Customized Screen files in Data Folder (Customized Screen)
			Flash(R)	Flash® Wallpaper files in Data Folder (Flash®)
			Flash(R) Ringtones	Flash® ringtones in Data Folder (Flash® Ringtones)
			Games and More	S! Applications
			Hot Status Template	Template files in Data Folder (Status Templates)
PRIVATE	MYFOLDER	My Items	Mail Art	Files in Data Folder (Mail Art)
FRIVALE			Message Templates	Graphic Mail templates in Templates folder
			Music	Music files in Data Folder (Music)
			Other Documents	Other files in Data Folder (Other Documents)
			Pictograms	GIF files in Data Folder (My Pictograms)
			Pictures	Still images in Data Folder (Pictures)
			Sounds & Ringtones	Melodies and other sound files in Data Folder (Ring Songs-Tones)
			Videos	Video files in Data Folder (Videos)
			Widget	Widget files in Data Folder (Widget)
		SH_Folder		Application management files
		Utility	·	Backup files (Phone Book), etc.
	SHARP	MOBILE	·	Backup files (User Dictionary), etc.

Menu List

Messaging

wcssagiii	9	
	Refer to	
Received Msg.		P.4-15
Create Messa	qe	P.4-4
Retrieve New	Msq.	P.4-28
Drafts		P.4-33
Templates		P.4-9
Sent Message	es	P.4-15
Unsent Messa	ages	P.4-33
Chat Folder		P.4-18
	Mail List	P.4-28
Server Mail	Retrieve All	P.4-28
Box	Delete All	P.4-31
	Mailbox Volume	P.4-34
Create New S	Create New SMS	
Address Settings		P.4-3
	View Settings	P.4-34
	Receive Settings	P.4-14
Cattings	Create/Send Settings	P.4-11
Settings	PC Mail Settings	P.4-21
	SMS Settings	P.4-39
	Speed Dial/Mail	P.4-23
	Mail Groups	P.4-19
Memory Statu	P.4-30	

■ Settings: View Settings

Function	Refer to
Received Msg. View	P.4-34
Sent Msg. View	P.4-34
Message List View	P.4-34
Scroll Unit	P.4-34
Auto Play Attached Sound	P.4-34
Picture Appearance	P.4-34
Animation View	P.4-34
Address View	P.4-34

■ Settings: Receive Settings

Function		Refer to
Message Download	DL Size Limit	P.4-35
	Auto Settings	P.4-14
Download	Condition(Auto)	P.4-14
Auto Delete R	eceived Msg.	P.4-35
Other Than	Incoming Display Setting	P.4-35
Standby Screen	View Setting	P.4-35
	Alert Sound	P.4-35
Secret Folder		P.4-35
	Standby Screen Info.	P.4-35
Link to	Light	P.4-35
Feeling	Vibration Pattern	P.4-36
	Ringtone	P.4-36
Spam Mail	Sort Spam Mail	P.4-17
Settings	Report Spam	P.4-36

■ Settings: Create/Send Settings

Function		Refer to
Create Msg. S	Create Msg. Size	
Picture Auto I	Resize	P.4-36
Sending Statu	ıs	P.4-36
Auto Resend		P.4-36
Auto Delete S	ent Msg.	P.4-36
Signature	Signature	
Cond Ontion	Delivery Report	P.4-24
Send Option	Reply to Settings	P.4-37
_ Reply With Text		P.4-37
Reply Settings	Auto Reply	P.4-30
Set Quick Reply		P.4-30
Send File Settings		P.4-37
Restrictions Setting		P.4-11

■ Settings: PC Mail Settings

Function	Refer to
PC Mail Account	P.4-21
PC Mail DL	P.4-37
Auto Check	P.4-37
Word wrap	P.4-38

■ Settings: SMS Settings

_	
Function	Refer to
Expiry Time	P.4-39
Message Center	P.4-39
Char-code	P.4-39



Yahoo!

Function	Refer to
Yahoo! Keitai	P.5-3
Menu List	P.5-3
Bookmarks	P.5-8
Saved Pages	P.5-8
Web Search	P.5-11
Enter URL	P.5-3
History	P.5-3
PC Site Browser	P.5-5
Browser Settings	P.5-12

■ PC Site Browser

	Function	Refer to
Homepage		P.5-5
Bookmarks		P.5-8
Saved Pages		P.5-8
Web Search		P.5-11
Enter URL		P.5-5
History		P.5-5
RSS Feed		P.5-9
Yahoo! Keitai		P.5-3
	Font Size	P.5-12
	Scroll Settings	P.5-13
	Cursor Settings	P.5-12
	Downloads	P.5-12
	Memory Operation	P.5-10
PC Site Browser	Security Settings	P.5-16
Settings	Download to	P.5-12
go	Initialize Browser	P.5-16
	Reset Settings	P.5-16
	Warning Message	P.5-13
	Zoom Factor	P.5-12
	Softkey Area	P.5-5

■ Browser Settings

Function	Refer to
Font Size	P.5-12
Scroll Unit	P.5-13
Cursor Settings	P.5-12
Downloads	P.5-12
Memory Operation	P.5-10
Security Settings	P.5-16
Download to	P.5-12
Initialize Browser	P.5-16
Reset Settings	P.5-16

S! Appli

Function	Refer to
S! Appli Library	P.8-7
Settings	P.8-10
Information	P.8-11

Settings

Function		Refer to
Application V	olume	P.8-10
Backlight		P.8-11
Vibration		P.8-11
Synchronizati	on	P.8-11
Calls & Alarms		P.8-10
	Switch On/Off	P.8-10
Screensaver	Activation Time	P.8-10
	Stop Auto Start	P.8-10
Surround		P.8-10
Set to Default		P.8-11
Memory All Clear		P.8-11

<u>Entertainment</u>

Entertainment		
	Refer to	
	What's New	P.10-6
	Back Issue	P.10-6
S! Information Channel/	Registration/Cancel	P.10-6
Weather	Get Latest Contents	P.10-18
Wedner	Notification	P.10-18
	Weather Indicator	P.10-6
S! Quick News		P.10-5
Free Contents		P.10-7
S! Contents Store		P.10-7
S! Friend's Status		P.10-9
S! Circle Talk		P.10-12
Blog Tool		P.10-14
BookSurfing		P.10-8
e-Book Viewer		P.10-8

S! Information Channel/Weather: Weather Indicator

Function		Refer to
Weather		P.10-19
Manual Update		P.10-6
Settings	Standby Setting	P.10-19
	Weather Notif.	P.10-19
	Icon Update	P.10-19

S! Quick News

Function	
S! Quick News List	
Auto Refresh	P.10-18
Show Image	P.10-18
Check Schedule	P.10-18
Change Skin	P.10-18
Delete S! Quick News Lists	P.10-18
	s List Auto Refresh Show Image Check Schedule Change Skin Delete S! Quick News



Appendix 15

Function		Refer to
Photo Camera	1	P.7-4
Video Camera	ı	P.7-5
Barcode Read	ler	P.9-27
Scan Card		P.9-29
Scan Receipt		P.9-13
Kanji Grabber		P.9-31
Review		P.7-6
	Picture Size	P.7-14
Photo Settings	Picture Quality	P.7-13
Settings	Settings	P.7-13
Video Settings	Record Time/Size	P.7-14
	Microphone	P.7-14
	Save Settings	P.7-13

■ Photo Camera

Function		Refer to
Shooting Settings	Exposure	P.7-13
	Focus Setting	P.7-13
Settings	White Balance	P.7-14
Modes	Add Frame	P.7-7
wodes	Continuous Shoot	P.7-7
Barcode/Scan		P.9-27
Review		P.7-6
Picture Size		P.7-14
Scene		P.7-14
Picture Quality		P.7-13
Self-timer		P.7-7
Settings		P.7-13
Help		P.7-13

■ Video Camera

Function		Refer to
Record	Exposure	P.7-13
Settings	Focus	P.7-13
Display Size		P.7-14
Review		P.7-6
Record Time/Size		P.7-14
Microphone		P.7-14
Video Quality		P.7-13
Self-timer		P.7-7
Settings		P.7-13
Help		P.7-13

■ Photo Settings: Settings

Function	Refer to
Focus Mark	P.7-13
Display Icons	P.7-13
Shutter Sound	P.7-13
Save Pictures to	P.7-13
Auto Save	P.7-13
Set Remote Shutter	P.7-13
Set Send Key	P.7-13

■ Video Settings: Save Settings

Function	Refer to	
Save Videos to	P.7-13	
Auto Save	P.7-13	

Media

Function	Refer to
Music	P.8-4
Videos	P.8-5
Streaming	P.5-13

■ Music

Function		Refer to
Last Played Music		P.8-8
My Music		P.8-6
Download Music		P.8-3
Sound Effects		P.8-8
Settings	Playback Mode	P.8-8
	Sound Output	P.8-8

■ Videos

Function		Refer to
Last Played V	ideo	P.8-8
My Videos		P.8-5
Download Videos		P.8-3
	Playback Mode	P.8-8
	Backlight	P.8-8
Cattinana	Display Size	P.8-8
Settings	Sound Effects	P.8-8
	Web Link Setting	P.8-8
	Sound Output	P.8-8



Tools

■ PIM/Life

	Function	Refer to
Alarms		P.9-8
Calendar		P.9-2
Exchange Pro	ofile	P.13-4
Wakeup TV		P.9-10
Relaxation Ti	me	P.9-12
Tasks		P.9-6
Household Accounts		P.9-13
Calculator		P.9-17
Expenses Memo		P.9-18
	Receive Simulated Call	P.9-37
	Switch On/Off	P.9-19
Simulated Call	Set Caller	P.9-19
	Assign Tone	P.9-19
	Receive Timing	P.9-19
	For Silent Mode	P.9-37

■ Clock/Gauge

Function	Refer to
Stopwatch	P.9-20
Countdown Timer	P.9-21
World Clock	P.9-22
Hour Minder	P.9-23
Battery Meter	P.1-24

Doc./Rec.

	Function	Refer to
Dictionary		P.2-13
Search		P.2-15
Notepad		P.9-24
Scratch Pad		P.2-16
ASCII Art		P.9-25
	Record Time	P.9-38
Voice Recorder	Ring Songs-Tones	P.9-26
necorder	Save Recording to	P.9-38
	Barcode Reader	P.9-27
	Open Barcode	P.9-39
	Create QR Code	P.9-28
Barcode/	Scan Card	P.9-29
Scan	Scan Receipt	P.9-13
	Kanji Grabber	P.9-31
	Scan Text	P.9-30
	Scanned Results	P.9-39
Phone Help		P.1-24

■ Connectivity

Function		Refer to
	Switch On/Off	P.13-17
	Add Device	P.13-6
	Paired Devices	P.13-7
Bluetooth	Send All	P.13-8
	Setting Watch	P.13-18
	My Device Settings	P.13-17
	My Device Details	P.13-17
Infrared	Switch On/Off	P.13-17
inirared	Send All	P.13-3
Card Reader	Mode	P.13-9
USB Charge Memory Card Backup/Restore		P.1-25
		P.12-6
		P.13-11

Data Folder

Function	Refer to
Pictures	P.7-8
DCIM	P.12-2
Ring Songs-Tones	P.9-26
S! Appli	P.8-7
Widget	P.10-2
Music	P.12-2
Videos	P.12-2
Books	P.12-2
Customized Screen	P.2-4
Status Templates	P.12-2
Flash®	P.12-2
Other Documents	P.12-2
Memory Status	P.12-2

Widget

Function	Refer to
Widget Store	P.10-2
Widget Contents	P.10-2
Settings	P.10-16

TV

Function	Refer to
Digital TV	P.6-2
TV Player	P.6-8
TV Link	P.6-12
TV Listing	P.6-6
Reservation List	P.6-9
Settings	P.6-11

Settings

Function		Refer to
TV Alarm		P.6-14
	Set Recording	P.6-13
	Image Location	P.6-13
Broadcast	Notify Connection	P.6-11
Data	Location	P.6-12
	Manufacture Number	P.6-12
	Delete StationData	P.6-11
Screen Size	Screen Size Set Landscape Sound Output	
Set Landscap		
Sound Output		
@Sound Outp	ut	P.6-11
Calls & Alarms TV Reserve Prior		P.6-11
		P.6-14
Auto Exit	Auto Exit Time	P.6-11
Auto Exit	Close Action	P.6-11

Phone

	Function	Refer to
Phone Book		P.2-17
Add New En	try	P.2-17
Information		P.1-25
Call Log		P.3-9
Play Messag	es	P.3-5
Play Voicem	ail	P.3-14
S! Addressbook Back-up		P.13-13
My Details		P.1-24
Set Category		P.2-18
Mail Groups		P.4-19
Rakutomo Link		P.3-8
Speed Dial/N	/lail	P.3-7
Touch-Tone Signal List		P.3-17
o /	Ph.Book Settings	P.2-22
Settings/ Manage	Call Log Setting	P.3-18
	Manage Entries	P.2-24

Settings

■ Sound/Display

Function	Refer to
Mode Settings	P.1-26
Display	P.14-3
Customized Screen	P.2-4
Sounds & Alerts	P.2-5
Date & Time	P.14-2
言語選択 (Language)	P.14-3
Ringer Output	P.14-6
Earpiece Volume	P.3-16
Change Menu	P.1-17

■ Sound/Display: Display

	Function	Refer to
Wallpaper		P.2-3
System Graph	nics	P.14-3
VeilView		P.1-27
Display Effect	ts	P.14-3
Font Settings		P.2-2
<u> </u>	Clock/Calendar	P.14-4
Standby Display	Show Widget	P.14-4
Display	Show Operator Name	P.14-4
Mini Battery		P.1-27
Greeting Message		P.14-3
	Duration	P.14-4
Sub-Display	Messages	P.14-4
	Display Date&Time	P.14-4
	Clock Type	P.14-4
	Caller Display	P.14-4
Backlight		P.14-3
Display Savin	g	P.14-3
Dial Number		P.14-3

■ Sound/Display: Sounds & Alerts

Function	Refer to
Volume	P.14-5
Ringtone/videos	P.2-5
Machi-Uta	P.2-5
System Sounds	P.14-6
Vibration	P.2-5
Event Light	P.14-5
Status Light	P.14-5
Any Key Answer	P.14-5
Surround	P.14-6

■ Sound/Display: Date & Time

Function	Refer to
Set Date/Time	P.14-2
Time Correction	P.14-2
Daylight Saving	P.14-2
Set Time Zone	P.14-2
Clock/Calendar	P.14-4
World Clock	P.9-22
Auto World Clock	P.9-22
Alarms	P.9-8
Set Holiday	P.9-32
Time Format	P.14-2
Date Format	P.14-2
Calendar Format	P.14-2

■ Phone/ ₽

User Dictionary			
Set Key Shortcut		Function	Refer to
Set Key Light	User Dictiona	ry	P.2-12
Switch On/Off	Set Key Short	cut	P.1-14
Double Mode	Set Key Light		P.14-4
Mode Name P.1-2		Switch On/Off	P.1-21
Reject By Line		Double Mode	P.1-23
Number Reject By Line P.1-2		Mode Name	P.1-26
Show Missed		Reject By Line	P.1-26
Send Priority	Nullibei	Show Missed	P.1-26
Memory Card		Packet Warning	P.1-26
Backup/ Backup All Items P.13- Backup Selected Items P.13- Restore All Items P.13- Restore Selected Items P.13- Settings/Manage P.13- Locks P.11- Software Update P.15-		Send Priority	P.1-26
Backup/ Restore Backup Selected Items P.13- P.13- Restore All Items P.13- P.	Memory Card		P.12-6
Backup/ Restore Restore All Items P.13- P.13- P.13- P.13- P.13- P.13- P.14- P.15- P.15- P.15- P.15- Locks P.11- P.15-		Backup All Items	P.13-19
Restore Hestore All Items P.13-P.13-P.13-P.13-P.13-P.13-P.13-P.13-		Backup Selected Items	P.13-11
Restore Selected Items P.13- Settings/Manage P.13- Locks P.11- Software Update P.15-		Restore All Items	P.13-19
Locks P.11- Software Update P.15-	nestore	Restore Selected Items	P.13-12
Software Update P.15-		Settings/Manage	P.13-19
	Locks		P.11-2
Decet Cettings D14	Software Update		P.15-5
Master Reset Settings P.14-	Master Deset	Reset Settings	P.14-9
Reset All P.14-	waster Heset	Reset All	P.14-9



,		
Function R		Refer to
	Number of Copies	P.7-12
	Settings	P.7-15
DPOF	Check Settings	P.7-12
	Reset Settings	P.7-15
SD Local Contents		P.12-8
Format Card		P.12-6
Memory Status		P.12-2

■ Phone/ : Locks

F	unction	Refer to
PIN Entry		P.11-2
Function Lock		P.11-2
IP Service Setti	ng	P.14-8
Function Control		P.11-4
Application Lock		P.11-3
History Lock		P.11-3
Show Secret Data		P.11-3
Set Lock Message		P.11-5
Handset Code	Need/UnNeed Setting	P.1-20
Settings	Save Handset Code	P.1-19
Administrator Setting		P.1-20

■ Call

	Function	Refer to
	Call Timers	P.3-10
Call Time/	Data Counter	P.3-18
Data Counter	Call Time Counter	P.3-18
Counter	Minute Minder	P.3-18
	Switch On/Off	P.3-5
Answer	Answer Time	P.3-15
Phone	Outgoing Message	P.3-15
	Volume	P.3-15
	Voicemail	P.3-14
Voicemail/	Diverts	P.3-13
Forwarding	Cancel All	P.3-14
1 Of Warding	Status	P.3-20
	Camera Picture	P.3-22
	Incoming Picture	P.3-22
	Outgoing Picture	P.3-22
Video Call	Hold Guidance Pict	P.3-22
video Cali	Backlight	P.3-22
	Loudspeaker	P.3-22
	Mute Microphone	P.3-22
	Remote Monitor	P.3-15
Caller ID		P.3-21
out Missed Ca	ills	P.3-14
	Int'l Prefix	P.3-16
Int'l Calling	Country Code	P.3-16
	Roaming Dial Assistant	P.3-16
	Bar Outgoing Calls	P.3-20
Call Barring	Restrict Destinations	P.3-11
Call Barring	Bar Incoming Calls	P.3-21
	Reject Numbers	P.3-12
Auto Answer		P.3-21
Call Waiting		P.3-20

■ Network

Function	Refer to
Select Network	P.14-7
Re-search Signal	P.14-7
Offline Mode	P.1-18
Retrieve NW Info	P.14-7
Location Info	P.14-8
Network Info	P.14-7
External Device	P.14-7

Index

**	
AC Charger	
Accessing Functions	
ccessory	
dministrator Code	
fter-Sales Services	
larms	
Canceling	
Deleting	
Editing entries	
For Manner Mode	
Link to World Clk	
Inimation View	
Inswer Phone	
ny Key Answer	
Application Lock	
ASCII Art	
uto Art	
luto Focus	
luto Reply	
Auto Resend	
uto Retry Function	4-2
В	
Backlight	
3ackup	
Auto Backup	
Settings/Manage	
Bar Incoming Calls	
Bar Outgoing Calls	
Barcode Reader	
Open Barcode	
Scanning during text entry	
Using scan results	
Battery	
lattam. Carran	1.0
Battery Cover	I-Z

Δ

Battery Meter	0-14, 10-21 1 3-5 13-8 13-8
С	
Calculator	9-29-329-33 . 3-13, 3-203-13
Call LogCall Time Counter	3-18
Call Waiting (answering Line 2)	3-20
Caller ID	
Auto Save	7-13
Capturing Still Images	7-4
Exposure	
Locking focus Macro	
Manual Focus	
	7-13
Picture Quality	
Picture Quality	7-13
	7-13 7-5
Recording Video	7-13 7-5 7-6
Recording Video Review Save Pictures to Save Videos to	7-13 7-5 7-6 7-13
Recording Video	7-13 7-5 7-6 7-13 7-7
Recording Video	7-137-67-137-137-7
Recording Video	7-137-67-137-77-137-7
Recording Video	7-137-57-67-137-77-137-13
Recording Video	7-13 7-5 7-6 7-13 7-13 7-13 7-13 13-9 11-19

Charging 1. Chat Folder 4-18, 4-3 Clear Tone 3 Clock/Calendar 14 Composite 7-1 Countdown Timer 9-2 Create Msg. Size 4-25, 4-3 Create QR Code 9-2	33 -4 -4 11 21 36 28
Customer Service 15-3 Customized Screen (Japanese) 2-	
D	
Data Folder 12 Files (attaching) 4-6, 12 Files (moving/copying) 12 Files (opening) 12 Files (renaming) 12 Folders (adding) 12 Selecting Multiple Files 12 Set Secret (folders) 12 Side Show 12-3, 12 Date & Time 14 Daylight Saving 9-22, 14 Delivery Report 4-12, 4-24, 4-3 Dialing from Call Log records 3-1 Dictionary 2-1 Digital TV (→ TV) 6 Adding Reception Areas 6 Auto Exit 6-1 Calls & Alarms 6-1 Change Area 6-1 Change Area 6-1 Program Info. Search 6-1 Sound Output 6-1 Sound Output 6-1 Sound Display 6-1 Display 1-2, 1-1	3 4 3 8 4 4 4 7 2 2 6 8 3 2 3 1 1 1 0 5 0 0 1 1 2

		Display (settings) 14-3 Display Effects 14-3 Display Saving 14-3 Double Number 1-21, 1-26 Download Dictionary 2-12 POF 7-12 Add Date 7-15 Check Settings 7-12 For All Pictures 7-12 Index Print 7-15 Dual Mode 1-23
		E
		Earpiece 1-2 Earpiece Volume 3-3, 3-16 e-Book Library 10-19 e-Book Viewer 10-8 e-Books (Japanese) 10-8, 10-19 Emergency Calls 3-2 English 14-3 Event Light 14-5 Expenses Memo 9-18 External Device Port 1-2
		F
	Appendix 15	Face Arrange 7-10 Feeling Mail (receiving) 4-12 Feeling Mail (sending) 4-6 Focus (locking) 7-13 Focus Setting 7-13 Font Size 2-2 Format Card 12-6 Free Contents 10-7 Function Control 11-4
		Function Control 11-4 Function Lock
		G
15	Q 5-32	General Notes

Handset Closed	1-2 -19
Handset Code1-	19
Handset mail address Handset Open	4-3 1-2 1-2 1-6 4-5 -15 -23 -37 -38
Household Accounts 9-	
I	
Indicators	7-3 1-9 -13 3-4 0-5 -11 6-5 8-5 1-7 3-2
Internal Antenna	-16

Accessing
K
Kanji Grabber .9-31 Keypad Lock 1-24 Language .14-3 Large Font Menu 2-2
L
Link to Feeling
M
Machi-Uta® 2-5 Mail Groups 4-19 Changing members 4-33 Deleting 4-33 Edit Name 4-33 Main Menu 1-13
Manner mode1-18
Master Reset 14-9 Format Card 12-6 Reset All 14-9 Reset Settings 14-9
Media Player8-2
Playlists8-6, 8-9
Memory All Clear (S! Applications) 8-11 Memory Card 12-5 Format Card 12-6 Opening files 12-6
Memory Card Structure & Contents 15-23

Menu List	15-24	Mail List	4-28
Camera	15-26	Message List	4-13, 4-30
Data Folder	15-28	Message Window	4-13, 4-28
Entertainment	15-25	Retrieving complete S! Mail me	essages
Media	15-26	manually	4-14
Messaging	15-24	Retrieving PC Mail	
Phone	15-28	Save to Data Folder	4-28
S! Appli	15-25	Messages (sorting)	4-17
Settings	15-29	Messaging (→ SMS, S! Mail, P	C Mail)4-2
Tools	15-27	Create/Send Settings	4-11, 4-36
TV	15-28	PC Mail Settings	4-37
Widget	15-28	Receive Settings	4-14, 4-35
Yahoo!	15-25	SMS Settings	4-39
Message List View	4-34	View Settings	4-34
Messages (creating/sending) 4-4, 4-	10, 4-22	Microphone	1-2
Attachments	1-6, 4-26	Minute Minder	3-18
Graphic Mail	4-7	Missed Call Notification	3-14
Inserting signature manually	4-24	Mobile Widget	10-2
Messaging Settings	4-24	Mode Settings	1-26
Preview Message	4-4	Multi Job	1-15
Recipient status	4-23	Music (deleting)	8-9
Recipients (editing)	4-23	Music (downloading)	8-3
Restricting Outgoing Messages	4-11	Music (playing)	8-4, 8-8
Save to Drafts	4-24	My Details	1-24
Send Reservation	4-24	Sending via Bluetooth®	
Sending from Drafts	4-33	Sending via Exchange Profile	13-4
Sending unsent messages	4-33	Sending via Infrared	13-17
Set Auto Play File	4-26	N	
Set Sent Cancel	4-24	14	
Signature	4-24	Notepad	9-24
Speed Dial/Mail	4-23	Edit Text	
Templates	4-9	Change Category	9-38
Using sent messages	4-33		
Messages (deleting) 4-	22, 4-31	0	
Auto Delete 4-	35, 4-36	Offline Mode	1-18
Messages (forwarding) 4-	33, 4-34	Optional Services	
Messages (protecting)		Optional Services (checking st	
Messages (receiving/checking)			
Accessing new mail out of Standby		Р	
DL Size Limit	4-35	Pager Code List	15 10
		rager Code List	10-10

PC (connecting handset) 13-9
PC Mail4-2, 4-20
PC Mail Settings 4-37
PC Mail (sending) 4-22
PC Site Browser 5-5
Phone Book (deleting)2-24
Phone Book (editing)2-23
Phone Book (saving)2-17
Phone Book (using) 2-19
Phone Book search 2-19
Phone Help 1-24
Picture Editor 7-8
PIN
PIN Entry 11-2
PIN Lock 15-2
Playlists 8-6, 8-9
Progressive download 5-4
Q
Quick Operations1-12
Quick Operations1-12
R
R Rakutomo Link3-7, 4-23
R Rakutomo Link
R Rakutomo Link
R Rakutomo Link
Rakutomo Link
R Rakutomo Link
R Rakutomo Link
R Rakutomo Link
R Rakutomo Link 3-7, 4-23 Received Msg. View 4-34 Record Caller Voice 3-17 Reference URLs 15-22 Reject (calls) 3-12, 3-15 Relaxation Time 9-12 Remote Monitor 3-15 Reply 4-13, 4-22, 4-30 Auto Reply 4-30
Rakutomo Link
Rakutomo Link
Rakutomo Link
Rakutomo Link
R Rakutomo Link
Rakutomo Link
R Rakutomo Link
R Rakutomo Link

(<u> </u>	1	

ReviewRSS Feeds	
S	
S! Addressbook Back-up	13-13
Auto Sync Settings	
Sync Log	
S! Applications	
S! Circle Talk10-12,	
Accepting requests	
Initiating	
IP Service Setting	
Registering Members	
S! Contents Store	
S! Friend's Status10-9,	
IP Service Setting	
Opening Member Status	
S! Information Channel (Japanese) 10-6,	
Weather Indicator	
S! Mail	
Attaching Files	
Create Msg. Size4-25	
Feeling Mail	
Graphic Mail	
S! Mail (sending)	
S! Quick News (Japanese)	10-5
Auto Refresh	
Deleting items	
Safety Precautions	
SAR	
Saved Pages5-8	
Scan Card	
Using scan results	
Scan Text	
Using scan results Scanning Receipts	
Schedules (→ Calendar)	
Scratch Pad	
SD Local Contents	
OD LOCAL CONTENIES	12-0

Search 2-1
Secure Remote Lock11-2, 11
Security Codes1-1
Need/UnNeed Setting1-2
Sent Msg. View4-3
Set as Wallpaper4-28, 9-40, 12
Set Date/Time14
Set Key Light14
Set Key Shortcut1-1
Set Quick Reply4-3
Set Sent Cancel4-2
Set Time Zone9-22, 14
Set to Default (S! Applications)8-1
Shortcuts 1-1
Show Secret Data11
Side Key 1
Signature 4-2
Simple Menu 1-1
Simulated Call9-1
Slide W paper2
Small Light1
SMS4
SMS Settings4-3
SMS (sending) 4-1
Snooze9-8, 9
Softkeys 1
Software Update15
Sort Spam Mail4-17, 4-3
Sounds & Alerts2-5, 14-5, 14
Speaker 1
Specifications15-1
Specifications (by function) 15-1
Calling 15-
Camera & Imaging15-2
Connectivity & File Backup15-2
Data Folder15-2
Digital TV 15-2
Entertainment15-2
Getting Started15-
Handy Extras 15-2

Internet 15-20
Media Player15-21
Memory Card15-21
Messaging 15-19
Mobile Widget
Network 15-22
S! Applications
Universal Operations, Etc
Speed Dial/Mail3-7, 4-23
Standby 1-6
Standby Shortcuts1-16
Status Icon List1-7
Status Templates10-11, 10-20, 12-2
Still images (capturing)7-4
Add Frame7-7
Continuous Shoot7-7
Picture Size7-14
Remote Shutter7-13
Scene7-14
Shutter Sound7-13
White Balance7-14
Still images (capturing & sending)7-4
Still images (editing)7-8
Additional editing options7-14
Changing sizes7-9
Composite7-11, 7-15
Face Arrange7-10
Merge Panorama7-11
Stopwatch 9-20
Strap Eyelet1-2
Streaming5-4, 5-13
Sub Display1-2, 1-11, 14-4
Swap Calls3-20
System Graphics14-3
System Sounds14-6
Т
Table of Contentsiii

 Tasks
 9-6

 Deleting Tasks
 9-7

Editing tasks	9-34
Opening Tasks	9-7
Text (editing)	2-11
Text Entry	2-6
Correction Conversion	2-8
Emoticons	
Hiragana	2-7
Hiragana to Katakana/Alphanumeri	С
Conversion	2-10
Input/Conversion	2-21
Inserting line breaks	
Inserting Phone Book entry items	
Inserting spaces	
Katakana	2-8
Mail & Web Extensions	2-9
One-Hiragana Conversion	2-8
Personal Mode	2-7
Pictograms & Symbols	2-9
Reset Log	
Search Word	
Switching Entry Modes	
Undo conversion or recover deleted	l
characters	
Using Character Codes	
Using Pager Code	
Using Wildcard Characters	
When Target Word is Not Listed	
Text Entry Key Assignments	
Time Correction	
Touch-Tone Signal List	
Troubleshooting	
ΓV (watching)	
Channels (saving)	
Data Broadcast (Japanese)	
Help	
Program Info	
TV Listing (Japanese)	
Using wireless Headphones	
TV Link	6-12
ΓV Player	6-12

TV programs (recording/playing) 6 Details	6-13 6-14 6-13 6-13 6-13 6-13 6-13
Timer log records (opening/playing/dele	
TV Alarm	
TV Reserve Prior	6-14
Wakeup TV	9-10
U	
•	
USB Charge1-5	5, 1-25
User Dictionary	
Deleting entries	
USIM PIN (→ PIN)	
Utility Software	
V	
V	
VeilView	1-24
Vibration	
Video (downloading)	
Video (playing) 8	
Video (recording)	
Display Size Microphone	
Record Time/Size	
Video (recording & sending)	
Video Calling	
Remote Monitor	
Video Calls (answering)	
Video Calls (placing)	3-6

Voice Calling	3-3
Voice Calls (answering)	3-3
Voice Calls (placing)	3-3
Voice Calls (placing while abroad)	3-4
Voice Recorder	9-26
Record Time	9-38
Save and Send	9-38
Save Recording to	9-38
Voicemail	
Volume (ringtones)	14-5
W	
Wakeup TV	9-10
Canceling	
Deleting	
Wallpaper	
Slide W paper	
Warranty	
Weather Indicator	
Icon Update	
Manual Update	
Weather	
Weather Indicator List	15-17
Widgets	10-2
World Clock	9-22
Auto World Clock	9-22
Υ	
Yahoo! Keitai	5-3



Q

Objectives	
Accessing Secret Files/Entries	
Data Folder12	2-2
Messaging folders 4-	
Phone Book2-	
Schedules/tasks	
Accessing the Internet	
From message text 4-	29
From scan results 9-39, 9-	
Media Player	
PC Site Browser	
RSS Feeds	
Yahoo! Keitai5	
Browsing/Viewing	
Blogs10-	14
e-Books 10)-8
PC Site Browser	
S! Information Channel 10)-6
S! Quick News 10)-5
Yahoo! Keitai	5-3
Calculating	
Calculator 9-	
Expenses Memo9-	
Household Accounts9-	13
Canceling/Removing	
Alarm	
Answer Phone	
Call Forwarding3-	
Customized Screen2-	
Download Dictionary2-	
Function Lock11	
Hour Minder9-	
Keypad Lock1-	
Large Font Menu2	
Manner mode1-	
Offline Mode1-	
S! Information Channel10	
Secret folders4-32, 12	
Simple Menu1-	17

	Speed Dial entries	3-7, 4-2
	Voicemail	3-1
С	hanging	
	Font Size	2-
	Font Weight	2-
	Handset Code	1-1
	Handset mail address	4-
	PIN	11-
С	hanging Ringtones	
	Phone Book	
	Ringtone/videos	
	Via Data Folder	12-
C	omposing/Sending Messages	
	ASCII Art entries	
	Feeling Mail	
	From Call Log records	
	From Internet pages	
	From message text	
	From Phone Book	
	From Rakutomo Link	
	From received messages	
	From scan results9-	
	From Scratch Pad	
	From sent messages	4-3
	Graphic Mail	
	PC Mail	
	Quick Phrase	
	S! Mail	
	SMS	
_	Speed Dial/Mail	4-2
C	opying	
	Calculation results	
	Data Folder files	
	From text entry window	2-1
	Scan results9-40, 9-	
	Text (e-Books)	
	Text (Internet pages)	
	Text (Messaging)	
	Text (S! Information Channel pages)	10-1

Downloading	
Content	
Customized Screen	
Dictionaries	2-12
e-Books	10-8
Free content	10-7
Music	8-3
S! Applications	
Video	
Widgets	10-2
Exchanging Files	
Bluetooth®	13-5
Card Reader Mode	
Exchange Profile	
Infrared	
Hiding Files/Entries	
Data Folder	12-4
Messaging folders	
Phone Book	
Schedules/tasks9	33 0-34
	-02, 9-04
Inserting/Removing Battery	
Inserting/Removing Battery	15-4
Inserting/Removing	15-4
Inserting/Removing Battery Memory Card	15-4
Inserting/Removing Battery Memory Card USIM Card Locking/Restricting	15-4 12-5 15-3
Inserting/Removing Battery Memory Card. USIM Card. Locking/Restricting Application Lock.	15-4 12-5 15-3
Inserting/Removing Battery Memory Card USIM Card Locking/Restricting Application Lock Call Log	15-4 12-5 15-3 11-3
Inserting/Removing Battery Memory Card USIM Card Locking/Restricting Application Lock Call Log Function Lock	15-4 12-5 15-3 11-3 11-3
Inserting/Removing Battery Memory Card USIM Card Locking/Restricting Application Lock Call Log	15-4 12-5 15-3 11-3 11-2 -20, 3-21
Inserting/Removing Battery Memory Card	15-4 12-5 15-3 11-3 11-2 -20, 3-21 1-24
Inserting/Removing Battery Memory Card USIM Card Locking/Restricting Application Lock Call Log Function Lock Incoming/outgoing calls3-11, 3 Keypad Lock Mail records	15-4 12-5 15-3 11-3 11-2 -20, 3-21 1-24 11-3
Inserting/Removing Battery Memory Card	15-4 12-5 15-3 11-3 11-2 -20, 3-21 1-24 11-3
Inserting/Removing Battery Memory Card USIM Card Locking/Restricting Application Lock Call Log Function Lock Incoming/outgoing calls Mail records PIN Entry	15-4 12-5 15-3 11-3 11-2 -20, 3-21 1-24 11-3
Inserting/Removing Battery Memory Card	15-4 12-5 11-3 11-3 11-2 -20, 3-21 11-24 11-2 9-2, 9-34
Inserting/Removing Battery Memory Card USIM Card Locking/Restricting Application Lock. Call Log Function Lock lncoming/outgoing calls3-11, 3 Keypad Lock Mail records PIN Entry. Managing Schedules Calendar	15-4 12-5 11-3 11-3 11-2 -20, 3-21 11-24 11-2 9-2, 9-34
Inserting/Removing Battery Memory Card USIM Card Locking/Restricting Application Lock Call Log Function Lock Incoming/outgoing calls3-11, 3 Keypad Lock Mail records PIN Entry Managing Schedules Calendar Tasks	15-4 12-5 15-3 11-3 11-2 -20, 3-21 1-24 11-3 11-2 9-2, 9-34
Inserting/Removing Battery Memory Card. USIM Card. Locking/Restricting Application Lock Call Log. Function Lock Incoming/outgoing calls3-11, 3 Keypad Lock Mail records PIN Entry. Managing Schedules Calendar Tasks Measuring Time	15-4 12-5 15-3 11-3 11-2 -20, 3-21 1-24 11-2 11-2 11-2 19-2, 9-34
Inserting/Removing Battery Memory Card	15-4 12-5 15-3 11-3 11-2 -20, 3-21 1-24 11-2 11-2 11-2 19-2, 9-34 9-6, 9-35

Via Exchange Profile13-4
Via Infrared13-17
Placing Calls
By entering phone numbers3-3
From Call Log records3-18
From Internet pages5-11
From message text4-29
From Phone Book2-19
From scan results 9-39, 9-42
International calls3-3
Rakutomo Link3-8
Speed Dial3-7
Video Calls3-6
While abroad3-4
Playing
Answer Phone messages/caller voice3-5
Files (Barcode Reader)9-40
Music8-4
Recorded TV programs6-8
Recorded TV programs from Timer log6-14
Split files (TV)6-13
Streams 5-4, 5-13
Video8-5
Voice files9-26
Voicemail messages3-14
Rejecting
Calls from public phones3-12
Calls from specified numbers3-12
Calls from unsaved numbers3-12
Incoming calls3-15
Withheld Caller ID3-12
Resetting/Formatting
All settings14-9
Handset14-9
Memory Card12-6
Saving
Backup13-11
Captured still images 7-4, 7-7
Draft messages4-24

Via Bluetooth®......13-18

	Edited still images	
	Files (Internet)	5-11
	Files (S! Information Channel pages)	
	Graphic Mail templates	4-7
	Mail attachments	
	Notepad entries	
	Phone Book entries	
	Recorded video	
	ving Phone Book Entries	
	Add New Entry	2-17
	Data Folder files	
	During a call	
	From Call Log records	
	From Internet pages	
	From message text	
	From received messages	
	From scan results9-39	
	anning	, -
	Business cards	9-29
	Kanji	9-31
	QR Codes	9-27
	Receipts	
	Text	
36	earching	
	Messages2-15	, 4-16
	Music to download	8-3
	Music to play	
	Notepad entries	
	Phone Book	
	Text (Internet pages)	5-11
	Video to download	8-3
	Video to play	8-5
	Web Search	2-15
36	ending via Mail	
	Data Folder files 4-6	, 12-3
	Notepad entries	9-38
	QR Codes	9-28
	Scan results 9-40	, 9-42
	Still images	
	URLs 5-11	, 5-13

	Video	7-5
	Voice files	9-38
s	etting Wallpaper	
	From attached files	4-28
	From scan results	
	From Sound/Display menu	
	Via Data Folder	
s	howing in Standby	
	Clock/Calendar	14-4
	Mobile Widgets	
	S! Applications	
	Standby Shortcuts	
	Wallpaper	
	World Clock	
U	sing as Alarm Clock	
	Alarms	9-8
	Hour Minder	9-23
	Wakeup TV	9-10
U	sing Away from Home	
	Alarms	9-8
	Camera	7-2
	Hour Minder	9-23
	Scratch Pad	2-16
	Search	
	Voice Recorder	9-26



Warranty & Service

Warranty

Warranty is provided when you purchase handset.

- Check the name of distributor and date of purchase.
- Read contents and keep in a safe place.
- The warranty term is described in the warranty.

■ After-Sales Services

See **P.15-6** "Troubleshooting" before contacting SoftBank Mobile for service or repairs.

If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (P.15-39) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, possible repairs are performed upon request at subscriber expense.

For other services, contact the distributor, the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (P.15-39).

Replacement parts are available for 6 years after termination of production.

- SoftBank Mobile is not liable for any damages resulting from use of this product.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of handset data. Keep a copy of Phone Book entries, etc. in a separate place.
- Disassembling or modifying handset may violate the Radio Law.
 Modified handset will not be repaired.



Customer Service

For information about SoftBank handsets or services, call General Information. For repairs, call Customer Assistance.

■ SoftBank Mobile Customer Center

General Information

From a SoftBank handset, dial toll free at 157 From a landline/IP phone, dial toll free at 0800-919-0157

Customer Assistance

From a SoftBank handset, dial toll free at 113 From a landline/IP phone, dial toll free at 0800-919-0113

If you cannot reach a toll free number, use the number (charges apply) below for your service area:

Hokkaido Area Tohoku Area Hokuriku Area Kanto, Koshinetsu Area	022-380-4380	Tokai Area	052-388-2002
Kansai Area	06-7669-0180	Chugoku, Shikoku Area Kyushu, Okinawa Area	092-687-0010

■ SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491 (toll free from SoftBank handsets) If handset is lost/stolen, call this number immediately (international charges apply)

SoftBank 001SH User Guide

December 2010, First Edition **SOFTBANK MOBILE Corp.**

For additional information, please visit a SoftBank Shop.

Model: SoftBank 001SH

Manufacturer: SHARP CORPORATION



Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- Handsets, batteries and chargers submitted for recycling cannot be returned.
- Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.

