Thank you for purchasing SoftBank 002SH.

## **Notes**

- •Most operation descriptions are based on default settings with clamshell open (P.1-1) in Standby (P.1-6).
- Operations and results may differ by handset status.
- •Sample screenshots, etc. are provided for reference only.
- Actual handset windows, menus, etc. may differ in appearance.
- "(Japanese)" appears next to functions or applications which require Japanese ability to use as intended.
- •In this guide and on handset, "abroad" means "outside Japan" with regard to handset/service usage.
- Accessible SoftBank Mobile services may vary by service area, subscription, etc.


\*With the exception that Handset Code and Administrator Code are set.

Guide Usage Notesi Table of Contentsii
1 Getting Started
Handset Parts1-1
Battery & USIM Card1-3
Charging Battery1-5
Power On/Off 1-6
Display & Indicators 1-7
Sub Display 1-11
Touch Panel 1-12
Menu Operations 1-14
Menu List 1-17
Security Codes1-19
Mobile Manners1-21
My Details & Basic Settings 1-22
World Clock 1-23
Memory Card 1-24
2 Universal Operations, Etc.
Text Entry2-1
Fonts 2-7
Wallpaper2-8
Sounds & Alerts2-9
3 Calling
Emergency Calls 3-1
Voice Calling3-2
Video Calling 3-4
Optional Services 3-5
Phone Book 3-7
4 Messaging
Customizing Handset Address 4-1

Sending Messages4-2
Customizing S! Mail Retrieval 4-5
Handling Messages 4-6
PC Mail4-8
5 Internet
Internet Services 5-1
Yahoo! Keitai 5-2
PC Sites 5-3
Browsing5-4
6 Connectivity & File Backup
Wi-Fi 6-1
Infrared 6-6
Bluetooth® 6-10
PC Connection 6-14
Backup 6-15
7 Camera
Getting Started 7-1
Photo Camera7-5
Video Camera7-15
Album 7-22
8 Additional Functions
Digital TV 8-1
Videos/Music 8-7
Media Player 8-8
Mobile Widget 8-13
Standby Shortcuts 8-15
<u>Icon View 8-16</u>
9 Customer Support
Customer Service 9-1
Software Update9-2

## 10 Safety Precautions

## **Parts & Functions**

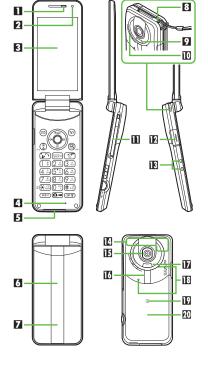

- Earpiece
- A Light Sensor
- Display
- Microphone
- **E** External Device Port (with Port Cover)
- **5** Sub Display
- **7** Illumination Light
- Strap Eyelet
- 1 Infrared Port
- Speaker
- TV Antenna
- IF HDMI Port (with Port Cover)
- E Charging Terminals
- III Internal Antenna Location
- E Camera (lens cover)
- Mobile Light
- E Recorder Microphone

- Do not cover or place stickers, etc. over Light Sensor or Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

## **Display Positions**

## Clamshell Closed



Keep handset closed when not in use.

## Clamshell Open



Open handset to place or answer calls, enter text, etc.

## Viewer Position


Handset is closed with Display outward.



Do not carry handset with Display in Viewer position. Display may be damaged.

#### **Handset Keys**

- Keys are indicated in this guide as shown.
- Change functions with \* via Set Key Shortcut as needed.

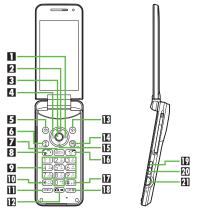

- Multi Selector (right) ⊙
  Open Icon View. Long Press to access last opened Icon View page.
- Multi Selector (up) Open Mobile Widget window. Long Press to open PC Site Browser menu.
- Open Main Menu.

- ☑ Multi Selector (left) ⑤
  Open Call Log (All). Long Press to activate/cancel Bluetooth®\*.
- ☐ Mail Key ②

  Open Messaging menu. Long Press to open S! Mail Composition window.

  .
- 5 Shortcuts & Spinguru Menu Key 
  Open Shortcuts menu. Long Press to open Spinguru Menu.
- Clear/Back Key
  Play Answer Phone messages. Long
  Press to activate/cancel Answer Phone.
- Start & Rakutomo Link Key
  Open Rakutomo Link window. Long Press
  to open Double Number Mode menu.
- Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- Enter ¼, +, P, ? and -. Long Press to activate/cancel Wi-Fi.
- Dictionary Key (SEE)

  Open Dictionary. Long Press to activate/
  cancel VeilView.
- Activate mobile camera.
- IE Yahoo! Keitai Key 

  Open Yahoo! Keitai portal. Long Press to open Bookmarks list.

  ...

  Open Bookmarks list.

  Open Bookmarks
- TV & HDMI Key (S)
  Activate TV. Long Press to start HDMI connection.

- Power On/Off & End Key S
  Long Press to power off.
- # Key #:3 Enter #. Long Press to activate/cancel Manner mode.
- Multi Job & Manner Key 
   Select handset mode. Long Press to activate/cancel Manner mode.
- Side Keys
- Volume Up Key Long Press to activate/cancel Manner mode.
- ☑ Volume Down Key ☐ Open: Show/hide Softkeys.
- Viewer: Show/hide Softkeys.

  Newpad Lock & Shutter Key
- Closed: Toggle Clock view. Long Press to illuminate Mobile Light.
- **Open:** Long Press to activate video camera. **Viewer:** Activate/cancel Keypad Lock. Long Press to activate video camera.

## Multi Selector & Side Keys

 In this guide, Multi Selector and Side Key operations are indicated as follows:


Press ③ or ②	<b>③</b>
Press ⊙ or ⊙	••
Press ③, ℚ, ⊙ or ⊙	<b>:</b>
Press or D	<b>4</b>   <b>&gt;</b>

## **Battery & USIM Card Installation**


- Do not apply excessive force to insert/remove USIM Card.
- USIM Card must be inserted to use this handset.

## Inserting



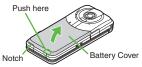

- Use Notch to open Cover. Push Cover up as shown, then lift to remove it.
- Remove Tray

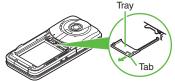

- Use Tab to pull Tray straight out.
- Place USIM Card on Tray with IC chip down




## Insert Tray



- Position and push in Tray fully.
- Insert battery



- With logo side up, align battery terminals with contact pins.
- Close Battery Cover

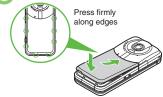

 Fit cover top into slot, then press down firmly.

#### **USIM Tray**

- Take care not to lose or damage removed Tray.
- Always insert USIM Card with Tray to prevent card damage upon removal.

## Removing

Power off first.



Remove Battery Cover



Remove battery



- Lift battery as shown.
- Do not short-circuit removed battery.
- Remove Tray
- Remove USIM Card from Tray
  - Replace Tray, reinstall battery and close Battery Cover.
  - Take care not to lose removed USIM Card.

## After Repairs, USIM Card Replacement or Handset Upgrade/Replacement

 Some downloaded files may be inaccessible. In addition, S! Applications and BookSurfing<sup>®</sup> may be disabled after USIM Card replacement.

## **About Battery**

- Charge battery at least once every six months; an uncharged battery may become unusable or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with a dry cotton swab.
- Do not apply excessive force to Battery Cover; damage may result.
- Close Battery Cover firmly. Debris trapped between Cover and base may expose handset to liquid/dust.
- To maintain water/dust resistance, close Battery Cover properly.
- Battery is not waterproofed or dustproofed.

#### Lithium-ion Battery

 This product requires a lithium-ion battery.
 Lithium-ion batteries are a recyclable resource.



- To recycle a used Li-ion00 lithium-ion battery, take it to any shop displaying the symbol shown above.
- To avoid fire or electric shock, do not short-circuit or disassemble battery.

## **About USIM Card**

USIM Card is an IC card containing customer and authentication information, including the handset number. Save Phone Book entries on USIM Card Phone Book to use them on other SoftBank handsets. Depending on the USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

#### Precautions

- Do not insert USIM Card into any other IC card device. SoftBank Mobile is not liable for resulting damages.
- Keep the USIM Card IC chip clean; malfunction may result. Clean with soft dry cloth.
- Do not attach labels to USIM Card. Malfunction may result.

#### Important

- USIM Card is the property of SoftBank Mobile.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to SoftBank Mobile upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Back up USIM Card files. SoftBank Mobile is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P.9-1).

## **USIM PIN**

Four- to eight-digit code (*9999* by default); activate PIN Entry (in Locks) to restrict handset use.

#### **PIN Lock**

 Entering incorrect PIN three consecutive times activates PIN Lock, limiting handset use.

#### **Canceling PIN Lock**

 Contact SoftBank Mobile Customer Center, General Information (P.9-1) for your Personal Unblocking Key (PUK Code) and follow these steps:

Enter PUK Code → ● → Enter new PIN → ● → Re-enter new PIN → ●

■ Write down PUK code.

#### **PUK Lock**

 Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. For recovery, USIM Card must be reissued at a SoftBank Shop (fees apply).

## **Charging Battery**

Battery must be inserted in handset to charge it.

#### **Charging Battery Outside Japan**

 SoftBank Mobile is not liable for problems resulting from charging battery abroad.

## **Desktop Holder**

Use specified AC Charger **ZTDAA1** (sold separately) together with Desktop Holder.


- In this guide, ZTDAA1 is referred to as "AC Charger."
- AC Charger and Desktop Holder are not waterproofed or dustproofed. Do not charge battery while handset is wet.
- Handset and AC Charger may warm while charging.

#### Important AC Charger Usage Note

 Fold back blades after charging. Do not pull, bend or twist the cord.

## Important Desktop Holder Usage Notes

- Battery will charge regardless of Display position. However, do not attempt to open handset.
- Do not subject to force/pressure.

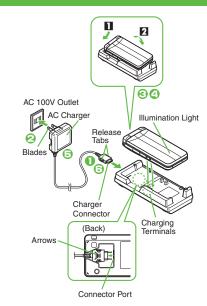

# Insert Charger Connector into Desktop Holder

 With arrows up, insert connector until it clicks. Extend blades and plug AC Charger into AC outlet



- Place handset onto Desktop Holder
  - Fit tabs into slots as shown in and push handset as indicated in until it clicks into place (resting flat).
  - Illumination Light glows red while charging.
  - Illumination Light goes out when battery is full.
- Disconnect handset from Desktop Holder
- Unplug AC Charger
- Disconnect Charger Connector from Desktop Holder
  - Squeeze Charger Connector release tabs and pull straight out to remove.

#### When Illumination Light Flashes

 Battery is unchargeable; may be defective or simply at the end of its life; replace it.

## **Handset Power On/Off**

#### **Power On**

Follow these steps when powering on 002SH for the first time:



 Waterproofing/dustproofing guidance appears following Power On Graphic; follow the steps below.




Select option 


Guide descriptions are based on Standard Menu



 After Change Menu guidance, My Details setup starts.

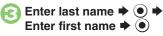

 Change Menu display option confirmation appears.

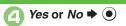



Standby

 Choose No to enter Standby immediately after powering on.

## When USIM Card is Not Installed

 Insert USIM Card appears; insert the card to use handset.

## Retrieving Network Information

Handset initiates Network Information retrieval when  $\textcircled{\bullet}$ ,  $\textcircled{\circ}$ ,  $\textcircled{\circ}$  or  $\textcircled{\circ}$  is pressed for the first time.



Follow these steps to retrieve Network Information to use Network-related services and TV; retrieval automatically sets Clock:



29

 When subscribed to Keitai Wi-Fi, Wi-Fi Spot setup menu opens; follow onscreen instructions. To skip setup, press

## Power Off



 After Power Off Graphic, handset shuts down.

## **Display**


## Standby



Hereafter, most screenshots omit Mobile Widgets and other icons.

## Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)

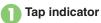



- Active indicators are enlarged; description for selected indicator appears.
- After ①, Long Touch other indicators to view their descriptions.
- After ①, tap indicator to open menu/ window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators

## Information

Information window opens at the bottom for Missed Calls, new mail, etc.



Information Window

Information label (e.g., *Message*, etc.) and count appear in Information window. Select an item and press to open it.



## Softkeys

Functions/operations assigned to ⓐ, • and • appear at the bottom of Display in portrait orientation with clamshell open.



## Using Touch Panel

In clamshell open (landscape) or Viewer position, Softkeys (shown right) appear. Tap a Softkey to execute assigned function/ operation. Some key assignments may vary with Display position/window content.

#### Portrait Orientation



## ■ Landscape Orientation



## **Display Saving**

Display goes dark after Display Saving time elapses. Press any key (except ③ during a call) to activate it.

#### **Backlight**

- Backlight turns off after Time Out time elapses. Press ( ) ( ) to illuminate it (key press may affect active function).
- Display goes dark during a call.
   (Backlight does not turn off first.)

## **Display Rotation**

Sensor detects handset movement. In Viewer position, Display orientation changes with handset orientation. Display orientation for clamshell open is fixed by default; set to rotate as needed.



Landscape Orientation




Portrait Orientation

## **Indicators**

## **Display Indicators**


When using Double Number in Dual Mode, line type appears bottom right of some indicators.

#### ■ Basic Status

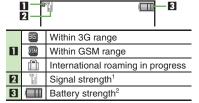

<sup>&</sup>lt;sup>1</sup>The more bars the better.

#### ■ Function Status

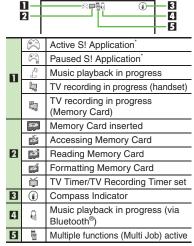

<sup>\*</sup>Appears gold for some S! Applications.

#### ■ Notifications


	1		
П	$\bowtie$	Unread mail	
•••	b	Unread Delivery Report	
2	DN.	Answer Phone active & message recorded	
		Answer Phone canceled & message recorded	
3	1416	New Voicemail	
4	<b></b>	Missed Call or new mail on idle line	
5		S! Appli Notification	
6	DRM +3)	Contents Key received	
	Ø,	Unread S! Information Channel info	
7	Ê	Software Update result	
	آه)	Unread S! Quick News info	
8	Ē	Unread S! Friend's Status notification	
-	Marni		

## Warnings

i	2+	
П	$\searrow$	Mail memory low
2	×	Message delivery failure
3	<b>%</b>	Memory Card unusable/misinserted

<sup>&</sup>lt;sup>2</sup>Flashes while charging; battery strength % (appears when Display activates, etc.) is an approximation.


#### **■** Transmissions

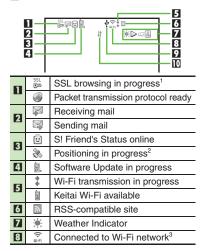

	ψ	USB Cable connected
	<b>.</b>	USB transmission in progress
	Į†	Infrared transmission in progress
		Infrared file transfer in progress
	8	Bluetooth® transmission ready
9	8	Bluetooth® transmission in progress (® appears for multiple connections)
	£.	Bluetooth® talk in progress
	Œ,	IC Transmission in progress
	0	IC Transmission in progress S! Addressbook Back-up transmission in progress
		S! Addressbook Back-up
	0	S! Addressbook Back-up transmission in progress
10	0	S! Addressbook Back-up transmission in progress PC Site Browser in use

<sup>&</sup>lt;sup>1</sup>Hidden while Mobile Widget is in use. <sup>2</sup>Flashes while positioning.

## Settings

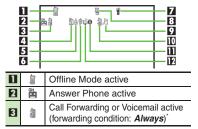

	An.	O
4	1	Schedule/Task (Alarm set)
	1	Schedule/Task (Alarm unset)
5	•	Alarm set
6	<b>(</b>	Hour Minder active
	0	Manner mode active
7	€	Drive mode active
4	•	Original mode active
	N	VeilView active
8	<b>a</b>	Keypad Lock active
0	80	IC Card Lock active
	N	Ringtone (Silent)
9	4	Ringtone (Increasing Volume)
	<	Vibration for incoming Voice/
		Video Calls active
10	48	Auto Answer or Remote Monitor
Ш	Ş	active
m	8	Show Secret Data active
ш		Function Lock (Once) active
12	ğ	Wakeup TV set

Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

<sup>&</sup>lt;sup>3</sup>The more blue bars the stronger the connection.

## **Sub Display**

View date/time and the following indicators with clamshell closed.

## **Activating Backlight**



## ■ Basic Status



1	Signal strength <sup>1</sup>
2	Battery strength <sup>2</sup>

<sup>&</sup>lt;sup>1</sup>The more bars the better.

## ■ Notifications

lincations
Missed Calls
Answer Phone message recorded
Missed Call Notification
New Voicemail
Unread mail
Unread Delivery Report
Contents Key received
Unread S! Information Channel info
Weather Indicator update
Weather Indicator
Location Info request
Pedometer target achieved
Videos/Music menu update
S! Appli Notification
Unread S! Friend's Status notification
Auto Backup complete
Auto Backup canceled

## ■ Warnings

<u></u> 53	Message delivery failure
<b>*</b> ×	S! Information Channel info reception
Α	failure
100	IP Service connection failure
<b>⊕</b> ×	Weather Indicator update failure
声	Public wireless LAN auto authentication
<u> </u>	failure
(Z-E)	Wi-Fi disabled
<b>3</b> (×	Auto Backup failure
	·

	•
■ Ha	ndset Status
<u></u>	Alarm
1	Schedule Alarm
Ž	Task Alarm
¥	TV Alarm (watch)
20	TV Alarm (record)

<sup>&</sup>lt;sup>2</sup>Flashes while charging; battery strength % (appears briefly depending on setting) is an approximation.

## **Using Touch Panel**

Touch Display to select menu items, open functions, scroll pages, etc. Available in clamshell open or Viewer position (regardless of orientation).

## **Basic Operations**





Tap item to open corresponding function; execute Softkey functions/operations.

## ■ Double Tap

Tap Display twice in rapid succession (within approximately 0.6 seconds).

## Long Touch



Touch item for 1+ seconds to execute corresponding function/operation.

## Drag




Touch and drag to move item or scribble/ sketch; release when complete.

## Swipe



Swipe Display to scroll.

## Spread & Pinch

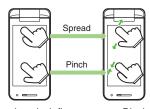

Spread or pinch fingers across Display to enlarge or reduce images, etc.

## **Operational Examples**

## **Selection & Execution**

Tap item to open or execute corresponding function/operation.



Tap Data Folder

The result is the same as selecting an item with \$ and pressing  $\textcircled{\bullet}$ .

## ■ Two Taps

When corresponding Options menu is available, etc., tapping item may only select (highlight) it; tap the item again to execute function/operation.



Tap Music twice



Music folder opens

## Screen Scroll

To see items outside Display area, drag or swipe in opposite direction.



Swipe right



Left portion appears

## Enlarge & Reduce

Spread or pinch to enlarge or reduce images, etc.





Enlarged

- Double-tapping images, etc. may also enlarge/reduce them.
- On Internet page or before saving captured image, Long Touch area/portion to enlarge it.

## Open Menus


Long Touch Display to open menu.




## **Important Touch Panel Usage Notes**


- Touch Panel may not respond in these situations:
  - Use with gloves/long fingernails
  - Use of pens, pencils or sharp objects
- Use with objects on/against Display
- When Display is wet
- To prevent malfunctions, do not:
  - Touch Display with wet fingers
  - Use if Display is wet
  - Subject Display to force/pressure
  - Place labels or stickers over Display
- Calibrate Touch Panel (P.1-16) to improve response.

## Main Menu

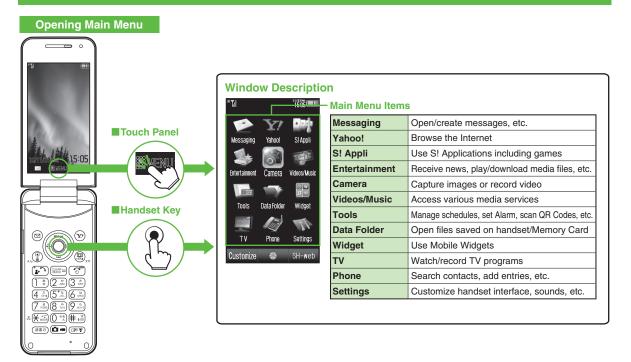

Follow these steps to open *World Clock* via handset keys or Touch Panel: (Touch Panel navigation screenshots are based on Viewer position.)

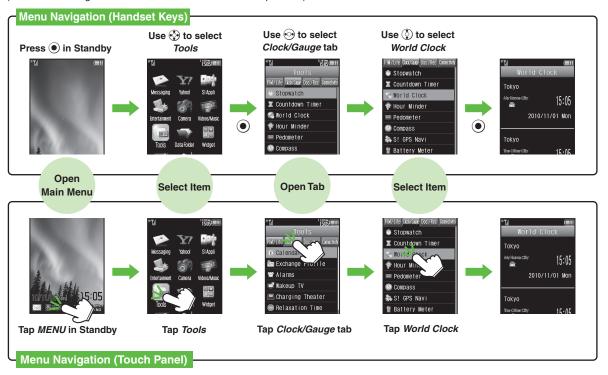

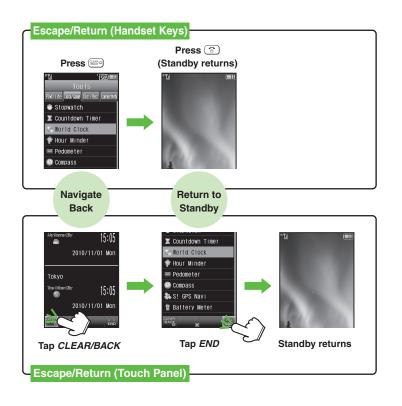

## **Calibrating Touch Panel**

Calibrate Touch Panel to improve response. Hold handset normally during calibration.

- **Settings Settings**
- Touch Panel → ●
- Correct Touch Panel → ●



- Yes →
  - Follow onscreen instructions.

## **Undo Calibration**

 If calibration does not improve response, follow these steps to restore default setting:
 After (2), (with a limit of the step in the ste

## Menu List

## Messaging

Received Msg.
Create Message
Retrieve New Msg.
Drafts
Templates
Sent Messages
Unsent Messages
Chat Folder
Server Mail Box
Create New SMS
Settings
Memory Status

#### Yahoo!

Yahoo! Keitai
Menu List
Bookmarks
Saved Pages
Web Search
Enter URL
History
PC Site Browser
Direct Browser
Browser Settings

## S! Appli

S! Appli Library
Osalfu-Keitai
Settings
Information

## Entertainment

S! Information Channel/Weather
S! Quick News
Free Contents
S! Contents Store
Media Player
S! Friend's Status
S! Circle Talk
Blog Tool
Digital Media Viewer
BookSurfing
e-Book Viewer

#### Camera

Easy Auto Camera
Pro Auto Camera
Quick Camera
Rapid Shooting Camera
Best Select Photo
Fish-eye Camera
Miniaturize Camera
HD Video Camera
Pro Auto Video Camera

Golf Swing Video Camera	
Album	٦
Scan Receipt	٦
Barcode Reader	٦
Scan Card	٦
Kanji/English Grabber	٦
Review	٦
Set Camera Key	٦

## Videos/Music

Videos/Music

## **Tools**

## ■ PIM/Life

- I IIVI/ LITE	
Calendar	
Exchange Profile	
Alarms	
Wakeup TV	
Charging Theater	
Relaxation Time	
Tasks	
Household Accounts	
Calculator	
Expenses Memo	
Osaifu-Keitai	
Simulated Call	

## ■ Clock/Gauge

Stopwatch
Countdown Timer
World Clock
Hour Minder
Pedometer
Compass
S! GPS Navi
Battery Meter

#### Doc./Rec.

Dictionary
Search
Document Viewer
Notepad
Scratch Pad
ASCII Art
Voice Recorder
Barcode/Scan
Phone Help

## ■ Connectivity

Wi-Fi
Bluetooth
Infrared
IC Transmission
HDMI Connection
USB Mode
USB Charge
Memory Card
Backup/Restore

## Data Folder

Pictures
DCIM
Ring Songs-Tones
S! Appli
Widget
Music
Videos
Lifestyle-Appli
Books
Customized Screen
Status Templates
Flash®
Other Documents
Memory Status

## Widget

Widget Store	
Widget Contents	
Settings	

## TV

Digital TV	
TV Player	
TV-Image Folder	
TV Link	
TV Listing	
Reservation List	
HDMI Connection	
Recorder Contents	
Settings	

## Phone

Phone Book
Add New Entry
Information
Call Log
Play Messages
Play Voicemail
S! Addressbook Back-up
My Details
Set Category
Mail Groups
Rakutomo Link
Speed Dial/Mail
Touch-Tone Signal List
Settings/Manage

## Settings

## ■ Sound/Display

Mode Settings	
Display	
Customized Screen	
Sounds & Alerts	
Date & Time	
言語選択 (Language)	
Ringer Output	
Earpiece Volume	
Change Menu	_

## ■ Phone/ ₽

User Dictionary
Set Key Shortcut
Viewer Position
Motion Control
Touch Panel
Set Key Light
Double Number
Videos/Music Menu Updates
Memory Card
Backup/Restore
Locks
Software Update
Master Reset

## ■ Call

■ Call
Call Time/Data Counter
Answer Phone
Voicemail/Call Forwarding
Video Call
Caller ID
out Missed Calls
Int'l Calling
Call Barring
Auto Answer
Call Waiting

## ■ Network

ı	Select Network		
	Select Service		
	Re-search Signal		
	Offline Mode		
	Retrieve NW Info		
	Network Info		
	Wi-Fi		
ı	External Device		

## **Security Codes**

These codes are required for handset use. (Set Handset Code and Administrator Code beforehand.)

- Guide descriptions are based on the assumption that Handset Code and Administrator Code are set.
- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

Handset Code*	Use or change some functions
Administrator Code	Required for Reset Settings, Reset All, Direct Browser Lock, Proxy Setting, etc.
Center Access Code (Network Password)	Four-digit code selected at contract; change service options, access Optional Services via landlines, or set call restrictions

<sup>\*</sup>Set/change on handset.

#### If Security Code is Unset


 Code setup message/window appears whenever Security Code is required.

#### **Incorrect Code Entry**

- Message appears for incorrect code entries; retry.
- Incoming/outgoing call restriction settings will be locked if incorrect code is entered three times consecutively during the setting. To resolve, Center Access Code (Network Password) must be changed.
- If you have previously changed Network Password on a SoftBank handset, enter the latest code.

## **Saving Handset Code**

Enter four to eight digits.

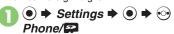





Locks Menu

- 🔁 Handset Code Settings 🕈 💿
  - Save Handset Code ▶ 💿
- 🚍 Enter Handset Code 🕈 💿
- 🕞 Re-enter Handset Code 🕈 💿

## **Changing Handset Code**

- After ②, enter current Handset Code ▶
- → Re-enter new Handset Code → ●

## **Saving Administrator Code**

Enter four to eight digits.

- In Locks menu, Administrator Setting → ●
- Register Administrator Code •
- Enter Administrator Code
- Re-enter Administrator Code → ●

#### **Changing Administrator Code**

After @, enter current Administrator Code

- **→** Enter new Administrator Code
- **→** Re-enter new Administrator Code
- **→ (**

## **Need/UnNeed Setting**

For enhanced security, set Need/UnNeed Setting to *Need*; Handset Code is now required to delete all files/entries, etc.

- In Locks menu, *Handset Code Settings* **→** ●
- Need/UnNeed Setting → ●
- Need → → Enter Handset Code → ●

## Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundinas.

- Power it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

## Manner Mode

Mutes most handset function sounds.







Manner mode is set

#### When Manner Mode is Active

- Ringtones and other sounds are muted.
- 002SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.
- To unmute Speaker temporarily while playing music, etc., follow these steps: During playback, (⁵) → (•) → Yes or No → ● Adjust volume **Canceling Manner Mode**

#### (Long)

#### Offline Mode

Temporarily suspends all transmissions.















Offline Mode is set.

**Canceling Offline Mode** In ⓒ, Off ▶ ⑥

## My Details & Basic Settings

## **Handset Number & Address**





 Handset phone number, mail address (unsaved by default) and the name entered at initial setup appear.

## **Editing My Details**

After  $\bigcirc$ ,  $\bigcirc$  (select tab)  $\Rightarrow$  Select item  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Select item  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Edit  $\Rightarrow$   $\bigcirc$ 

#### **Date & Time**

- Settings → In Sound/Display menu, Date & Time → ●
- Set Date/Time → ●
- Enter the year → Enter the month → Enter the day → Enter the time →
  - If a confirmation appears, choose
     Yes and press .

## Language

- ① *Settings* ● In Sound/Display menu, *Language* or *言語選択* ●
- English or 日本語 → ●

## **Opening World Clock**

## **Auto World Clock**

Powering on outside Japan automatically sets World Clock; the local time for your current location appears in Standby. Upon returning to Japan, original World Clock setting and Clock view will return.

- Disabling Auto World Clock
- Settings → In Sound/Display menu, Date & Time → ●
- Auto World Clock ▶ ●
- 🕝 Disabled 🕈 💿

## **Setting World Clock Manually**





20



Set Time Zone Window

## Select area → ●



# Advancing One Hour (Daylight Saving) [Set Time Zone Window] To cancel, press Adding Custom Time Zone [Set Time Zone Window] Fenter City name ↑ ↑ ↑ ↑ → ↑ ↑

# Opening World Clock in Standby Manually

Enter time difference 

◆ 

●

- Settings → In Sound/Display menu,
- Standby Display ⇒ ●
- Clock/Calendar 

   ●
- World Clock (L), etc. ⇒ ●
- 🕞 💿 🕈 Standby returns

## **Memory Card Installation**

Use microSD/microSDHC Memory Card (hereafter "Memory Card") to save and organize files for use on 002SH.

If inserted, captured images, downloads and other files save to Memory Card. (My Pictograms and Graphic Mail templates save to handset.)

#### **Important Memory Card Usage Notes**


- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never power off or remove battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

## Inserting & Removing

Power off first.

Remove battery (P.1-3)

Insert card

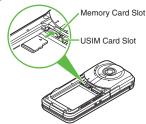

- With terminal side down, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.

Insert battery, then close Battery Cover (P.1-3)



#### Precaution

 Do not insert Memory Card into USIM Card Slot.

## If Appears after Power On

 Memory Card may not be inserted properly; reinsert the card.

#### Removing Memory Card


 Gently push in card and release it; card pops out. Pull card straight out gently.



## **Formatting Memory Card**

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.



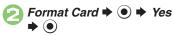

 Offline Mode is set. Handset transmissions are suspended until format is complete.




#### Precaution

• Never power off or remove battery while formatting; may cause damage.

## **Text Entry**

Use handset keys or Touch Panel to enter text.

## **Handset Keys**

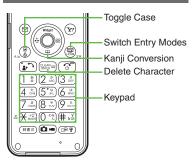

Unless noted otherwise, text entry descriptions are for text entry windows using handset keys.

## **Opening Help**


#### Note

• Pressing ③ repeatedly may not close text entry windows.

## **Touch Panel**

Use Onscreen Keyboard to enter text.

- Onscreen Keyboard keys correspond to Keypad keys.
- Onscreen Keyboard appears when a text entry window is opened in Viewer position.

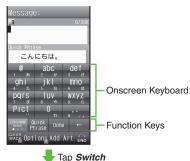



 Tap Switch at the bottom to toggle Function Key assignments.

## Function Key Assignments

Input Mode	Switch entry modes	
A/a	Toggle case	
Conv	Convert hiragana to kanji, etc.	
Conf.	Enter current characters	
Rev. Order	Reverse character options	
Undo	Undo conversion/deletion	
Quick Phrase	Use Quick Phrase	
Auto Art	Convert to Graphic Mail	
Correction	Initiate Correction Conversion	
Emoticons	Open emoticon list	
Search Word	Enter text from dictionaries	
Del. Cand.	Delete entry log record of	
Dei. Cariu.	selected word suggestion	
Prev. (Next)	Open previous (next) page	
Common Pict	Show Cross-Carrier	
0011111101111101	Pictograms	
All Pict	Show all Pictograms	
Pred. Mode	Toggle suggestion mode	
←/→	Move cursor left/right	
Range Text	Highlight text range	
Quit	Cancel Range Text	
Copy (Cut)	Copy (cut) highlighted text	
Del. All	Delete all characters	
Dict.	Use dictionaries	
Done	End text entry	
Keyboard Off	Hide Keyboard	
Keyboard On	Show Keyboard	

## **Switching Entry Modes**






• Available entry modes appear.



## Select mode **→** •

• Entry Mode Indicators:

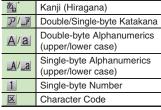

<sup>\* \*\*</sup> appears when Predictive is active.

## **Character Entry Basics**

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle character options for that key.

Example: In Double-byte Katakana mode, press three times.



Press to toggle options in reverse.
 To type characters assigned to the same key, press first.

Example: In Single-byte Alphanumerics mode, enter *no*.



 Long Press a key to enter the current character and advance cursor.



## **Entering Characters**

## Hiragana

Follow these steps to enter **ff** in Kanji (Hiragana) mode:





(Confirm)

## Kanji

Convert **すずき** to **鈴木**.

Type すずき



- In Kanji (Hiragana) mode, word suggestions change as hiragana are typed. (Predictive)
- Long Press to toggle suggestion mode between Standard, Literary, Spoken and Automatic. (Personal Mode)







• To exit suggestion list, press .





 Words likely to follow the entry appear based on previous entries. (Previous Usage)

#### When Target Word is Not Listed

- Press 
   or 
   or to segment hiragana to convert separately.
  - Press v to toggle Predictive and Non-Predictive suggestions.

Deleting Words/Phrases from Entry Log
Type hiragana → ② → Select word/
phrase → ⑨ (Long) → Yes → ●



## **Entering from Dictionaries** (Search Word)

Enter text by referring to word definitions, translations, etc.





- Press ( to toggle dictionaries.
- Select word, etc. **→** (•) Definition/translation appears.

## **One-Hiragana Conversion**

Type the first hiragana to access previously selected words. Example: **\*\* \*\*** was previously converted to 给木.








#### **Correction Conversion**

After mistyping hiragana assigned to the same key (e.g., (1) instead of 3), follow these steps to enter intended word/phrase from suggestion list without retyping: (Available when three or more hiragana are typed.)

- Type hiragana 

  → Before selecting word/phrase, (5)
  - · Corrected word suggestions appear.

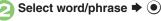



Follow these steps to switch to Double-byte Katakana mode and enter \*\*\*\mu\$\sigma\cdots\*



Katakana





## Pictograms & Symbols

- May be unavailable depending on entry mode.
- Immediately after inserting a descriptive word such as 嬉しい or 悲しい. corresponding Pictograms may appear in suggestion list. (PictgramWordLink)



- Pictogram or Symbol List appears. (Log appears if Pictogram/Symbol has been used.)
- (toggle tabs) ▶ (a) or (b) (toggle Lists)



• While entering message text, press (\*) in Pictogram List to toggle Cross-Carrier Pictograms and all Pictograms. Alternatively, press (9) to switch to My Pictogram or Symbol List.

# Select Pictogram or Symbol

• Pictograms are double-byte even in single-byte entry modes.



## **Emoticons**









## **Alternative Emoticon Entry Method**

• In Kanii (Hiragana) mode, type かお or a descriptive word such as b-l or j-h, then convert the entry.

#### Mail & Web Extensions

Enter .co.jp, http://, etc., easily.











 Extensions are single-byte even in double-byte entry modes.

## Hiragana to Katakana/ **Alphanumeric Conversion**

Enter katakana and alphanumerics in Kanji (Hiragana) mode. Example: To enter PM Use key inscriptions.













Select word/phrase (PM)

## **Using Wildcard Characters**

To improve word suggestions in Kanji (Hiragana) mode, or Single-byte Alphanumerics mode, add \*s, or \*s (wildcard characters) respectively, to entries. Use \* or \* to specify the character count: For example, type **5**/10 \* \* for a list of words/phrases of four or more characters starting with **5**/1, type **so**\*\* for a list of case insensitive words/phrases that start with so.

Example: Kanii (Hiragana) mode



Type hiragana → 🕞 → 🕞








• \* appears; to type another, press 🕞 again.



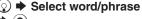




## **Editing Characters**

## **Deleting & Editing**

Follow these steps to correct また、お願 いしますto また明日お願いします:

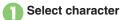







- The highlighted character is deleted.
- Select target location 
  Enter characters




#### **Recovering Deleted Characters**

• Press to recover characters deleted with ...

#### **Deleting All Text**

 Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press

## Copy/Cut & Paste

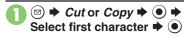



- To cancel and start over, press 🔊.
- Highlight text range 

  ◆ ●
- Select target location ▶

  (Long)



• Text is entered.

Pasting Previously Cut/Copied Text
Select target location → ⊚ → Paste
→ ● → Select text → ●

■ Available when Paste List appears.

## **Customizing Fonts**

## **Enlarging All Fonts**

Follow these steps to enlarge fonts for menus, text entry, etc.:

● Settings ● ● In Sound/Display menu, Change Menu ●



🔼 Large Font Menu 🕈 💿

Canceling Large Font Menu In ②. Standard Menu ▶ •

## **Resizing Specific Fonts**





- In Sound/Display menu,

  Display 

  ●
- 🕟 Font Settings 🖈 💿



Font Settings Menu

- Font Size → Select item → ●
- 🕞 Select size **→** 💿

## **Changing Font Weight**

In Font Settings menu, Font Weight → ●



Select weight → ●

## **Using Mincho Font**

- In Font Settings menu, Font
  Type → ●
- Ming-cho ⇒ ●


## Wallpaper

- Settings → In Sound/Display menu, Display → ●
- Wallpaper ⇒ ●
- 🛐 Vertical or Horizontal 🖈 💿



Wallpaper Menu



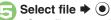

- Some files may not be usable.
- Omit the next step when *Preset Pictures* is selected in ②.
- Use 🐧 to zoom in/out or press 🖾 to rotate.

## 60

# Selecting Images Smaller or Larger than Display

- After ⑤, select option ▶ ⑥ ▶ ⑥
   For *Centered*, use ﴿ to zoom in/out or press ⑥ to rotate.
- Downloading Images via Yahoo! Keitai In ②, Download Pictures ▶ ●
- Read terms of service and then follow onscreen instructions.

## Selecting Images with Limited Usage Period

## **Selecting Chara Time Files**

In  $\bigcirc$ , Chara Time  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Select file  $\Rightarrow$   $\bigcirc$   $\Rightarrow$   $\bigcirc$   $\Rightarrow$   $\bigcirc$ 

## Slide Show Wallpaper

Set Slide Show to appear in Standby. Some folders/files may not be supported.

- In Wallpaper menu, Slide W paper → ●
- Folder Setting → ●
- Pictures or DCIM → ●
- Select sub folder 

  Set this folder 

  Output
  - Omit steps for sub folder if none is applicable.

## If There is No Image in Set Folder

Preset images appear.

## **Using Preset Images**

In ⓒ, Preset Pictures ▶ ◉

## Changing Pattern

- In ②, Pattern Setting → Select pattern → ●
- To check patterns, select one and press .

## **Customizing Handset Responses**

## Ringtone





Sounds & Alerts Menu

- Ringtone/videos ⇒ ●
- Select item 

  ○
  For For New Message, etc., select
  Assign Tone and press ○.
- Select folder → ●
- 🕞 Select tone/file 🕈 💿

Setting Ring Time for Incoming Mail, etc.

After ③, Duration → ● ➡ Enter
time → ●

Playing Video for Incoming Transmissions
In ②, Videos → ⑥ → Select file → ⑥
If Portion of File Content is Specifiable

- After ⑤, start point selection window opens. Follow these steps:
   Select start point ▶ ⑥
- Selecting Files with Limited Usage Period
   A confirmation appears. Choose *Yes* and press to proceed.

# Machi-Uta® Service Registration (Japanese)

Use Machi-Uta® to play music instead of the standard ringback tone for the other party. Machi-Uta® requires a separate contract and basic monthly fee.

- In Sounds & Alerts menu,

  Machi-Uta 

  ●
- Register/Cancel 

   Follow onscreen instructions.

#### Vibration

- In Sounds & Alerts menu, Vibration → ●
- - On → ●
- Vibration Pattern → ●
   To check vibration patterns, select one and press <sup>(a)</sup>.
- Select pattern ▶ ●

Setting Ringtones to Control Vibration In ⓒ, Link to Sound ➡ ◉ Important Vibration Usage Note

 Cancel Vibration when charging battery to help avoid accidents.

# **Emergency Calls**

Your location is automatically reported to the corresponding agency (police, etc.) when you place emergency calls (110, 119 or 118) with SoftBank 3G handsets. (Emergency Location Report) 002SH reports Location Information based on positioning signals from radio stations.

- Registration/transmission fees do not apply.
- Positioning accuracy is affected by location/signal conditions. Always provide your location and purpose on the phone.
- Location Information is not reported when emergency calls are placed without Caller ID (such as when the number is prefixed with 184). However, the corresponding agency may obtain your Location Information in a life threatening situation.
- Location Information is not reported during international roaming.

# Handset Restrictions & Emergency Calls

Emergency calls are possible even while some handset restrictions are active.

Active Restriction	Emergency Calls
Function Lock (in Locks)	
Bar Outgoing Calls (in	Possible
Call Barring)	
Offline Mode	
Keypad Lock	Restricted
PIN Entry (in Locks)	

# **Voice Calling**


# **Answering a Voice Call**

Incoming Call window opens for a call.



Incoming Voice Call Window

- to accept the call
  - Call connects.
  - Answer calls with clamshell open.

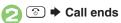

Muting Ringer Temporarily When a call arrives, ( Expiece Volume

During a call, 🐧 or 💶

# After Calls to/from Unsaved Numbers

Save to Phone Book confirmation appears.
 Select New Entry or New Detail and press to save number; Phone Book entry window or entry search window opens, respectively.

# Placing a Voice Call

- Enter phone number with area code
  - To correct entry, use to place cursor under the digit and press ...
     To delete the digits above and after the cursor, Long Press ...

Wait for receiver to accept the call.



Specifying Line when Using Double Number in Dual Mode

After ①, ⑥ ⇒ Select Line(Voice) ⇒
⑥ ⇒ Select line ⇒ ⑥

# Placing an International Call

- Enter phone number with area code ▶ ☒
- 🔁 Int'l Call 븆 💿

Calling Unlisted Countries
In ⑤, Enter Code ♦ ⑥ ♦ Enter
country code ♦ ⑥ ♦ ፻

# Placing Calls from Outside Japan

See below to place a call to Japan from abroad. Apply for Global Roaming beforehand. See SoftBank Mobile Website for details: http://mb.softbank.jp/en/global\_services/ Access roaming area/rate information or print it out to carry with you while traveling abroad.





- Handset dials the number.
- To call other countries, select the target country instead of ##(JPN).

# 👔 💿 Þ Call ends

# Calling SoftBank Handsets

In ②, always select 
 ☐
 本(JPN).

Calling Landlines & Mobiles within the Same Country

Enter phone number with area code


# **Calls Overseas**

 Calling may not be possible outside Japan.
 Connections depend on available network, signal strength, and handset settings.

# **Video Calling**

View the other party's image or send an Outgoing Image to compatible handsets. Handle Video Calls like Voice Calls. This page describes functions/operations unique to Video Call.

# **Window Description**

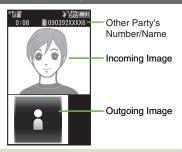

# Important Video Call Usage Notes

- If both parties are using handset models without internal cameras, Video Call cannot be used as intended.
- If both parties are not using the same Video Call system, call may be interrupted. (Video Call charges apply.)
- Video Calls cannot be placed while TV is active.

# **Answering a Video Call**

Incoming Call window opens for a call.



Incoming Video Call Window

- to accept the call
  - Alternative Image is sent. (Video Call charges apply to the caller.)
- 🕥 📧 🕈 Call ends

Answering with Camera Image
[Incoming Video Call Window] ● ▶
No ▶ ●

■ Engaged Video Call Operations

Toggle View	
Toggle Outgoing Image	•
Open Help	

# Placing a Video Call

- Enter phone number ⇒ ●
- 🔁 Video Call 🕈 💿



• Image appears when call is accepted.



Specifying Line when Using Double

Number in Dual Mode

After ①, Select Line(Video) ▶ ● ▶

Select line 

●

# **Optional Services**


Call Forwarding and Voicemail can only be set simultaneously when Call Forwarding is set to Video Calls.

Call Forwarding	Automatically divert all or all unanswered incoming calls to another preset phone number
Voicemail	Redirect all or unanswered calls to Voicemail Center; access messages from handset/touch tone phones
Call Waiting*	Answer incoming calls or open another line during a call
Group Calling	Switch between open lines or connect multiple lines at once for teleconferencing
Caller ID	Show or hide your own number when placing calls
Call Barring	Restrict incoming/outgoing calls depending on conditions

\*A separate contract is required.

# **Initiating Call Forwarding**

Follow these steps to divert calls to a phone number saved in Phone Book after selected ring time (*No Answer* set): (Numbers starting with 1, 00, 0120 or 0990 cannot be saved.)

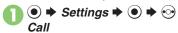



Voicemail/Call Forwarding Menu

- 🕞 Diverts 🕈 💿
- Select call type → ●
- Ro Answer → ●
- Phone Book → Select entry → ●





Diverting Calls without Handset Response
In ⊕, Always ▶ ● ▶ ⊙ - ⊙
Entering Forwarding Number Directly
In ⊕, Enter Number ▶ ● ▶ Enter
phone number ▶ ● ▶ Select ring
time ▶ ●

# Initiating Voicemail

Follow these steps to divert calls to Voicemail Center after selected ring time (No Answer set):






**Diverting Calls without Handset Response** In ②, Always ▶ ●

# **Missed Call Notification**

Activate this function for records of calls missed when handset is off/out-of-range and Voicemail is active.

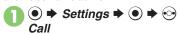

out Missed Calls → (•) → (•) Follow the voice guidance for further

operations.

# **Playing Messages**

- In Voicemail/Call Forwarding menu, *Voicemail* **→ ●**
- Play Voicemail **⇒** • Follow the voice guidance for further operations.

**Deleting New Voicemail Message Indicator** In ②, Clear Indicator 


◆ ● Yes **→ ●** 

# Canceling Call Forwarding/Voicemail

- In Voicemail/Call Forwarding menu, *Cancel All* **→ ●**
- Yes **♦** (•)

# **Creating Phone Book Entries**

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

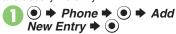




Last Name: → ● Denter last name → ● First Name: →
● Enter first name → ●



 Characters entered for names (reading for kanji) appear.

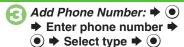



- To save additional phone numbers, repeat ②.
- Add Email Address: 

  ◆ Enter mail address 

  ◆
  - Select type ⇒ ●



 To save additional mail addresses, repeat ②.





Phone Book Entry Window



Entry is saved to Phone Book.

# Incoming Calls while Creating Entry

 Contents are temporarily saved. End the call to return.

Selecting Mode when Using Double Number in Dual Mode

[Phone Book Entry Window] Mode:

# **Personal Ringtone**

Set tone for calls from saved numbers.

- In Phone Book entry window, select item, e.g., *Tone-Voice Call:* ▶ ●
- Assign Tone 

  ◆ Select folder 

  ◆ ●
- Select tone/file → → 🕏

#### **Saving Secret Entries**

Hide Phone Book entries to require Handset Code for access.

- In Phone Book entry window, Secret: ▶ ●
- ② On → ③ → 🤡

# **Accessing Secret Entries**

- Enter Handset Code ●

# **Customizing Response by Category**

- ① → Phone → → SetCategory → ○
- Select item 

  Select item, e.g., Assign Tone

  Customize responses
  - Customize responses in the same way as Phone Book entries.
  - Not available for USIM Card.

# Responses Set by Phone Book Entry • Settings for each entry take priority.

# **Saving Numbers After Calls**

After a call, save number to Phone Book.



When confirmation appears,

New Entry → ● →

Complete other fields → ∞

Saving to an Existing Entry
In ①, New Detail → ② → Select
entry → ③ → Complete other fields
→ ②

# **Using Phone Book Entries**

# Dialing via Phone Book





Entry Search Window (By あかさたな)

- When using Double Number in Dual Mode, line indicators appear.
- Select entry → ●
- Select phone number

Placing Video Calls
After ②, ● → Video Call → ●

# Changing Search Method

Phone Book Search Methods:

By あかさたな	Shows entries with Readings that start with katakana in the specified row
By Category	Opens entries in the specified Category
By Reading	Shows all entries in Reading order (katakana, alphabetical then numerical)

- In entry search window, 

  → Ph.Book Settings → ●
- 🥥 Sort Entries 🕈 💿
- Select method → ●

Changing Search Method Temporarily [Entry Search Window] ⊕ (press to toggle search methods)

# **Opening from Other Functions**

Example: Enter a recipient via Phone Book when sending a message.



Select Recipient Window

- Phone Book ⇒
  - Entry search window opens.
- Select entry → ●
- Select phone number or mail address **→ (•)** 
  - Recipient is entered.
  - Omit if only one number or address is saved

# **Customizing Handset Address**

Change alphanumerics before @ of the default handset mail address.

For more information, see https://www.email.softbank.ne.jp/help/e/address.html.

# **Changing Address**











Select *English* and press , then follow onscreen instructions.

# **Saving Address**

When handset address is changed, SoftBank Mobile sends new address confirmation via S! Mail.



To save new address to My Details, follow these steps. (New address is effective even if not saved.)



















# Sending S! Mail

S! Mail and press .

Follow these steps to send S! Mail to a number/address saved in Phone Book:





S! Mail Composition Window

- Select recipient field → ●
- 🕟 Phone Book 🕈 💿
- Select entry ⇒ ●
- - Omit if only one number or address is saved.
  - When a mail address is entered, avoid using single-byte katakana in message text or subject; may not appear properly on recipient devices.

- Select subject field → →
  Enter subject → ●
- Select message text field



Enter message → ●



S! Mail Composition Window



#### **Incoming Calls while Creating Message**

 Content is saved temporarily. End the call to return.

#### Personal Mode

 When recipient is entered via Phone Book, text entry window word suggestions change by recipient type.

Previewing Outgoing Message
After ②, ⊚ → Preview Message → ●
Pictogram Entry

- In Pictogram List, press (3) to toggle
   Cross-Carrier Pictograms and all Pictograms.
- Pictogram appearance may differ by carrier.

Specifying Line when Using Double Number in Dual Mode

[S! Mail Composition Window] 

Switch Line 

Output

Output

Select line 

Output

Ou

Converting to Graphic Mail

After  $\bigcirc$ , Auto Art  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Select decoration type  $\Rightarrow$   $\bigcirc$   $\Rightarrow$   $\bigcirc$  (Next) or  $\bigcirc$  (Prev.)  $\Rightarrow$   $\bigcirc$   $\Rightarrow$   $\bigcirc$ 

- To cancel conversion, follow these steps before ⑤:
  - ☑ → Cancel Arrangement → ⑥ →Yes → ⑥

# **Attaching Files**

Send attachments to compatible handsets. Follow these steps to attach images to S! Mail:

- In S! Mail Composition window after composing message, select attachment field ▶ ●
- Picture 

  ◆ Select folder 

  ◆ ●
- Select file → ●



File attached

#### **Attaching Non-Image Files**

• In ②, select a folder other than *Picture* and press ③, then select a file.

# **Attaching Multiple Files**

After ©, Attach (1)  $\Rightarrow$  o  $\Rightarrow$  Attach File  $\Rightarrow$  o  $\Rightarrow$  Picture  $\Rightarrow$  o  $\Rightarrow$  Select folder  $\Rightarrow$  o  $\Rightarrow$  Select file  $\Rightarrow$  o  $\Rightarrow$  o

X in Attach (X) indicates the number of attached files.

# Auto Image Resize

Large images may be automatically reduced to approximately 400 - 500 KB by default. Change resize setting via Picture Auto Resize in Create/Send Settings.

# If Recipient Cannot Receive Large Messages (Up to 2 MB)

 Message may be truncated or attachments may be lost.

# **Sending SMS**

Follow these steps to send SMS to a number saved in Phone Book:





SMS Composition Window

- Select recipient field ▶ ●
- Phone Book → ●
- Select entry → ●
- 🕞 Select number 🕈 💿
  - Omit if only one number is saved.


# Select message text field



Enter message



SMS Composition Window

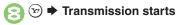

# **Incoming Calls while Creating Message**

 Content is saved temporarily. End the call to return.

#### Personal Mode

 When recipient is entered via Phone Book, text entry window word suggestions change by recipient type.

#### When Message Text Exceeds Limit

 A confirmation appears. To convert SMS to S! Mail, choose *Yes* and press .

# Specifying Line when Using Double Number in Dual Mode [SMS Composition Window] ◎ ▶

Switch Line 

Select line 

S

# Entering Pictograms Automatically After ②, Auto Art → ③ → ② (Next)

or (Prev.) → (9) → (3)

# **Customizing S! Mail Retrieval**

Set complete S! Mail retrieval to manual (Server sends only initial portion of message text without attachments) or set handset to retrieve complete messages automatically by specifying sender type, mail address, etc.

# **Retrieving Messages Manually**









Message Download Menu






Retrieving Complete S! Mail Automatically when Approximate Size is 300 KB or Less In ⑤, On(Up to 300KB) ▶ ⑥

# **Restricting Automatic Retrieval**

By Sender Type

In Message Download menu, Condition(Auto) → ●

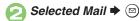



Select item 

○ (□/✓)

○ (▽/✓)

# By Mail Address

Specify mail addresses or domains (alphanumerics after @ of mail addresses).

In Selected Mail menu,

Individual Address ⇒ ⊠

Select blank entry → ●

Select method 

Select/enter address 

●

Repeat ② - ❸ to add mail addresses.

**(4) (∀) → (∀)** 

Restricting by Domain (Direct Entry)

[Selected Mail Menu] Receive by the

Domain → ③ → Select blank entry


→ ⑥ → Direct Entry → ⑥ → Enter

domain → ⑥ → ※ → ⑤

# Managing & Using Messages

# **Messaging Folders**

Messages are organized in folders by type.

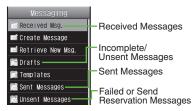

#### **Auto Delete**

 Oldest received/sent messages are deleted automatically to save new ones when memory is full. Protect important messages to avoid unintentional deletion.


#### **Opening Help**

- Follow these steps in folder list, message list or message window:

#### When Failed Message is Saved

 A reminder message appears upon opening Messaging menu.

# **Checking Messages**

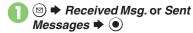



Folder List

- When a PC Mail Account exists, PC Mail folder (folder with the name specified in Account Name) appears.





Message List





Message Window

# **Protecting Messages**

In message list, select message


→ □ → Manage Msg. → ●




Canceling Protection In ②, Unlock → ●

# **Window Description**

# Message List

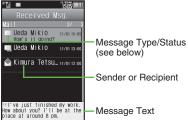

# ■ Message Type/Status

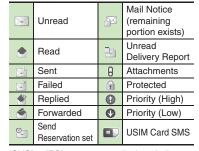

<sup>&</sup>quot;SMS" or "PC" appears accordingly on indicators.

# **Message Window**




Press  $\maltese$  or  $\clubsuit$  to open other messages (higher or lower in message list).

# Changing Font Size [Message Window] (3.3) (Long) to enlarge or (1.2) (Long) to reduce

# PC Mail

Receive or reply to PC mail account messages.

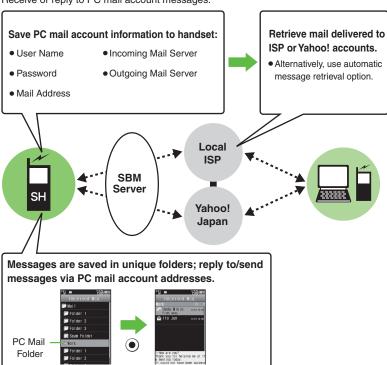

# Important PC Mail Usage Notes

- Receiving PC Mail for the first time after PC Mail Account setup may incur high charges due to large-volume packet transmissions.
- Setting handset to retrieve PC Mail automatically may incur high packet transmission fees; remember this, especially when using handset outside Japan.
- Other functions may slow while handset is checking for new messages.
- Checking for new messages may incur packet transmission fees even when none exists.
- Single-byte katakana and Pictograms are not supported.
- When messages sent from handset to PC mail account are retrieved by handset (then opened, replied with quotes, forwarded, etc.), included Pictograms may not appear or may appear as different characters.

# **PC Mail Account Setup**

- Proceed with setup according to information supplied by ISP.
- PC Mail services may be unavailable depending on the services, settings or contract details for your PC mail account. Confirm compatibility with POP/SMTP message retrieval/transmission via e-mail software beforehand.

# ■ Mandatory Items for Retrieval

User Name	Required to connect to incoming mail server
Password	Required to connect to incoming mail server
ReceivingServer	Incoming mail server address

## ■ Mandatory Items for Transmission

Mail Address	Address to use PC Mail
Sender Server	Outgoing mail server address

#### **Setting Other Items**

 Edit information as needed; for description, select an item and press ☒.





- PC Mail Account → ●
- ⟨Empty> → ●
- Set Receiving 

  Select item 

  Select/
  enter item 

  Select/

  Select/
  - User Name, Password and ReceivingServer are mandatory.
- Set Sending → → Select item → → Select/enter item →
  - Mail Address and Sender Server are mandatory.
- - If a confirmation appears, follow onscreen prompts.

## Using Yahoo! Mail Addresses

In ⓒ, Set Quick Yahoo! Mail ♦ ● ♦
Yes or No ♦ ●

- Follow onscreen instructions
- Choose No to create a new account.

# **Editing Accounts**

In ②, select account → ● From ②
Deleting Accounts

In ⑤, select account ▶ ⑤ ▶ Yes

## Saving User ID & Password for Transmission

 If User Name and Password are unset Set Receiving items are automatically used for SMTP authentication. Follow these steps if ISP requires User Name and Password:

In  $\bigcirc$ , Set Sending  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Sender Auth.  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  SMTP Auth.  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  User Name  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Enter name  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Password  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Enter password  $\Rightarrow$   $\bigcirc$   $\Rightarrow$   $\bigcirc$   $\Rightarrow$   $\bigcirc$ 

# **Retrieving New PC Mail**

Retrieve new messages from created accounts. If message count is high, some may not be received on the first attempt.









- Press 🖅 to retrieve full message.
- Message window is similar to that of S! Mail.

### **Deleting Messages**

[Message List] Select message ⇒

(a) → Delete → (a) → Select option

→ (a) → Yes → (b)

After **①**, select account **→ ② → ③**■ Omit **③** if only one message is retrieved.


Omit so it only one message is retrieved

# Sending PC Mail

Follow these steps to create and send PC Mail:





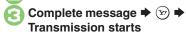

Converting to S! Mail

After  $\bigcirc$ ,  $\bigcirc$   $\Rightarrow$  Convert to S! Mail  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Yes  $\Rightarrow$   $\bigcirc$ 

#### Note

• Single-byte katakana and Pictograms are not supported.

# **Service Basics**

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser or Direct Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SoftBank Mobile Website (P.9-1).
- Outside Japan, Yahoo! Keitai and PC Site Browser cannot be used over Wi-Fi.

#### Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. (Information fees may also apply.) To prevent automatic connection, select an appropriate option for *Script Settings*, *Flash*® *auto-download* and *Download Videos* in Security Settings (e.g., via Browser Settings for Yahoo! Keitai).

# Security

Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

## **Opening Secure Pages**

- A confirmation appears. Choose *Yes* and press to proceed.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GMO GlobalSign, RSA Security, SECOM Trust Systems and Comodo Japan cannot be held liable for any damages associated with the use of SSL.

# Using Yahoo! Keitai

Access Yahoo! Keitai sites via 3G. Network or Wi-Fi.

- To use Wi-Fi, subscribe to Keitai Wi-Fi and complete related settings.
- Within registered access point range. handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Internet pages may not open depending on connection/Server status, etc.

# Using Yahoo! Keitai Main Menu

Browse Yahoo! Keitai sites from Yahoo! Keitai Main Menu.





Connection starts



- Internet Page
- Yahoo! Keitai Main Menu opens.
- To disconnect, press (27).
- Highlight menu item **→** Corresponding page opens.
  - Repeat 2 to open additional links.



# **Returning to Previous Pages** [Internet Page] ( → Previous page opens ■ Follow these steps to return to the initial page: [Internet Page] → Forward → ● Returning to Yahoo! Keitai Main Menu $\rightarrow$ **User Authentication** • Follow these steps to open pages requiring authentication: Enter user ID or password → (\*) **Using History** Select record ⇒ ● **Entering URLs Directly** ● Enter URL ● ● Accessing $\angle z = - y \angle z + Directly$ ■ メニューリスト is a portal to Yahoo! Keitai content and services. (Includes a link to lists of sites supporting English.) Switching between 3G and Wi-Fi Manually [Internet Page] → Convenient Functions ◆ ( ) ◆ Switch Wi-Fi/3G

⇒ Select network ⇒ ●

# **Browsing PC Sites**

View PC Internet sites via PC Site Browser or Direct Browser. (Direct Browser requires Wi-Fi connection.)

- To use Wi-Fi, subscribe to Keitai Wi-Fi and complete related settings.
- When using PC Site Browser within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Browsing PC sites via PC Site Browser may incur high charges depending on subscribed price plan.
- Internet pages may not open depending on connection/Server status, etc.

- Yahoo! →
- PC Site Browser or Direct Browser **→** (•)
- Homepage **→** (•) **→ Connection starts**



- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, press (\(\frac{\pi}{2}\)).
- Highlight menu item **→** (●)
  - Corresponding page opens.
  - Repeat (4) to open additional links.



#### **Direct Browser**

 Use this Wi-Fi-based browser to view PC sites without using SoftBank 3G Network service.

# **Returning to Previous Pages** [Internet Page] ( → Previous page opens ■ Follow these steps to return to the

initial page: 

Returning to Yahoo! JAPAN Home

[Internet Page] 

→ Homepage → ● **User Authentication** 

**Using History** 

In €, History → • Select record 

# **Entering URLs Directly**

In ③, Enter URL → ● Fnter URL **▶ (•)** 

Switching between 3G and Wi-Fi Manually (PC Site Browser)

> Functions 
>
> ◆ ( ) 
>
> ◆ Switch Wi-Fi/3G

⇒ Select network ⇒ 
●

# **Basic Operations**

# **Page Browsing**

# **Scrolling Pages**

If page content continues beyond view, use • to scroll pages. Long Press to scroll continuously.



# **Switching Frames**

On framed pages, Long Press (B) to switch active frame.




- In pointer navigation, point to a frame and press 
  to select it.
- Otherwise, use to select one.
- Alternatively, tap a frame to select it.

# Viewing Single Frame Frame In • • ■ To return, press .

# **Tabbed Browsing**

Open another page in a new tab and switch between tabs.


# Opening a New Tab

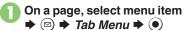





# Switching Tabs

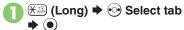

- In pointer navigation, point to a tab and press ( ) to open it.
- Alternatively, tap a tab to open it.



# Selecting Items in Enlarged View

Enlarge area to select items with finger.

On a page, Long Touch area



Enlarged View

Drag to highlight item in enlarged view ▶ Release

Enlarging Areas in Pointer Navigation [Internet Page] Point to area ▶ (7-3) (Long)

- Use ❖ to move pointer in enlarged view; highlight item and press to execute it.
- To close enlarged view, press a key other than ��.


#### **Selecting Text**

Activate Drag Mode in pointer navigation to enable text selection. Select text to copy or look up words in dictionaries. Follow these steps to use a dictionary: (Text may not be selectable or linked page may open depending on site or page.)

- On a page, point to first character → ⊙ (Long)
  - Drag Mode activates.
- Highlight text range




- **3 0**
- Select dictionary
  - Dictionary opens with text inserted.

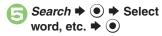

Starting Over
After ⓒ, point to first character ▶ ◉
From ❷

# **Additional Page Operations**

Enter text or select/execute items.

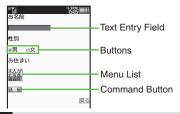

- Text Entry
- Enter text 

   Internet page returns.
- Using Entered Text (Input Memory)
  [Internet page] Select text entry field

  → → ◎ → Insert/Font Size → ●

  → Input Memory → → Select text

  → ●

- Pull-down Menu Item Selection
- Select item → ●

- Page Item Indicators
- Selection Items
  Buttons or boxes appear.



■ Execution Items


Execute the assigned command.

On a page, select command→ ●

# Wi-Fi (Wireless LAN)

002SH supports wireless LAN (hereafter "Wi-Fi") that enables Internet connection via private Wi-Fi network, public wireless LAN service, etc. Handset connects to the Internet via Wi-Fi automatically whenever possible, allowing high-speed communication without switching networks.

Subscribe to Keitai Wi-Fi to use Wi-Fi.

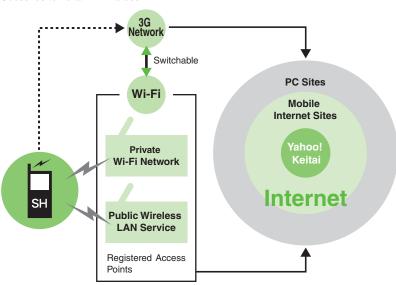

# Service Usage Outline

Private
Wi-Fi network

Prepare devices, contract with ISP, etc.

Private
Public wireless
LAN service

Subscribe to service, etc.

Register access point on handset

Connected to Wi-Fi within access point range

## **Registering Access Points**

- Save access point information to handset to use Wi-Fi.
- Handset connects to registered access points automatically.
- Access point search may take some time depending on the number of registered access points.

#### Important Wi-Fi Usage Note

 Depending on signal conditions, connection may automatically switch from Wi-Fi to 3G incurring packet transmission fees; set confirmation to appear as needed.

# **Registering Private Access Points**

- Broadband connection, ISP subscription and Wi-Fi access point are required.
- To connect to corporate access points, consult the system administrator for settings.
- Configure settings on Wi-Fi access points beforehand. (For details, see the access point guide.)
- Access point information (SSID, authentication method, encryption method, security key, etc.) is unique to each access point. Check it beforehand.

# Using AOSS<sup>™</sup> or WPS

AOSS<sup>™</sup> and WPS are systems/standards for easy access point registration and security configuration; available on compatible Wi-Fi access points.

Using AOSS<sup>™</sup>






Wi-Fi Menu





Create Profile Menu

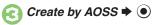

- 40
  - Follow onscreen instructions.
  - To cancel, press (Y).
  - Handset connects to Wi-Fi upon completion of registration (Switch On/Off: On).

# Using WPS

Example: Push Button Configuration (PBC) method

- In Create Profile menu, Create by WPS → ●
- 20
  - Follow onscreen instructions.
  - To cancel, press 🐑.
  - Handset connects to Wi-Fi upon completion of registration (Switch On/Off: On).

#### **Using PIN Method**

access point 

●

- Enter an eight-digit number (PIN) generated by handset into the access point.
  - After ①, ⊗ → PIN entry → ⊙ → ⊙

    → Enter number on Display into

# **Access Point Search**

In Create Profile menu,

Search Access Point ▶ ●



- To cancel search, press (v).
- Select access point → ●
- Enter corresponding security key ▶ ●
- Yes →
  - Handset connects to Wi-Fi (Switch On/Off: On).

#### If Encryption Method is WEP

After 

, authentication method selection window opens. Select a method according to the access point.

# **Registering Access Points Manually**

Check access point information beforehand.

# Major Items

#### ■ Access Point Profile

Profile Name	
	Enter the same SSID as
	the access point

# Security

Authentication Method	Supported authentication methods vary by access point; set accordingly
Encryption Method	Supported encryption methods vary by authentication method; set according to access point
Security Key	Enter the security key (also called "encryption key," "network key" or "passphrase") set on the access point

# Entering Information

Example: Authentication Method is WPA/WPA2-PSK Auto.

- In Create Profile menu,

  Manual 

  ●
- Profile Name → ★ Enter name → ●
- SSID → Enter SSID → ●
- Security → ●



- 🚍 Authentication Method 🗪
  - Select method 
     ●
- Encryption Method → → Select method → ●
- Security Key → Denter security key → ●









- Yes **▶** •
- Handset connects to Wi-Fi (Switch On/Off: On).


If Authentication Method is *Open System* & Encryption Method is *No Authentication* 

- Omit security key entry.
- If Encryption Method is WEP
  In ∅, <Empty> ♦ ★ Enter WEP
  kev ♦ ★ ♥ ★ From ⑤

# **Using Public Wireless LAN Services**

- Subscription with the corresponding service provider, etc. is required.
- Access point information (SSID, authentication method, encryption method, security key, etc.) is unique to each access point. Check it beforehand.
- Subscribe to Keitai Wi-Fi to use SoftBank Wi-Fi Spot or BB mobilepoint (provided by SOFTBANK TELECOM) access points.
  - For more about BB mobilepoint, see SOFTBANK TELECOM Website at http://tm.softbank.jp/english/consumer/wlan/index.html.

# Using Wi-Fi Spot

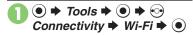





Create Profile Menu

- Wi-Fi Spot → ●
- Password → ► Enter password → ●
- **5** 🔊
- } Yes **→** ⊙
  - Handset connects to Wi-Fi (Switch On/Off: On).

# Using Other Public Wireless LAN Services

- Check public wireless LAN service information beforehand.
- Connection to some public wireless LAN services may not be possible.
- In Create Profile menu,

  Manual 

  ●
- Complete fields

   For details, see P.6-4 "Entering Information "
- User ID → ► Enter ID → ●
- Password → Enter password → ●
- Switch On/Off → → On
- 🛐 Yes 🕈 💿
  - Handset connects to Wi-Fi (Switch On/Off: On).

# Infrared

Wirelessly transfer files between 002SH and compatible devices.

002SH supports IrSimple™ high-speed wireless communications protocol; exchange large image files instantly with compatible mobile phones, printers, etc.

#### Transferable Files

Phone Book	Received Msg.
Calendar	Sent Messages
Tasks	Drafts
Notepad	Templates (Messaging)
Bookmarks	Data Folder

- Copy/forward protected files are not transferable.
- Some files may not be transferable; some settings may be lost, or files may not be saved properly.

# **Getting Started**

# Infrared Precautions

Align Infrared Ports of both devices.

• Handset cannot receive connection requests during Software Update.



- Do not place objects between devices.
- Keep Infrared Ports aligned during transfer.
- Do not look into Infrared Port during infrared transmissions. Eyesight may be affected.
- 002SH complies with IrMC 1.1, however, some files may not transfer properly.

# Transfer Options

One File Transfer	Transfer single files
All File Transfer	Transfer all files by function
IrSS Transfer	Exchange single JPEG image files with compatible devices at high speed

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

#### **Authorization Code**

 Four-digit code required for Infrared transfers. All File Transfers are possible when codes match. (Authorization Code is changeable for each transfer.)

# **Transferring Files via Infrared**

# **Receiving Files**







- Infrared is activated.
- Handset receives files if sent within three minutes.
- Handset must be in Standby to accept connection requests.
- Connection request arrives



Request Window

- Perform subsequent operations
  - To cancel transfer, press 🖾.

# Subsequent Operations

- - If storage media confirmation appears, select media and press .
- All File Transfer (Adding Files)

  Yes 

  Enter Authorization

  Code 

  As New Items 

  Output

  Code 

  As New Items
- All File Transfer (Overwriting Existing Files)

  Yes → → Enter Authorization

  Code → → Delete All & Save →

   → Yes →
  - For Phone Book, My Details except handset phone number is overwritten as well.
- IrSS Transfer

  Yes
  - Files are saved to Data Folder (Pictures).

#### Sending Files


# One File Transfer

Example: Phone Book entry



- - When complete, entry search window returns.

# All File Transfer

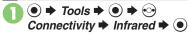


- Send All → ●
- Yes → ► Enter Handset Code → ●
- Enter Authorization Code → Transfer starts → ●


#### Sending Phone Book

In 
 , Picture transfer confirmation

 appears; choose Yes or No and press 

# Sending JPEG Images at High Speed

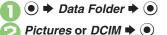

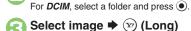

- - Images may be reduced automatically before transfer depending on size.
  - When complete, file list returns.
  - Transfers are one-way; end even if files are not received.

# **Exchanging Contact Information**

Exchange name, phone numbers, mail addresses, and other contact info with other compatible handsets via infrared. Read **P.6-6** "Infrared Precautions" beforehand.

# **Receiving Profiles**







Exchange Profile Menu



Receive **→** •



**Profile received** 



 Received profile is saved to Phone Book.

# **Sending Profiles**



Changing Profile Items to Send

[Exchange Profile Menu] Send

Settings → ● → Select item → ●

(□/✓) → Complete selection → ✓

Opening My Details

[Exchange Profile Menu] My Details

→ ●

# Bluetooth®

Wirelessly transfer files/data between 002SH and compatible devices (watches, handsfree devices, etc.).

- For transferable files, see P.6-6.
- 002SH supports simultaneous connection with two devices. (May be unavailable depending on device type.)
- Bluetooth<sup>®</sup> connection may not be possible with some Bluetooth<sup>®</sup> devices.
  - Handset shall be connected to certified Bluetooth® devices that meet the specification standards developed by the Bluetooth SIG.
  - Data transfers may fail depending on characteristics or specifications of the certified Bluetooth® devices.
- Noise may interfere with wireless or handsfree conversations.
- TV audio is supported only on SCMS-T DRM scheme compliant Bluetooth® devices.

# **Getting Started**

# Bluetooth® Precautions

Check transmission range of your Bluetooth® device to use with handset properly.

Maximum transmission range for transfers between 002SH handsets is ten meters.

(Bluetooth® connection/transfer rate may vary depending on conditions.)

#### Important Handsfree Device Usage Note

- Handle call operations on the device in use.
   Bluetooth® Watches
- Compatible Bluetooth® watches support these functions:
  - Clock sync
- Alarm notice
- News notice
- Mail notice
- Remote Shutter Mode Settings
  - Caller ID notice
- Quick SilentHold calls
- Show Operator Name
- For details about functions/operations, see the Bluetooth<sup>®</sup> watch guide.

# Sender Search for devices Select device Request connection Recipient Activate Bluetooth®

#### **Authorization Code**

 4 to 16-digit code required for Bluetooth<sup>®</sup> connections with devices not compliant with Bluetooth<sup>®</sup> specification Ver. 2.1.

Connection complete

Accept

For handsfree devices, enter specified Authorization Code.

# Transferring Files via Bluetooth®

# Activating Bluetooth®





- Bluetooth<sup>®</sup> is activated.
- Handset must be in Standby to accept connection requests from unpaired handsfree devices, etc.
- To cancel Bluetooth<sup>®</sup>, Long Press ⊙.

# Connecting Bluetooth® Devices

# Device Search & Pairing

Activate Bluetooth® on devices to be paired with first.





Bluetooth Menu





- **6** 
  - Found devices are listed after search.
  - To cancel search, press 🗐.
- Select device 

  If a confirmation appears, choose Yes and press 

  .
- Yes 

  Pairing complete

  If the other device is a keyboard,
- follow onscreen instructions.

  Connecting Devices Not Compliant with

Bluetooth® Specification Ver. 2.1
In ⊕, enter the same Authorization
Code for handset and the other
device ▶ ● ▶ Paring complete

- On the other device, complete code entry within 30 seconds.
- Code entry is omitted for paired devices.



In Bluetooth menu, *Paired*Devices 

● ●



Paired Device List



## Accepting Connection Requests

Follow these steps to accept connection requests from unpaired devices:

Connection request arrives



Request Window





- Yes
  - If the other device is a keyboard, follow onscreen instructions.

Connecting Devices Not Compliant with Bluetooth® Specification Ver. 2.1 In ⊚, enter the same Authorization Code as sender's ▶ ●

■ Complete code entry within 30 seconds.

#### **Transferring Files**

Follow the steps below to exchange files with paired devices.

- For transferable files, see P.6-6.
- When requested, enter Authorization Code.
- Receiving Files
- Connection request arrives



Request Window

- Perform subsequent operations
  - To cancel transfer, press 🗐.

#### Subsequent Operations

One File Transfer

Yes → ● Yes → ●

- If storage media confirmation appears, select media and press .
- All File Transfer (Adding Files)Yes → → As New Items → ○
- All File Transfer (Overwriting Existing Files)

- ♦ Yes ♦ ●
- For Phone Book, My Details except handset phone number is overwritten as well.
- Sending Files
- One File Transfer

Example: Phone Book entry



- Via Bluetooth 
   ●
   ●
- Select device 

  Select starts

  Select device 

  Transfer starts
  - When complete, entry search window returns.

- All File Transfer
- Select device → Yes

  →
  - Enter Handset Code → ●




#### **Sending Phone Book**

 In ②, Picture transfer confirmation appears; choose Yes or No and press ③.

## Connecting PC

#### **Accessing Memory Card**

Connect handset to a PC via USB Cable to access Memory Card from the PC without removing card from handset. USB Cable may be purchased separately.

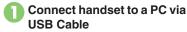











Disconnect USB Cable.

#### If Menu in 1 Does Not Appear

- Follow these steps:
  - → Tools → ← Connectivity
    - **→** USB Mode **→ (•) →** From **(•)**
- Operations on the PC may be required; if prompted, follow onscreen instructions.

#### **Utility Software (Japanese)**

For more PC-related operations, download Utility Software (including USB Cable driver) from the following URL.

#### **Utility Software**

http://k-tai.sharp.co.jp/download/tools/utility/

#### **Mobile Data Communication Fees**

 Using the Internet by connecting handset to PC/PDA via USB Cable or Bluetooth® may incur high charges as large-volume packet transmissions tend to occur in a short period of time.

## **Basics**

Back up information to Memory Card, and restore to handset as needed.

Specify frequency for Auto Backup.

Auto Backup requires a subscription to S! Addressbook Back-up.

#### **Supported Items**

In manual backup, items with are selectable at once via *Check Selection* in Options menu.

Phone Book	Sent Messages
Calendar*	Drafts*
Tasks <sup>*</sup>	Templates (Messaging)
Bookmarks*	Contents Keys
Notepad*	Data Folder
Mail Groups*	User Dictionary
Received Msg.*	Used Log

#### **Auto Backup Compatibility**

- These items are not backed up automatically:
- Mail Groups
- Templates (Messaging)
- Data Folder
- User Dictionary
- Used Log

#### **Precautions**

- Not available if battery is low.
- Backup may fail if Memory Card memory is low.
- Some items may not be transferable; some settings may be lost, or files may not transfer properly.

#### Auto Delete (Auto Backup Files)

 Auto Backup saves up to three backup files for each item; when full, oldest files are deleted automatically to save new ones.

#### **Contents Keys**

- Manual backup overwrites Contents Keys in Memory Card. Perform Restore beforehand to keep previous Keys.
- In Auto Backup, Contents Keys are added to Memory Card.

#### **Restoring Backed Up Content**

• Corresponding handset content is overwritten depending on Restore option.

## Backup & Restore

#### Manual Backup

Follow these steps to back up selected items at once:





Backup/Restore Menu

- Yes → ●
- Select item 

   ( | √ | ✓ ) 

  Complete selection





Selecting/Canceling All Items
In ②, ⑤ → Check All or Uncheck All
→ ⑥

#### **Auto Backup**

Back up information to Memory Card at a specified frequency automatically. To enable Auto Backup, set Auto Sync Settings (S! Addressbook Back-up) to *On*; Auto Backup will be performed at 2:00 AM on the same day of the week by default.

#### Precautions

- Auto Backup does not start when:
- Memory Card is not inserted
- Battery is low/dead and not being charged
- Another function is active (end it and return to Standby)

#### At Auto Backup Time

Backup starts; Information window opens upon completion.

Select *Complete Auto Save* and press ot open backup result.

## Changing Settings

Follow these steps to back up once a week automatically:

- Auto Backup → ► Enter
  Handset Code → ●



Auto Backup Menu

- R Frequency Settings → ●
- Once Every Week → →
  Select day → → Enter
  time → ●

# Backing Up Once a Month In ②, Once Every Month → ● → Enter date → ● → Enter time → ● Disabling Auto Backup In ②, Don't Auto Backup → ● Disabling Encoding [Auto Backup Menu] Encode Settings → ● → Off → ●

#### **Memory Card to Handset**

Follow these steps to restore selected items:

- (3) (37)
  - If no file list appears, skip ahead to 3.
- Select file 

  Repeat ② to complete selection.







• To cancel, press 🔊.



Selecting Multiple Items at Once
In ②, ③ → Select option → ● →
From ④

Selecting/Canceling All Items
In ②, ⑤ → Check All or Uncheck All
→ ●

Changing Restoration Method

Changing Restoration Method

After ⊘, select item ▶ ⊚ ▶ Change

to Add Mode or Chg. to Overwrite

Mode ▶ ● From ⓒ

## **Getting Started**

Capture still images or record video.

#### **Detect Personal & Pet**

Locks focus on the face of a person or pet. Register people's faces; related information appears in Viewfinder upon face detection.

#### **Continuous AF**

Focus continuously adjusts as the framed subject's position changes.

#### **Select Camera**

002SH is loaded with preset camera modes tailored for various purposes/ occasions: select a camera mode to suit subject/shooting conditions.

#### **Album**

Sort saved images into up to 500 albums; create original albums as needed.

#### Important Mobile Camera Usage Notes

- Clean dust/smudges from lens cover with soft dry cloth before use.
- Mobile camera is a precision instrument, however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Exposing lens to direct sunlight may damage color filter and affect image color.

#### Auto Shut-off

• Before image capture/recording, mobile camera shuts down after a period of inactivity and handset returns to Standby.

#### **Shutter Click**


 Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.

## **Photo Camera & Video Camera Overview**

Focus modes and sizes shown below are defaults; those with \* are fixed.

		Description	Focus Mode	Size
	Easy Auto Camera	Capture nearby subjects easily (settings partially changeable)	Normal(Face)	14M
Standard Shooting	Pro Auto Camera	Capture nearby subjects easily (settings mostly changeable)	Normal(Face)	14M
	Quick Camera	Capture distant scenery quickly	Manual Focus	3M
	Scene Cameras	Select one according to subject/shooting conditions	Normal(Face)	14M
Subject	Monochrome Camera	Capture black and white images	Normal(Face)	14M
&	Sepia Camera	Capture sepia images	Normal(Face)	14M
Conditions	Long Exposure Camera	Capture images in low light (fireworks, night scenes, etc.)	Normal(Face)	14M
	Shot Memo Camera	Improve text readability in captured memos, tables, etc.	Center Auto Focus	5M
	Wallpaper Camera	Show mock Clock/Calendar in Viewfinder to capture image and set it as Wallpaper	Normal(Face)	Wallpaper
Specific	Auction Camera	Use guide to capture multiple images for posting on auction sites	Center Auto Focus	VGA
Objectives	Messaging Camera	Capture and send images via mail easily	Normal(Face)	VGA
	Blog Camera	Capture and post images to blogs easily	Normal(Face)	VGA

		Description	Focus Mode	Size
	Look Back Camera	Play sound and release shutter automatically when subject turns face to camera	Normal(Face)	14M
Auto Shutter Release	Smile Camera	Release shutter automatically when subject smiles	Normal(Face)	14M
	Self Timer Camera	Release shutter automatically after selected time elapses	Normal(Face)	14M
	Rapid Shooting Camera	Capture up to 100 images rapidly	Normal(Face)	Full HD
Consecutive Shooting	Three-Shot Camera	Capture three consecutive images of up to 14M size automatically	Normal(Face)	14M
	Best Select Photo	Select best image from a series of rapid shot images including moments immediately before shutter releases	Center Auto Focus	QVGA
	Fish-eye Camera	Capture images with enhanced barrel distortion as if shot with full-frame horizontal fisheye lens	Center Auto Focus	3M
Fun Cameras	Miniaturize Camera	Capture images of scenery, etc. that resemble miniature models as if shot with a tilt-shift lens	Center Auto Focus	5M
	Drawable Camera	Drag on captured image to scribble or sketch	Normal(Face)	Wallpaper

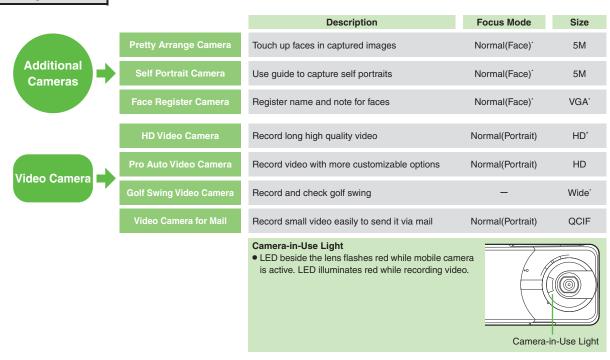

## Capturing Still Images

#### **Viewer Position**

position

(Landscape Display Touch Panel Operations) Follow these steps to capture someone's image via *Pro Auto Camera*:









Tap Pro Auto Camera

Pro Auto Camera activates.

## Frame subject on Display



Photo Viewfinder (face detected)

- Focus is locked on the face of a detected person or pet automatically for Pro Auto Camera, Easy Auto Camera, etc. (Face auto focus)
  - When multiple faces are detected, frame appears on each face; tap one on which to lock focus.
- Detection may fail depending on face angle, distance from subject or environment.
- To use Detect Personal, first register a face with a name, etc. If camera detects registered face, saved name, etc. appears in Viewfinder; handset automatically sorts saved images to designated folder (Portrait & Pet).
  - Camera cannot detect registered faces and pets at the same time.






Captured Image Window

Shutter clicks; captured image appears.



Tap 💭

- Image is saved. (Viewfinder returns.)
- Open saved images via Album or Data Folder.

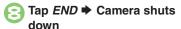

#### Mobile Light

 Mobile Light may illuminate automatically depending on ambient light level or camera mode. Follow these steps to turn setting off:

[Photo Viewfinder] Tap 


Tap

May require access via MENU depending on camera mode.



# Pre-Image Capture Operations (Touch Panel)

Indicators appear on Display. Tap one to adjust the corresponding setting or execute the assigned command. Indicators vary by camera mode.

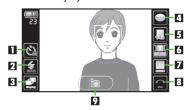

1	Self-timer	6	Switch cameras
2	Mobile Light	7	MENU
3	Toggle indicator view	8	Exit
4	Scene	9	Release shutter
5	Picture Size		

Toggling Indicator View
[Photo Viewfinder] Tap

#### Additional Operations

Zoom In/Out	Drag up or down across image
Adjust Brightness	Drag left or right across image
Focus Lock	Tap image

Tap *MENU* for more functions/settings.

#### **Opening Help**

[Photo Viewfinder] Tap *MENU* → Tap *Help* twice

#### Clamshell Open

(Portrait Display Handset Key Operations) Follow these steps to capture distant scenery via *Quick Camera*:





Photo Viewfinder appears.







 Faces are not detected automatically for Quick Camera. For close-up portrait shots, press and use to adjust focus, then press .
 (Manual Focus)





- Shutter clicks; captured image is saved. (Viewfinder returns.)
- Open saved images via Album or Data Folder.





#### **Mobile Light**

 Mobile Light may illuminate automatically depending on ambient light level or camera mode. Follow these steps to turn setting off:



# Pre-Image Capture Operations (Handset Keys)

Zoom In/Out	<b>③</b> / <b>②</b>
Adjust Brightness	€)/⊙
Toggle Mobile Light Mode	# 52
Toggle Indicator View	(P)
Open Help	() to (t)

#### **Focus Lock**

Lock focus on subject; camera continuously focuses on the subject even if it moves.

- Chase Focus tracks the subject's movement, and Continuous AF adjusts focus as the distance to the subject changes.
- May be unavailable depending on camera mode.
- In Photo Viewfinder, frame subject in center of Display
- Half press and hold a or tap subject
  - Focus Lock is set.
  - To cancel, release or tap subject again.



- Captured image appears.
  - Tap nor **OK** to return to Viewfinder.

# Using Handset Keys [Photo Viewfinder] Frame subject in

center of Display → ♠ ♠ ●

■ To cancel Focus Lock, press again before pressing .

#### **Chase Focus**

 Camera distinguishes the subject by color; light-colored subjects or subjects having the same color as the background may not be tracked correctly.

#### Image Size & Usage

002SH Picture Size & Corresponding Usage:

_	oozon notaro olzo a oomooponaliig ooago	
	14M	A3 prints
	10M	B4 prints
Ī	5M	B5 prints
Ī	3M	L to 2L prints
	Full HD	Full HD display wallpaper
	Wallpaper	002SH Wallpaper
	VGA	Blog posts, etc.
	QVGA	Mail attachments, etc.

#### **Smart Resize Zoom**

 At 14M(Smart Resize), Picture Size changes with zoom scale (print quality may be affected); check the size on indicator before image capture.

## Selecting Camera by Use

#### **Switching Cameras**

(Landscape Display Touch Panel Operations)

In Photo Viewfinder, tap camera selection indicator (⊞, etc.)



- Swipe to select camera
- Tap camera
  - Selected camera activates.
  - For subsequent operations, see "Using Selected Camera."

#### **Using Selected Camera**

(Landscape Display Touch Panel Operations)

- Rapid Shooting Camera
- 🚺 Tap 🚍
- Tap mode twice
- Frame subject on Display
  - After image capture, thumbnails appear.
- 🚹 Tap 🖫
- 🚍 Tap *Save* 
  - Save process may take some time depending on the number of captured images. If a confirmation appears, tap Yes, then tap OK.
  - Saved images appear in Data Folder (Pictures > Shooted Pics).

#### Shooting Manually

After <sup>(3)</sup>, press **(a)** for each frame **(b)** From <sup>(4)</sup>

#### **Saving Selected Images**

After ⓒ, tap image (☑) → Tap Save
Using Photo Recommender

- Follow these steps to save an image from recommended images (automatically selected in terms of Face, Move,
  - Sharpness and Macro, one for each).

After ⊚, tap ᠍ → Tap image (☑) → Tap Save

Creating Strobe Photo (Composite Image)

After ⑤, tap ☒ → Tap Yes → Tap OK

- Tap 💭 to save.
- May be unavailable depending on rapid shooting mode.

#### Look Back Camera

- Frame subject on Display ▶
  Tap ♣, ♣ or ♣
  - Sound plays.
- Face detection activates and shutter releases; image appears
- Tap OK

   Viewfinder returns.
- Smile Camera
- Frame subject on Display
- Smile detection activates and shutter releases; image appears
- Tap OK

   Viewfinder re
  - Viewfinder returns.

#### Self Timer Camera

- Frame subject on Display
  - Countdown starts.
- Shutter releases after approximately ten seconds; image appears
- Tap *OK*
- Viewfinder returns.
- Wallpaper Camera
- Frame subject on Display
  - Wallpaper preview appears.
- Tap Setting
  - Image is set as Wallpaper. (Viewfinder returns.)
- Auction Camera
- Frame subject on Display
  - First preview image appears.
- 🔁 Tap 📁
  - Repeat ① ② to capture two more images following onscreen instructions.
- R Tap Yes

#### ■ Messaging Camera

- Frame subject on Display
- Tap 🔼
  - Mail Composition window opens.
     Complete and send message.
- Shot Memo Camera
- Frame subject on Display
- Tap 

  Correction starts

  Swipe to select preview image 

  Tap Apply
- 🕞 Tap 🗊
  - Viewfinder returns.

#### Pretty Arrange Camera





- Face is touched up.
- Tap Apply → Tap 💭 Viewfinder returns

#### **Adjusting Each Effect Separately** After @, tap corresponding indicator (M. etc.)

■ Tap the same indicator repeatedly for further adjustment.

#### When Multiple Faces are Detected

• After ②, tap 📓 to touch up all faces. To touch up select faces, follow these steps: Tap frame (♥) → Tap 🖺 → 🕙

#### ■ Self Portrait Camera

Activate Self Portrait Camera with handset open and follow these steps:

Turn handset upside down



- Frame your face on Display and look into the lens
- Face detection activates, tones sound, and shutter releases; image appears
- Tap OK

Viewfinder returns.

#### Additional Cameras

Three-Shot Camera	Frame subject on Display  → Tap image →	
Calliera		
Best Select Photo	Tap <i>Save</i> ■ To save all images or use Photo Recommender, see P.7-8 "Rapid Shooting Camera."	
Scene Cameras		
Monochrome Camera		
Sepia Camera	Frame subject on Display	
Miniaturize Camera		
Fish-eye		
Camera		
Long Exposure Camera	Frame subject on Display  Shutter is left open for approximately 30 seconds before image capture.	
Blog Camera	Frame subject on Display  → Tap → Tap  Proceed with blogging	
Drawable Camera	Frame subject on Display	

## **Changing & Saving Camera Settings**

Change settings by purpose/shooting conditions; save frequently used settings as *My Camera* for future use. Some settings may be unavailable depending on camera mode (no corresponding indicators appear).

#### **Maior Items** Description **Focus Mode** Select Normal(Face), Center Auto Focus, Macro or Manual Focus Continuous AF Adjust focus as focus-locked subject's position changes; choose On or Off Focus Track focus-locked subject as it moves within framed image; choose On or Off **Focus Mark** Select focus frame design from Pattern 1 to Pattern 6 **One Touch Shutter** Release shutter upon tapping subject; choose On or Off Self-timer Select 10 sec., 5 sec., 2 sec. or Off Shutter **Shutter Mode** Select *Normal* (manual), *Egao* (smile detection) or *Furimuki* (face detection) **Shutter Sound** Select shutter click sound from Pattern 1 to Pattern 3 **Image Size Picture Size** Select image size from 14M(3240x4320) to QVGA(240x320) & **Picture Quality** Select image quality from High Quality, Fine and Normal Quality



#### **Changing Settings**

(Landscape Display Touch Panel Operations) Example: Picture Quality

In Photo Viewfinder, tap



Tap Picture Quality twice



- Tap quality twice
  - Viewfinder returns.
  - For some settings, current status appears in their indicators.

#### **Saving Changed Settings**

(Landscape Display Touch Panel Operations)
After image capture, save changed settings
with a name and captured image; load saved
settings in the same manner as switching
cameras.

May be unavailable depending on camera mode.

- Saving as My Camera
- In captured image window, tap Options → Tap Save as My Camera
  - Messages appear.
- Drag frame to specify image area



 The specified portion will be used as the camera's icon.

- Tap Assign
  - Tap My Camera Name:
  - **➡** Enter name **➡** Tap *Done*
  - 😭 Tap *Assign* 
    - My Camera is created.

# Entering Information After ⑤, tap Note: ▶ Enter text ▶ Tap Done ▶ ⑤

- Using My Cameras
- In Photo Viewfinder, tap camera selection indicator (⊞, etc.)
- Swipe to select My Camera
- Tap My Camera

## **Registering Faces (Detect Personal)**

Register people's faces; related information appears in Viewfinder upon face detection, and captured images are sorted into albums (Portrait & Pet) when saved.

- Register name, note and priority for up to ten faces.
- When multiple registered faces are detected, focus is locked to one with highest priority.




Viewfinder Information

#### **Saving Entries**


(Landscape Display Touch Panel Operations)



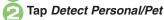



Use guide to find best position

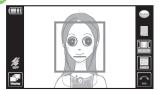

Guide turns red when face is detected.





 Window shown above opens when face is recognized correctly; if not, repeat ② - ⑤. Tap *Empty* 

Tap Name:

Enter name → Tap Done

## Tap Assign

- Entry is saved.
- The lower the entry number the higher the priority.

#### **Entering Information**

After ③, tap *Note:* ▶ Enter text ▶ Tap *Done* ▶ ⑤

#### **Setting Text Color**

After ⊚, tap Font Color: → Tap color


→ ⑤

Upon face detection, Viewfinder information appears in the selected color.

## Recording Video

#### **Precautions**

Do not cover Recorder Microphones while recording video.

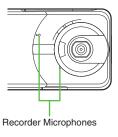

#### **Viewer Position**

(Landscape Display Touch Panel Operations) Follow these steps to record high definition video via HD Video Camera:

Record up to four seconds per shot on handset. Insert a Memory Card to record longer shots.



With handset open, (Long)



**Rotate Display to Viewer** position



Video Viewfinder (HD Video Camera)



## Frame subject on Display



· Recording starts after a tone.



- - · Recording stops with a tone.
  - Video is saved and plays back; Viewfinder returns.
  - Play saved video via Album, Data Folder or Media Player.

#### Incoming Calls

• If a call arrives before video is saved. recorded clip is temporarily saved. After the call, video is saved and plays back automatically: Viewfinder returns.

#### If Battery Runs Low

 Recording stops. (Recorded clip is saved.) **Switching Video Cameras** 

[Video Viewfinder] Tap MENU → Tap Simple Setting → Tap video camera



# Video Viewfinder Operations (Touch Panel)

Indicators appear on Display. Tap one to adjust the corresponding setting or execute the assigned command. Indicators vary by camera mode.



Toggling Indicator View
[Video Viewfinder] Tap

#### Additional Operations

Zoom In/Out	Drag up or down across image
Adjust Brightness	Drag left or right across image
Focus Lock	Tap image
Cancel Recording (Start Over)	Tap <i>CLEAR/BACK</i> (in Viewer position only)

Tap **MENU** for more functions/settings.

Changing Scene Setting by Subject

[Video Viewfinder] Tap → Swipe
to select scene → Tap scene

Opening Help

[Video Viewfinder] Tap MENU → Tap
Help


Switching Cameras

[Video Viewfinder] Tap camera
selection indicator ( → etc.) → Swipe
to select camera → Tap camera

#### Clamshell Open

(Portrait Display Handset Key Operations) Follow these steps to send recorded video via mail using *Video Camera for Mail*:



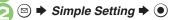






Video Viewfinder (Video Camera for Mail)

- Frame subject on Display
  - Recording starts after a tone.



- Recording stops with a tone.
- Video is saved and plays back.

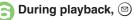



- Mail Composition window opens.
- S Complete message ▶ 🕏

Switching Video Cameras
[Video Viewfinder]
Setting
<b>→ •</b>

Video Viewfinder Operations (Handset Keys)

Zoom In/Out	<b>③</b> / <b>②</b>
Adjust Brightness	€)/⊙
Mobile Light On/Off	# 📆
Change Quality	* ************************************
Pause/Resume Recording	While Recording, 💬*
Capture Still Image	While Recording, <sup>™</sup>
Cancel Recording (Start Over)	(MEE) CO
Open Help	() 20th

May be unavailable depending on camera mode and recording size.

Press (a) to open Options menu for more functions/settings.

## **Checking Golf Swing**

Play two golf swing video files simultaneously for comparison. Be sure there is ample swinging space before recording golf swings.

#### Recording with Golf Swing Video Camera

(Landscape Display Touch Panel Operations)

- In Video Viewfinder, tap camera selection indicator (=, etc.)
- Swipe to select
  GolfSwingVideoCam and
  tap it
- Frame head within green circle
  - Countdown starts.
  - Recording starts after approximately ten seconds; video is saved and plays back automatically.

#### Self-Recording

 Activate Golf Swing Video Camera with handset open and rotate Display 180 degrees to record yourself.
 Viewfinder image appears reversed; to display a mirror image, follow these steps:
 Tap Options → Tap Settings → Tap Display Setting → Tap Mirror

#### **Comparing Golf Swings**

(Portrait Display Handset Key Operations) Play two video files recorded with Golf Swing Video Camera simultaneously in slow motion for comparison.

- Simultaneous playback may be unavailable for other video files.
- Golf Swing Play supports video recorded with Golf Swing Video Camera only.
- Simultaneous/synchronous playback may be unavailable depending on recording conditions (swing speed difference, background, etc.).
- ★ Entertainment ★ ●Media Player ★ ●
- Videos → Golf Swing
  Play → ●
- Select storage media →
  - Select first file ▶ (□/☑)
  - Select second file ▶ (□/☑)

- **6** 🔊
  - To hide message, press ☒.
- **7** •
  - Synchronizing process starts.
- 80
  - Slow motion playback starts.

#### **Adjusting Head Position**

In  $\bigcirc$ ,  $\bigcirc$   $\Rightarrow$   $\bigcirc$  (Chg. Up) or  $\bigcirc$  (Chg.Low)  $\Rightarrow$   $\bigcirc$  Move circle to frame head  $\Rightarrow$   $\bigcirc$   $\Rightarrow$   $\bigcirc$   $\Rightarrow$   $\bigcirc$ 

Setting Swing Direction & Point of View In ⊘, ⊚ ⇒ ⊚ (Chg. Up) or ♡ (Chg.Low) ⇒ ⊚ (Prev.) or ♡ (Next)

ledow

■ In pause, press to advance frame. Replaying during Playback


**⊙** 

Playing at Normal Speed In (3, (Long)

## **Changing & Saving Video Camera Settings**

Change settings by purpose/shooting conditions; save frequently used settings as *My Video Camera* for future use. Some settings may be unavailable depending on camera mode (no corresponding indicators appear).

## Major Items Description **Focus Mode** Select Normal(Portrait), Manual Focus or Macro **Focus** Track focus-locked subject as it moves within framed image; choose *On* or *Off* Video Size **Picture Size** Select recording size from HD(1280x720) to QCIF(176x144) & **Video Quality** Select High Quality, Fine or Normal Quality Record video with sound; choose On or Off Microphone Select Wide, Focus or Chase Microphone Mode

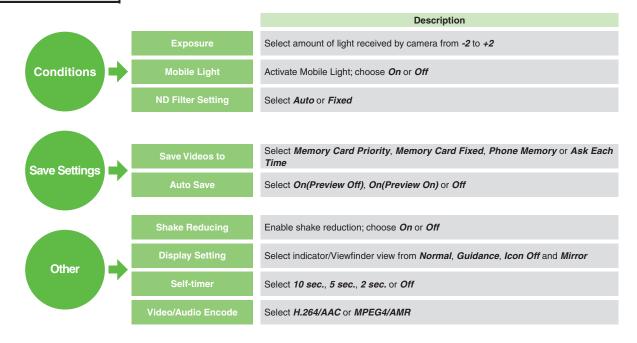

#### **Changing Settings**

(Landscape Display Touch Panel Operations) Example: Picture Size (recording size)

In Video Viewfinder, tap



Tap Picture Size



- R Tap size
  - Viewfinder returns.
  - For some settings, current status appears in their indicators.

#### **Saving Changed Settings**

(Landscape Display Touch Panel Operations) Save changed settings as My Video Camera and load them as needed.

Change settings beforehand.

- Saving as My Video Camera
- In Video Viewfinder, tap

  MENU → Tap Simple Setting
- Tap Save as My Video1 or Save as My Video2
  - Settings are saved as My Video Camera.

Overwriting Saved My Video Camera After ②, tap *Yes* 

- Using My Video Cameras
- In Video Viewfinder, tap

  MENU → Tap Simple Setting
- Tap My Video Camera

## **Opening Saved Images via Album**

#### **Basics**

Handset sorts saved images (still images and video) into up to 500 albums of the following preloaded categories automatically; create original albums as needed.

Portrait & Pet	Stores portraits (sorted into albums by registered face) and images containing detected pets	
Event	Stores images sorted into albums by period scheduled in Calendar	
By Camera	Stores images sorted into albums by camera mode	
By Date	Stores images sorted into albums by captured date	

#### **Album Images & Source Files**

 Album stores only file locations. (Source files are saved in Data Folder.) Images disappear from Album if source files are deleted.





A single image can be sorted into multiple categories (e.g., a portrait captured using a specific camera is stored in *By Camera* and *Portrait & Pet*). In addition, a single image with multiple registered faces will be stored in each subject's album in *Portrait & Pet*.

#### **Opening Albums**


(Portrait Display Handset Key Operations)





Album Window

- Recommend shows a recently updated album.
- Popular Top 10 stores ten most frequently opened albums.

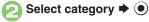



Album List

Albums within appear.

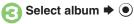




Image List

(3) Select image



· Image appears.

 For Rapid Shooting Camera and Three-Shot Camera albums, images appear sequentially (Continuous Slide); press ( ) to stop.

**Opening Latest Album** After 1, (Y) Slide Show (Still Images) After ②, select album ▶ 🖾 ▶ Slide Show **▶** ●

#### Creating Original Albums

Create new albums by selecting sort keys (from Portrait & Pet. Event and By Camera) and specifying date and time. Follow these steps to create an album by selecting sort keys from Portrait & Pet and By Camera:

In Album window, 🖾 **▶** Create Original Album 

◆ 

●



Choose Portrait & Pet 

◆ (•)





• Repeat © to complete selection.





Select Camera type 

◆ 

●








Repeat (a) to complete selection.





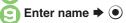



**Previewing Created Album** After 

Album Preview 

●

■ To return, press .

**Editing Sort Keys** [Album List] Select album ▶ 🖾 ▶ Edit Auto Sort Keys → ● Select 

■ For items other than Select Date/Time press ( again.

## **Area Setup**

When activating TV for the first time, follow these steps to set up channels by area:





Setup confirmation appears.





Select region → ●





• After setup, channel list appears.





 To watch TV, select *Digital TV* and press .

Watching TV without Completing Area Setup In ⑤, No Preference ▶ ⑥

Adding Reception Areas

② → ② → Set Channels → ● →

Change Area → ● → Select Area →

② → Set Area Info → ● → From ③

#### Important Digital TV Usage Notes

- 002SH is exclusively for use in Japan.
- When using TV while charging battery, separate AC Charger and Antenna to avoid interference.

#### **Digital TV Antenna**

Pulling Antenna by its top, extend it fully.

- Adjust angle to find best reception. (Unless transmission source is near, extend it for better reception.)
- After use, gently retract Antenna. Do not carry handset with Antenna extended; damage may result.



## Watching TV

Complete Area setup (P.8-1) first.





TV Window

# Use Keypad to select a channel

- Use to switch channels one by one; Long Press to find channel with stable signal automatically.



• Press (\*\*) to answer calls.

#### When Answering Voice Calls with Memory Card Inserted

 Current program is temporarily recorded; start playback after the call. (Time Shift)

#### **Incoming Messages**


 Double beep sounds and New Message notice appears. Long Press (22) to access messages.

#### **Important Digital TV Usage Notes**

- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programs may not be viewable or record properly when:
  - Too far from or too close to broadcasting stations
  - In mountainous areas or near tall buildings
- Aboard trains or in moving vehicles
- Near high-voltage lines, neon lights or wireless base stations
- Near railroad tracks or highways
- Anywhere a jamming signal is broadcast/reception is unstable

#### Watching TV in Widescreen

Viewer Position

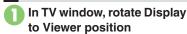

Hold handset in landscape




- TV window rotates with handset orientation.
- Drag left or right across TV image → Tap channel
  - Alternatively, tap channel key then drag left or right to select channels.

Activating TV from Standby in Viewer Position

Tap MENU → Tap TV → Tap Digital TV

## Clamshell Open

In Motion Control menu, set Display Change to *Manual at Open(press* ) or *Manual(press* ) first.

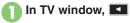



- TV window rotates 90 degrees clockwise.
- Use Keypad to select a channel
  - Multi Selector response changes with TV orientation.

#### **Major TV Window Operations**

## Handset Keys

Toggle Panel On/Off	¥7)
Change Area	(TO)
Volume Control	<b>4</b>   <b>&gt;</b>
Toggle Display Size (portrait)	(B.A.)

#### Touch Panel


Switch Channel	Drag left or right across TV image ▶ Tap channel	
Volume Control	Drag up or down across TV image	
Toggle View	Tap TV image	
Change Display Size	Pinch or spread across TV image <sup>1</sup>	
Change Data Broadcast View	Pinch or spread across Data Broadcast area <sup>1</sup>	
Change Area	Tap Area name <b>→</b> Tap Area²	

<sup>&</sup>lt;sup>1</sup>Available in portrait orientation.

#### **Using Options Menu via Touch Panel**

 Tap *Options*, then tap menu items to proceed.

## **Panel & Channel Area Descriptions**

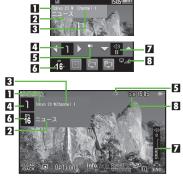

1	Area name	5	Sound Channel
2	Program name	6	Channel
3	Station name	7	Volume
4	Channel key	8	Signal strength*

<sup>\*</sup>The more bars the better.

Indicator position varies with display size.

<sup>&</sup>lt;sup>2</sup>Available in landscape orientation.

## **Recording Programs**

Clip is saved to handset (or Memory Card, if inserted).

#### Precautions

- Saved files cannot be forwarded or attached to messages.
- 002SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank Mobile is not liable for any damages resulting from accidental loss or alteration of recorded content.

#### **Dubbing 10**

 002SH supports Dubbing 10 copy protection scheme that allows recordings to be copied from handset to Memory Card. Open file properties for remaining copy count.

# In TV window, ♠️ (Long) ▶ Recording starts



Recording Window

- Changing volume, etc. does not affect recordings.
- Illumination Light flashes to indicate TV signal strength: Move to a place where Illumination Light flashes sky blue (moderate) or blue (strong).



# Recording Programs in Landscape [TV Window] (Long)

- To stop, Long Press while recording.

  In Viewer Position
- Tap to start recording. To stop, tap .
   In landscape orientation, Long Touch

Hold ●. (To stop, Long Touch Hold ■.)

#### Chase Play (Playing while Recording)

 Watch a program from the beginning while recording it on Memory Card.

[Recording Window] ® (Long) → Playback starts → ఄ (Long) → Playback stops

To start playback in Viewer position, tap
 Options ⇒ Rec/ō ⇒ Ō Play. Long

 Touch Hold ■ to stop playback.

## Memory/Battery Runs Low or Video Call is Accepted

- Recording stops. (Recorded clip is saved.) Saving Files via the Internet while Recording
- While recording programs to handset, be sure there is enough free memory before saving files.

## **Playing Recorded Programs**





Video List

- mi indicates the file is unplayable.
- Select file → ●



Playback Window

- Playback starts. (The last played file plays from where it stopped.)
- (Long) → Playback stops

## Switching Video Lists

After ①, → Change to Phone or Change to MemoryCard → ⊙

#### **Major Playback Operations**

Adjust volume or change display size following the same operations used while watching TV.

#### Handset Keys

Rewind/Fast Forward	<b>⊙</b> 1, 2/ <b>⊙</b> 1
Skip (Forward/ Backward)	(# ,±)/( <del>X</del> ==)
Pause <sup>3</sup>	( in landscape)
Set Marker	<b>₽</b> ^4
Toggle Panel On/Off	(v) in landscape)

<sup>1</sup> Each press increases speed. To resume
normal playback, press 🐨 (💿 in landscape)
<sup>2</sup> Long Press to replay. (Available when no
Marker is saved.)

<sup>&</sup>lt;sup>3</sup>In pause, use of to reverse/advance frame. 
<sup>4</sup>Not available during Time Shift playback.

#### Touch Panel

Rewind	Drag left across TV image <sup>1</sup>		
Fast Forward	Drag right across TV image <sup>1</sup>		
Pause	Tap <b>Pause</b> or 2		
Stop Playback	Long Touch Hold ■		
Skip to Any Point	Drag slider		
Toggle View	Tap TV image		
Change Display Size	Pinch or spread across TV image <sup>3</sup>		
Change Data Broadcast View	Pinch or spread across Data Broadcast area <sup>3</sup>		

<sup>&</sup>lt;sup>1</sup>Release to resume normal playback.

Long Press to split file.

<sup>&</sup>lt;sup>2</sup>In pause, drag left/right across TV image to reverse/advance frame.

<sup>&</sup>lt;sup>3</sup>Available in portrait orientation.

## TV Timer & TV Recording Timer

- In TV window, ☑ → Rec./
  TimeShift → ●
- Reservation List → ●
- Manual → → Watching or Recording → ●
- Enter start date/time 

  Enter end date/time 

  ●
- Channel: → → Select channel → → 🌣

## Setting Timer via EPG

In ②, From TV Listing ▶ ●

Refer to the application's help menu for operational instructions.

## Timer Recording Precautions

Confirm target channel reception.

- End the current operations.
- Be sure battery is charged adequately and there is enough free memory.

## At Timer Time (TV Alarm Time)

TV and Alarm activate.



Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.

#### While Using Another Function


 TV activates via Multi Job and target program/recording starts. However, if Multi Job cannot activate in the current state, TV may remain off, or the current function may end automatically (unsaved images, messages, Phone Book entries, etc. may be deleted). End all active functions/applications before Timer time.

## **Accessing Webcasting Sites (Japanese)**

Access Yahoo! Streaming and other webcasting sites.

- Subscription to Keitai Wi-Fi may be required to use some services/content.
- Read information on the source site.



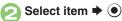

• Follow onscreen instructions.

#### Menu Updates

Information window opens for Videos/ Music menu update notice. Follow these steps to open it:

- In Information window, *Menu Update Notif.* → ●
- Yes →
  - Follow onscreen instructions.

# Suppressing Information Window for Menu Updates

- Settings ● Phone/
- → Videos/Music Menu Updates →
- Notification Off → 
   Notification Off →

#### Streaming

Most media on webcasting sites are provided as streams; handset plays media while it downloads.

## Playing Media Streams

Select file ⇒ ●



- Playback starts.
- For playback window description, see P.8-11 "Video Playback Window Description."

# Stopping Playback During playback,


#### **Playback Sound**


 Streaming sound is heard from Speaker/ Headphones regardless of Sound Output setting in Media Player.

## Media Player Basics

Use Media Player to play music/video on 002SH.

- Download media files from Mobile Internet sites via Media Player or transfer files from PCs.
- Transfer PC music files and save them on Memory Card.

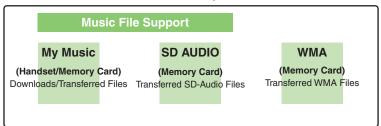

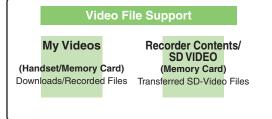

#### **Playback Precautions**

- Media Player is not compatible with some recording/playback formats. Files may not play depending on Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming/progressive download).
   Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.

## Compatibility

• Files transferred from PCs cannot be used as ringtones or System Sounds.


## **Downloading Media Files**

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.







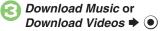

Follow the links to download media

## Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

### **Handling Transferred Files**

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

## Saving WMA Files

Follow these steps to save WMA files via compatible software:

(Copy protected files can only be played on the handset with which the files were transferred.)

# Connect handset to a PC via USB Cable



- MTP Mode →
  - Copy music from PC. Refer to the software's help menu for operational instructions.
- ② → Yes → →
  Connection ends

Disconnect USB Cable.

If Menu in ① Does Not Appear

Follow these steps:

Tools → ⊙ → ⊙ Connectivity
 USB Mode → ⊙ → From ⊘

Operations on the PC may be required; if prompted, follow onscreen instructions.

## **Playing Music**

- Media Player → → Music → ●
- My Music → Select tab (folder)



Music Playlists Window

- All Music ⇒ ●
- Select file ▶ ●



Music Playback Window

 Album art appears for compatible Chaku-Uta Full<sup>®</sup> files. (WMA album art is not supported.)

## Using Other Functions while Playing Music After (3), (2012) or (3)

- To stop playback, follow these steps in Standby:
  - ③ → Yes → ●

Playing SD AUDIO or WMA Files In ⊚, SD AUDIO or WMA → ● → From ②

**Searching Music Files** 

After ②, ⑤ → Search → ⑥ → Enter search text → ⑥

- Lyric Display-Compatible Files
- Press to display lyrics.

## Major Music Playback Operations

Replay	(Long Press: Rewind*, Double Press: Skip Backward)	
Skip Forward	(Long Press: Fast Forward)	
Volume Down	(Long Press: Mute)	
Volume Up or Cancel Mute	<b>③</b>	
Pause	•	
Stop	In Pause,	
Switch Sound Output	(Long)	
Open Help	() 25 g	

\*Release for playback.

## Music Playback Window Description



1	Title	8	Pause
2	Artist name	9	Sound Effects
3	Playback Mode	10	Information link
4	Status		Elapsed time
5	Track number	12	Volume control
6	Playback slider	13	Skip forward
7	Replay		

## **Playing Video**






My Videos → ● Memory Card or Phone Memory → ●



Video Playlists Window



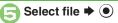



Video Playback Window



Playing SD VIDEO Files
In ⊗, SD VIDEO ▶ ● 

Searching Video Files
After ②, ⊚ ▶ Search ▶ ● ▶ Enter
search text ▶ ●

## At Alarm Time

• Playback pauses.

Video Recorded on Other Devices

Video image may appear rotated.

## Major Video Playback Operations

For volume up/down, pause, sound output or help, see **P.8-10** "Major Music Playback Operations."

Fast Forward/ Rewind	<b>⊘</b> / <b>⊙</b> *	
Slow Motion Playback	In Pause, 🗒	
Advance/ Reverse Frame	In Pause, ⊙/⊙	
Replay	⊙ (Long)	
Skip Forward/ Backward	# 5 d / X min	
Toggle View	(Interface On/Off) (2 (Display Size) (3 (Aspect)	

\*Each press increases speed.

## Video Playback Window Description



Ι	Title	6	Elapsed time
2	Author name	7	Volume
ß	Clip number	88	Information link
4	Status	9	Sound Effects
5	Playback Mode	10	Pause

## **Using Playlists**

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre.

- Playlists store only file locations. Source files remain in All Music or All Videos.
- Music or Ring Songs-Tones sub folder containing music files appear in Playlists window; select a folder to play the files within it.

## Adding to Playlist

Follow these steps to add a music file to  $\mathcal{I}V\mathcal{I}UX\mathcal{F}1$ :

- Media Player → → Music → ●
- My Music → ●



Playlists Window

- All Music → Select file
  → □
- ⑤ Add to Playlist ⇒ ⇒ プレ イリスト1 ⇒ ●

## **Renaming Playlists**

- In Playlists window, select Playlist ▶ ⊠
- Edit List Title → ► Enter name → ●

## **Customizing Standby Display (Japanese)**

Paste various widgets (applications) to Standby to access/activate information/ functions immediately from Standby.



## Saving Widgets to Standby


Save up to three widgets (excluding S!速報 ニュース/S!ともだち状況, 歩数計 and 家計簿).









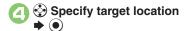

## **Using Widgets**





 Widget activates; follow onscreen instructions.

## **Unlocking Temporarily**

⑤ → 🖺 → ⑥ → Enter Handset Code → ⑥


## Removing Widgets from Standby





Remove → ●

## **Obtaining Widgets**

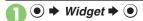



Mobile Widget Menu



## **Installing Widgets**

Some widgets may need to be installed manually; follow these steps:
 [Mobile Widget Menu] Widget
 Contents → ○ → Select widget →
 ○ → Install → ○ → Yes → ○


Activating Widgets Not Saved in Standby [Mobile Widget Menu] Widget Contents → ● Select widget → ●

## **Deleting Widgets**

- In Mobile Widget menu, Widget Contents ▶ ●
- Select widget 

  S/速報ニュース/S/ともだち状況、歩数計
  and 家計簿 cannot be deleted.
- Delete → Yes → ●

## **Deleting All Widgets**

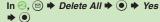

If there is a widget saved in Standby, a confirmation appears; follow onscreen prompt.

## **Standby Shortcuts**


Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

## Saving Shortcuts to Standby





- Corresponding icon appears.
- >> appears when more items are available.

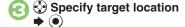

## Saving from Menu/Window

 Follow these steps in Options menu: (Available when Set as StbyShortcut appears.)

Set as StbyShortcut → ● → Standby Screen → ●

## **Using Shortcuts**



 Menu/window opens or command is executed.

## **Unlocking Temporarily**



## **Removing Shortcuts from Standby**



## Icon View

Save shortcuts to functions, files, folders, widgets, etc. to Icon View for easy access.

## Saving Shortcuts to Icon View

- If selected page is full, remove icons first.
- Installed widgets are saved automatically.





Icon View Page

Press 
 or 
 or 
 oto open next or previous page. (Press 
 on 
 in Page 1 to return to Standby.)





- Corresponding icon appears.
- >> appears when more items are available.

# 

## Saving from Menu/Window

 Follow these steps in Options menu: (Available when Set as StbyShortcut appears.)

Set as StbyShortcut → ● → Select page or New Page → ● → Specify target location → ●

## When Five or More Pages Exist

- A confirmation appears after ①. Choose
   Yes or No and press ②.
  - To disable confirmation, press

## **Using Shortcuts**



Press 
 or 
 or 
 oto open next or previous page. (Press 
 on 
 in Page 1 to return to Standby.)

## Accessing Last Opened Page (Long)

## Removing Shortcuts

- On Icon View page, select icon ▶ ⊠ (Long)
- Cancel Icon → ●

## **Customer Service**

For information about SoftBank handsets or services, call General Information or see SoftBank Mobile Website. For repairs, call Customer Assistance.

### ■ SoftBank Mobile Customer Center

# General Information From a SoftBank handset, dial toll free at 157

From a landline/IP phone, dial toll free at 0800-919-0157

Customer Assistance
From a SoftBank handset, dial toll free at 113
From a landline/IP phone, dial toll free at 0800-919-0113

If you cannot reach a toll free number, use the number (charges apply) below for your service area:

Hokkaido Area Tohoku Area Hokuriku Area Kanto, Koshinetsu Area	022-380-4380	Tokai Area	052-388-2002
Kansai Area	06-7669-0180	Chugoku, Shikoku Area Kyushu, Okinawa Area	092-687-0010

## ■ SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491** (toll free from SoftBank handsets)

If handset is lost/stolen, call this number immediately (international charges apply)

### ■ SoftBank Mobile Website

http://mb.softbank.jp/en/

## **Software Update**

Check for firmware updates and download as required.


#### Precautions

- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Update failure may disable handset. To reduce failure risk, make sure signal is strong and stable, and charge battery beforehand.
- Update will not start if another function is in use. Before updating software (or before scheduled update time), end all active functions/applications.
- Disconnect USB Cable beforehand to reduce failure risk.
- Always back up important information.
   SoftBank Mobile cannot be held liable for damages from lost information, etc.

## **Updating Software**

Packet transmission fees do not apply to updates (including checking, downloading and rewriting).



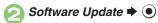






Follow onscreen instructions.

## **Update Result**

In ⊘, Update Result → ⊙

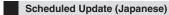

SoftBank Mobile sends update notice via SMS; read and change preset update schedule as needed. A confirmation appears at scheduled update time. Press 
o or wait a while for update to start.

## When Updated

Update success notification appears and handset reboots.

After reboot, completion message appears and Information window opens.

## **Update Result**

While Information window appears, *Update Result* ▶ ●

### Reboot Failure

 If handset does not return to Standby after update, power off, reinsert battery, then restart it. If it still does not restart, contact SoftBank Mobile Customer Center, Customer Assistance (P.9-1).

## **Safety Precautions**

Read safety precautions before using handset.


- Observe precautions to avoid injury to self or others, or damage to property.
- SoftBank Mobile is not liable for any damages resulting from use of this product.

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

<b>⚠ DANGER</b>	Great risk of death or serious injury from improper use
<b>⚠ WARNING</b>	Risk of death or serious injury from improper use
<b>⚠</b> CAUTION	Risk of minor injury or damage to property from improper use

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.



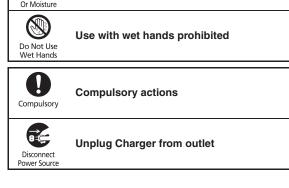


Handset, Battery, USIM Card, Desktop Holder, Charger (Sold Separately) & Memory Card (Sold Separately)



## Use specified battery, Desktop Holder and Charger only.

overheat, ignite, malfunction, etc.

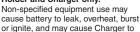



Compulsory

Do not disassemble, modify or solder handset or related hardware. May cause fire, injury, electric shock or malfunction. Battery may leak. overheat, burst or ignite. Modifying handsets is prohibited by the

Do Not Disassemble

Radio Law and subject to a penalty. Do not expose internal handset

parts, battery, Desktop Holder or Charger to liquids.

May cause overheating, electric shock,

fire, injury or malfunction. Use handset/

related hardware properly/appropriately.



Do not let liquid-exposed internal parts Or Moisture remain wet; do not charge wet battery.

Do not charge battery in or expose handset or related hardware to extreme heat (e.g., near fire or sources of heat, in direct sunlight. inside vehicles, etc.).



Prohibited

May cause warping/malfunction; battery may leak, overheat, ignite or burst. Handset or related hardware may become hot to the touch, leading to burn injuries, etc.

Do not force battery/Charger into handset. Confirm terminal/ connector orientation and retry. Battery may leak, overheat, burst, ianite, etc.

Do not place handset, battery,

cooking appliances.

ignite, malfunction, etc.

Desktop Holder or Charger in/on

ovens, microwave ovens, pressure

cookers, induction stoves or other


Battery may leak, overheat, burst or

ignite. Handset, Desktop Holder or

Charger may overheat, emit smoke.

WARNING



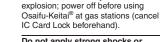

Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk. Handset use near petrochemicals or other flammables may cause fire/



Compulsory

Do not apply strong shocks or impacts.

Do not drop/throw handset or related hardware. Battery may leak, overheat. burst or ignite, resulting in fire, electric shock, malfunction, etc.

Prohibited

If there is unusual sound/odor. smoke or any other abnormality: Continued use may cause fire, electric shock, etc.; grasp plug to disconnect Charger, power off, then remove battery, being careful not to burn or



Compulsory

injure yourself. Keep liquids (water, pet urine, etc.)



or conductive material (pencil lead. metallic strip, metal iewelry, etc.) away from charging terminals, External Device Port or HDMI Port. May cause short circuit, resulting in fire, malfunction, etc.



#### Do not charge battery while handset is wet.

May cause electric shock or short circuit, resulting in fire, malfunction, etc. Prohibited

Do not expose handset or related hardware to hot air from dryers, etc. to dry them or for any other purpose. Avoid saunas or hot water. Battery may leak, overheat, burst or ignite. Handset, Desktop Holder or Charger may overheat, emit smoke,




## **⚠** CAUTION

Do not place handset or related hardware on unstable surfaces.

ignite, malfunction, etc.



Handset or related hardware may fall. resulting in injury, malfunction, etc.: take added care when Vibration is set or while charging.

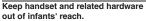



Infants may choke from swallowing handset or related hardware or be injured, etc.



If your child is using handset/ related hardware, explain all instructions and supervise usage. Misuse may cause injury, etc.



## **Battery**



## **⚠ DANGER**

Read battery label to confirm battery type: use/dispose of battery accordingly.

Symbol on Label	Battery Type
Li-ion00	Lithium-ion

Do not dispose of battery in fire. Battery may leak, burst, ignite, etc.




Prohibited

Do not damage battery (with a nail, hammer, foot, etc.) or subject it to strong impacts or shocks. Battery may leak, overheat, burst, ignite, etc.




Prohibited

Keep wire or other metal objects away from battery terminals. Do not carry/store battery with conductive material (pencil lead, metallic strip, metal jewelry, etc.).

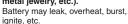

If battery fluid gets in eyes, do not rub: rinse with water and consult a doctor immediately.

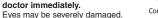



## **⚠ WARNING**

If battery fluid contacts skin or clothes, discontinue handset use and rinse with clean water immediately. May cause skin damage.



If battery does not charge properly. stop trying.



Battery may leak, overheat, burst, ianite, etc.

Compulsory

If there is abnormal odor, excessive heat, discoloration or distortion, remove battery, being careful not to burn or injure yourself. Avoid fire sources.

Continued use may cause battery to leak, overheat, burst, ignite, etc.

Keep battery away from pets. Pet bites may cause battery to leak, burst, overheat, ignite, etc.





Do not dispose of an exhausted battery with ordinary refuse.



Tape over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.

#### Handset

## **WARNING**

## Do not shine Mobile Light in eyes.


May temporarily affect eyesight or startle, leading to accidents.



CAUTION: Use of controls. adjustments or performance of procedure



other than those specified herein may result in hazardous radiation exposure. As the emission level from Mobile Light LED used in this product is harmful to the eyes, do not attempt to disassemble the cabinet. Service is limited to authorized service centers only.

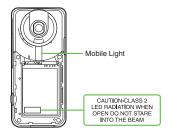

## ■ Mobile Light LED Properties

- a) Emission Duration: Continuous
- b) Wavelength White: 400 - 700 nm

c) Maximum Emission Output

White: 1.2 mW (4.3 mW inside handset)

### Do not use handset while driving or cycling.



Accidents may result. Phone use while driving or cycling is prohibited by law and subject to a penalty; park legally beforehand.




Power off near electronic devices that employ high precision control systems or weak signals.




Compulsory May cause electronic malfunctions, etc.

Take added care near these devices: Hearing aids, implanted pacemakers/ defibrillators and other electronic medical equipment; fire alarms, automatic doors and other automatic control devices.

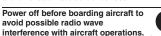



If mobile phone use is allowed on board, follow airline or cabin crew instructions regarding handset use.

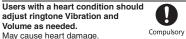

If thunder is heard while outdoors, power off: find cover.

There is a risk of lightning strike or electric shock.

Volume as needed.



he lost

breakage.

Do not look into Infrared Port during infrared transmissions. Eyesight may be affected.



Prohibited

## **⚠** CAUTION

Do not use handset when it may affect a vehicle's electronic equipment.



Handset use inside vehicles may cause electronic equipment to malfunction, resulting in accidents.



If you experience any skin irritation associated with handset use. discontinue handset use and consult a doctor.

Metal and other materials may cause skin irritation, rashes, or itchiness depending on your physical condition.

Keep handset away from magnetic cards, etc. Data on bank cards, credit cards. telephone cards, floppy disks, etc. may



Prohibited

Be sure there is ample space for Motion Control use; hold handset firmly and shake it gently. Handset may slip, resulting in injury or



#### Do not swing handset by strap or TV Antenna.

May harm self or others; strap may break, resulting in injury or handset malfunction/breakage.



Prohibited

Handset may become hot while in use, especially at high temperature. Prolonged contact with skin may cause burn injuries.



Compulsory

Always maintain some distance from Speaker while ringtones, music or other handset sounds play.



Excessive volume may damage ears or hearing.

Keep fingers, straps, etc. outside when opening/closing handset. May cause injury, breakage, etc.



Watch TV from a distance in good

liaht. Watching in poor light or too close may affect evesight.



Moderate handset volume when using Headphones. Excessive volume may damage ears

or hearing.



Compulsory

## Desktop Holder (Included) & Charger (Sold Separately)

## **↑ WARNING**

Do not cover/wrap Charger/Desktop Holder while charging.




Prohibited

Charger/Desktop Holder may overheat, resulting in fire, malfunction.


#### Use only the specified voltage. Non-specified voltages may cause fire,

malfunction, etc. AC Charger: AC 100V-240V Input

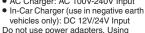

Charger with step-up/step-down transformer may cause fire, electric shock or malfunction

#### Leave Charger unplugged during periods of disuse; grasp plug to disconnect it.

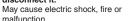

Use only the specified fuse for In-Car Charger.

Non-specified fuse may cause fire or malfunction. See In-Car Charger manual for details.



Disconnect Power Source

Compulsory

If liquids (water, pet urine, etc.) seep inside Charger, grasp plug and disconnect it immediately. May cause electric shock, smoke or



Power Source

If plug is dusty, grasp it and disconnect Charger, then clean with dry cloth.



Fire may result.

fire.

Do not use In-Car Charger in positive earth vehicles.

May cause fire, etc. Use in negative earth vehicles only.



Plug Charger firmly into the outlet, keeping the plug and Charger/ Desktop Holder charging terminals Compulsory away from conductive material

(pencil lead, metallic strip, metal iewelry, etc.).

May cause electric shock, short circuit. fire, etc.

Do not touch Charger plug with wet hands. May cause electric shock, malfunction. etc.



Do Not Use Wet Hands

Do not touch Charger if thunder is heard. May cause electric shock, etc.



#### Do not use Desktop Holder inside vehicles.

Extreme temperature or vibration may cause fire or damage handset, etc.



Prohibited

Do not expose Desktop Holder or Charger to liquids/high humidity (e.g., precipitation, bath/shower rooms, restrooms, etc.).



May cause fire, electric shock or malfunction.



### Grasp plug and disconnect Charger before cleaning.

May cause electric shock, etc.



Disconnect

Always grasp plug (not cord) to disconnect Charger. Pulling the plug by cord may damage

cord, causing electric shock, fire, etc.



Compulsory

Do not subject AC Charger to strong shocks or impacts while it is



plugged into the outlet. May cause malfunction or injury.

Do not touch charging terminals of Desktop Holder while it is connected to the outlet. May cause burn injuries.



Take care not to pinch fingers when opening/closing Desktop Holder Stand.



May cause injury, etc.

## Handset Use & Electronic Medical **Equipment**

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).

## **N** WARNING

Persons with implanted pacemaker/ defibrillator should keep handset more than 22 cm away.



Compulsory

Radio waves may interfere with implanted pacemakers or defibrillators.

If you intend to use electronic medical equipment other than implanted pacemaker/defibrillator outside medical facilities, consult the vendor on radio wave effects. Radio waves may interfere with electronic medical equipment.

Observe these rules inside medical facilities to avoid effects of radio waves on electronic medical equipment:



- Do not enter an operating room or an Intensive or Coronary Care Unit while carrying a handset.
- Keep handset off in hospitals.
- Even in lobbies or other places where handset use is permitted, keep handset off near electronic medical equipment.
- · Obev medical facility rules on mobile phone use.

Power off in crowds or trains where persons with implanted pacemaker/ defibrillator may be near.



Radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.

## **General Notes**

#### General Use

- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of handset/Memory Card files or settings. Keep separate copies of Phone Book entries, etc.
- Handset transmissions/TV signal reception may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference
- For proper use of Memory Card (sold separately), read the manual beforehand.
- Beware of eavesdropping.

Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

## Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

 Beware of harmful/malicious websites. Take added care when posting personal information, etc. • An export license may be required to carry the handset into other countries if it is to be used by or transferred to another person. However, no such license is required when you take the handset abroad for personal use on a vacation or business trip and then bring it back. Export control regulations in the United States provide that an export license granted by the US government is required to carry the handset into Cuba, Iran, North Korea, Sudan or Syria.

#### **Handset & Hardware Care**

- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank Mobile is not liable for any resulting damages.
- Use handset within 5°C 35°C (up to 40°C for brief periods in bath/shower rooms, etc.) and 35% - 90% humidity.
- Avoid extreme temperatures or direct sunlight.
- Handset/battery may warm during operation or while charging. This is normal.
   Malfunction resulting from misuse is not covered
- by the warranty.

   Exposing lens to direct sunlight may damage
- Exposing lens to direct sunlight may damage color filter and affect image color.
- Battery may not charge properly if ports/ terminals are obstructed by dust, etc. Clean with dry cloth, cotton swab, etc.
- Clean handset with soft dry cloth. Using alcohol, thinner, etc. may damage it.
- Avoid scratching Display.

- Avoid heavy objects or excessive pressure. May cause malfunction or injury.
  - Do not sit on handset in back pants pocket.
     Do not place heavy objects on handset inside handbags, packs, etc.
- Connect only specified products to External Device Port. Other devices may malfunction or cause damage.
- Do not force an HDMI cable (sold separately) into/out of HDMI Port.
- Place handset on a flat, stable surface when connected to a TV via an HDMI cable; tilting an HDMI cable relative to handset may prevent proper connection, causing malfunction, etc.
- Always power off before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.
- Do not power off while using Memory Card; may result in data loss or malfunction.
- When walking outside, moderate handset volume to avoid accidents.
- Avoid covering Speaker while using handset.

### Bluetooth® Function

SoftBank Mobile is not liable for any damages resulting from data/information leakage due to use of handset Bluetooth® function.

#### Precautions

The frequency band utilized by handset Bluetooth® function is shared with industrial, scientific or medical equipment, including household microwave ovens, etc., and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

- 1 Before using Bluetooth®, visually confirm that no other radio stations sharing the same frequency band are in use nearby.
- 2 Should interference occur between handset and other radio stations, move or cancel Bluetooth<sup>®</sup> function immediately.
- 3 For additional information and support, contact SoftBank Mobile Customer Center, General Information: From a SoftBank handset, call toll free at 157. To call toll free from a landline/IP phone, see P.9-1 "Customer Service."

#### Frequency Band

This radio station utilizes 2.4 GHz band with FHSS modulation. Maximum transmission radius is 10 meters (32 feet). It is not possible for the radio station to avoid using the frequency band of the mobile unit identification apparatus.



## Wi-Fi (Wireless LAN)

Wireless LAN (hereafter "Wi-Fi") uses radio waves to enable communication between compatible devices, thus allowing connection to a local area network from anywhere within the range. However, there is a risk of data interception unless security is established. It is advisable for the user to configure security settings on their own responsibility before using Wi-Fi.

- Do not use Wi-Fi near electrical appliances, audiovisual equipment or office automation equipment; may affect Wi-Fi transmission speed, availability, clarity, etc. (There is a possibility of interference especially when a microwave oven is in use.)
- The target access point may not be detected correctly if there are multiple access points nearby.

#### Precautions

The frequency band utilized by handset Wi-Fi is shared with industrial, scientific or medical equipment, including household microwave ovens, etc., and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

- 1 Before using Wi-Fi, visually confirm that no other radio stations sharing the same frequency band are in use nearby.
- 2 Should interference occur between handset and other radio stations, move or disable Wi-Fi immediately.

3 For additional information and support, contact SoftBank Mobile Customer Center, General Information: From a SoftBank handset, call toll free at 157. To call toll free from a landline/IP phone, see P.9-1 "Customer Service."

### Frequency Band

This radio station utilizes 2.4 GHz band with DSSS-OFDM modulation. Maximum transmission radius is 40 meters (131 feet).



## ■ Simultaneous Use with Bluetooth®

Both Wi-Fi (IEEE 802.11b/g) and Bluetooth® use the 2.4 GHz band. Therefore, Wi-Fi transmission speed, availability and clarity may be affected when Bluetooth® device is used near handset or when handset Bluetooth® is active. Should interference occur, discontinue use of the Bluetooth® device or cancel handset Bluetooth®.

- This handset supports Wi-Fi channels 1 13.
   Handset will not connect to access points set to other channels
- · Available channels vary by country.
- For use of Wi-Fi aboard aircraft, check with airline beforehand.
- In some countries/regions, such as France, there are restrictions on the use of Wi-Fi. If you intend to use Wi-Fi on the handset abroad, check the local laws and regulations beforehand.

## **Function Usage Limits**

These functions are disabled after handset upgrade/replacement or service cancellation: Camera; Media Player; S! Applications; TV. After a period of disuse, these functions may be unusable: retrieve Network Information to restore usability.

## **Mobile Camera**

- Mind your manners when using handset camera.
- Test the camera before capturing/recording special moments.
- Do not use handset camera in places where photography or videography is prohibited.
- Captured images may not be used/transferred without copyright holder (photographer, etc.) permission, except for personal use.

#### In-Call/Transmission Caution

During calls/transmissions, calling/transmission charges/fees apply even if other functions or operations are simultaneously in use.

## **Portrait Rights**

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity. which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/distributing their photographs without permission is illegal; use handset camera responsively.

## Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without copyright holder permission may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

### **Electromagnetic Waves**

For body-worn operation, this phone has been tested and meets RF exposure guidelines when used with accessories containing no metal, that position handset a minimum of 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

## **CE Declaration of Conformity**

## C € 0168①

In some countries/regions, such as France, there are restrictions on the use of Wi-Fi. If you intend to use Wi-Fi on the handset abroad, check the local laws and regulations beforehand.

Hereby, Sharp Telecommunications of Europe Ltd, declares that 002SH is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the original declaration of conformity for each model can be found at the following Internet address: http://www.sharp.co.jp/k-tai/

## **Battery - CAUTION**

Use specified battery or Charger only. Non-specified equipment use may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.

Do not dispose of an exhausted battery with ordinary refuse; always tape over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.

Charge battery in ambient temperatures between 5°C and 35°C: outside this range, battery may leak/overheat and performance may deteriorate.



## **European RF Exposure Information**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. Highest SAR value:

Model	At the Ear**	On the Body
002SH	0.441 W/kg	0.388 W/kg

As SAR is measured utilizing the device's highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the Network. The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a handsfree device to keep the mobile phone away from the head and body.

Please see Electromagnetic Waves on P.10-9 for important notes regarding body-worn operation. Measured in accordance with international guidelines for testing.

## **Headphone Signal Level**

The maximum output voltage for the music player function, measured in accordance with EN 50332-2 is 29.0 mV

### **FCC Notice**

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## F

## **FCC Information to User**

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient/relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



002SH

## **FCC RF Exposure Information**

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR, The SAR limit set by the FCC is 1.6 W/kg.

Highest SAR value: Model FCC ID At the Ear On the Body APYHRO00135 | 0.206 W/kg

0.631 W/kg

This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the ECC and can be found at http://www.fcc.gov/oet/fccid under the Display Grant section after searching on the corresponding FCC ID (see table on the left). Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Website at http://www.phonefacts.net.

## Specific Absorption Rate (SAR)

## 002SH meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the body, shall not exceed 2 W/kg². This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

The highest SAR value of 002SH is 0.406 W/kg. SAR tests were conducted with handset transmitting at its highest certified power level in accordance with testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network. Additional information on SAR can be obtained on the following Websites.

Ministry of Internal Affairs and Communications http://www.tele.soumu.go.jp/e/sys/ele/index.htm Association of Radio Industries and Businesses (ARIB) http://www.arib-emf.org/ (Japanese)

Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

## Water & Dust Resistance

### 002SH Water & Dust Resistance

002SH complies with IPX5 (former JIS protection level 5)<sup>1</sup> and IPX7 (former JIS protection level 7)<sup>2</sup> water protection standards as well as IP5X (JIS protection level 5)<sup>3</sup> dust protection standard, with Port Covers and Battery Cover closed firmly.

<sup>1</sup>IPX5 compliant means that a handset continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min.) discharged from a nozzle (inner diameter: 6.3 mm), from all directions (approximately 3 m from handset) for at least 3 minutes.

<sup>2</sup>IPX7 compliant means that a handset continues to function as a phone after being gently submerged to the depth of 1 m in still tap water at room temperature, left there for approximately 30 minutes, then removed from it.

<sup>3</sup>IP5X compliant means that a handset continues to function as a phone and its safety is maintained after being agitated in a device containing dust of 75 µm or smaller in diameter for 8 hours, then removed from the device.

 Water/dust resistance may be affected under some circumstances. Malfunction resulting from misuse is not covered by the warranty.  002SH is compliant with IPX5, IPX7 and IP5X water/dust protection standards. However, ingress of dirt, sand, mud, metal powder, food, beverage, etc. may cause malfunction.

## **Important Notes**

- Close Battery Cover and Port Covers firmly. Debris (hair, sand, fibers, etc.) trapped between Cover and base may expose handset to liquid/dust.
- If Battery/Port Cover is left open liquid exposure may cause handset malfunction/electric shock. Power off, then remove battery.
- If handset is wet, wipe it with dry cloth.
- Do not open/close Battery/Port Cover with wet hands or while handset is wet.
- Handset is only water resistant against fresh/tap water between 5°C - 35°C.

## **Precautions**

- Do not subject handset to soap, detergent, bath powder/oil, sea/pool/spa water, hot water, etc.
- Rinse off sea/pool water, beverage, dirt, sand, mud, etc. immediately; residue may cause malfunction if allowed to dry.
- Rinse off sand, dirt, etc. completely before use; any residue may damage handset causing malfunction.

- Do not soak handset in bath or pool; never use it in water (including opening/closing of handset and pressing keys).
- Handset is not resistant to water pressure.
   Avoid high-pressure water/shower (over 6 liters/min.) or water immersion.
- Do not expose handset to extreme humidity for long periods; avoid prolonged use in bath/shower rooms.
- Do not use in saunas. Avoid hot air from dryers, etc.
- Use handset within 5°C 35°C (up to 40°C for brief periods in bath/shower rooms, etc.) and 35% - 90% humidity.
- Avoid extreme temperatures (e.g., near stoves, inside refrigerators, etc.).
- Volume may be low when Microphone/ Earpiece/Speaker is wet; dry handset before use.
- Battery, Desktop Holder and optional accessories are not waterproofed or dustproofed.
- Do not subject handset to strong shocks or impacts; do not poke Microphone,
   Earpiece, Speaker, etc. with a cotton swab or sharp object; water/dust resistance may be affected.
- Avoid placing handset directly on sand.
   Sand may penetrate Earpiece, Speaker,
   etc., resulting in low volume.

- Sand, etc. trapped in the hinge may cause excessive friction or noise when opening/ closing handset.
- Touch Panel may not respond properly if wet or touched with wet fingers.
- Do not move handset directly from a cold place to a warm humid place; condensation may occur. Should this happen, dry handset naturally at room temperature.
- 002SH does not float on water.
- Keep handset out of heavy rain.
- Do not let liquid-exposed handset remain wet; exposure to cold may freeze liquid causing malfunction.
- Damaged Battery/Port Cover affects water/ dust resistance; contact a SoftBank Shop.

## **Charging Precautions**

- Battery, Desktop Holder and optional accessories are not waterproofed or dustproofed. Avoid exposure to liquids/high humidity (e.g., precipitation, bath/shower rooms, restrooms, etc.); may cause fire, electric shock or damage.
- Never charge battery while handset is wet; may cause fire or damage due to electric shock or short-circuit.
- Close Port Cover firmly after charging via External Device Port. Use Desktop Holder to prevent ingress of water and dust via External Device Port.
- Do not touch Desktop Holder or Charger with wet hands. Electric shock may occur.
- Do not use Desktop Holder or Charger in rooms in which water is regularly in use (kitchens, bath/shower rooms, etc.); may cause fire or electric shock.

## Care & Maintenance

- Proper care of the gaskets around Port Covers and Battery Cover is crucial for continued handset water/dust resistance.
   Observe the following:
  - Do not remove or damage gaskets. Keep them clean.
  - Do not insert sharp objects through Port/ Battery Cover gaps; may damage gasket and affect water/dust resistance.
- If Port/Battery Cover gasket is damaged or deformed, replace it with a new one.
   For gasket replacements, contact a SoftBank Shop.
- To maintain water/dust resistance, replace related parts every two years regardless of their condition. Customer-requested parts replacement incurs fees and requires handset submission. For details, contact a SoftBank Shop or SoftBank Mobile Customer Center, General Information (see P.9-1 "Customer Service").

## **Cleaning Handset**

## **Washing Handset**

Wipe off dirt, sand, beverage, etc., gently with cloth. Then with Battery Cover closed, hold handset approximately 10 cm below faucet or shower head and wash with low-pressure tap water (6 liters/min. or lower) at normal temperature (5°C - 35°C). Wash with your hands, taking care not to open Covers; do not use a brush or sponge. Dry handset before use.

- Before washing handset, make sure that Battery Cover and Port Cover are closed firmly.
- Do not use a washing machine or ultrasonic cleaner.
- Do not place handset in a microwave oven to dry it. Battery/handset may leak, burst, overheat or ignite; may cause malfunction, accident or injury.
- Do not dry handset by exposing it to extreme heat (e.g., hot air from dryers, etc.); may cause warping, discoloration or damage.

## **Drying Handset**


Dry these parts/areas after washing handset:

Hinge Earpiece

Microphone Speaker

Recorder
Microphones

- Wipe handset surface with dry cloth
- Holding hinge firmly by its sides, shake handset about 20 times

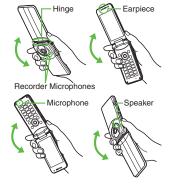

Pat against dry cloth to remove moisture from grooves



Leave handset on dry cloth for approximately 2 - 3 hours at room temperature

#### Do Not Use Wet Handset

- Voice quality may be affected, or moisture may transfer to clothes, bag, etc.
- Moisture may short-circuit External Device Port and HDMI Port.
- Exposure to cold may freeze moisture causing malfunction.