Introduction

Thank you for purchasing SoftBank 930SH.

- For proper handset use, read "First Step Guide" in 930SH Starter Guide and this guide beforehand.
- Accessible SoftBank services may vary by service area, subscription, etc.

SoftBank 930SH is compatible with both 3G and GSM network technologies.

Notes

- Copying this guide in whole or part without authorization is prohibited.
- Guide content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this guide. Please contact SoftBank Customer Center, General Information (P.14-40) about unclear or missing information.

Chapter Contents At A Glance

Getting Started	1
Basic Operations	2
Calling	3
Messaging	4
Yahoo! Keitai & PC Site Browser	5
Digital TV	6
Camera & Imaging	7
Media Player & S! Applications	8
Handy Extras	9
Communication Services	10
Handset Security	11
Connectivity & File Backup	12
Handset Customization	13
Appendix	14



- Most operation descriptions are based on default settings with handset open (P.1-2) in Standby (P.1-6).
- •Operations and results may differ by handset status.
- •Sample screenshots, etc. are provided for reference only.
- Actual handset windows, menus, etc. may differ in appearance.
- •"(Japanese)" appears next to functions or applications which require Japanese ability to use as intended.

Guide Usage Notesii
Table of Contentsiii
Accessoryv
Safety Precautionsvi
1 Getting Started
Handset Parts 1-2
Charging Battery 1-4
Power On/Off 1-6
Display 1-7
Accessing Functions1-10
Motion Control1-14
Mobile Manners 1-16
Security Codes1-17
Basic Tools1-18
Double Number 1-19
Additional Functions1-22
Troubleshooting 1-24
Troubleshooting 1-24
Troubleshooting
Troubleshooting1-24 2 Basic Operations
Troubleshooting
Troubleshooting
Troubleshooting
Troubleshooting 1-24 2 Basic Operations 2-2 Font Size 2-2 Standby Window 2-3 Wallpaper 2-5 Customized Screen & S! Familiar Usability 2-6 Sounds & Alerts 2-7 Text Entry 2-8
Troubleshooting
Troubleshooting
Troubleshooting 1-24 2 Basic Operations Font Size 2-2 Standby Window 2-3 Wallpaper 2-5 Customized Screen & S! Familiar Usability 2-6 Sounds & Alerts 2-7 Text Entry 2-8 User Dictionary 2-13 Dictionary 2-14 Search 2-16
Troubleshooting 1-24 2 Basic Operations Font Size 2-2 Standby Window 2-3 Wallpaper 2-5 Customized Screen & S! Familiar Usability 2-6 Sounds & Alerts 2-7 Text Entry 2-8 User Dictionary 2-13 Dictionary 2-14 Search 2-16 Scratch Pad 2-17
Troubleshooting 1-24 2 Basic Operations Font Size 2-2 Standby Window 2-3 Wallpaper 2-5 Customized Screen & S! Familiar Usability 2-6 Sounds & Alerts 2-7 Text Entry 2-8 User Dictionary 2-13 Dictionary 2-14 Search 2-16

Memory Card2-24 Additional Functions2-21 Troubleshooting2-3
3 Calling Emergency Calls 3- Voice Calling 3- Video Calling 3- Decoration Call 3- Speed Dial 3- Call Log 3- Call Time & Call Cost 3-1 Optional Services 3-1 Additional Functions 3-1 Troubleshooting 3-2
Messaging 4-5 Sending Messages 4-1 Incoming Messages 4-1 Chat Folder 4-1 Mail Groups 4-1 PC Mail 4-1 Additional Functions 4-1 Troubleshooting 4-3
5 Yahoo! Keitai & PC Site Browser Internet Services

RSS Feeds5-8
Additional Functions5-9
Troubleshooting5-16
6 Digital TV
Digital TV6-2
TV Player6-8
TV Timer6-10
Additional Functions6-11
Troubleshooting6-17
7 Camera & Imaging
Camera7-2
Photo Camera7-4
Video Camera7-5
Review7-6
Shooting Modes7-7
Editing Images7-9
Printing7-13
Additional Functions7-14
Troubleshooting7-18
8 Media Player & S! Applications
Media Player8-2
Music8-5
Video8-6
Playlists8-7
S! Appli8-8
Additional Functions8-9
Troubleshooting8-14
9 Handy Extras
Calendar & Tasks9-2

Table of Contents

Alarms		
Osaifu-Keitai® 9-12 Pretense Call 9-15 Stopwatch 9-16 Countdown Timer 9-17 World Clock 9-18 Hour Minder 9-19 Document Viewer 9-20 Notepad 9-21 Voice Recorder 9-22 Scan Barcode 9-23 Create QR Code 9-24 Scan Card 9-25 Text Scanner 9-26 S! Quick News 9-27 S! Information Channel 9-28 e-Books 9-29 Additional Functions 9-30 Troubleshooting 9-44 10 Communication Services S! Town & S! Loop 10-2 S! Friend's Status 10-3 S! Circle Talk 10-6 Near Chat 10-8	Wakeup TV	
Document Viewer 9-20 Notepad 9-21 Voice Recorder 9-22 Scan Barcode 9-23 Create QR Code 9-24 Scan Card 9-25 Text Scanner 9-26 S! Quick News 9-27 S! Information Channel 9-28 e-Books 9-29 Additional Functions 9-30 Troubleshooting 9-44 10 Communication Services S! Town & S! Loop 10-2 S! Friend's Status 10-3 S! Circle Talk 10-6 Near Chat 10-8	Osaifu-Keitai® 9-12 Pretense Call 9-15 Stopwatch 9-16 Countdown Timer 9-17 World Clock 9-18	
Scan Card 9-25 Text Scanner 9-26 S! Quick News 9-27 S! Information Channel 9-28 e-Books 9-29 Additional Functions 9-30 Troubleshooting 9-44 10 Communication Services S! Town & S! Loop 10-2 S! Friend's Status 10-3 S! Circle Talk 10-6 Near Chat 10-8	Document Viewer 9-20 Notepad 9-21 Voice Recorder 9-22 Scan Barcode 9-23	
10 Communication Services S! Town & S! Loop	Scan Card 9-25 Text Scanner 9-26 S! Quick News 9-27 S! Information Channel 9-28 e-Books 9-29 Additional Functions 9-30	
Additional Functions 10-10 Troubleshooting 10-12	10 Communication Services S! Town & S! Loop 10-2 S! Friend's Status 10-3 S! Circle Talk 10-6 Near Chat 10-8 Blog Tool 10-9 Additional Functions 10-10	

11 Handset Security
Handset Security11-2
Face Recognition 11-4
Additional Functions 11-6
12 Connectivity & File Backup
Infrared 12-2
IC Transmission 12-5
Bluetooth® 12-7
Mass Storage 12-10
Backup 12-11
S! Addressbook Back-up (SAB)12-13
Additional Functions 12-16
Troubleshooting 12-19
13 Handset Customization
Date & Time 13-2
Display & Key 13-3
Ringtones & Sounds 13-5
Connectivity 13-6
Reset 13-8
14 Appendix
USIM Card14-2
Battery14-4
Software Update14-5
Troubleshooting 14-6
Key Assignments14-8
Pager Codes 14-10
Character Codes 14-11
Weather Indicators14-17
Specifications 14-18

Index	14-3
Warranty & Service	14-39
Customer Service	14-40

Accessory

■ Battery (SHBCC1)



- For accessory-related information, please contact SoftBank Customer Center, General Information (P.14-40).
- Use specified Charger/Headphones (sold separately) only.

Safety Precautions

Read safety precautions before using handset.


- Observe precautions to avoid injury to self or others, or damage to property.
- SoftBank is not liable for any damages resulting from use of this product.

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

<u> </u>	Great risk of death or serious injury from improper use
⚠ WARNING	Risk of death or serious injury from improper use
⚠ CAUTION	Risk of serious injury or damage to property from improper use

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.



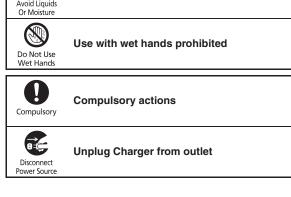

Handset, Battery, USIM Card, Charger (Sold Separately) & Memory Card (Sold Separately)



Use specified battery, Charger (sold separately) and Desktop Holder (sold separately) only.



Non-specified equipment use may cause battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.

Do not disassemble, modify or solder handset or related hardware.



May cause fire, injury, electric shock or malfunction. Battery may leak, overheat, Disassemble burst or ignite.

Modifying handsets is prohibited by the Radio Law and subject to a penalty.

Do not expose handset or related hardware to liquids.



Avoid Liquids Or Moisture

Do not leave handset or related hardware wet after exposure to water. pet urine, etc., and do not charge wet battery. May cause overheating, electric shock, fire, injury or malfunction. Use them in an appropriate place properly.

Do not charge battery in or expose handset or related hardware to extreme heat (e.g., near fire or sources of heat, in direct sunlight. inside vehicles, etc.).



Prohibited

May cause warping/malfunction: battery may leak, overheat, ignite or burst. Handset or related hardware may become hot to the touch, leading to burn injuries, etc.

Do not force battery/Charger into handset. Check the direction and retrv.



Battery may leak, overheat, burst, ignite, etc.

↑ WARNING

Do not place handset, battery or Charger in/on ovens, microwave ovens, pressure cookers, induction stoves or other cooking appliances.

Battery may leak, overheat, burst or ignite. Handset/Charger may overheat, emit smoke, ignite, malfunction, etc.

Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk.



Prohibited

Handset use near petrochemicals or other flammables may cause fire/ explosion; turn handset off before using Osaifu-Keitai® at gas stations (cancel IC Card Lock beforehand).

Do not apply strong shocks or impacts.



Prohibited

Do not drop/throw handset or related hardware. Battery may leak, overheat, burst or ignite, resulting in fire, electric shock, malfunction, etc.

If there is unusual sound/odor. smoke or any other abnormality:



Compulsory

Continued use may cause fire, electric shock, etc.; grasp plug to disconnect Charger, turn off handset, then remove battery, being careful not to burn or injure yourself.

Keep liquids (water, pet urine, etc.) or conductive material (pencil lead, metallic strip, metal jewelry, etc.) away from charging terminals. External Device Port or Memory Card Slot.



May cause short circuit, resulting in fire, malfunction, etc.

⚠ CAUTION

Do not place handset or related hardware on unstable surfaces.



Handset or related hardware may fall, resulting in injury, malfunction, etc.; be especially careful when Vibration is set.

Keep handset and related hardware out of infants' reach.



Infants may choke from swallowing handset or related hardware or be injured, etc.

If your child is using handset and related hardware, explain all



instructions and supervise usage. Compulsory Misuse may cause injury, etc.

Battery



DANGER

Read battery label to confirm battery type; use/ dispose of battery accordingly.

Do not dispose of battery in fire. Battery may leak, burst, ignite, etc.




Do not damage battery (with a nail, hammer, foot, etc.) or subject it to strong impacts or shocks.

Prohibited

Prohibited

Battery may leak, overheat, burst, ignite, etc.

Keep wire or other metal objects away from battery terminals. Do not carry/store battery with conductive material (pencil lead. metallic strip, metal iewelry, etc.). Battery may leak, overheat, burst, ignite. etc.

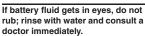



Eyes may be severely damaged.

⚠ WARNING


If battery fluid contacts skin or clothes, discontinue handset use and rinse with clean water immediately.




Compulsory

May cause skin damage.

If battery does not charge properly, stop trying.

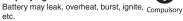

If there is abnormal odor. excessive heat, discoloration or distortion, remove battery, being careful not to burn or injure vourself. Avoid fire sources.

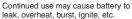



! CAUTION

Do not dispose of an exhausted battery with ordinary refuse.

Tape over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.



Handset



⚠ WARNING

Do not use Mobile Light near people's faces.

Prohibited

Eyesight may be temporarily affected leading to accidents. CAUTION:


EN60825-1:1994 A1:2002 & A2:2001

Use of controls, adjustments or performance of procedure other than those specified herein may result in

CLASS 1 LED Product

hazardous radiation exposure.

As the emission level from Mobile Light LED used in this product is harmful to the eyes, do not attempt to disassemble the cabinet. Servicing is limited to qualified servicing station only.

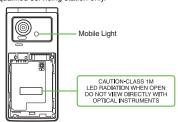

Mobile Light LED Properties

- a) Emission Duration: Continuous
- b) Wavelength

White: 400 - 700 nm

c) Maximum Emission Output White: 240 µW (1.2 mW inside handset)

Do not use handset while driving or cycling.

Accidents may result. Phone use while driving or cycling is prohibited by law and subject to a penalty: park in a legal parking space beforehand.



Prohibited

Turn handset power off near electronic devices that employ high precision control systems or weak signals.




May cause electronic malfunctions, etc. Be especially careful near the following devices:

Hearing aids, implanted pacemakers/ defibrillators and other electronic medical equipment: fire alarms. automatic doors and other automatic control devices.

Turn handset power off before boarding aircraft.

Cancel the setting that turns handset power on automatically (alarm, etc.) beforehand.

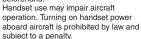

Users with a heart condition should adjust ringtone Vibration and Volume as needed.



Compulsory May cause heart damage.

If thunder is heard while outdoors. turn power off; find cover. There is a risk of lightning strike or

electric shock.



Compulsory

Compulsory

Do not look into Infrared Port during infrared transmissions. Evesight may be affected.



Prohibited

Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently.



Handset may slip, resulting in injury or

breakage.




Do not use handset when it may affect a vehicle's electronic equipment.



Compulsory

Handset use inside vehicles may cause electronic equipment to malfunction, resulting in accidents.

If you experience any skin irritation associated with handset use. discontinue handset use and consult a doctor.

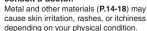

Keep handset away from magnetic cards, etc. Data on bank cards, credit cards.

telephone cards, floppy disks, etc. may be lost.

Do not swing handset by strap. May harm self or others: strap may break, resulting in injury or handset malfunction/breakage.



Prohibited

Handset may become hot while in use, especially at high temperature. Prolonged contact with skin may cause

burn injuries.

affect eyesight.



Compulsory

Always maintain some distance from Speaker while ringtones, music or other handset sounds play.




Excessive volume may damage ears or hearing.

Keep fingers, straps, etc. outside when opening/closing handset. May cause injury, breakage, etc.



Watch TV from a distance in good liaht.

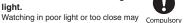

Moderate handset volume when using Headphones.



Excessive volume may damage ears or hearing.

Compulsory

İΧ

Charger (Sold Separately)



Do not charge battery on unstable surfaces.



Handset may fall and disconnect from Charger or malfunction, etc.

Prohibited

Do not cover/wrap Charger while charging.



Charger may overheat, resulting in fire, malfunction, etc.

Prohibited

Prohibited

Use only the specified voltage.

Non-specified voltages may cause fire, malfunction, etc.

- AC Charger (sold separately): AC 100V-240V Input
- In-Car Charger (sold separately; use in negative earth vehicles only): DC 12V/24V Input

Do not use power adapters. Using Charger with step-up/step-down transformer may cause fire, electric shock or malfunction.

Leave Charger unplugged during periods of disuse; grasp plug to disconnect it.



Power Source

May cause electric shock, fire or malfunction

for details

Use only the specified fuse for In-Car Charger (sold separately). Non-specified fuse may cause fire or malfunction. See In-Car Charger manual



Compulsory

If liquids (water, pet urine, etc.) seep inside Charger, grasp plug and disconnect it immediately.



Disconnect May cause electric shock, smoke or fire. Power Source

If plug is dusty, grasp it and disconnect Charger, then clean with a dry cloth.



Compulsory

Fire may result.

Do not use In-Car Charger (sold separately) in positive earth vehicles.



May cause fire, etc. Use in negative earth vehicles only.

Plug Charger firmly into the outlet, keeping the plug and Charger/ Desktop Holder charging terminals Compulsory away from conductive material (pencil lead, metallic strip, metal iewelry, etc.).

May cause electric shock, short circuit. fire, etc.

Do not touch Charger plug with wet hands.



May cause electric shock, malfunction, etc.

Do not touch Charger if thunder is heard.

May cause electric shock, etc.



A CAUTION

Grasp plug and disconnect Charger before cleaning.





Power Source

Always grasp plug (not cord) to disconnect Charger.



Pulling the plug by cord may damage cord, causing electric shock, fire, etc.

Do not subject AC Charger (sold separately) to strong shocks or impacts while it is plugged into the Prohibited outlet.

May cause malfunction or injury.

Do not touch charging terminals of Desktop Holder (sold separately) while it is connected to the outlet. Prohibited May cause burn injuries.



Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



Persons with implanted pacemaker/defibrillator should keep handset more than 22 cm away.



Radio waves may interfere with implanted pacemakers or defibrillators.

If you intend to use electronic medical equipment other than implanted pacemaker/defibrillator Compulsory outside medical facilities, consult the vendor on radio wave effects.



Radio waves may interfere with electronic medical equipment.

Observe these rules inside medical facilities to avoid effects of radio waves on electronic medical equipment:

- Compulsory
- Do not enter an operating room or an Intensive or Coronary Care Unit while carrying a handset.
- · Keep handset off in hospitals; cancel the setting that turns handset power on automatically (alarm, etc.) beforehand.
- Even in lobbies or other places where handset use is permitted, keep handset off near electronic medical equipment.
- Obev medical facility rules on mobile phone use.

Turn handset off in crowds or trains where persons with implanted pacemaker/defibrillator Compulsory may be near; cancel the setting that turns handset power on automatically (alarm, etc.) beforehand.

Radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.



General Notes

General Use

- SoftBank is not liable for any damages resulting from accidental loss/alteration of files saved on handset/Memory Card. Keep separate copies of Phone Book entries, etc.
- Handset transmissions/TV signal reception may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- For proper use of Memory Card (sold separately), read the manual beforehand.

Beware of eavesdropping.

Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard. Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

 An export license may be required to carry the handset into other countries if it is to be used by or transferred to another person. However, no such license is required when you take the handset abroad for personal use on a vacation or business trip and then bring it back.

Export control regulations in the United States provide that an export license granted by the US government is required to carry the handset into Cuba, Iran, North Korea, Sudan or Syria.

Handset & Hardware Care

- Handset is not water-proof. Avoid exposure to liquids and high humidity.
 - Keep handset away from precipitation.
 - Cold air from air conditioning, etc. may condense causing corrosion.
 - Avoid dropping handset in damp places (restroom, bath/shower room, etc.).
- On the beach, keep handset away from water and direct sunlight.
- Perspiration may seep inside handset causing malfunction.
- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damages.
- Use handset between 5°C 35°C (35% 85% humidity).
- Avoid extreme temperatures and direct sunlight.
- Exposing lens to direct sunlight may damage color filter and affect image color.
- Battery may not charge properly if ports/terminals are obstructed by dust, etc. Clean with a dry cloth, cotton swab, etc.
- Clean handset with a dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Avoid scratching handset Display.
- Avoid heavy objects or excessive pressure. May cause malfunction or injury.
 - Do not sit on handset in back pants pocket.
 - Do not place heavy objects on handset inside handbags, packs, etc.

- Connect only specified products to Headphone Port. Other devices may malfunction or cause damage.
- Always turn off handset before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.
- Do not remove Memory Card or turn off handset power while using the card; may result in data loss or malfunction.
- When walking outside, moderate handset volume to avoid accidents.
- Do not use Desktop Holder (sold separately) inside vehicles. Vibration may damage handset, etc.

Function Usage Limits

These functions are disabled after handset upgrade/ replacement or service cancellation: Camera; Media Player; S! Applications; TV.

After a period of disuse, these functions may be unusable; retrieve Network Information (P.13-6) to restore usability.

Mobile Camera

- Mind your manners when using handset camera.
- Test the camera before capturing/recording special moments.
- Do not use handset camera in places where photography or videography is prohibited.

Electromagnetic Waves

For body-worn operation, this phone has been tested and meets RF exposure guidelines when used with accessories containing no metal, that position handset a minimum of 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

CE Declaration of Conformity

C € 0168

Hereby, Sharp Telecommunications of Europe Ltd, declares that 930SH is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the original declaration of conformity for each model can be found at the following Internet address: http://www.sharp.co.jp/k-tai/



Battery - CAUTION

Use specified battery or Charger only.

Non-specified equipment use may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.

Do not dispose of an exhausted battery with ordinary refuse; always tape over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.

Charge battery in ambient temperatures between 5°C and 35°C; outside this range, battery may leak/overheat and performance may deteriorate.



European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg.

As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. Highest SAR value:

Model	At the Ear"	On the Body
930SH	0.682 W/kg	0.372 W/kg

As SAR is measured utilizing the device's highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the Network. The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a handsfree device to keep the mobile phone away from the head and body.

Please see Electromagnetic Waves on the left for important notes regarding body-worn operation. "Measured in accordance with international guidelines for testing.

FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient/relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FC

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Highest SAR value:

Model	FCC ID	At the Ear	On the Body
930SH	APYHRO00077	0.457 W/kg	0.478 W/kg

This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset.

The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found at https://fiallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm under the Display Grant section after searching on the corresponding FCC ID (see table on the left). Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Website at http://www.phonefacts.net.

Rights, Trademarks & Patents

Portrait Rights

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/ use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity, which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/ distributing their photographs without permission is illegal; use handset camera responsively.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

The software contained in handset is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software, and do not separate it from hardware in whole or part.

Video recording and playback are based on MPEG-4. This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA. See http://www.mpedla.com.

This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional license and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use. Such additional license may be obtained from MPEG LA, LLC. See http://www.mpegla.com for additional details.



Handset employs RSA® BSAFE™ software developed by RSA Security

RSA is a registered trademark of RSA Security Inc.

BSAFE is a registered trademark of RSA Security Inc. in the United States and/or other countries.

Safety Precautions

This product is equipped with JBlend™ designed to accelerate the performance of Java™ Application. Powered by JBlend™. Copyright 1997-2008 Aplix Corporation.



All rights reserved.

JBlend and JBlend-related brands are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

Java and Java-related brands are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.





microSDHC $^{\text{TM}}$, microSD $^{\text{TM}}$ and miniSD $^{\text{TM}}$ are trademarks of the SD Card Association.

NetFront®

This product employs NetFront Browser (Internet browser) and NetFront SMIL Player developed by ACCESS Co., Ltd.

Copyright© 1996-2008 ACCESS Co., Ltd. ACCESS and NetFront are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan or other countries

This product includes a module developed by Independent JPEG Group.

IrSimple[™], IrSS[™] and IrSimpleShot[™] are trademarks of the Infrared Data Association[®].

Bluetooth is a registered trademark of the Bluetooth SIG, Inc.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by SHARP is under license.

The frequency band utilized by handset Bluetooth® function is shared with industrial, scientific or medical equipment, including household microwave ovens, etc., and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

- 1 Before using Bluetooth[®], visually confirm that no other radio stations sharing the same frequency band are in use nearby.
- 2 Should interference occur between handset and other radio stations, move or cancel Bluetooth[®] function immediately.
- 3 For additional information and support, contact us at the following number.

SoftBank Customer Center, General Information From a SoftBank handset, call toll free at 157 for General Information.

From landlines, see P.14-40 "Customer Service."

This radio station utilizes 2.4 GHz band with FHSS modulation. Maximum transmission radius is 10 meters (32 feet).



Microsoft, PowerPoint and Excel are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Powered by Mascot Capsule[®]/Micro3D Edition[™]. Mascot Capsule is a registered trademark of HI Corporation.

©2002-2008 HI Corporation. All rights reserved.

FeliCa is a contactless IC card technology developed by Sony Corporation.

FeliCa is a registered trademark of Sony Corporation. \bigcirc is a registered trademark of FeliCa Network, Inc.

Osaifu-Keitai is a registered trademark of NTT DOCOMO, INC.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.



This product contains Adobe[®] Flash[®] Lite[™] player software under license from Adobe Systems Incorporated.

Adobe Flash Lite Copyright © 2003-2007 Adobe Systems Incorporated. All rights reserved. Adobe, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and other countries.

Smartlink, VeilView and Wakeup TV are trademarks or registered trademarks of SHARP Corporation.



Document Viewer is enabled by Picsel Technologies. Picsel, Picsel Powered, Picsel Viewer, Picsel File

Viewer, Picsel Document Viewer, Picsel PDF Viewer and the Picsel cube logo are trademarks or registered trademarks of Picsel Technologies Ltd.

Chaku-Uta and Chaku-Uta Full are registered trademarks of Sony Music Entertainment (Japan) Inc.

BookSurfing® is a registered trademark of CELSYS Inc., Voyager Japan, Inc. and INFOCITY Inc.

Genius English-Japanese Dictionary ©2005-2008 Taishukan

Genius Japanese-English Dictionary ©2005-2008 Taishukan

Meikyo Japanese Dictionary ©2005-2008 Taishukan

- All text in Wikipedia is available under the terms of the GNU Free Documentation License.
- Genius EJ-Dic MX.net ©KONISHI Tomoshichi, MINAMIDE Kosei & Taishukan, 2008
- Genius JE-Dic MX.net ©KONISHI Tomoshichi, MINAMIDE Kosei & Taishukan. 2008
- Meikyo J-Dic MX.net ©KITAHARA Yasuo & Taishukan. 2008
- Imidas Encyclopedia ©SHUEISHA Inc.
- Encyclopedia Nipponica, Digital Daijisen, PROGRESSIVE English-Japanese Dictionary, PROGRESSIVE Japanese-English Dictionary ©Shogakukan Inc.
- Hot Pepper Pockets is a registered trademark of Recruit Co., Ltd.

PhotoSolid[®] and FaceSolid[™] are trademarks or registered trademarks of Morpho, Inc.

SOFTBANK, SoftBank and the SoftBank logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and other countries.

Yahoo! and the Yahoo! and Y! logos are trademarks or registered trademarks of Yahoo! Inc.

CP8 PATENT

Video Call, S! Application, Customized Screen, Movie Sha-mail, Sha-mail, 3D Pictogram, Input Memory, Near Chat, Multi Job, S! Mail, Graphic Mail, Feeling Mail, S! Information Channel, S! Town, S! Loop, PC Site Browser, Weather Indicator, S! Quick News, S! Addressbook Back-up, S! Circle Talk, S! Friend's Status, Lifestyle-Appli, S! Familiar Usability, S! Music Connect, PC Mail, Double Number, Decoration Call and Secure Remote Lock are trademarks or registered trademarks of SOFTBANK MOBILE Corp.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

Specific Absorption Rate (SAR)

930SH meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the body, shall not exceed 2 W/kg². This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

All mobile phones, prior to product launch, must be certified as compliant with government requirements as stipulated by the Radio Law, 930SH has been granted Technical Regulations Conformity Certification by TELECOM ENGINEERING CENTER. Its highest SAR value is 0.672 W/kg. This value was obtained by TELECOM ENGINEERING CENTER as part of the certification process. SAR tests were conducted with handset transmitting at its highest certified power level in accordance with testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network.

Additional information on SAR can be obtained on the following Websites.

Ministry of Internal Affairs and Communications http://www.tele.soumu.go.jp/e/ele/index.htm Association of Radio Industries and Businesses (ARIB) http://www.arib-emf.org/initiation/sar.html (Japanese)

Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).




Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Charging Battery (AC Charger)	1-4
Charging Battery (In-Car Charger).	1-5
Power On/Off	1-6
Handset Power On/Off	1-6
Display	1-7
Display & Indicators	1-7
Accessing Functions	
Handset Menus	1-10
Key Shortcut	
Using Simplified Menus (Simple M	enu)
	1-12
Toggling Active Functions (Multi Jo	b)
	1-13

Motion Control	1-14
Mobile Manners	1-16
Security Codes	1-17
Basic Tools	1-18
My Details & Basic Tools	1-18
Double Number	1_10
Double Nulliber	1-13
Using Double Number	
	1-19
Using Double Number	1-19 1-20



Getting Started

Parts & Functions

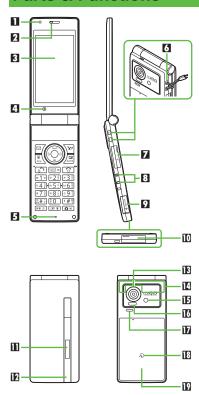

- Light Sensor
- 2 Earpiece
- Display
- [1] Internal Camera
- **5** Microphone
- Strap Eyelet
- Headphone Port (with Port Cover)
- Charging Terminals
- Memory Card Slot (with Slot Cover)
- External Display
- External Camera (lens cover)
- II Internal Antenna Location
- Mobile Light
- III Infrared Port
- Logo
- ☑ Battery Cover
- Do not cover or place stickers, etc. over Light Sensor or Internal Antenna area.
- Replace Port/Slot Cover after Port/Slot use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Handset Positions

Handset Closed



Keep handset closed when not in use.


Handset Open



Open handset to place or answer calls, enter text, etc.

Handset Keys

Keys are indicated in this guide as shown.

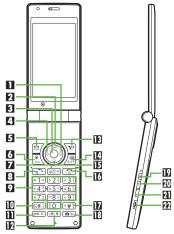

■ Multi Selector (right) Open Received Calls. Long Press to activate/cancel infrared.

2 Multi Selector (up) (5)
Open Standby Window. Long Press to open PC Site Browser menu.

☑ Center Key ⑤ Open Main Menu. Long Press to activate/ cancel Keypad Lock.

☑ Multi Selector (left) ⑤
Open Dialed Numbers. Long Press to activate/cancel Bluetooth®.

Open Messaging menu. Long Press to open S! Mail Composition window.

- Shortcuts & A/a Key Open Shortcuts menu.
- ☑ Clear/Back Key

Play Answer Phone messages. Long
Press to activate/cancel Answer Phone.

Open All Calls. Long Press to open Double Number Mode menu.

Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.

★ Key ※※
 Enter #, +, P, ? and -. Long Press to open S! Friend's Status member list.

☐ Dictionary Key ☐ □ ○
Open Dictionary. Long Press to activate VeilView

IE Multi Job & Manner Key

Select handset mode. Long Press to activate/cancel Manner mode.

TV & Text Key And Activate TV. Long Press to open Change Menu window.

E Multi Selector (down) ♀
Open Phone Book. Long Press to create new Phone Book entries

1 # Kev ⋅ # 🕫

Enter #. Long Press to activate/cancel Manner mode.

I Camera Kev □ ■

Activate mobile camera. Long press to activate Review

Side Keys

S! Circle Talk Key

Long Press to illuminate Mobile Light.

Open: Open S! Circle Talk member list.

☑ Volume Up Key
☐ Closed: Scroll External Display indicators.
Long Press to check e-money balance.

☑ Volume Down Key Long Press to start Pretense Call.
Closed: Scroll External Display indicators.

☑ Shutter Key 🗖

Open: Long press to activate mobile camera.

Closed: Toggle Clock view.

Multi Selector & Side Keys


 In this guide, Multi Selector and Side Key operations are indicated as follows:

Press 🐧 or 😱	③
Press o or o	••
Press ③, ②, ⊙ or ⊙	•••
Press or ►	▼

Charging Battery (AC Charger)

Battery must be inserted in handset to charge it.

- Use specified AC Charger ZTDAA1 (sold separately) only. In this guide, ZTDAA1 is referred to as "AC Charger."
- Handset and AC Charger may warm during charging.

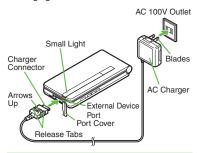

Important AC Charger Usage Note

 Fold back blades after charging. Do not pull, bend or twist the cord. Open Port Cover as shown



- Connect AC Charger
 - With arrows up, insert connector until it clicks.
- Extend blades and plug AC Charger into AC outlet



- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

Unplug AC Charger



- Pull AC Charger straight out.
- Disconnect handset
 - Squeeze release tabs to remove connector.
- Fold back blades and replace Port Cover

When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.
 USB Charge
- Connect handset (with power on) to PC via USB Cable to charge battery.


Charging Battery Overseas

 SoftBank is not liable for problems resulting from charging battery abroad.

Advanced

Charging Battery (In-Car Charger)

In-Car Charger may be purchased separately.

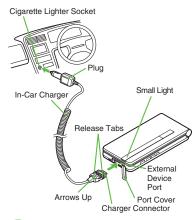



- With arrows up, insert connector until it clicks.
- Plug Charger into cigarette lighter socket
- Start car engine
 - Small Light illuminates red while charging.
 - Small Light goes out when battery is full.
- G Unplug Charger
- Disconnect handset
 - Squeeze release tabs to remove connector.
- Replace Port Cover

Important In-Car Charger Usage Notes

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.





Handset Power On/Off

Power On

Follow these steps when powering on 930SH for the first time:



• After Power On Graphic, follow the steps below.




Change Menu window opens





Mv Details setup starts.

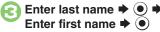

 Change Menu display option confirmation appears.





Standby Choose No to enter Standby immediately after powering on.

When USIM Card is Not Installed

• Insert USIM Card appears; insert the card to use handset

Retrieving Network Information

Handset initiates Network Information the first time.



- Choose Yes and press •. When confirmation appears, press .
- Retrieve Network Information to use Network-related services and TV: retrieval automatically sets Clock.

Power Off



ি (Long)

 After Power Off Graphic, handset shuts down

Display & Indicators

Viewing Display

Standby



- Indicators (signal strength, battery strength, etc.) appear.
- Information window opens at the bottom for Missed Calls, new mail, etc.



Information Window

■ Information label (e.g., *Message*, etc.) and count appear in Information window. Select an item and press to open it.

■ Softkeys

Functions/operations assigned to , o and papear at the bottom.



Display Saving

• Display goes dark after Display Saving time elapses. Press any key to activate it.

Backlight

 Backlight turns off after Time Out time elapses. Press [0] - [9] to illuminate it (key press may affect active function).

Indicators

and indicate line type in Dual Mode (P.1-19).

■ Basic Status



- International roaming in progress
- Signal strength¹
 - Packet transmission protocol ready (3G)
- Packet transmission protocol ready (GSM)
 - Packet transmission available (3G)
- Packet transmission available (GSM)
- Battery strength (%² appears in turn)
- IP Service enabled³

Advanced


¹The more bars the better.

²Battery strength % is an approximation.

³Appears when Decoration Call or S! Appli Communication is enabled.

⁽P.1-22) • Handling Information list

Function Status

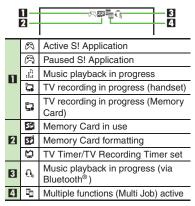

■ Notifications




■ Transmissions

	1 — 2 — 3 — 4 —			
	@	SSL browsing in progress		
П	@	Waiting packet transmission (3G)		
	€SPI	Waiting packet transmission (GSM)		
2	\bowtie	Receiving mail		
4	×	Sending mail		
5 1		S! Friend's Status online		
Positioning in progr		Positioning in progress*		
4	8	Software Update in progress		
	•	USB Cable connected		
	\$	USB transmission in progress		
	÷	Infrared transmission in progress		
	¥Î	Infrared file transfer in progress		
5	∦	Bluetooth® transmission ready		
9	8,	Bluetooth® transmission in progress		
	£.	Bluetooth® talk in progress		
	0	S! Addressbook Back-up		
		transmission in progress		
	星	PC Site Browser in use		
6	2	RSS-compatible site		
7	۰	Weather Indicator		
8	\$	Infrared transmission ready		
*Flashes while positioning				

5

^{*}Flashes while positioning.

Settings

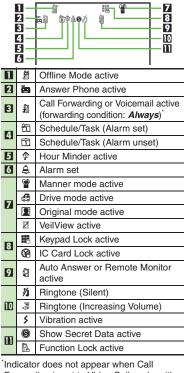

Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

External Display Indicators

■ Basic Status



Signal strengthBattery strength

The more bars the better.

■ Notifications



		№ <u>33</u>	
ĺ	1		Missed Calls
Ī	2	•	Answer Phone message recorded
Ī	3		Missed Call Notification
Ī	4		New Voicemail
ĺ	5		New mail
Ī	6	Ш	New Delivery Report
ĺ	7	•¥3	Contents Key received
ĺ	8	(A)	Unread S! Information Channel info
ĺ	9	E 0	Weather Indicator update
			·

Warnings

1 2 3 4 5 2 x 9 x 2

S! Information Channel info reception failure

S! Decoration Call transmission failure

IP Service connection failure

Weather Indicator update failure

Message delivery failure


Handset Status

1234567 458845

External Display Date & Time

Press to toggle Clock view.

Handset Menus

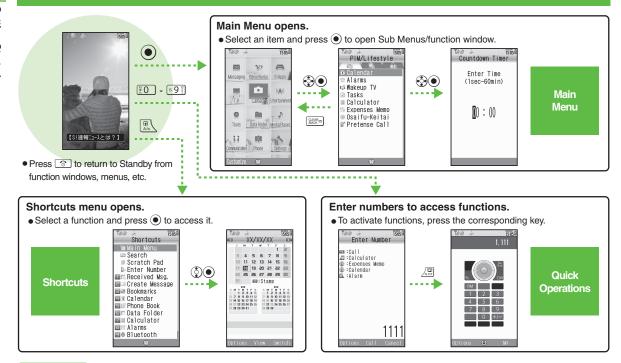

Advanced

Customizing shortcuts Restoring default shortcuts (P.1-22)

Key Shortcut

Long Press ☑, ☑ or ❖ to access assigned functions.


	Open S! Mail Composition window
\Y?	Activate Familink Remote
<u></u>	Open PC Site Browser menu
②	Create new Phone Book entries
•	Activate/cancel Bluetooth®
(a)	Activate/cancel Infrared

Changing Assigned Functions

Follow these steps to assign Calculator to 🖎:

● Settings ● ● In Phone Settings menu, Set Key Shortcut ● ●



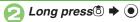



- 💽 From Appli 🕈 💿
- Tools → In PIM/
 Lifestyle menu, Calculator

 → ●

Bookmark In ⑤, From Bookmark → ⑥ → Select title → ⑥ → Yes → ⑥

Bluetooth® or Infrared On/Off
In ⑤, From Other ▶ ⑥ ▶ Select
item ▶ ⑥

Show Secret Data Setting Window
In ⊕, From Other ▶ ● ≯ Secret
Mode ▶ ●

IC Card Lock On/Off
In ⊚, From Other ⇒ ● ⇒ IC
CardLock On/Off ⇒ ●
Canceling Assigned Function
In ⊗, Off ⇒ ●

Using Simplified Menus (Simple Menu)

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.



- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).
- Only Display Change is available for Motion Control.

■ Menu Items

Messaging	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
Phone	Phone Book, Add New Entry, Play Messages, Answer Phone, Call VM, My Details, Speed Dial/Mail
Camera	Photo Camera, Video Camera, Barcode/Scan, Review, Photo Camera Settings, Video Camera Settings
Convenient Tool	Calendar, Alarms, Calculator, Assignment, Dictionary, Notepad, S! Friend's Status, S! Circle Talk, Double Number Settings, Change Menu
Data Folder	-
TV	-

Key assignments are largely the same as in Standard Menu.

Activating Simple Menu







While Using an Incompatible Function

• End the function before activating Simple Menu.

Canceling Simple Menu





Toggling Active Functions (Multi Job)

Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet



Jot down information

Multi Job may not be activated from some menus/windows (e.g., when selecting ringtone/ringvideo, etc.).



In a function window, In text entry/dial windows, Long Press



Select function → ●



Menu/window opens.










 When a confirmation appears, follow onscreen prompts.

Motion Control

Sensor detects handset orientation or movement. Move handset to navigate pages, mute ringer, etc.

- Activate Display first.
- Activate Motion Control by function beforehand.



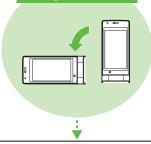


Display Change

Rotate handset 90 degrees counterclockwise and return. Display orientation changes accordingly.

Display Rotation

Digital TV
PC Site Browser
Document Viewer
Image Viewer
Video Viewfinder

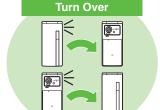


Activate Quick Silent

Turn handset over to instantly mute ringer and stop vibration.

Ringer	Vibration
Incoming Calls,	Incoming Calls,
Alarms, etc.	Alarms, etc.

• Some tones may not be silenced.

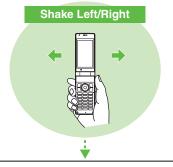

Navigate Functions

Shake to the left to navigate back, or right to navigate forward.

Music	Channels
Music Player	TV
Images	Pages
Data Folder	Document
(Pictures)	Viewer



Zoom In/Zoom Out

Shake forward to enlarge, or backward to reduce.

Fonts

Zoom Image

Message Window Yahoo! Keitai

Data Folder (Pictures)

Zoom Page

PC Site Browser Document Viewer

Disabling Display Rotation

Video Viewfinder always rotates with handset orientation.











- Display Change

 ◆ ◆ Select function **→** •
- Off **⇒** (●)

Activating Motion Control by Function

- In Motion Control menu, Action Settings

 ◆

 ●
- Select function **→** •

Activating Show Secret Data Temporarily Enter Handset Code - Shake handset left or right

■ Close handset in Standby to cancel Show Secret Data

Important Motion Control Usage Notes

- Hold/shake handset correctly to avoid unintended results
- Motion Control may be unavailable while handset is ringing/vibrating.
- Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently to avoid injury/breakage. Do not shake handset roughly; handset may slip, resulting in injury or damage.

Advanced

Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.







Manner mode is set.

When Manner Mode is Active


- Ringtones and other sounds are muted.
- 930SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.
 Canceling Manner Mode

(Long)

Offline Mode

Temporarily suspends all transmissions.



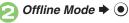





Offline Mode is set.

Canceling Offline Mode In ⑤, *Off* ▶ ⑥

Advanced

Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank is not liable for misuse or damages.

Handset Code	9999 by default; use or change some functions
Center Access Code	4-digit code selected at contract; access Optional Services via landlines or change contract details
Network Password	4-digit code selected at contract; restrict incoming/ outgoing calls (Call Barring)

Change Network Password as needed.

Incorrect Code Entry

- Handset code is incorrect! appears; try again.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed.

Changing Handset Code

Enter four to eight digits for new Handset Code.










Phone Settings Menu







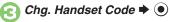



Enter current Handset Code



Enter new Handset Code **→ (•)**



Re-enter new Handset Code

My Details & Basic Tools

My Number







• Handset phone number and the name entered at initial setup appear.

Keypad Lock

Lock handset kevs and prevent accidental operation/function activation.

- (Long)
 - Keypad Lock activates.
 - 1 does not turn off handset power.

Incoming Calls while Keypad Lock is Active

 Keypad Lock is temporarily canceled; press to answer calls. Keypad Lock reactivates after the call.

Canceling Keypad Lock

(Long)

Pen Light

- (Long)
 - Mobile Light illuminates.
- Mobile Light goes out

Important Pen Light Usage Note

• Do not point Pen Light at people or look at it directly.

Battery Meter



Approximate battery strength appears.

Phone Help

Access this handy guide to handset settings and key functions/shortcuts.

- \bullet \bullet Tools \bullet \bullet Doc./Rec.
- Phone Help **→** •
- Select item

 ◆
 - Toggle guides as needed.

VeilView

Activate VeilView to prevent peeking.

🕮 (Long)

Canceling VeilView ## Ø (Long)

- Editing/clearing My Details Toggling My Details in Dual Mode (P.1-22)
 - Changing battery strength indicator pattern Changing VeilView pattern/density (P.1-23)

Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- For more information, see SOFTBANK MOBILE Corp. Website (P.14-22).

Two Phone Numbers & Two Mail Addresses



Modes

Select from three usage modes:

A Mode
(Line A* only)
(Line B* only)

B Mode Dual Mode ine B* only) (both accounts)

Callers to the other line hear a busy tone; messages are received without alerts.

Account Memory Management

While one line is active, call/messaging records for the other do not appear.

Phone Book Entries

Call Log Records Messaging Folders

 Customize Wallpaper, incoming call graphic, ringtone, vibration, etc. by account.

Activating Double Number

Make sure signal is stable.

- Settings → ●
- In Phone Settings menu, Double Number Settings ▶ ●
- Switch On/Off → ●
- On → ●

Canceling Double Number In ②, Off → ③ → ⑤

- When Double Number is canceled:
- Line B calls and SMS messages are redirected to Line A Phone Number
- Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
- Double Number account is not affected.

Modes

Activate *A Mode* to use Line A only, *B Mode* to use Line B only, or *Dual Mode* to use both accounts. While abroad, any Line B messaging charges are applied to Line A.

A Mode

Receive Calls to Line A Only

Place calls or send messages via Line A.

A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

B Mode

Receive Calls to Line B Only

• Place calls or send messages via Line B.

B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status, S! Circle Talk and Decoration Call are unavailable.

Dual Mode

Receive Calls to Both Accounts

• Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

Phone Book Entries

Specify A, B or Dual.

Messaging

Select Line A or Line B. Sender Address changes accordingly.

Calling

Select Line A or Line B. Caller ID changes accordingly.

• 💹, 🖪 and 🔟 indicate line type in Phone Book entries, message lists, Call Log records, etc. 🖁

Switching Modes

🚹 (Long)



Select mode **→** (•)

• For *B Mode* confirmation appears.



Saving Modes to Phone Book Entries



Mode: → • Select mode

Entries Saved with Double Number Off • Dual is set automatically.

USE	C	hai	ď	e
			\sim	

Disabling USB	● Settings → ● → Connectivity → USB
Charge	Charge → ● → Disable → ●

Information

	Start Here ● → Phone → ● See below
Handling Information list	Opening List Manually Information
	Clearing List Information

Shortcuts

	Start Here ♣ ⇒ Select numbered function ⇒ ☑ ⇒ See below
Customizing shortcuts	Changing Default Shortcuts Assign
	Changing Item Order Move
Restoring default shortcuts	Select numbered function ⇒ ✓ ⇒ Set to Default ⇒ ● → Yes ⇒ ●

Motion Control

	Settings In Phone Settings
Practicing Motion	menu, Motion Control → ● → Action Test →
Control actions	Select item Select item
	Follow onscreen instructions.

Mode	
Changing handset modes	Start Here ● ➤ Settings ➤ ● In Phone Settings menu, Mode Settings ➤ ● ➤ See below
	Selecting a Handset Mode Select mode
	Customizing Handset Modes Select mode ⇒ ☑ → Select item → ● Adjust settings • Not available for Normal mode.
Creating a custom mode	● Settings ● In Phone Settings menu, Mode Settings ● Original ● Select item ● Adjust settings
Resetting Mode Settings	● Settings ● In Phone Settings menu, Mode Settings ● Select mode ● Enter Handset Code ● ● Yes ●

My Details

	Start Here ● ▶ ₹0 → See below
Editing/clearing My Details	Editing My Details Select tab → Select item → ☑ → Select item → ⑥ → Edit → ☑
	Clearing My Details
Toggling My Details in Dual Mode	● Description Switch to B or Switch to A Switch to B or Switch to A


Battery Meter

● Settings → ● In Phone Settings menu, Display → ● → Mini Battery → ● → • For patterns other than Clock & Battery, indicators **Changing battery** appear in turn. To change interval, press .

strength indicator pattern

- For Battery level (or level), approximate battery strength appears as a percentage.
- Remaining time is approximated for current handset usage pattern.
 - Remaining time is hidden while charging.

VeilView

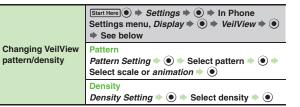

Double Number

All Modes

Omitting Handset Code entry when switching modes	Settings In Phone Settings menu, Double Number Settings Password Entry Off Enter Handset Code The Settings
Renaming Double Number modes	● Settings ● In Phone Settings menu, Double Number Settings ● Mode Name ● Select mode ● Enter name ● Select icon ●

A Mode & B Mode

Showing indicator for calls missed or new mail on idle line	● Settings ● In Phone Settings menu, Double Number Settings ● Show Missed ● On ● ●
Hiding Internet connection confirmation	● Settings ● In Phone Settings menu, Double Number Settings ● Packet Warning ● Off ● Off ● Available for B Mode.

■ Dual Mode


Rejecting calls to	Settings In Phone Settings
either line in Dual	menu, Double Number Settings 🔷 🌒 🖈 Reject
Mode	menu, Double Number Settings → ● → Reject By Line → ● → Select line → ● → On → ●
Setting main line for Dual Mode	● Settings ● In Phone Settings menu, Double Number Settings ● Send Priority ● Select option ●

ľ

Battery Meter



--- appears

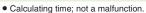



100% does not appear

• This is by design; not a malfunction.



Battery runs out faster

- A low ambient temperature reduces battery time.
- An older battery may run out faster.



Remaining time changes suddenly

 Time estimated by handset status; estimate may take time to appear.

Font Size	. 2-2
Changing Font Size	. 2-2
Standby Window	.2-3
Standby Window (Japanese)	. 2-3
Wallpaper	. 2-5
Customized Screen & S! Familiar	
Usability	. 2-6
Customized Screen & S! Familiar	
Usability (Japanese)	. 2-6
Sounds & Alerts	
Journa & Alerta	. 2-7
Customizing Handset Responses	
	. 2-7
Customizing Handset Responses Text Entry	. 2-7
Customizing Handset Responses	. 2-7 . 2-8 . 2-9
Customizing Handset Responses Text Entry Entering Characters	. 2-7 . 2-8 . 2-9 2-12

Dictionary	2-1 4
Using Dictionaries	2-14
Search	2-16
Searching Text	2-16
Scratch Pad	2-17
Phone Book	2-18
Creating Phone Book Entries	2-18
Using Phone Book Entries	2-20
Data Folder	2-21
Opening Files	2-22
Managing Files & Folders	2-23
Memory Card	2-24
Using Memory Card	2-24
Additional Functions	2-26
Troubleshooting	2-34
3	

2

Basic Operations



Changing Font Size

Enlarging All Fonts

Activate Large Font Menu to enlarge fonts for menus, text entry, etc. as follows:



(Long)



Large Font Menu → ●

Canceling Large Font Menu In ②, Standard Menu ▶ •

Customizing Font Sizes





- In Phone Settings menu,

 Display
 ●
- Font Settings ▶ ●



Font Settings Menu

- Font Size → Select item → ●
- Select size ▶ ●

Changing Font Weight

In Font Settings menu, Font Weight → ●



Select weight → ●



Standby Window (Japanese)

In Standby, view S! Quick News or Calendar, access shortcut icons, and more.





Standby Window





Press to toggle panels.
 (Long Press to toggle panels in reverse.)





Standby Window Panels

■ Shortcut Panel



- Access functions from shortcut icons.
- Calendar/Tag Panel



• Open Calendar; enter schedules, etc. in tags.

■ News Panel



- View S! Quick News.
- Member Panel



 Open entry/member details saved in Phone Book/S! Friend's Status member list.

Selecting Panel Items

[Shortcut Panel]/[Calendar/Tag Panel]

→ Select Item →

Select item →

(□/✓) →

✓

■ To the left is an example of Shortcut Panel with all items checked (√).

Advanced

Changing display option Assigning shortcuts/Bookmarks Managing shortcuts/Bookmarks Adding news items Changing news scroll speed Showing unread news only Changing news image setting Updating news items manually Assigning members Managing members (P.2-26 - 2-27)



Panel Selection

In Standby Window,

Standby Window

●



- Display Panel → → Select panel → (□/☑) → ☞
 - Panels with ☑ (checked) appear in Standby Window.

Using Tags

- In Calendar/Tag Panel, select row with □ → ●
- Enter text ▶ ●



Checking/Unchecking Tags

- ③ **⇒** Select tag **⇒ ≅ →** Check Note
- or Uncheck **→** ●
- Checked tag (with ☑) turns gray.

Deleting Tag Notes

- Select tag ⇒ □ → Delete Note
- **→** •
- To delete all checked tags, follow these steps:
 - **(a)** → **(b)** → Delete Checked Note → **(b)**

Wallpaper

- Settings In Phone Settings menu,

 Display ●
- Wallpaper → ●



Wallpaper Menu

- - For images smaller or larger than
 Display, select an option and press
 - Some files may not be usable.

Selecting Images with Limited Usage Period


- A confirmation appears. Follow these steps:
 Yes → (•) → (•)
- If Double Number Mode Menu Opens Select mode **▶ ●**


Slide Show Wallpaper

Set Slide Show to appear in Standby. Some images may not appear.

In Wallpaper menu, *Slide W*paper → ●



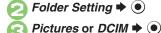

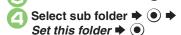

• Omit steps for sub folder if none.

If There is No Image in Set Folder

Preset images appear.
 Using Preset Images

In ⓒ, Preset Pictures ▶ ◉

Changing Pattern

In ②, Pattern Setting → ● Select pattern → ●



Customized Screen & S! Familiar Usability (Japanese)


Downloading Customized Screen

Use preloaded Customized Screen or download new via handset as follows: Read information (price, etc.) on Customized Screen download page.





Customized Screen Menu

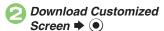

 Handset connects to the Internet and source site list appears. Follow onscreen instructions.

Customized Screen Setup

To install the most recent version, apply the file then download the updated one.

In Customized Screen menu, select Customized Screen ▶ ●



Applying Fee-based Customized Screen

 If Contents Key is required, follow these steps:

After **①**, **● Yes ● ①**

Read terms of service and then follow onscreen instructions.

When Selected Customized Screen is Active

Cancellation confirmation appears after ①.

S! Familiar Usability

Download and install applications that load legacy model interfaces.

Downloading S! Familiar Usability

Follow onscreen instructions.

S! Familiar Usability Setup





Customizing Handset Responses

Ringtone





Sounds & Alerts Menu

- Ringtone/videos →
 - Select item

 For For New Message, etc., select

 Assign Tone and press

 .



- Select folder → ●
- Select tone/file → ●

Setting Ring Time for Incoming Mail, etc.

After ⑤, Duration ▶ ⑥ ▶ Enter
time ▶ ⑥

Playing Video for Incoming Transmissions
In ②, Videos → ● → Select file → ●

If Portion of File Content is Specifiable

 After ⑤, start point selection window opens. Follow these steps:
 Select start point → ⑥

Selecting Files with Limited Usage Period

A confirmation appears. Choose *Yes* and press to proceed.

When using Double Number in Dual Mode (P.1-19)

 When ringtones are customizable for each line, press represent in Ringtone/videos menu to switch lines.

Vibration



- On → ●
- Vibration Pattern

 To check vibration patterns, se
 - To check vibration patterns, select one and press
- 🕞 Select pattern 🕈 💿

Setting Ringtones to Control Vibration
In ⓒ, Link to Sound ❖ ⑥

Precaution

 Cancel Vibration when charging battery to help avoid accidents.



Text Entry

Unless noted otherwise, text entry descriptions are for text entry windows.



Text Entry Window (Message Text)





Note

• Pressing repeatedly may not close text entry windows.

Switching Entry Modes





Available entry modes appear.



Select mode **→** •

• Entry Mode Indicators:

ಕೄ*	Kanji (hiragana)
アルア	Double/single-byte katakana
A/a	Double-byte alphanumerics (upper/lower case)
_A/_a	Single-byte alphanumerics (upper/lower case)
1	Single-byte number
区	Character Code

^{*#} appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle between character options for that kev.


Example: In double-byte katakana entry, press 10 three times.




Press to toggle options in reverse.

To enter characters assigned to the same key, press () first.

Example: In single-byte alphanumerics mode, enter no.

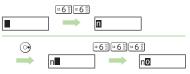

Long Press a key to enter the current character and advance cursor.

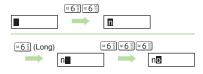



Entering Characters

Hiragana

Follow these steps to enter **f f s** in kanii (hiragana) mode:





(No Conv)

Kanii

Convert **すずき** to **給木**.





• In kanji (hiragana) mode, word suggestions change as hiragana is entered. (Predictive)



To exit suggestion list, press





 Words likely to follow the entry appear based on previous entries. (Previous Usage)

When Target Word is Not Listed

- Press or v to segment hiragana to convert separately.
- Press 🖭 to toggle Predictive and Non-Predictive suggestions.

Phonetic Conversion

Enter reading in hiragana ▶ 🖾

Selecting Multiple Converted Words

(A)

Advanced

🖑 🌑 Inserting line breaks 🚳 Inserting spaces 🌑 Changing Font Size 🌑 Disabling suggestions based on entered characters 🚳 Disabling suggestions based on entered words Disabling emoticon/Pictogram suggestions based on entered words Lowering type priorities in suggestion list Using Keypad to enter words/phrases from suggestion list Clearing entry log (P.2-28)



One-Hiragana Conversion

Enter the first hiragana to access previously selected words.

Example: 鈴木 was previously selected after conversion.







Katakana

Follow these steps to switch to double-byte katakana mode and enter ジュン.









Pictograms & Symbols

May be unavailable depending on the entry mode.





• Pictogram/Symbol Log appears.



• In Pictogram List, press to toggle cross-carrier Pictograms and all Pictograms.

Select Pictogram or Symbol



• Pictograms are double-byte even in single-byte modes.



Emoticons





Select emoticon **→** •

Alternative Emoticon Entry Method

• In kanji (hiragana) mode, enter かお or a descriptive word such as b-l or $\bar{j}-h$, then convert the entry.


EmoticonWordLink

 Immediately after inserting a descriptive word such as 嬉しい or 悲しい. corresponding emoticons may appear in the suggestion list.



Mail & Web Extensions

Enter .co.jp, http://, etc., easily.

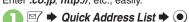





• Extensions are single-byte even in double-byte entry modes.

Hiragana to Katakana/ **Alphanumeric Conversion**

Enter katakana and alphanumerics in kanji (hiragana) mode.

Example: To enter PM Use key inscriptions.





Select word/phrase (PM) → •

Quick Conversion (for Hiragana)

A list of word suggestions appears based on the key pressed.

Example: To enter 終電







One Hiragana Word Call

• Enter the first hiragana of entries you used Quick Conversion for and press 🖒.



Editing Characters

Deleting & Editing

Follow these steps to correct また、お願 いします to また明日お願いします:

Select character







- The highlighted character is deleted.
- Select target location

 Enter characters




Recovering Deleted Characters

 Press an once for each character after deletion.

Deleting All Text

 Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press .

Copy/Cut & Paste

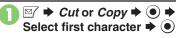



Cut

- To cancel and start over, press \(\overline{\pi} \).
- Highlight text range → ●
- Select target location ▶

 [##X ** (Long)



Text is entered.

Pasting Previously Cut/Copied Text
Select target location → □ → Paste
→ ● → Select text → ●

Available when Paste List appears.



Saving Frequently Used Words


Saving Words (Japanese)

Saved words appear among suggestions.

SettingsIn Phone Settings menu, User Dictionary **→** (•)



User Dictionary Menu

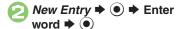

Enter reading

◆ ●

Editing Entries

In ②, Saved Word List → ● Edit reading → • Yes → •

930SH Download Dictionary (Japanese)

Download specialized 930SH Download Dictionaries from SH-web Mobile Internet site. Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions. Some dictionary files may not be usable.

In User Dictionary menu,




- Select number **→** (•) Select dictionary

 ◆

 ●
 - Existing dictionary is replaced.

Canceling Dictionary In ②, select dictionary ▶ 🖾 ▶ **Viewing Dictionary Information ▶** (**0**)

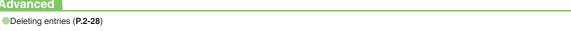

Basic Operations

Available Dictionaries:

Preloaded Dictionaries	Melkyo Japanese Dictionary, Genius English-Japanese Dictionary, Genius Japanese-English Dictionary
Online Dictionaries*	Wikipedia, Meikyo J-Dic MX.net, Genius EJ-Dic MX.net, Genius EJ-Dic MX.net Genius JE-Dic MX.net, Imidas Encyclopedia, Encyclopedia Nipponica, Digital Daijisen, PROGRESSIVE English-Japanese Dictionary, PROGRESSIVE Japanese-English Dictionary, Hot Pepper Pockets, and more

Online dictionary use requires Internet connection incurring transmission fees. Information fees may also apply. Read terms of service and then follow onscreen instructions.

Searching As-You-Type





Dictionary Window

- Last used dictionary appears first.
- Enter reading (spelling for English-Japanese dictionary)
 - Search results appear as you type.





Definition/Translation Window

Looking Up in Online Dictionaries
[Definition/Translation Window] ☑

→ WebDict.Search → ⑥ → 検索 →

⑥ → Yes → ⑥ → Select word → ⑥

Searching by Keyword

- 📊 In Dictionary window, 🗹
- Search Method

 ◆

 Keyword Search

 ●
- Select entry field → → Enter text → ●



Search → ● Select word
→ ●



Using Online Dictionaries

- In Dictionary window, ▼ ◆
 - Terms of service appear when using online dictionary for the first time.
 Read and then press .
- Select pull-down menu

 Select dictionary

 S
- Select entry field **⇒ ⇒**Enter text **⇒ →** *検索* **⇒** ●



- Yes ⇒ ●
- Select word ▶
 - Definition/translation window opens.

Disabling Confirmation

In ②, Yes(ConfirmNoMore) → ● →

From 🖯

Using History & Bookmarks

- Saving Bookmarks
- In definition/translation window, ⊠∕
- Bookmark → ●
- Opening History or Bookmarks
- \rceil In Dictionary window, 🖾
- History or Bookmark List → ●
- Select word →
 - Definition/translation window opens.

Adding Downloaded Dictionary

- 🔁 Add Dictionary 🕈 💿
- 🕟 Select file 🖈 💿

Canceling Added Dictionary

In ②, Cancel Dictionary → ● → Yes → ●

Using Dictionaries during Text Entry

To use dictionaries before entering text, press [##] 2].

In kanji (hiragana) mode, enter text → Before pressing ● to complete entry.



- Select dictionary → ●
- Search → Select word
 - Definition/translation window opens.

Inserting Index Word into Text

After ⓒ, ☞ ▶ Paste Index Word ▶ ◉



Searching Text

Web Search







Search Window

- Web Search is selected by default.
- Select entry field → → Enter search text → ●
- Search →
 - Search results appear.

Searching within PC Sites [Search Window] → Change Browser → → PC Site Browser → →

Mail Search

- In Search window, *Mail*Search **→** ●
- Search → Select option → ●

Searching within Received or Sent Messages

[Search Window] ☑ → Change Mail Folder → ● → Received Messages or Sent Messages → ●



Scratch Pad

Open Scratch Pad to jot down text, and more.







■ Web Search

Save to Notepad → ●

• Open saved entries from Notepad.


Other Scratch Pad Usage		
Usage	Operation	
Add Standby Window Tag	Save as Sticky Note → •	
Enter Mail Message Text	Create Message → ● → Select mail type → ●	
Enter Schedule Subject/Details	Save to Calendar ▶ ●	
Enter Task Subject/Details	Save to Tasks ▶ ●	
Add Last Name to Phone Book	Save to Phone Book → Reading is not entered.	
Save Text File	Save as Text File → ● ⇒ Enter name → ● ⇒ Save here → ● ■ Saved to Data Folder (Other Docs).	
Search Internet	Web Search Select browser	

For more, see corresponding function description or follow onscreen instructions.



Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

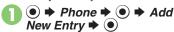




Last Name: → ● → Enter last name → ● → First Name: → ● → Enter first name → ●



 Characters entered for names (reading for kanji) appear.

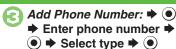



- To save additional phone numbers, repeat 6.
- Add Email Address: →
 - 🖈 Enter mail address 🖈 💿
 - Select type ⇒ ●



 To save additional mail addresses, repeat ②.





Phone Book Entry Window



Y7

• Entry is saved to Phone Book.

Incoming Calls while Creating Entry

 Contents are temporarily saved. End the call to return.

Selecting Mode in Dual Mode (P.1-19) [Phone Book Entry Window] *Mode:*

→ ● Select mode → ●





Saving other information
 Setting Light Color
 Changing vibration pattern
 Editing Phone Book entries
 Setting incoming mail ring time
 Renaming Categories
 Moving Categories (P.2-30)

Personal Ringtone

Set tone for calls from saved numbers.

In Phone Book entry window, select item, e.g., Tone-Voice Call: ▶ ●



- Assign Tone → Select folder → ●
- Select tone/file → ●

Saving Secret Entries

Restrict access to Phone Book entries by saving them as Secret entries.

- In Phone Book entry window, Secret: ▶ ●
- On ⇒ 🧿

Accessing Secret Folders

Customizing Response by Category





Category Control Menu

- Select Category ▶ ☑ ▶
 Select item ▶ ●
- Select item

 Select item, e.g., Assign Tone

 Customize responses
 - **▶** **Y**′
 - Customize responses in the same way as Phone Book entries.
 - Not available for USIM Card.

Responses Set by Phone Book Entry

Settings for each entry take priority.

Saving Numbers After Calls

After a call, save number to Phone Book.





As New Entry ▶ ● ▶
Complete other fields ▶ ☑

Saving to an Existing Entry
In ②, As New Detail → ③ → Select
entry → ⑥ → Complete other fields

→ □

□

Using Phone Book Entries

Dialing via Phone Book







Entry Search Window (By a-ka-sa-ta-na)

- When using Double Number in Dual Mode (P.1-19), Line indicators appear.
- Select entry **→**




Entry Details

Select phone number



Placing Video Calls

After €, ● **Video Call ●** ●

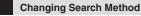







Select method **→** (•)

Phone Book Search Methods:

By a-ka-sa-ta-na	Shows entries with Readings that start with katakana in the specified row
By Category	Opens entries in the specified Category
By Reading	Shows all entries in Reading order (katakana, alphabetical then numerical)

Changing Search Method Temporarily [Entry Search Window] \(\square\) (press repeatedly to toggle search methods)

Opening from Other Functions

Example: Enter a recipient via Phone Book when sending a message.



Phone Book **→** (•)

Entry search window opens.

Select entry **→** (•)

Select phone number or mail address **→** (•)



- · Recipient is entered.
- Omit if only one number or address is saved.

Advanced



🖑 Changing view for entry search window Assigning images to Phone Book entries for incoming transmissions Messaging via Phone Book Placing Decoration Calls via Phone Book Deleting Phone Book entries Checking memory status Copying Phone Book entries (And more on P.2-29 - 2-31)

Data Folder

Handset files are organized in folders by file format.

■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Large still images on Memory Card (images captured with save location set to SD(DCIM))
Ring Tones	Downloaded melodies and other sound files
S! Appli	S! Applications
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Lifestyle-Appli*	Lifestyle-Appli required to use Osaifu-Keitai®
Books	Downloaded e-Books, etc.
Customized Screen	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Decoration Call	Decoration Call files created on handset or obtained via mail
Flash®	Downloaded Flash® (animation) files
Other Docs	Other files (Dictionary files, etc.)

^{*}Contains corresponding Yahoo! Keitai menu shortcut.

Memory Status

 Delete messages/files when memory is low. Handset performance may be affected when memory is full.

Opening Files



▶ Data Folder 🖈 💿





- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press \(\subseteq \).



Select folder **→** (•)



To open a sub folder, select it and press .



File List

Select file **→** •



- The content plays or appears.

Handling Open Images


- Press to enlarge, or press •# or to open next/previous ones.
- S! Mail Attachments

After ②, select file ▶ 🏻 → Send/

- When a confirmation appears, follow onscreen instructions
- Copy Protected Files (=0 or 90)
- Some functions may be unavailable.

Slide Show

Available for Pictures or DCIM folder.

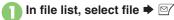





Slide Show **→** (●)





▶ Slide Show stops

Changing Interval

In ⓐ, ☑ → Speed → ⑥ → Select speed

●

■ When Speed is set to *Manual*, press or ** to advance or reverse frame.





Managing Files & Folders

Adding Folders

May be unavailable for some folders.

- (●) Data Folder 🖈 (●) 🖈 Select folder **→ ●**
- \square If Download is selected or folder is empty, skip ahead to 4.
- Manage Items **→** (•)



Create Folder

◆

●

Enter name **→** (•)

Renaming Folders After ①, select folder ▶ 🗹 ▶ Manage Items

◆ (•)

◆ Rename

◆ · Assign different names to folders within a

Moving Files

Some files may not be moved.

- In file list, select file ▶ 🖾
- Move **→ (•) →** Phone or Memory Card **→ ●**
- Select folder **→** (•)
- Move here **→** (•)

Copying Files

here **→** (•)

[File List] Select file → M → Copy → Phone or Memory Card → Select folder → ○ → Copy

Selecting Multiple Files



Hiding Folders

Restrict access to created folders. Only handset folders can be hidden.

- In file list, select folder ▶ ☑
- Set Secret

 ● Enter Handset Code **→** (●)

Accessing Secret Folders ▶ Enter Handset Code **▶ ●**

Advanced

layer.

Using Memory Card

Use microSD™/microSDHC™ Memory Card (hereafter "Memory Card") to save and organize files for use on 930SH.
Use recommended Memory Cards only.
For details, see P.14-22 "microSD™
Memory Card Compatibility."

Precautions

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.

Important Memory Card Usage Notes

- Never remove Memory Card or battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

Inserting & Removing

Turn handset power off first.



Open cover



Insert card



- With logo side up, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.



Close cover



If D Appears after Power On

 Memory Card may not be inserted properly; reinsert the card.

Removing Memory Card

 Gently push in card and release it; card pops out. Pull card straight out gently.





Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.







 Offline Mode is set. Handset. transmissions are suspended until format is complete.





Yes **▶** (•)

• To cancel, choose **No** and press •.

Precaution

 Never remove Memory Card or battery while formatting; may cause damage.

Opening Memory Card Files

Data Folder → (●)

MemoryCard **→** • Memory Card Data Folder opens.

Select folder **→** • Select file **→** •

Standby Window

■ View Setting

Changing display option

Ohamaing display option

Ohamaing display option

Ohamaing display option

Ohamaing option

Ohamain

■ Shortcut & Bookmark Settings (Shortcut Panel)

	Start Here (5) ⇒ Select icon ⇒ 🖾 ⇒ See below
Assigning shortcuts/	Shortcuts Assign Shortcut → ● → Select menu item → ● → Select function/folder → ●
	Bookmarks Assign Bookmark → ● → Select title → ● → Select Pictogram → ● → Yes → ●
	Start Here (5) → Select icon → 🗹 → See below
Managing shortcuts/	Deleting shortcuts/Bookmarks Delete → ● → Yes → ●
Bookmarks	Changing shortcut/bookmark order Move → ● ⇒ Select icon ⇒ ☑ (Up) or ☑ (Down) → ●

■ News Settings

	Start Here (5) ⇒ ☑ → Add News ⇒ ● → See below
	Shortcut Panel & Calendar/Tag Panel
	S! Quick News List ☀ ● ➡ 登録はこちら ☀ ●
	→ Yes → ● → Select genre → ● → Select
Adding news items	item ⇒ •
	Follow onscreen instructions.
	News Panel
	Select genre → ● → Select item → ●
	Follow onscreen instructions.
Changing news	③ → 🗹 → News Display → ● → News Speed
scroll speed	→ ● Select speed → ●
	Available for Shortcut Panel and Calendar/Tag Panel.
Showing unread	(5) → 🗹 → News Display → • Target News
news only	→ ● Unread Only → ●
,	Available for Shortcut Panel and Calendar/Tag Panel.
	Start Here (3) ⇒ 🖾 ⇒ See below
	Showing Images on Shortcut Panel &
	Calendar/Tag Panel
Changing news	News Display → ● → Display Image → ● →
image setting	On ⇒ •
	Available when only news area is set to appear on
	the Panel.
	Hiding Images on News Panel
	Display Image ⇒ ● → Off ⇒ ●

Updating news	One Item ③ ⇒ Select item ⇒ ☑ ⇒ Manual Update ⇒ ● ⇒ Reload This News ⇒ ●
items manually	All Items ③ → ☑ → Manual Update → ● → Reload All → ● • Available for News Panel.

■ Member Settings

—	
Assigning members	Shortcut Panel ③ → Select member field → ☑ → Assign Member → ⑥ → Select category → ⑥ → Select entry/member → ⑥
	Member Panel (⑤) ▶ ⑤
	Start Here ③ → Select member → ☑ → See below
Managing members	Deleting Members Delete → ● → Yes → ●
	Changing Member Order Move → ● ▼ (Up) or ▼ (Down) → ●
	Changing Member Icons Change Icon Select Pictogram Available for Shortcut Panel and Member Panel.

Customized Screen & S! Familiar Usability

Accessing Customized Screen source sites	Data Folder Select Customized Screen Select Customized Screen Web Access Select Customized Screen Follow onscreen instructions.
Applying preset Customized Screen	● Settings ● Customize ● Customized Screens ● Preset Screens ● Select pattern ● ● ●
Canceling Customized Screen	● → ☑ → Off → ● → Yes → ●
Canceling S! Familiar Usability	● > Yes → S!おなじみ操作解除 → ● Yes → ●
Canceling Customized Screen or S! Familiar Usability unconditionally	Main Menu → ● → Settings → ● → In Phone Settings menu, Customize → ● → Off → Yes → ●
Deleting Customized Screens	● Data Folder ● Customized Screen ● Select Customized Screen ● Polete ● Yes ● • When the corresponding Contents Key has been downloaded, choose Yes or No and press ●.



Text Entry	
Using Character Codes	In a text entry window (Character Code mode), enter four digits (P.14-11)
Using Pager Code	In a text entry window, ☐ Input/Conversion ☐ Input Method ☐ Pager Code ☐ Return to text entry window and enter two digits (P.14-10).
Inserting line	At the End of Text In a text entry window,
breaks	Mid-Entry In a text entry window, ★#♥ → ✓ (♦ ●)
Inserting spaces	In a text entry window, ⊙
Changing Font Size	In a text entry window,
Disabling suggestions based on entered characters	In a text entry window, → Input/Conversion → ● Predictive → ● → Off → ●
Disabling suggestions based on entered words	In a text entry window, → Input/Conversion → → Previous Usage → → Off → ●
Disabling emoticon/ Pictogram suggestions based on entered words	In a text entry window, → Input/Conversion → ● ★ EmoticonWordLink → ● → Off → ●
Lowering type priorities in suggestion list	In a text entry window,

Using Keypad to enter words/ phrases from suggestion list	In a text entry window, $\ \ \ \ \ \ \ \ \ \ \ \ \ $
Clearing entry log	In a text entry window, → Input/Conversion → → Reset Log → → Yes → ●
Undo conversion or recover deleted characters	In a text entry window, ☑ ⇒ Undo/Recover ⇒ ●
Inserting Phone Book entry items	In a text entry window, → Insert/Font Size → → Phone Book → → Select entry → Select item → →

User Dictionary		
Deleting entries	● Settings ● In Phone Settings menu, User Dictionary ● Saved Word List ● Select word ● Yes ●	



Dictionary Viewing dictionary ■ ⇒ M → Information ⇒ • information ► Font Size → Select size → **Changing Font Size** ■ ■ Enter reading (or spelling) ■ Select Copying Index Word word ⇒ ● → Copy Index Word ⇒ ● After copying text, ■ → 🖾 → By Copy Text Looking up copied ⇒ Search ⇒ ● Select word ⇒ ● words in dictionaries Start Here ► History or Bookmark List ⇒ See below One Word Deleting History & Select word \Rightarrow \boxtimes \Rightarrow Delete \Rightarrow \bullet \Rightarrow Yes \Rightarrow \bullet bookmarks All Words □ Delete All □ □ Enter Handset Code

Updating

dictionary list

Dictionaries ⇒ ● Yes ⇒ ●

	■ View Settings		
	Changing view for entry search window	Phone Phone Ph.Book Settings View Settings Itist Only List Only Output Description:	
	Assigning images to Phone Book entries for incoming transmissions	Start Here	
		Assigning Images Assign Picture	
		Capturing Images Take Picture	

Phone Phone Ph.Book Settings

Output

Description:

or Outgoing Call ⇒ ● Off ⇒ ●

New Number Prompt ⇒ ● Incoming Call

Phone Book

Hiding confirmation

after calls to/from

unsaved numbers

■ Phone Book Entry

	Start Here → Phone → → Add New Entry → → See below
	Address Address: Select item Complete field
Saving other	Office Office: Select item Enter text Description:
momaton	Homepage Homepage:
	Note Note: ▶ ● ➤ Enter text ▶ ●
	Birthday Birthday: ● ● Enter date ● ●
Setting Light Color	Select item, e.g., Light-Voice Call: Switch On/Off Select color Select option Select color Select color Select color
Changing vibration pattern	Select item, e.g., Vibration-Message: Switch On/Off Select option Vibration Pattern Select option Select pattern Select pattern Select option Select option Select option Select option
Editing Phone Book entries	Select katakana row Select entry Edit Select item Select item Edit Select item Select item Edit Reading after editing names.

Setting incoming mail ring time	② Select katakana row Select entry ☑ Edit • • Tone-New Message: • • Duration • • Enter time • • Available for compatible ringtones.
Renaming Categories	● Phone ● ● Category Control ● Select Category ● Edit Name ● ● Enter name ● ●
Moving Categories	● Phone ● ● Category Control ● ● Select Category ● ▼ Select target location ● ● View for By Category Phone Book search changes accordingly.

■ Using Entries

	Start Here
Messaging via Phone Book	Phone Numbers Select phone number → ● → Create Message → ● → S! Mail or SMS → ● Complete message → ☑
	Mail Address Select address
Placing Decoration Calls via Phone Book	Select katakana row Select entry Select phone number Deco. Call Deco. Call File Deco. Call Folder Select lile Dutgoing Type Mhen placing a Decoration Call for the first time, a confirmation appears.
Initiating S! Circle Talk via Phone Book	② ♦ Select katakana row ♦ Select entry ♦ ⑤ Select phone number ♦ ⑥ ♦ Call S! Circle Talk ♦ ⑥ ♦ ⑥ Set My Status to Online first.



Placing	💿 🏓 🥯 Select katakana row 🖈 Select entry 🟓
	● Select phone number ⇒ ● Int'l Call
via Phone Book	⇒

■ Manage Entries		
Deleting Phone	One Entry ② → → Select katakana row → Select entry → ☑ → Delete → ● → Yes → ●	
Book entries	All Entries	
Checking memory status	Phone	
	One Entry (Handset → USIM Card) ③ ♦ ⊙ Select katakana row ♦ Select entry ♦ ☑ ♦ Manage Entries ♦ ● Copy Entry to USIM ♦ ● Yes ♦ ●	
Copying Phone Book entries	One Entry (USIM Card → Handset) ③ → ☑ → Ph.Book Settings → ● → Select Phone Book → ● → USIM Memory → ● → ③ Select katakana row → Select entry → ☑ → Manage Entries → ● → Copy Entry to Phone → ●	
	All Entries All E	

	Start Here	
Editing Categories	Renaming Categories Select Category → ● → Edit Name → ● → Enter name → ●	
on USIM Card	Moving Categories Select Category → ☑ → Select target location → ●	
	Changing Icons Select Category	
Changing default storage media for new entries	Phone Ph.Book Settings Save New Entry USIM Memory or Ask Each Time	
Switching reference Phone Book	● Phone ● ● Ph.Book Settings ● ● Select Phone Book ● ● USIM Memory or Both ● ●	

■ Mode Settings
Activate Double Number first.

Changing mode of all entries at once	● Phone ● ● Manage Entries ● ● Change Mode(All) ● ● Select mode ● ● Enter Handset Code ● ●
Changing mode of multiple entries	② ► ✓ Manage Entries ► ● Multiple Selection ► ● Select entry ► ● (☑/□) ► ✓ Change Mode ► ● Select mode ► ●
Changing mode of entries by Category	③ Select Category → ☑ → Manage Entries



Data Folder

■ File/Folder View Settings


Switching file list view	 Data Folder Select folder Manage Items Change List View Select option
Changing image quality	● Data Folder ● Select folder ● Select file ● ● Manage Quality (Picture Quality for Flash® files) ● Select quality ● ●
Changing Slide Show settings	Start Here
	Playing Once Repeat
	Playing Music BGM Settings
	Changing Music BGM Settings → ● → Play Ring Tones → ● → Select folder → ● → Select file → ●
Disabling automatic scroll of panorama images	● Data Folder ● Select folder ● Select file ● ● Switch Autoscroll ● Off ●
Hiding Softkeys in image view	● Data Folder ● Select folder ● Select file ● ● SW GuideDisplay ● Off ●

■ Using Files/Folders

Using files as Wallpaper	● Data Folder ● Select folder ● Select file ● Select file ● Set as Wallpaper ● ● For images smaller or larger than Display, select an option and press ●.
Using files as ringtones	Select file Select folder Select file Select fi
Using files as ringvideos	● Data Folder ● Videos ● Select file ● ☑ ● Set as Ring Video ● ● Select item ● ● For For New Message or For New PC Mail, enter ring time and press ●.
Saving Phone Book entries	● Data Folder ● Select folder ● Select file ● Save to Phone Book ● As New Entry ● Complete other fields ● Y
Activating mobile camera, etc. in corresponding folders	● Data Folder → ● Select folder → ● → Take Picture, Record Video or Record Voice → ●

■ Managing Files/Folders

Opening file	● → Data Folder → ● → Select folder → ●
properties	Select file ⇒ ☑ ⇒ Details ⇒ ●
Renaming files	● Data Folder ● Select folder ● Select file ● Manage Items ● ● Rename ● ● Enter name ● ●
Sorting files	● Data Folder ● ● Select folder ● ● ■ Manage Items ● ■ Sort ● ■ Select method ● ● To reverse the order, sort by the same method again.
Deleting files & folders	Start Here ● → Data Folder → ● → Select folder → See below
	Single Files
	Folder & Files Within
Canceling Secret	Unlock Secret folders temporarily and select folder → ☑ → Unset Secret → ● → Enter Handset Code → ●

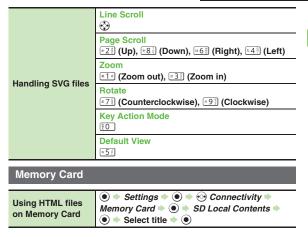



Standby Window



Shortcut/member icons do not appear on Shortcut Panel

• By default, only news area is set to appear on Shortcut Panel. Access Select Item via Options menu and select Shortcut or Member as needed.

Customized Screen



Customized Screen is not applied

 Some Customized Screens may not contain files for Wallpaper, System Graphics, ringtones or ringvideos; default settings apply for these functions.

Phone Book



Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc.. confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images do not appear for incoming Decoration Calls including image/video.
- Images may not appear when another function is active, etc.



Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc... confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- · Ringtones do not sound for incoming Decoration Calls with sound.
- . Memory Card with source files may be removed: reinsert the card to restore settings.



Cannot enter 16 characters for Category names

 Character entry limit for Category names may be lower depending on the USIM Card in use.



Data Folder



Cannot copy files properly

 Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)



Copied/moved files cannot be used on PCs, etc.

 Some files may not be usable on other SoftBank handsets or PCs, etc.



Cannot sort files properly

 Check the number of files/folders in the folder. Files/folders in folders containing 241 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.



What should I be careful about when entering file names?

Single-byte Symbols ¥, /, :, ;, ., <, >, /,
?, ∦ and " are not supported.

Emergency Calls	3-2
Voice Calling	3-3
Video Calling	3-5
Decoration Call	3-7
Speed Dial	3-8

Call Log	3-9
Call Time & Call Cost	3-10
Optional Services	3-11
Additional Functions	3-13
Troubleshooting	3-22

3

Calling



Emergency Calls

Your location is automatically reported to the corresponding agency (police, etc.) when you place emergency calls (110, 119 or 118) with SoftBank 3G handsets. (Emergency Location Report) 930SH reports Location Information based on positioning signals from radio stations.

- Registration/transmission fees do not apply.Positioning accuracy is affected by
 - location/signal conditions. Always provide your location and purpose on the phone.
- Location Information is not reported when emergency calls are placed without Caller ID (such as when the number is prefixed with 184). However, the corresponding agency may obtain your Location Information in a life threatening situation.
- Not available during international roaming.

Handset Restrictions & Emergency Calls

Emergency calls are possible even while some handset restrictions are active.

Active Restriction	Emergency Calls
Max Cost (P.3-18)	
Function Lock (P.11-2)	Possible
Outgoing Calls (P.3-20)	
Offline Mode (P.1-16)	
Keypad Lock (P.1-18)	Restricted
PIN Entry (P.11-2)	



Voice Calling

Answering a Voice Call

Incoming Call window opens for a call.



Incoming Voice Call Window

- to accept the call Call connects.


Call ends

Muting Ringer Temporarily [Incoming Voice Call Window] After Calls to/from Unsaved Numbers

• Save to Phone Book confirmation appears.

Placing a Voice Call

Follow these steps to dial via Phone Book:

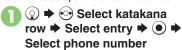



Wait for connection.



Call ends

Switching Lines in Dual Mode (P.1-19) After ①, ● Select Line(Voice) ▶ Select line● **Earpiece Volume**

During a call, ③ or

Advanced

Rejecting calls Placing calls on hold Answering with Headphones (P.3-13)

Placing calls by entering phone numbers Adjusting Earpiece Volume Sending/blocking Caller ID (P.3-14)

Muting Microphone Recording caller voice (Voice Call only) (And more on P.3-15)



Enter phone number with area code ▶ ☑/

Int'l Call → ●



Calling Unlisted Countries
In ⑤, Enter Code ♦ ⑥ ♦ Enter
country code ♦ ⑥ ♦ ♣

Placing Calls while Abroad

See below to place a call to Japan from abroad. Apply for Global Roaming beforehand. http://mb.softbank.jp/mb/en/global_service/

Enter phone number with area code ▶ ☑



Handset dials the number.

👔 💿 🕈 Call ends

Calling SoftBank Handsets

In ②, always select 日本(JPN).

Calling Landlines & Mobiles within the Same Country

 Perform steps in "Placing a Voice Call" on P.3-3.

Calls Overseas

Calling may not be possible outside Japan.
 Connections depend on available network, signal strength, and handset settings.

Answer Phone

Record caller messages on handset. Answer Phone cannot be used when handset is off or out-of-range. Use Voicemail to record caller messages when Answer Phone is not available.



(Long)

• Answer Phone is set (a appears).

Canceling Answer Phone (Long)

Answering Calls while Recording

• No message will be recorded.

Playing Messages



 Playback ends automatically after all messages have played.

■ Playback Operations

- Flayback Operations	
Volume Control	◊ or
Replay/ Skip Backward	€
Stop	CLEAR IS BACK IS
Skip Forward	● or ⊙
Delete	Yes

Advanced




Calling

Recording caller messages Changing ring time Sampling outgoing message Muting Earpiece (P.3-13)

Placing calls by entering country code directly Adding a country code automatically when placing calls Adding/changing/deleting country codes (And more on **P.3-14**)

View the other party's image or send an Outgoing Image to compatible handsets.

Window Description

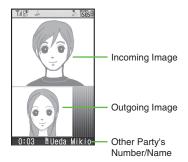

■ Engaged Video Call Operations

	Toggle View	Q Q,XZ
	Toggle Outgoing Image	•
Ī	Open Help	

Important Video Call Usage Notes

- If both parties are not using the same Video Call system, call may be interrupted. (Video Call charges apply.)
- Video Calls cannot be placed while TV is active.

Answering a Video Call

Incoming Call window opens for a call.



Incoming Video Call Window

- to accept the call
- **② ③ →** Call ends


Answering without Camera Image
[Incoming Video Call Window] ●

Yes ▶ ●

- Video Call charges apply to the caller.

 After Calls to/from Unsaved Numbers
- Save to Phone Book confirmation appears.

Advanced

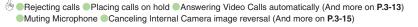





Placing a Video Call

Follow these steps to dial via Phone Book:

Calling

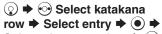

Select phone number **→ ●**

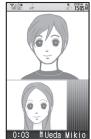

· Call is accepted and image appears.



⇒ Call ends

Switching Lines in Dual Mode (P.1-19) After ①, Select Line(Video) → ⊙ → Select line **→** •

Advanced



9 Placing calls by entering phone numbers Adjusting Earpiece Volume Sending/blocking Caller ID (P.3-14) Sending Alternative Image when initiating Video Calls Disabling Loudspeaker for Video Calls Muting Microphone when initiating Video Calls (And more on P.3-20 - 3-21)

Decoration Call

Show decorative message in incoming call windows on recipient's handset.

- Available without a separate contract.
- Recipient's handset must be Decoration Call-compatible.
- Charges apply to the caller when Decoration Call is placed successfully.


Answering a Decoration Call

Incoming Call window opens for a call.




Incoming Decoration Call Window

If Softkeys do not appear, handle incoming Decoration Call like any other call.

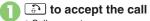

Call connects.

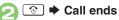

 Open/save Decoration Call files from received call records.

Note

 Decoration Call file may not play depending on recipient handset settings.

Placing a Decoration Call

Follow these steps to place a Decoration Call by entering a phone number:

Enter phone number **→ □** Deco. Call → (•)








• To check selected file, press \(\subseteq \).



 Handset dials the number. (It may take some time.)



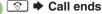


Placing Your First Decoration Call

- A confirmation appears. Follow onscreen instructions.
- To disable confirmation, press (□).

Placing Decoration Video Calls

After €, Outgoing Type ▶ ●



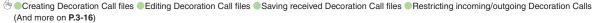




Calling

Speed Dial

Saving Phone Numbers

Save phone numbers to Speed Dial/Mail list for easy dialing.

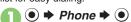





Select phone number **→ ●**



Select mail address prompt appears.

Do not Assign **⇒** ● To save mail address instead, select one and press .

Yr Saved

• To save additional phone numbers, repeat 3 - 3.

Using Headphones for Speed Dial

• Save a phone number to **1**.

Canceling Speed Dial Entries

In ⓒ, select entry ▶ 🗹 ▶ Remove **▶ (•)**

■ Omit entry selection step when canceling all entries.

Using Speed Dial



Placing Video Calls

In ②, ● Speed Video • ●

Placing Decoration Calls

In ②, ● Speed Deco. Call • ● Deco. Call File → Select/create

file **▶** ☑

Using Headphones

• In Standby, Long Press Call Button until a double beep sounds; handset dials the number saved in . To end the call, Long Press Call Button until a beep sounds.



Call Log

Call Log

Open recent dialed/received call records.







- All Calls opens; press () to open Dialed Numbers, Dialed Frequency and then Received Calls
- When using Double Number in Dual Mode (P.1-19), Line indicators appear except for Dialed Frequency.



Select record **→ ●**




 Select Decoration Call record and press v to open the corresponding file.

When the Same Number is Dialed More Than Once Using the Same Call Option

• Only the last record appears. (All records appear for S! Circle Talk and Decoration Call.)

Advanced

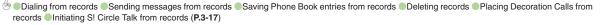




Call Time & Call Cost

Call Time

Check estimated time of the most recent call and all calls.



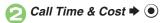



Call Time & Cost Menu





Dialed Calls or Received Calls

• • • •

Call Cost

Check estimated call charges of the most recent call and all calls.

Call Costs (including Max Cost) may be unavailable depending on subscription status.

- In Call Time & Cost menu, Call Costs → ●
- Show Call Cost → ●







Optional Services


Call Forwarding and Voicemail can only be set simultaneously when Call Forwarding is set to Video Calls.

Call Forwarding	Automatically divert all or all unanswered incoming calls to another preset phone number
Voicemail	Redirect all or unanswered calls to Voicemail Center; access messages from handset/touchtone phones
Call Waiting*	Answer incoming calls or open another line during a call
Group Calling*	Switch between open lines or connect multiple lines at once for teleconferencing
Call Barring	Restrict incoming/outgoing calls depending on conditions
Caller ID	Show or hide your own number when placing calls

*A separate contract is required.

Initiating Call Forwarding

Follow these steps to divert calls to a phone number saved in Phone Book after selected ring time (No Answer set):

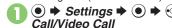





Voicemail/Divert Menu


- Diverts → (•) → Select call type **→** (•)
- No Answer **→** (•)



- Phone Book **→** (•) **→** (•) Select katakana row Select entry **→** (•)
- Select phone number **→** (•) • Omit 3 if only one number is saved.





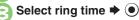

Diverting Calls without Handset Response In ②, Always ▶ ⊙ → 🖯 - 🗸 **Entering Forwarding Number Directly** In ⑤, Enter Number → ⑥ → Enter phone number

◆

◆ Select ring time **→** •

Initiating Voicemail

Follow these steps to divert calls to Voicemail Center after selected ring time (No Answer set):

In Voicemail/Divert menu. Voicemail

◆ (•)

◆ Activate



No Answer → (•) → Select ring time \Rightarrow (•)

Diverting Calls without Handset Response In ②, Always ▶ ●


Advanced



Calling

Missed Call Notification

Activate this function for records of calls missed while handset is off/out-of-range and Voicemail is active.

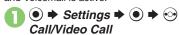



Call/Video Call Menu



- When using Double Number in Dual Mode (P.1-19), select a line and press .
- Follow the voice guidance for further operations.

Playing Messages





Voicemail/Divert Menu






- When using Double Number in Dual Mode, select a line and press .
- Follow the voice guidance for further operations.

Hiding New Voicemail Message Indicator In ⊚, Delete Icon → ● Yes → ●

Canceling Call Forwarding/Voicemail

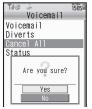



Advanced



Receiving a Call

■ Handling Incoming Calls

Rejecting calls	Voice Call When a call arrives,
	Video Call
	When a call arrives, 😉
Placing calls on	When a call arrives, 💿
hold	 Press to answer the call on hold.
Answering with	When a call arrives, Long Press Call Button
Headphones	To end the call, Long Press Call Button.

Answer Phone

Recording caller messages	When a Voice Call arrives,
Changing ring time	● Settings ● ● ⊙ Call/Video Call → Answer Phone ● ● Answer Time ● ● Enter time ● ●
Sampling outgoing message	● Settings ● ● ⊖ Call/Video Call ► Answer Phone ● ● Guidance Msg ● ● Press to stop playback.
Muting Earpiece	● Settings → ● → ○ Call/Video Call → Answer Phone → ● → Volume → ● Silent → ●

Remote Monitor		
Answering Video Calls automatically	Start Here ● ♦ Settings ♦ ● ♦ ❖ Call/Video Call ♦ Video Call ♦ ● ♦ Remote Monitor ♦ ● ▶ Enter Handset Code ♦ ● ♦ See below	
	Saving Numbers from Phone Book Auto Answer List • • < Empty> • Change • From Phone Book • • Select katakana row • Select entry • • Select phone number • • • To enter a phone number directly, select < Empty> and press •	
	Saving Numbers from Call Log Auto Answer List → ● → <empty> → ☑ → Change → ● → From Call Log → ● Select record → ●</empty>	
	Activating Remote Monitor Switch On/Off	
Editing Auto Answer List	Start Here ● → Settings → ● → ○ Call/Video Call → Video Call → ● → Remote Monitor → ● → Enter Handset Code → ● → Auto Answer List → ● → See below	
	Editing Numbers Select entry	
	Deleting Entries Select entry	
Changing ring time	Settings Settings Remote Monitor Answer Time Answer Time	

● **Enter time ●** ●



Placing a Call

■ Basic Operations

Placing calls by entering phone numbers	Enter phone number with area code To correct entry, use to place cursor under the digit and press To delete the digits above and after the cursor, Long Press To delete the digits.
	Video Call Enter phone number with area code
Adjusting Earpiece Volume	 ♦ Settings ♦ ● ♦ In Phone Settings menu, Earpiece Volume ♦ ● ♦ Adjust level ♦ ●
Sending/blocking Caller ID	After phone number entry, → Hide My ID or Show My ID → ●

■ International Calls

	•
	Start Here Settings Call Auto Add Code Auto Add Code See below
Adding a country code automatically when placing calls	Activating Auto Add Code Switch On/Off
	Selecting a Country from List Country Code Select country Select country Select country Select country
	Specifying a Country Code Country Code
Saving frequently used international prefix	● Settings ● ● ⊙ Call/Video Call Int'l Calling ● Int'l Prefix ● ■ Enter Handset Code ● ■ Enter prefix ●
Adding/changing/ deleting country codes	Start Here
	Adding <empty> → ● → Enter name → ● → Enter country code → ●</empty>
	Changing Select country → ● → Change → ● → Enter name → ● → Enter country code → ●
	Deleting Select country



During a Call	
Muting Microphone	Voice Call During a call, ☑ (press again to cancel) Video Call During a call, ☑ ➤ Mute ➤ ● • To cancel, select Unmute.
Recording caller voice (Voice Call only)	During a call,
Activating/ canceling Loudspeaker	Activating Loudspeaker for Voice Call During a call, While message appears, To cancel, press .
	Canceling Loudspeaker for Video Call During a call, [v] (press again to activate)
Switching sound output	During a call, → Transfer Audio → → To Phone or To Bluetooth → ●
Opening Phone Book	During a call, → Phone Book → → → → Select katakana row → Select entry → ● • Press twice to return to call window.
Saving Phone Book entries	During a call, → Phone Book → → Add New Entry → → Complete fields → → Press → to return to call window.
Disabling touch tone signaling	During a call,

Placing calls on hold	During a call, → Hold → ● Subscription to Call Waiting or Group Calling is required to place Voice Calls on hold. To resume Voice Calls, press →, select Retrieve and press ●. To resume Video Calls, press →.
Opening messages (Voice Call only)	During a call, → Messaging → → Select Messaging folder → → Select folder → → Select message → → • Press → three times to return to call window.
Creating messages (Voice Call only)	During a call,
Adjusting Outgoing Image brightness	During a Video Call,
Canceling Internal Camera image reversal	During a Video Call,

Decoration Call

Decoration Call	
Creating Decoration Call files	Start Here
	Using Still Images Picture → ● → Pictures → ● → Select file → ● → Sounds → ● → Select folder → ● → Select file → ● → Yes or No → ● → ▼ → Save here → ●
	Using Video Video Video
	Using Animation Flash® → ● → Select file → ● → Yes or No → ● → ▼ → Save here → ●
Editing Decoration Call files	Data Folder Decoration Call D
Saving received Decoration Call files	② Select type ⇒ Select record ⇒ ② ⇒ Save File ⇒ ● ⇒ Save here ⇒ ●
Restricting incoming/outgoing Decoration Calls	● Settings ● ● ○ Call/Video Call Decoration Call ● Switch On/Off ● Off ● Enter Handset Code ●
Hiding incoming Decoration Call window	Settings Call/Video Call Decoration Call Play in Receiving Off Off Off Off Off Off Off O

Using mobile camera to create Decoration Call files	Start Here
	Capturing Still Images Picture → ● → Take Picture → ● → Capture image → ● → ☑ → Save here → ● • Combine image with sound as needed.
	Recording Video Video Record Video Record Video Record Video Record Video Video Save Video Video Video Video Save Video Vi
Removing image/ video/sound	Start Here
	Removing Image/Video Images → ● → Remove Image → ● → ☑ → Save as New or Overwrite → ● • For Save as New, select Save here and press ●.
	Removing Sound Sounds → ● → Remove Sound → ● → ₩ → Save as New or Overwrite → ● For Save as New, select Save here and press ●.
Showing options upon Decoration Call failure	● Settings → ● → ○ Call/Video Call → Decoration Call → ● Notice → ● → On → ●

Call Log

Dialing from select Video Call and Calling from Receive	press or instead of , then press . d Call Records press or instead of , then press or instead of , then press or .
② D No Select type	
from records Create Message → € Complete message	S! Mail or SMS > •
Book entries from records Save to Phone Book Complete othe	e Select record • • • • • • • • • • • • • • • • • • •
Deleting records Delete → ● Yes	e → Select record → ☑ → → ●
All Records	All → ● ➤ Enter Handset
	e ⇒ Select record ⇒ ☑ ⇒ Deco. Call File ⇒ ● ⇒ ☑
Initiating S! Circle Talk from records Select type Call S! Circle Talk ■ Set My Status to Onlii	0 0

Call Time/Call Cost/Data Communication

■ Call Time

Setting handset to beep during Voice Calls	Settings →
Hiding Call Time during calls	Settings Call/Video Call Disp. Time/Cost Call Time Counter Call Time Counter Call Time Counter
Resetting Call Timers	● Settings → ● Call/Video Call Call Time & Cost → Call Timers → ● Clear Timers → Enter Handset Code Yes → ●

■ Call Cost

Showing Call Cost after each call	Settings Se
Resetting Call Costs	● Settings ● ⇔ ⇔ Call/Video Call → Call Time & Cost → ● Call Costs → ● Show Call Cost → ● □ Enter PIN2 → Yes → ●

Limiting Call Costs	Start Here
	Setting a Limit Max Cost/Residual → ● ➤ ➤ Set → ● → Enter PIN2 → ● → Enter amount → ●
	Changing the Limit Max Cost/Residual → ● ➡ ➡ Enter PIN2 → ● ➤ Enter amount → ●
	Checking Remaining Amount Max Cost/Residual ● ● • May be unavailable depending on subscription status.
Showing amount in another currency	● Settings • ● Call/Video Call • Call Time & Cost • ● Call Costs • ● Cost Units • ● Enter PIN2 • ● Enter currency • ● Enter exchange rate (per yen) • ● ●

■ Data Communication

Checking packet transmission volume	Start Here
	Most Recent Volume Last Data
	All Volume All Data
Resetting Data Counter	● Settings • ● • ○ Call/Video Call • Call Time & Cost • ● Data Counter • ● Clear Counter • ● Yes • ●

Optional Services

All Services

Checking service	● > Settings > ● > ○ Call/Video Call > Select service > ● > Status > ●
	• For <i>Call Barring</i> , select restriction and press .

■ Call Waiting (Contract Required)

= can training (contract required)	
Activating Call	Settings Output Call/Video Call Output Description:
Waiting	Call Waiting → ● → On → ●
Placing Line 1 on hold to answer Line 2	A tone sounds during a Voice Call ◆ Press ♠ to switch between lines. ◆ Press ♠ to end active line and re-engage the
LIIIO L	party on hold.

■ Group Calling (Contract Required)

Opening another line during a call	During a Voice Call, enter phone number ►
Switching between open lines (Swap Calls)	During a Voice Call, ♠ • Press ♠ to switch between lines.
Talking on multiple lines simultaneously	While switching between lines, Group Calling Conference All O
Switching to private conversation during Group Calling	During a Voice Call, select number/name → ● → Private → ●




■ Call Barring

	Start Here ● → Settings → ● → ⓒ Call/Video Call → Call Barring → ● → Rejected Numbers → ● → Black List → ● → See below
Rejecting calls by number	Saving Numbers Set Reject Number → ● → <empty> → ● Enter phone number → ● • When using Double Number in Dual Mode (P.1-19), select a line type and press ●.</empty>
	Activating Black List Switch On/Off → ● → On → ●
Rejecting calls	Start Here ● → Settings → ● → ⓒ Call/Video Call → Call Barring → ● → Rejected Numbers → ● → See below
without designating	Calls from Unsaved Numbers Unknown → ● → On → ●
numbers	Calls with No/Undisplayable Caller ID or from Public Phones Withheld On On On On On On On On On O
Changing Network Password	● Settings ● ● ☆ Call/Video Call → Call Barring ● ● Change NW Password ● ● Enter current Network Password ● ● Re-enter new Network Password ● ● Re-enter new Network Password ● ● ● Re-enter

Designating numbers to reject from saved information	Start Here
	From Phone Book Ph. Book List
	From Call Log Records From Call Log
	From S! Friend's Status Member List From Friend's Status
Editing Black List	Start Here Settings Call Call ⇒ Call Barring Rejected Numbers Black List Set Reject Number Set Reject S
	Editing Numbers Select number/name ● ● ► Edit ●
	Deleting Numbers Select number/name ⇒ ☑ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●

Calling

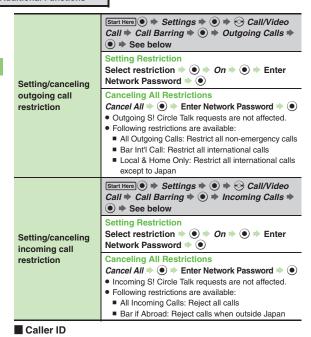

Show My Number → • On or Off → •

Settings

■ Voice Call

Answering Voice Calls automatically when using Headphones	Start Here ● → Settings → ● → ⊙ Call/Video Call → Auto Answer → ● → Enter Handset Code → ● → See below
	Activating Auto Answer Switch On/Off → ● → On → ● • When Auto Answer is active, Auto Answer tone sounds after ringtone even in Manner mode; cancel afterward.
	Changing Ring Time Answer Time ● ● Enter time ●

■ Video Call

Sending Alternative Image when initiating Video Calls	Start Here Settings Call Call Call Call Call Camera Picture Call See below			
	Setting Alternative Image Default Image			
	Changing Alternative Image Alternative Image → ● ⇒ Select folder → ● ⇒ Select file → ● → ●			
	Omit file selection step when using Customized Screen images.			
Changing quality	Settings Output Call/Video Call Output Call/Video Call			
of Incoming/	Video Call → ● Incoming Picture or			
Outgoing Images	Outgoing Picture → ● Select quality → ●			
Disabling	Settings Output Call/Video Call Call/Video Call			
Loudspeaker for	Video Call ⇒ ● Doudspeaker ⇒ ● → Off			
Video Calls	→ •			



Showing/hiding

Caller ID

Setting image that is sent while call is on hold	● Settings ● ● Call/Video Call ● Video Call ● Hold Guidance Pict ● ● Select folder ● ● Select file ● ● ● Omit file selection step when using Customized Screen images.
Setting Backlight status	● Settings ● ● ○ Call/Video Call ● Video Call ● ● Backlight ● ● Select option ● ● Selecting Normal Setting applies Display Backlight setting.
Muting Microphone when initiating Video Calls	Settings

Receiving a Call



Cannot use Answer Phone or Caller Voice

- Answer Phone and Caller Voice are disabled when less than 12 seconds remain or 20 messages are recorded. Delete messages.
- Answer Phone and Caller Voice are not available for Video Calls

Placing a Call



Cannot place call via Speed Dial

 Speed Dial is not available when Phone Book access is restricted by Application Lock.



Cannot place call

- If \$\mathbb{H}\$ appears, cancel Keypad Lock (P.1-18).
- If A appears, cancel Function Lock (P.11-2).
- If M appears, cancel Offline Mode (P.1-16).



Call won't connect and there's a beeping tone

- Did you include the area code or the first 0? Dial the number including the area code or 0.
- Handset may be out-of-range (out appears). Move to a place where signal is strong and retry.

During a Call



Outgoing Image is distorted during Video Calls

· Rapid motion can make images appear choppy or distorted.



Conversation is hampered

- Conversations may be hampered by ambient noise.
- Check Earpiece Volume when using Loudspeaker. Increasing Earpiece Volume may cause feedback/interference.



Call is choppy or cut off

- Network signal may be weak. Move to a place where signal is strong and retry.
- · Battery may need to be charged or replaced. Charge battery or install a charged battery.



Clicking noise is heard during call

 Handset may be moving into another service area. Noise is heard when Network signal switches. This is normal.



Cannot hear other party's voice

- Earpiece Volume may be low. Increase Earpiece Volume (P.3-14).
- · Sound output may be set to use handsfree device. Set Transfer Audio. (P.3-15) to To Phone.

Other



Talk Time on Display seems incorrect

• Ring time for incoming or outgoing calls is not counted. (On hold time is counted.)



Cannot save phone number for Call Forwarding

• Does the number start with 1. 00. 0120 or 0990? Public service numbers. international call numbers starting with 00. toll-free numbers and fee-based service numbers cannot be saved.



4-2
4-2
4-3
4-4
4-4
4-7
4-8
4-8
4-10
. 4-10
I
. 4-12

. 4-13
4-13
. 4-14
4-14
. 4-15
. 4-18
. 4-32

4

Messaging



Use the following messaging services.

SMS

Exchange up to 160 alphanumerics with SoftBank handsets.

S! Mail

Exchange up to 30,000 characters with e-mail compatible handsets, PCs, etc; attach media files, etc.

Send Graphic Mail; set Feeling Setting in subject field when messaging SoftBank handsets.

PC Mail

Receive or reply to PC mail account messages. Use 930SH to handle PC Mail messages like SMS or S! Mail.

Available Entry Items

	Recipient	Subject	Message	Attachment
SMS	Available*	N/A	Available	N/A
S! Mail	Available	Available	Available	Available
PC Mail	Available	Available	Available	Available

*SoftBank handset numbers only.

- A separate contract is required to use
 S! Mail and receive e-mail from PCs, etc.
- For more information, see SOFTBANK MOBILE Corp. Website (**P.14-22**).

Auto Retry Function

If recipient's handset is off/out-of-range, a sent message is saved in Server Mail Box and delivery attempted at regular intervals. (Undeliverable messages are deleted.)

Auto Resend

When Auto Resend is active, handset automatically resends unsent messages up to two times. Cancel to disable (**P.4-28**).

Customizing Handset Address

Change alphanumerics before @ of the default handset mail address.

For more information, see SOFTBANK MOBILE Corp. Website (P.14-22).

Changing Address











 Handset connects to the Internet. Select *English* and press , then follow onscreen instructions.

Saving Address

When handset address is changed. SoftBank sends new address confirmation via S! Mail.



To save new address to My Details, follow these steps. (New address is effective even if not saved.)























Sending S! Mail

Follow these steps to send S! Mail to a number/address saved in Phone Book:




When a PC Mail Account exists, select **S! Mail** and press **.**



S! Mail Composition Window

- Select recipient field → ●
- Phone Book **→** •
- Select katakana row ⇒Select entry ⇒ ●

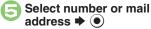

- Omit if only one number or address is saved.
- When a mail address is entered, do not use single-byte katakana in message text or subject.
- Select subject field → → Enter subject → ●



Text Entry Window





S! Mail Composition Window

连 🖈 Transmission starts

Incoming Calls while Creating Message

 Content is saved temporarily. End the call to return.

Previewing Outgoing Message After ③, → Preview Message → ●

Pictogram Entry

- In Pictogram List, press (to toggle cross-carrier Pictograms and all Pictograms.
- Pictogram appearance may differ by carrier.

Switching Lines in Dual Mode (P.1-19)

[S! Mail Composition Window]

Switch Line

Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line
Select line



- Using other recipient entry methods Adding recipients Inserting signature automatically Converting mail type (SMS/S! Mail) (And more on P.4-18)
 - Saving without sending Requesting delivery confirmation Designating/editing reply-to address (And more on P.4-19 4-20)
 - Requesting Delivery Report for all messages
 Disabling automatic resend of unsent messages
 Hiding progress bar while sending messages (And more on P.4-28)

Attaching Files

Send attachments to compatible handsets. Follow these steps to attach images to S! Mail:

In S! Mail Composition window after composing message, & Attach







Picture

Select folder

Output

Out

Select file

When a size list appears, select attachment size and press .



Attach File Window

Repeat ② - ④ to attach more files.



Attaching Non-Image Files

• In ⓐ, select a folder other than *Picture* and press ⑥, then select a file.

Sending Feeling Mail

In S! Mail Composition window after composing message,

→ Feeling Settings → ●



- Select category, e.g.,

 Happy/Glad

 ●
- Select item, e.g., I Love You → ●




🗿 🗹 🔷 Transmission starts

Canceling Feeling Mail

[S! Mail Composition Window] Select subject field → ● → ⊖ Select Pictogram, e.g., ! → → ●

Advanced

© Capturing/recording and attaching Set Auto Play File (P.4-20)

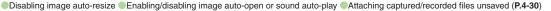



Sending Graphic Mail

Follow these steps to:

- · Change font size and background color
- Insert images and My Pictograms
- Scroll text
- In text entry window, (Long)



Graphic Mail Window

Font Size: ▶ ●




Select size **→** • Enter text










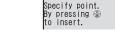

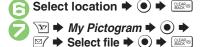







Scrolling **→** ●



- Select direction ▶ ▶
 Enter text
- **① ◆ Y →** Transmission starts

Canceling Last Action [Graphic Mail Window] Undo → ● Cancelling All Graphic Mail Settings [Graphic Mail Window] Cancel → ● → Yes → ● Saving as Templates After ①, ● ▶ ☑ → Save as

- After ①, ② → ☑ → Save as

 Template → ③ → Enter name → ③

 → Save here → ⑥
- Only the message text is saved.

Advanced



Sending SMS

Follow these steps to send SMS to a number saved in Phone Book:







SMS Composition Window






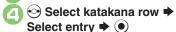

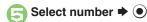



Omit if only one number is saved.

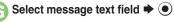







SMS Composition Window



Incoming Calls while Creating Message

 Content is saved temporarily. End the call to return.

When Message Text Exceeds Limit

A confirmation appears. To convert SMS to S! Mail, follow these steps:
 Yes → ●

Switching Lines in Dual Mode (P.1-19)


[SMS Composition Window]

Switch Line

Select line

€



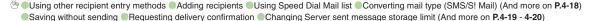

Changing Server sent message storage limit Changing SMS Server number Changing character encoding for composing messages (P.4-31)



Opening & Replying

Opening New Messages

Information window opens for new mail.

See P.4-17 to receive PC Mail.



- By default, complete S! Mail messages including attachments are retrieved; transmission fees apply depending on the price plan.
- Automatic message retrieval while abroad may incur high charges since flat-rate packet transmission plans do not apply during international roaming. Set handset to retrieve initial portion of message text, then manually retrieve complete message as needed.

Delivery Report

 Information window opens for Delivery Report. Follow these steps to open it:
 Delivery Report → ● → Select message with report → ● → ☑





Select message → ●



 Message text appears in 3D animation (3D Pictogram).



→ •

Message window opens.

Mail Notice

- When Message DL is not set to Auto (All), Server sends initial portion of message text in each of the following cases:
 - The message was sent to multiple recipients
- Files are attached to the message

Receiving Feeling Mail

 Small Light, Vibration and ringtone respond according to settings.

Attached Images

Attached images open automatically.
 Messages with Quiz

Enter or select answer ▶ ●

Message cannot be opened until the correct answer is entered or selected.

Animation View

 When a specific Pictogram is included in subject or message text, corresponding animation appears in message window background.

Advanced

- Opening new mail out of Standby Retrieving new S! Mail manually Viewing new messages on External Display (And more on P.4-21)
 Muting ringer, etc. for messages sorted into Secret folders Hiding graphics above Information window Disabling 3D Pictogram (And more on P.4-28 4-29)
 - Disabling automatic S! Mail retrieval in Japan Disabling automatic S! Mail retrieval abroad Retrieving specified messages (P.4-29 4-30)



Window Description

Message List



■ Message Type/Status

\boxtimes	Unread	A	Mail Notice (remaining portion exists)
	Read	図	Unread Delivery Report
Ø	Sent	9	Attachments
Ø	Failed	Ĥ	Protected
	Replied	0	Priority (High)
S	Forwarded	0	Priority (Low)
2	Send Reservation set	0	USIM Card SMS

sms or PC appears for SMS/PC Mail messages ($\[mathbb{Q}\]$, etc.).

Message Window



Press *#* to open previous (older) message, or *** to open next (newer) one. Use ** to change font size.

Line Indicators

 When using Double Number in Dual Mode (P.1-19), Line indicators (■ and
 ■) appear in message list.

Replying to Messages

📗 In message window, 🗹



 Original message text is quoted (except for SMS and Graphic Mail).

Complete message ◆ ☑ ◆ Transmission starts

Replying to Messages Addressed to Multiple Recipients

After ①, To Sender or Reply All ⇒

② ⇒ ②

Auto Reply


 Handset sends a reply automatically when receiving messages from saved numbers or addresses in specified mode.

Advanced

Using linked info Saving attachments to Data Folder Looking up message text words in dictionaries Jumping to message top/bottom Reporting unsolicited message sources as spammers Selecting mail type/quote option Opening received message for reference Replying quickly using fixed text Replying to messages automatically (And more on P.4-22 - 4-23)





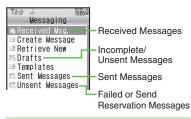

Auto Delete

 Oldest received/sent messages are deleted automatically to save new ones when memory is full. Protect important messages to avoid unintentional deletion.

Opening Help

• Follow these steps in folder list, message list or message window:




Checking Messages





Folder List

- When a PC Mail Account exists, folder with the name specified in Account Name appears.
- Select a folder and press \(\) to hide/ show sub folders. To open full message list, hide sub folders and press \(\).

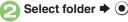



Message List







Message Window

Protecting Messages

- In message list, select message ▶ ☑ ▶ Manage Msg. ▶ ●
- ᢓ Lock 🕈 💿

Canceling Protection In ⊘, Unlock → ●

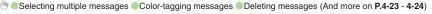

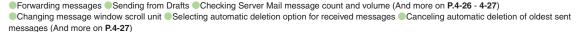



Searching Messages

Search messages by message text, sender/recipient address, etc.

- Search → ●
- Search All Msg. ▶ ●

Searching within *Mail* Folder In ⓒ, *Search Folder* ▶ ⓒ ▶ ②

Searching Message Text

- Press ☑ or ☑ to jump to next/ previous search result.

Hiding Folders

Messages appear in Chat Folders even if source messages are sorted into Secret folders.

- Select folder ▶ ☑



Accessing Secret Folders

After ①, ☑ → Unlock Temp. → ⊙

▶ Enter Handset Code **▶ ●**





Sorting Messages into Designated Folders

Sort messages by sender/recipient or partially matching text in sender/recipient address, subject or SMS message text.

■ Received Msg. or Sent Messages • •

Select target folder 🕈 🗹

My Folders → ● Select blank entry → ●

Auto Sort Keys
Sender (Exact)
Sender (Include)
Subject

Sender(Exact)
(Recipient(Exact) for Sent
Messages)

● ●



Select method → ● →
Select/enter number/
address → ●

Saved

Sort by Partially Matching Text
In ②, Sender(Include)
(Recipient(Include) for Sent
Messages) or Subject → ● ► Enter
text → ● → ⑤

Filtering Spam

Follow these steps to filter messages from handset numbers/addresses not saved in Phone Book into Spam Folder:



🔰 Anti Spam Measures 🕈 💿

Enter Handset Code ▶ ●



Unregistered(Mobile) → ● (☑)

 \triangleright

Exempting Messages from Filtering

After ②, Permitted List(Common) →

③ → Select blank entry → ⑥ →

Select key → ⑥ → Select/enter

number/address/subject → ⑥ → ஹ

→ ⑥ (▽) → ⑤

When a PC Mail Account Exists

 Filter PC Mail messages from addresses not saved in Phone Book.



Using Chat Folders

Organize messages exchanged between handset and Chat members' handsets. To hide messages, set Chat Folder to Secret.

Saving Members





Select folder ▶ ☑








- Select blank entry

 Select saved member to edit number/
- Select saved member to edit numbated address.
- Select method → →
 Select/enter number/
 address → ●



- Repeat (2) (5) to add members.
- Saved

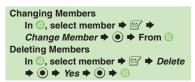

Opening Chat Folders

In Chat Folder list, select folder

● ●



Select message → ●





Creating Groups for Broadcast Mail

Create Mail Groups to send messages to multiple recipients at one time.





Settings
 Settings
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O
 O







Mail Group Entry Window













- - <Assign New Entry> ▶
 - **→** Select katakana row
 - Select entry ⇒ (●)



Select number or mail address **→** (•)



- Omit (a) if only one number or address is saved.
- Repeat 3 3 to add members.




⇒ Saved



PC Mail

Receive or reply to PC mail account messages.

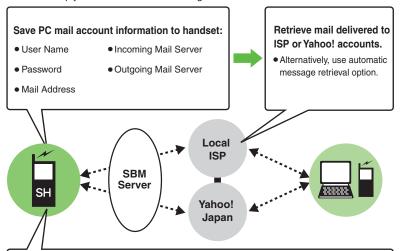

Messages are saved in unique folders; reply to/send messages via PC mail account addresses.



 Handle messages (sort, etc.) like S! Mail or SMS. (Unavailable functions do not appear in Options menu and some may appear under different names.)

Important PC Mail Usage Notes

- Receiving PC Mail for the first time after PC Mail Account setup may incur high charges due to large-volume packet transmissions
- Setting handset to retrieve PC Mail automatically may incur high charges; remember this, especially when using handset outside Japan.
- Other functions may slow while handset is checking for new messages.
- Checking for new messages may incur transmission fees even when none exists.
- Single-byte katakana and Pictograms are not supported.
- When messages sent from handset to PC mail account are retrieved by handset (then opened, replied with quotes, forwarded, etc.), included Pictograms may not appear or may appear as different characters.



PC Mail Account Setup

- Proceed with setup according to information supplied by ISP.
- PC Mail services may be unavailable depending on the services, settings or contract details for your PC mail account. Confirm compatibility with POP/SMTP message retrieval/transmission via e-mail software beforehand

■ Mandatory Items for Retrieval


User Name	Required to connect to incoming mail server
Password	Required to connect to incoming mail server
ReceivingServer	Incoming mail server address

■ Mandatory Items for Transmission

Mail Address	Address to use PC Mail
	Outgoing mail server address

Setting Other Items

 Edit information as needed; for description, select an item and press

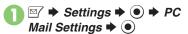



PC Mail Account ▶ ●



- ⟨Empty> → ●
- Set Receiving

 Select item

 Select/
 enter item

 Select/

 Select/
 - User Name, Password and ReceivingServer are mandatory.
- Set Sending → → Select item → → Select/enter item →
 - Mail Address and Sender Server are mandatory.



 When a confirmation appears, follow onscreen prompts.

Using Yahoo! Mail Addresses In ⑤, Set Quick Yahoo! Mail ❖ ⑥ ❖ Yes or No ❖ ⑥

- Follow onscreen instructions.
- Choose *No* to create a new account.

Editing Accounts

In ②, select account → ④ → ② - ⊘

Deleting Accounts
In ②, select account → ☑ → Yes → ●

Saving User ID & Password for Transmission

 If User Name and Password are unset Set Receiving items are automatically used for SMTP authentication. Follow these steps if ISP requires User Name and Password:

In \odot , Set Sending \Rightarrow \odot \Rightarrow Sender Auth. \Rightarrow \odot \Rightarrow SMTP Auth. \Rightarrow \boxdot \Rightarrow User Name \Rightarrow \odot \Rightarrow Enter name \Rightarrow \odot \Rightarrow Password \Rightarrow \odot \Rightarrow Enter password \Rightarrow \odot \Rightarrow \boxdot \Rightarrow \Longrightarrow \Rightarrow \bigcirc



Retrieving New PC Mail

Retrieve new messages from created accounts. If message count is high, some may not be received on the first attempt.



• To retrieve messages by account, select one and press •.







Message Window

- ullet Press $\begin{cases} \mathbf{Y} \end{cases}$ to retrieve full message.
- Message window is similar to that of S! Mail.

When Handset is Set to Retrieve Messages Automatically

 Messages are received after set intervals. (Information window opens.)

Deleting Messages

[Message List] Select message ♦

☐ → Delete → ● → Select option

→ ● → Yes → ●

Checking Received PC Mail



- Message list appears. Message list is similar to that of S! Mail.

Replying to PC Mail

- \rceil In message window, 😉
 - PC Mail Composition window opens.
 - Original message text is quoted (except for HTML messages).
- Complete message → 🗹 →
 Transmission starts

Replying without Quoting Original Message Text

[Message Window]

→ Reply →


→ PC Mail → → Complete


message → >

Changing Account for Outgoing Messages
[PC Mail Composition Window]
Select recipient field ◆ ● ◆ From:
◆ ● ◆ Select account ◆ ●

Sending PC Mail

Follow these steps to create and send PC Mail:

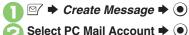

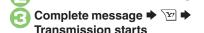


Converting PC Mail to S! Mail

After \bigcirc , \bigcirc \rightarrow Convert to S! Mail \rightarrow \bigcirc \rightarrow Yes \rightarrow \bigcirc

Note

 Single-byte katakana and Pictograms are not supported.

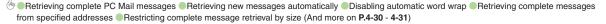



Creating Messages

■ Recipient

- Necipielii	
Using other recipient entry methods	In Mail Composition window, select recipient field Select method Select/ enter number/address
Adding recipients	In Mail Composition window, select recipient field Add Recipient Select method Select/enter number/address F
Switching recipient status (To, Cc and Bcc)	In Mail Composition window, select recipient field → Select recipient → Select status → Other recipients cannot see numbers/addresses set to Bcc.
Using Speed Dial	Saving Recipients
Mail list	Creating Messages In Standby, [① - ⓒ] ◎ ♀ (Speed Dial/Mail entry number) ➡ • When messaging to SoftBank handset numbers, select S! Mail or SMS and press ●.
	Start Here In Mail Composition window, select recipient field ▶ ● See below
Editing/deleting	Editing Recipients Select recipient
recipients	Deleting a Recipient Select recipient → ☑ → Delete → ●
	Deleting All Recipients Select recipient

	Start Here → Settings → → Speed Dial/Mail → → See below
Editing Speed Dial/	Editing Entries Select entry ▶ ☑ ▶ Change ▶ ● Select number/address ▶ ● ▶ Select new number/ address ▶ ● ▶ №
wan nst	Canceling Entries Select entry
	Canceling All Entries
■ Message Text	

type (SMS/S! Mail)

Inserting signature automatically	Settings Stings Stings Stings Stings Stingsture Stings Stingsture
Inserting signature manually	In text entry window,
Previewing 3D Pictogram	In Mail Composition window,
Converting mail	In Mail Composition window,

SMS or Convert to S! Mail → ● Yes → ●



Sending Messages

■ Save/Send Reservation/Cancel

Saving without sending	After completing message,
	Start Here After completing message,
Sending automatically later	Auto Send when Signal Returns Within the Network → ● → Yes → ●
automationing facts	Designating Send Date/Time (within one week) Date & Time → ● → Enter date/time → ● → Yes → ●
Canceling sent S! Mail	 Sent Messages Select folder Select message Set Sent Cancel Yes Available for messages sent to SoftBank handsets.

■ Msg. Settings

	In Mail Composition window,
	Settings → ● → Delivery Report → ● → On
Requesting	→ •
delivery	Delivery Report arrives when message is delivered.
confirmation	Open sent message to check delivery status indicator:
	■ 🗐: Delivered, 🗐: Unknown, 🗐: Failed
	Not available for PC Mail.
	In Mail Composition window,
Setting priority	Settings ⇒ ● ⇒ Priority ⇒ ● ⇒ Select
	priority * •
Setting message to	In Mail Composition window,
be deleted from	Settings ⇒ ● ⇒ Set Auto Delete ⇒ ● → On
recipient handset	→ •
once read	Available when messaging to SoftBank handsets.

Adding a reply request	In Mail Composition window,
Restricting forward/delete	In Mail Composition window,
	Start Here In Mail Composition window,
	Using Preset Questions (Multiple Choice) Select question → ● → Selection → ● → Select number → ● → Enter/edit option → ● Enter/edit all options → Select answer → □ → □ □
Locking message with Quiz	Using Preset Questions (Exact Answer Entry) Select question
	Creating Custom Quiz (Multiple Choice) <create original=""></create>
	Creating Custom Quiz (Exact Answer Entry) <create original=""></create>
Editing assigned Quiz	In Mail Composition window, Settings Quiz Edit Question Edit question/options/answer Gagain after editing options) Available when messaging to SoftBank handsets.



Decimating	Start Here In Mail Composition window,
Designating/ editing reply-to address	Designating Switch On/Off
	Editing Edit Address ● ● Edit ●
Changing Server sent message storage limit	In Mail Composition window,

■ Attachments

	Start Here In Mail Composition window, Attach File
	Capturing Still Images Picture
Capturing/ recording and attaching	Recording Video Video Record Video to start recording to stop Accept Select storage media Record Video To stop Accept To storage media To storage media To storage To storag
	Recording Sounds Sound → ● → Record Voice → ● → ● to start recording → ● to stop → Accept → ● → Select storage media → ●
Set Auto Play File	Select attached file Select Auto Play File Switch On/Off On On On Enter Message Enter comment Not available for PC Mail.

Graphic Mail

Opening Templates from Messaging Menu
Mail from templates Mail from templates Opening Templates from S! Mail Composition Window
Changing text color, size & effect Changing text color, size & effect Changing text color Changing text color Changing text color Changing text color In text entry window, ♠ (Long) ♦ Font Color: Set ♦ ● Changing text color In text entry window, ♠ (Long) ♦ Font Color: Set ♦ ● Changing text color Set ♦ ● Select color ♦ ● Enter text Start Here In text entry window, ♠ (Long) ♦ Inserting Background sound
Changing text color, size & effect Select start point → → Highlight text range Font Color:, Font Size: or Effect → → Set → → Select color → → Font Color: Changing text color In text entry window, → (Long) → Font Color: Select color → → Enter text Start Here In text entry window, → (Long) → Insert → → → See below Inserting Background Sound
Inserting Background sound
Inserting Inserting BGM Sound → ● Select folder → ● →
Inserting background sound BGM Sound Select folder BGM Sound BGM Sound BGM Sound BGM Sound BGM Sound BGM Sound
Deleting Delete BGM → ● Yes → ●
Start Here In text entry window, ♠ (Long) ⇒ See below
Inserting Flash® file Inserting Flash file Inserting Flash file I
Previewing
Deleting ☑ ▶ Move cursor before Flash® icon ▶



Inserting horizontal line	In text entry window, ♠ (Long) → Insert → • Line → •	
Flashing text	Start Here In text entry window,	
	Flashing Effect \Rightarrow $\textcircled{\bullet} \Rightarrow Blink \Rightarrow \textcircled{\bullet} \Rightarrow Blink On \Rightarrow \textcircled{\bullet} \Rightarrow$ Enter text	
	Canceling	
Aligning text (left/ right/center)	In text entry window, (a) (Long) Fifect Alignment Select option Enter text	

Receiving/Opening Messages

■ Receiving

Opening new mail out of Standby	(Long)
Retrieving new S! Mail manually	 ♥ ♥ When a PC Mail Account exists, select S! Mail and press ●. Retrieve messages missed while handset is out-of-range.
Retrieving Server Mail list	 Server Mail Box → ● Mail List → ● Yes → ● When using Double Number in Dual Mode (P.1-19), select a line and press ● to proceed.

	Retrieving remaining portions	Via Mail Notice In message list, select Mail Notice ▶ ● ➤
		Via Server Mail List
		Start Here ☑ → Server Mail Box → ● > See below
	Retrieving all	Directly from Server Retrieve All
	Server Mail	Via Server Mail List
	■ Opening	
	Viewing new	O+O

Available with handset closed.

messages on

External Display



■ Message Window

■ Message window	
Using linked info	Dialing Numbers In message window, select number ● ● Call or Video Call ● ●
	Sending Messages In message window, select number or mail address → ● → Create Message → ● → S! Mail or SMS → ● → Complete message → ☑ For mail addresses, omit mail type selection step.
	Accessing Internet Sites In message window, select URL → ● → Yes → ● • Select PC Site Br. to connect via PC Site Browser.
Saving attachments to Data Folder	In message window, select file → ☑ → Save to Data Folder → ● → Enter name → → Save here → ● • For templates, Save as Template appears. (Omit file name entry step.)
	Start Here In message window, select file ⇒ ☑ ⇒ See below
Using attachments	As Wallpaper Set as Wallpaper → ● → Enter name → ● Save here → ● → ● For images smaller or larger than Display, select an option and press ●.
	As Ringtone/Ringvideo Set as Ringtone or Set as Ring Video Enter name Set experiments Select item For For New Message or For New PC Mail, enter ring time and press .

Playing slides	In message window, → Slide Play → ● A slide consists of message text with attachments.
Coving to Dhone	Saving Sender Address In message window, → Save Address → Select number or mail address → As New Entry → Complete other fields → Y To add to an existing entry, select As New Detail.
Saving to Phone Book	Saving Linked Info In message window, select number or mail address Save to Phone Book or Save Address As New Entry Complete other fields To add to an existing entry, select As New Detail.
Copying text	Start Here In message window, → Copy → See below
	Sender/Recipient Number/Address Address Select number/address Output Description:
	Subject or Message Text Subject or Message Text © → Select first character → ● → Highlight text range → ●
Looking up message text words in dictionaries	In message window,
Jumping to message top/bottom	In message window,
Reporting unsolicited	In message window, → Report Spam → ●
message sources as spammers	Signature is not inserted automatically. Not available for PC Mail.



■ Replying

Selecting mail	In message window,
Opening received message for reference	type/option → ● → Complete message → ☑ In message window, ☑ → Rep. with View → ● → Select option → ● → Complete message → ☑
Replying quickly	Editing Quick Reply Text Settings General Settings Send/Compose Set Quick Reply Select text Select text Edit Settings Set Quick Reply
using fixed text	Using Quick Reply In message window, → (Long) → Select text → ●
	Start Here ♥ ♦ Settings ♦ ● ♦ General Settings ♦ ● ♦ Send/Compose ♦ ● ♦ Auto Reply ♦ ● ♦ See below
Replying to	Saving Recipients Address Setting ● ● Select blank entry ● ● Select/tenter recipient ● Select mode ● ● (□/☑) ● ☑ ● ☑ Select saved recipient and press ● to edit number/ address.
messages automatically	Editing Reply Text Reply Message → ● Select mode → ● ★ Enter text → ● • Edit text for each mode.
	Activating Auto Reply Switch On/Off

Managing Messages

■ Message List

_ moodage ziot	
	Selecting In message list, select message → ☑ To uncheck, press ☑ again.
Selecting multiple messages	Selecting Up to 50 Messages at Once In message list,
	Unchecking All In message list,
Color-tagging messages	In message list,
Sorting messages	In message list,
Opening sender/ recipient details	In message list, select message → ☑ → View Mail Address → ● → Select sender or recipient → ●
Checking memory status	
Opening properties	In message list, select message → ☑ → Message Details → ●
Changing template name display	



Deleting Server

Saving SMS messages to USIM Card	In message list, select SMS message Manage Msg. SIM Sync Available for compatible USIM Cards.
Changing received message status (read/unread)	In message list, select message ▶ ☑ → Manage Msg. → ● → Switch to Unread or Switch to Read → ●
■ Deleting Messages	
	One Message In message list, select message
Deleting messages	All Messages In message list,
	All Messages in Drafts or Unsent Messages In message list (Drafts or Unsent Messages),

In message list, select Mail Notice 🔷 🖾 🕏

Deleting Server	Start Here Server Mail Box → Mail List → See below
	One Message
	Select message → ☑ → Delete → ● → Yes → ●
Mail list	All Messages
	 Delete All → ● ⇒ Enter Handset Code → → Yes → ●
	When retrieve list confirmation appears, choose <i>Yes</i> and press .
Deleting all Server	Server Mail Box → ● Delete All → ●
Mail directly from Server	⇒ Enter Handset Code ⇒ ● ⇒ Except New Msq. or Delete All ⇒ ●
Folders	
- i ciacio	In message list, select message ▶ ☑ ▶
Moving messages manually	Manage Msg.
	In folder list, select folder ⇒ 🖾 ⇒ Rename ⇒
Renaming folders	Enter name Available in Chat Folder list as well.
Deleting folders	In folder list, select folder → ☑ → Delete → ● Enter Handset Code → ● When delete message confirmation appears, choose Yes and press ●.
	When Double Number is active, corresponding folders in other modes are also deleted.
A alalia ar fa lalarra	In folder list,
Adding folders	Enter name ● ● • Available in Chat Folder list as well.



Retrieving PC Mail for specified folder	In folder list, select folder ⇒ 🖾 → Retrieve New ⇒ •
Canceling Secret	Unlock Secret folders temporarily and select Secret folder → ☑ → Unset Secret → ● → Enter Handset Code → ●
Searching messages within specified folder	In folder list, select folder ▶ ☑ ▶ Search ▶ ③ ▶ Search Folder ▶ ⊙ ▶ Select method ▶ ⑤ ▶ Select/enter number/address/subject/ text string ▶ ⑥

■ Sorting into Folders

a sorting into rolders	
Re-sorting messages	In folder list, select folder Classify Output Description:
Sorting spam by setting keys	Settings • General Settings • Anti Spam Measures • Enter Handset Code • Individual(Common) • (Y) Select blank entry • Select key • Select/enter number/address/subject • Y
Editing/deleting sort keys	Start Here In folder list, select folder → □ → My Folders → ● → Select entry → See below
	Editing Subject Key
	Deleting an Entry
	Deleting All Entries

■ Chat Folders

= Chat i Clacio	
Deleting folders	 Chat Folder
Deleting all messages	
Resetting Chat Folders	Chat Folder → ● → □ → Reset → ● Enter Handset Code → ● → Yes → ●



■ Mail Groups

Renaming Mail Groups	Select Group → Set Mail Group → Select Group → Select Name → Enter name → O → Yes → O
Deleting Mail Groups/Group members	Start Here → Settings → ● Set Mail Group → ● → Select Group → See below
	Mail Groups ☑ → Delete → ● → Yes → ● Enter Handset Code → ●
	Group Members Select member → ☑ → Remove Entry Source Phone Book entries remain even after deleting members.
Changing Mail Group members	Select Group Select member Re-assign Entry Select entry Select number or mail address Select member Select katakana Select number or Select number or Select member Select number or Se

Using Messages

Forwarding messages	In message window, Forward Select recipient field Select method Select/enter number/address Attached files are forwarded. To forward SMS messages, select S! Mail or SMS and press .
Sending from Drafts	☐ → Drafts → ● → Select message → ● → Complete message → ☑
	Start Here In message list (Unsent Messages), select message → ☑ → See below
Sending unsent messages	Sending without Editing Resend → ●
	Edit & Send Edit
Using sent messages	In message list (Sent Messages), select message → ☑ → Edit & Send → ● → Complete message → ☑
Saving messages with schedules to Calendar	In message list, select message ♥ ♥ ♦ Manage Msg. ♥ ♦ Save to Calendar ♥ ● Enter subject ♥ ● Enter start/end date/ time ♥ ● ♥ ❤️

Forwarding Server Mail	Via Mail Notice In message list, select Mail Notice Forward Notifi. Forward (forward Mail Notice text only) or Remote Forward Select recipient field Select method Select/enter number/address
	Via Server Mail List
Opening Server Mail properties	 Server Mail Box Mail List Select message Message Details Message Details When retrieve list confirmation appears, choose Yes and press
Checking Server Mail message count and volume	 Server Mail Box → ● Mailbox Volume → ●

General Settings

Changing message window scroll unit	Settings → General Settings → ● Scroll Unit → ● → Select unit → ●
Changing message list view	
Showing complete sent/received message addresses	☑ → Settings → ● → General Settings → ● → Address View → ● → Show All → ●
Changing view for Received Msg. folder	 Settings
Changing view for Sent Messages folder	Sent Msg. View → General Settings → Sent Msg. View → Select option → Folder View by Account is selectable when a PC Mail Account exists.
Selecting automatic deletion option for received messages	Settings → ● General Settings → ● * Auto Delete → ● → Received Msg. → ● Select option → ●
Canceling automatic deletion of oldest sent messages	✓ Settings → General Settings → Auto Delete → Sent Messages → Not Auto Del → ●
Changing spam report recipient	☑ Settings ● General Settings ● Report Spam ● Edit address ● Yes ●



General Settings (Send/Compose)

Requesting Delivery Report for all messages	 Settings ● General Settings ● Send/Compose ● Delivery Report ● On ● On ●
Disabling automatic resend of unsent messages	 Settings ♥ ● General Settings ♥ ● Send/Compose ♥ ● Auto Resend ♥ ● Off ♥ ●
Designating/ editing reply-to address	Start Here
	Designating Switch On/Off
	Editing Edit Address ● ● Edit ●
Selecting quote option	 Settings Send/Compose Reply With Text Select option
Hiding progress bar while sending messages	 Settings ★ ● General Settings ★ ● Send/Compose ★ ● Sending Status ★ Off(Background) ★ ●

General Settings (Receive)

■ Message Notice & Animation View

	_ moodage reduce a /mmatter view	
Muting ringer, etc. for messages sorted into Secret folders	Secret Folder → ● Settings → ● Secret Folder → ● No Response → ●	
Changing alerts for messages received during handset use	Start Here → Settings → → Receive → → Message Notice → → See below	
	Showing New Message Window On Active Screen On On On On On On On	
	Selecting Scrolling Notice Option View Setting	
	Muting Alert Sound Alert Sound → ● → Off → ●	
Disabling Animation View	☑ Settings OF Animation View OFF OFF	

Feeling Mail

Hiding graphics above Information window	Settings ● General Settings ● Receive ● Link to Feeling ● Idle Screen Info. ● Off ●
Disabling/ changing illumination	Start Here
	Disabling Switch On/Off → ● → Off → ●
	Changing Color Light Color Select category Select color Select color Select color
Changing vibration pattern	Settings General Settings Faceive Link to Feeling Fattern Select pattern
Muting/changing ringtones	Start Here
	Muting Ringer Switch On/Off
	Changing Ringtones Assign Tone → ● → Select category → ● → Select folder → ● → Select tone/file → ●

■ 3D Pictogram

Disabling 3D Pictogram	 Settings General Settings Receive Josplay Effect Disable Disable
Changing background/speed	Start Here Settings Settings Receive Settings Set
	Changing Background Background Color
	Changing Animation Speed Display Speed Select speed Output Display Speed Disp

S! Mail Settings

Automatic Retrieval

Disabling automatic S! Mail retrieval in Japan	
	Settings
Disabling	→ Message DL(Abroad) → ● → Manual → ●
automatic S! Mail	 When set to Auto (All), complete S! Mail messages
retrieval abroad	including attachments are retrieved; may incur high
	charges.



Retrieving specified messages	Start Here
■ Attachments	
Disabling image auto-resize	 Settings → ● S! Mail Settings → ● Picture Appearance → ● Normal → ● Setting applies to PC Mail as well.
Enabling/disabling image auto-open or sound auto-play	Settings
Attaching captured/recorded files unsaved	Settings → S! Mail Settings → O Send File Settings → Attach Only → O Setting applies to PC Mail as well.

PC Mail Settings	
Retrieving complete PC Mail messages	☐ Settings → PC Mail Settings → ● PC Mail DL → ● → PC Mail DL → ● → All Contents → ●
Retrieving new messages automatically	Start Here
	Enabling Automatic Retrieval Check New Mail → ● → On → ● → Select account → ● (√ appears) → ✓ → ● • Setting Check New Mail to On may incur high charges; checking for new messages may incur transmission fees even when none exists. Remember this, especially when using handset outside Japan. • Other functions may slow while handset is checking for new messages.
	Changing Automatic Retrieval Interval Interval
Disabling automatic word wrap	 Settings → ● PC Mail Settings → ● Word wrap → ● → Off → ●

Retrieving complete messages from specified addresses	
	Selecting Sender Types Select item
	Specifying Addresses Individual Address Select blank entry Select/enter address
	Deleting an Individual Address Entry Individual Address
	Deleting All Individual Address Entries Individual Address
Restricting complete message retrieval by size	Settings → PC Mail Settings → PC Mail DL → Max DL Size → → Select account → Select size → ● • Effective when PC Mail DL is set to All Contents or DL All From List.
Enabling automatic PC Mail retrieval abroad	Settings
Disabling automatic retrieval during specified time	Settings PC Mail Settings Check New Mail Inactivate Time Switch On/Off On On Start Time: Set Enter start time Enter on time: Enter end time On Start Time: Set Enter start time On Start Time: Set Enter end time

SMS Settings	
Changing Server sent message storage limit	Settings → SMS Settings → ● Expiry Time → ● → Select option → ●
Changing SMS Server number	Start Here → Settings → → SMS Settings → → Message Center → → See below
	Editing Setting1(Default) to Setting3 → ● → Edit number → ●
	Deleting Setting2 or Setting3 → ☑ → Delete → ● → Yes → ●
	Activating Setting2 or Setting3 → ☑ → Set Default → ● Do not change Server number unless instructed to do so. Activated number moves to Setting1(Default) and shifts the others down.
Changing character encoding for composing	Settings → SMS Settings → → Char-code → → Select encoding → ●
messages	



Sending Messages



Cannot enter message text or attach files

 Attachment size affects text size limit. In turn, text size affects attachment size limit



Sending failure appears in Information window

• To resend, follow these steps: Sending failure ⇒ ● Select message \Rightarrow \bullet \Rightarrow \bullet \Rightarrow



Unsent message is not resent automatically

• Auto Resend attempts to send unsent messages automatically up to two times only.



Set Auto Play File cannot be set

- Apply to one file per message.
- Not available for Graphic Mail.
- May be unavailable for some files.



Msg. Settings are not applied

- · Settings are valid for one message, and effective when viewed on compatible handsets/applications.
- Delivery Report/Priority setting may not be effective when sent to mail addresses.
- · Priority setting does not affect delivery speed.



Cannot set Msg. Settings

- These settings cannot be applied at the same time; select one per message: Set Auto Delete, Reply Request, Forward NG, Delete NG, Quiz, Set Auto Play File.
- Only Delivery Report and Expiry Time are available for SMS



Signature is not inserted automatically

· Auto Insert is available for S! Mail only.



Cannot cancel sent messages

- Short messages may not be canceled.
- Set Sent Cancel is available for S! Mail. only.



Cannot send PC Mail

- Follow these steps to check User Name and Password for SMTP authentication: Settings
 PC Mail Settings → ● PC Mail Account ⇒ Select account ⇒ ● ⇒ Set Sending → ● Sender Auth. → SMTP Auth. → □
- Some ISPs require SMTP authentication setup in addition to Set Receiving setup.



Incoming Messages



Handset won't ring or vibrate for some incoming messages

- · Handset does not ring or vibrate for messages with Low Priority.
- Handset does not ring, vibrate or open Information window for messages filtered as spam.



A confirmation requesting a reply appears

• To reply, choose **Yes** and press •). Confirmation does not appear for replied messages.



Handset won't respond according to Feeling Mail settings

- Ringtone, Light and Vibration settings in Phone Book take priority.
- Feeling Mail settings are disabled when:
 - Sender is saved in Phone Book as Secret entry
- The message was filtered as spam
- The message was sorted to a Secret folder



Message text appears distorted

• Follow these steps to change encoding: In message window.

✓

✓

View Settings → ● Char-code → ● ⇒ Select option ⇒ ⊙

Handling Messages



Cannot move messages into some folders

 To move to Secret folders, unlock temporarily or cancel Secret beforehand.



Cannot receive messages

- If appears, memory is full; delete messages (P.4-24).
- If out appears, move to a place where signal is strong.



S! Mail is not delivered as sent

 Recipient must be subscribed to S! Mail, Super Mail or Long Mail. The maximum size of messages/ attachments handsets can receive varies by make and model. Confirm compatibility with recipient handsets.



Still images are not delivered as sent

· Recipient handset may not be JPEG-compatible. Convert JPEG files to PNG.



Video files are not delivered as sent

 Send video files to S! Mail- or VGS-compatible SoftBank handsets supporting MPEG-4.



Internet Services	5-2
Service Basics	5-2
Yahoo! Keitai	5-3
Using Yahoo! Keitai	5-3
PC Site Browser	5-4
Using PC Site Browser	5-4
Browsing	5-5
Basic Operations	5-5

Bookmarks & Saved Pages	5-7
Using Bookmarks & Saved Pages.	5-7
RSS Feeds	5-8
Updating Blogs & News	5-8
Additional Functions	5-9
Troubleshooting	5-16

5

Yahoo! Keitai & PC Site Browser



Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SOFTBANK MOBILE Corp. Website (P.14-22).

Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. Information fees may also apply.

Security

Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

Secure Pages

- A confirmation appears before entering and exiting secure pages.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GlobalSign, RSA Security and SECOM Trust Systems cannot be held liable for any damages associated with the use of SSI.

Advanced



☼ Clearing cache (temporarily saved information) Disabling manufacture number auto send for authentication Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.) (And more on P.5-14 - 5-15)

Using Yahoo! Keitai

Opening Main Menu

Internet pages may not open depending on connection/Server status, etc.






Internet Page

- Yahoo! Keitai Main Menu appears.
- To disconnect, press \(\subseteq \).



- Corresponding page opens.
- Repeat 2 to open additional links.

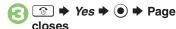

Returning to Previous Pages [Internet Page] → Previous page opens

Follow these steps to return to the initial page:

[Internet Page]

Forward

Returning to Yahoo! Keitai Main Menu

User Authentication

Enter user ID or password → •

treaming

Streaming

- Enjoy audiovisual media while it downloads.
- Packet transmission fees apply even while stream is paused.

Using History





Select record **→** ● **→** Connection starts

• Corresponding page opens.




Entering URLs Directly





- Enter URL → → Connection starts
 - Corresponding page opens.
- ③ → Yes → Page closes

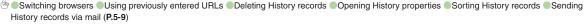







Using PC Site Browser

Open PC sites from Yahoo! JAPAN (preset home page).

- Internet pages may not open depending on connection/Server status, etc.
- Browsing PC sites may incur higher charges.

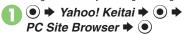




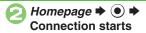



Internet Page

- Yahoo! JAPAN Home opens.
- When a message appears, follow onscreen prompts.
- To disconnect, press \(\overline{Y} \).
- 🛐 Highlight menu item 🕈 💿
 - Corresponding page opens.

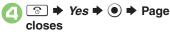

Returning to Previous Pages [Internet Page] ☑ ▶ Previous page opens ■ Follow these steps to return to the

initial page:

Returning to Yahoo! JAPAN Home
[Internet Page]

→ Homepage

●

User Authentication

Enter user ID or password ▶ ● ➤ ☑
Using History

In ②, *History* **→** ● **→** Select record

Entering URLs Directly
In ②, Enter URL → ③ → Enter URL

→ •

Hiding Softkeys

[Internet Page]

→ Convenient

Functions → → Softkey Area →

→ Off → →

Browsing in Wideview

[Internet Page] Rotate handset 90 degrees counterclockwise



- Switching browsers Using previously entered URLs Deleting History records Opening History properties Sorting History records Sending History records via mail (P.5-9)
 - Showing navigation map for continuous scroll Changing scroll unit (PC Site Browser) Hiding PC Site Browser messages (P.5-14)

Basic Operations

Page Browsing

Scrolling Pages

If page content continues beyond view, use to scroll pages. Long Press to scroll continuously.

Switching Frames

On framed pages, Long Press et to select other frames.

When pointer navigation is active, point to a frame and press

to select it.

■ To return, press .

Tabbed Browsing

Open another page in a new tab and switch between tabs.

Opening a New Tab

On a page, select menu item

→ ☑ → Tab Menu → ●





Switching Tabs



• When pointer navigation is active, point to a tab and press • to open it.

Closing Tabs

(Long) → Select tab → ● →

Tab Menu → ● → Close Tab

or Close All Other Tabs → ●

Advanced

🖑 🌑 Using Web Search 🖫 Searching current page 🚳 Looking up copied words in dictionaries 🜑 Saving files to Data Folder 🚳 Jumping to page top/bottom

Changing character size Zooming specific areas (And more on P.5-9 - 5-10)

Changing scroll unit Disabling automatic image display/sound playback (And more on P.5-14)



Selecting Text

Activate pointer navigation and Long Press • to enable text selection (Drag Mode). Select text to copy or look up words in dictionaries.

Follow these steps to use a dictionary:

- On a page, select first character ▶ ⊙ (Long)
 - Drag Mode is activated.
- - Dictionary opens with text inserted.
- Search → Select word

Text Entry

- On a page, select text entry field ▶ ●
- Enter text

 Internet page returns.

Using Entered Text (Input Memory)
[Internet page] Select text entry field

→ ● → ☑ → Insert/Font Size → ●

→ Input Memory → ● → Select text

Pull-down Menu Item Selection

On a page, select menu list field ▶ ●



Select item

◆

●

When Multiple Selection is Supported


• Select items as needed and press

Page Item Indicators

Selection Items

Buttons \bigcirc or boxes \square appear.

On a page, select button or box **▶** ●

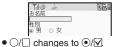

Execution Items

Execute the assigned command.




Using Bookmarks & Saved Pages

Bookmarks

Bookmark sites for quick access.

- Saving Bookmarks
- - Save appears only for savable pages.
- Enter/edit title → ●
- Opening Bookmarks



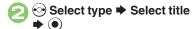

Corresponding page opens.

Saved Pages

Save page content; handset opens saved pages without connecting to the Internet.

- Saving Pages
- - Save appears only for savable pages.
- Enter/edit title ▶ ●

- Opening Saved Pages




Select page

● Corresponding page opens.

Opening Saved Pages Online
[Internet Page]

→ Saved Pages

→
→ Open List
→
→ Select
page
→
●

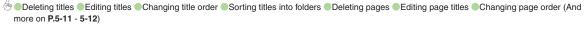



Updating Blogs & News

Register RSS-compatible sites; view content updates without opening source sites. Transmission fees apply.

Subscribing to RSS Feeds


Available for PC Site Browser only.



appears for RSS-compatible sites.





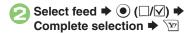



 Choose *Yes* to update immediately or *No* and press .

Via RSS Icons

Use RSS/RDF/XML icons on RSS-compatible sites.

- On a page, select icon ⇒ ●
- Yes → Save → ●

Checking Updates

Follow these steps to update all feeds:

- PC Site Browser → → RSS Feed → ●



RSS Feed List

- Reload All ⇒ ⇒ ●
- Yes or No **→** ●
- Select feed **→** ●



- Select title

 Information appears.
- Updating Single RSS Feeds
 [RSS Feed List] Select feed ▶ ☑ ▶
 Reload ▶ ▶ Yes or No ▶ ●
- Disabling/Enabling Updates
 [RSS Feed List] Select feed ▶ ☑ ▶

Manage RSS Feed → ● Restrict Update or Accept Update → ●

Accessing Source Sites

[Title List] Select title ◆ ● → Select linked title → ● → Yes → ● → ● → Yes or No → ●

Yes or No → ●



Connecting/Browsing

General

	Switching browsers	On a page, Convenient Functions Change to PC Browser or Switch Browser This Page or Linked Page Yes or No Yes
	Using previously entered URLs	Start Here ● ≯ Yahoo! Keitai ≯ ● ≯ See below
		Yahoo! Keitai Enter URL → ● → ☑ → URL Entry Log → ● → Select URL → ● → ●
		PC Site Browser PC Site Browser PC Site Brow

■ History

Deleting History records	Start Here ● → Yahoo! Keitai → ● → History → ● Select type → See below
	One Record Select record ⇒ ☑ ⇒ Delete ⇒ ● → Yes ⇒ ●
	All Records
Opening History properties	● → Yahoo! Keitai → ● → History → ● → Select record → □ → Details → ●
Sorting History records	● → Yahoo! Keitai → ● → History → ● → Sort → ● → By Domain or By Date → ●

Sending History	● Yahoo! Keitai ● History ● Select record ● Send URL ● S! Mail or SMS ● Complete message ▼
	or <i>SMS</i> → ● Complete message → ☑ • S! Mail Composition window opens automatically
	depending on character count.

Page Operations

■ Yahoo! Keitai & PC Site Browser

Using Web Search	On a page, → Convenient Functions → ● → Web Search → ● → Enter search text → ●
Searching current page	On a page, Convenient Functions Search Search Fine Enter search text Fine Press to jump to next search result, if any.
Looking up copied words in dictionaries	On a page, Convenient Functions Copy & Search Dict. Highlight text range Select dictionary Search Search Search
	Start Here On a page, See below See below
Saving files to Data Folder	Files on Page Select file → ● → Save → ● ← Enter name → ● → Save here → ● • Some files are saved automatically. • End memory-consuming operations (TV recording, etc.) beforehand. • Confirm signal is strong, battery is adequately charged and that there is enough free memory beforehand.
	Background Images Save Background Image Save Save
	Enter name



	Dialing Numbers On a page, highlight number → ● → Call or Video Call → ●
Using linked info	Sending Messages On a page, highlight number or mail address → ● → Create Message → ● ⇒ S! Mail or SMS → ● → Complete message → ☑
Copying text	On a page,
Sending URLs via mail	On a page, ☑ ➤ Convenient Functions ➤ ● ➤ Send URL ➤ ● ➤ S! Mail or SMS ➤ ● Complete message ➤ ☑ ■ S! Mail Composition window opens automatically depending on character count.
Jumping to page top/bottom	On a page, Convenient Functions Dump In Page Page Top or Page Bottom Output Description:
Opening function shortcuts	On a page,
Opening page properties	On a page, → Convenient Functions → → Details → → Select item → ●
Changing encoding to read garbled text	On a page, ☑ → Settings → ● Char-code → ● → Select option → ●

	Start Here On a page, → Convenient Functions → → Flash®Menu → → See below	
Handling Flash® files	Pausing/Playing Pause, Resume or Replay ●	
	Setting Image Quality Quality	
Updating page content	On a page,	
■ Yahoo! Keitai		
Changing character size	On a page, (enlarge) or (reduce)	
■ PC Site Browser	PC Site Browser	
Switching view	On a page, → PC Screen or Small Screen → ● • In Small Screen view, PC sites are redesigned to fit Display.	
Zooming on pages (Zoom Factor)	On a page, (enlarge) or (reduce)	
Jumping to specific locations	On a page, ^{∞5} (Long) → Quick Movement map appears → Select location → ●	
Zooming specific areas	On a page, point to area • 7] (Long) • Pointed area is enlarged and shown in the lower half of Display. Long Press 7] to toggle Zoom Area options (Small, Large and Off).	



Streaming

Playing media streams	On a page, select file
	Start Here While streaming,
Customizing streaming settings	Changing Playback Size Display Size
	Setting Backlight Status Backlight
	Adjusting Sound Effects Sound Effects Select effect Playback size may not change depending on file/stream. Selecting Normal Settings applies Display Backlight setting.
	Start Here ● → Media Player → ● → Streaming → ● → See below
	Resuming from Stopped Point Last Played ● ●
Streaming from	Using Bookmarks Bookmarks
Media Player	Using History History Select record Packet transmission fees apply even while stream is paused. Streaming sound is heard from Speaker/ Headphones regardless of Sound Output setting.

Bookmarks & Saved Pages

■ Bookmarks

B Bookmarks	
	Start Here
	One Title
Deleting titles	Select title ⇒ 🖾 ⇒ Delete ⇒ • Yes ⇒ •
	All Titles
	
	Yahoo! Keitai Bookmarks
Editing titles	Select type → Select title → ☑ → Edit →
	Title: Title: Title: Title: Title: Title:
Editing	Yahoo! Keitai Bookmarks
bookmarked URLs	Select type → Select title → ☑ → Edit → URL: → ⊙ → Edit → ⊙ → ☑
	0 0 0
	 ♦ Yahoo! Keitai ♦ Bookmarks ♦ Select type ♦ Select title ♦ Send
Sending	◆ ● As Message ◆ ● S! Mail or SMS
bookmarked URLs	◆ ● Complete message ◆ ▼
via mail	S! Mail Composition window opens automatically
	depending on character count.
Changing title order	Yahoo! Keitai Bookmarks
	⇒ Select type ⇒ Select title ⇒ 🗹 ⇒ Move
	⇒
Opening title	Yahoo! Keitai Bookmarks Something the state of the stat
properties	Select type ⇒ Select title ⇒ 🗹 ⇒ Details ⇒ 💿




	-
Sorting titles into folders	Start Here
	Creating Folders ☑ → Create Folder → ● Enter name → ●
	Moving to Folders Select title → ☑ → Move → ● ☑ → Select folder → ● → ●
	Moving from Folders Select folder → ● → Select title → ☑ → Move → ● → ☑ → ●
	Renaming Folders Select folder ⇒ ⊠ ⇒ Rename ⇒ ● ⇒ Enter name ⇒ ●
	Deleting Folders Select folder → ☑ → Delete → ● → Yes → ●

■ Saved Pages

Deleting pages	Start Here ● → Yahoo! Keitai → ● → Saved Pages → ● → See below
	One Page Select page
	All Pages
Editing page titles	● Yahoo! Keitai ● Saved Pages ● ● Select page ● ■ Rename ● ● Enter title ● ●
Changing page order	● Yahoo! Keitai ● Saved Pages ● Select page ● Move ● Select target location ● ●
Opening page properties	 Yahoo! Keitai → ● Saved Pages → ● Select page → ■ Details → ●
Switching page list view	● Yahoo! Keitai ● ● Saved Pages ● ● Select page ● ☑ ● List View or Preview View ● ●

RSS Feeds			
Deleting feeds	Start Here		
	One Entry Select feed ⇒ ☑ → Delete → ● Yes → ●		
	All Entries		
Sorting feeds	● Yahoo! Keitai ● PC Site Browser ● RSS Feed ● ● Manage RSS Feed ● Sort ● Select option ●		
Opening feed properties A State			
	Start Here ● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → See below		
	Creating Folders		
Sorting feeds into folders	Moving to Folders Select feed ⇒ ∅ ⇒ Manage RSS Feed ⇒ ● ⇒ Move ⇒ ● Select folder ⇒ ● Move ⇒ ●		
	Renaming Folders Select folder		
	Deleting Folders Select folder		

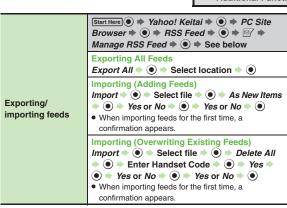



Settings

Unless noted otherwise, settings are available for Yahoo! Keitai and PC Site Browser. (Operations described for Yahoo! Keitai.)

■ Internet Page

Changing scroll unit	● → Yahoo! Keitai → ● → Browser Settings → ● → Scroll Unit → ● → Select unit → ●
Disabling	Start Here ● → Yahoo! Keitai → ● → Browser Settings → ● → Downloads → ● → See below
automatic image display/sound	Image Display Images ⇒ ● → Do not Show → ●
playback	Sound Playback Sounds
Changing character size	● → Yahoo! Keitai → ● → Browser Settings → ● → Font Size → ● → Select size → ●
	Start Here
Using pointer navigation	Activating Cursor Mode Settings
	Changing Pointer Speed Speed Settings
Using Memory Card as primary download storage	● Yahoo! Keitai ● ● Browser Settings ● Download to ● Prefer Card ● ● • Some files may be saved to handset regardless of this setting.

■ PC Site Browser

Showing navigation map for continuous scroll	● Yahoo! Keital ● PC Site Browser ● PC Site Browser Settings ● Scroll Settings ● Page Navigation ● On ●
Changing scroll unit (PC Site Browser)	● Yahoo! Keital ● PC Site Browser ● PC Site Browser Settings ● Scroll Settings ● Scroll Unit ● Select unit ●
Hiding PC Site Browser messages	● Yahoo! Keitai • ● PC Site Browser • ● PC Site Browser Settings • ● Warning Message • ● PC Site Browser or Yahoo! Keitai • ● Off • ●

■ Memory Operation		
Clearing cache (temporarily saved information)	Yahoo! Keitai	
Clearing cookies	● Yahoo! Keitai → ● Browser Settings ● → Memory Op. → ● Delete Cookies • → Yes → ●	
Clearing authentication information	● Yahoo! Keitai → ● → Browser Settings → ● → Memory Op. → ● → Delete Auth Info → ● → Yes → ●	
Deleting all RSS feeds	● Yahoo! Keitai ● PC Site Browser ● PC Site Browser Settings ● Memory Op. ● Delete RSS Feed List ● Enter Handset Code ● Yes ● Available for PC Site Browser.	



■ Security Settings

Disabling manufacture number auto send for authentication	● Yahoo! Keitai ◆ ● → Browser Settings ◆ ● → Security Settings ◆ ● → Manufacture Number ◆ ● → Off ◆ ●	
Disabling referer information delivery to the Server	● Yahoo! Keitai ● Browser Settings ● Security Settings ● Send Referer ● Not Send ●	
Enabling/disabling cookies	● Yahoo! Keitai ● Browser Settings ● Security Settings ● Cookies ● ● Select option ●	
Selecting script execution option	● Yahoo! Keitai → ● Browser Settings • ● Security Settings → ● Script Settings → ● Select option → ●	
Hiding confirmations before entering/exiting secure pages	● Yahoo! Keitai • ● Browser Settings • ● Security Settings • ● Secure Prompt • ● Do not Show • ●	
Opening electronic certificates saved on handset	● Yahoo! Keital ● Browser Settings ● Security Settings ● Root Certificates ● Select certificate ●	
Changing validity of entered user ID/ password	● Yahoo! Keitai ● ● Browser Settings ● Security Settings ● ● Keep Auth Info ● ● Select option ● ● • Per Browsing retains entered user ID/password during browsing sessions. On retains such authentication information even after turning handset off. • Authentication information may not be retained depending on the site.	

Enabling/disabling Ajax (for asynchronous communication)	● Yahoo! Keitai ● → Browser Settings ● → Security Settings → ● → Restrict Ajax ◆ ● → Select option → ●	
Resetting		
Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.)	● Yahoo! Keitai • • Browser Settings • • Initialized Browser • • Enter Handset Code • • Yes • •	
Restoring default handset settings	● Yahoo! Keital ● ● Browser Settings ● ● Reset Settings ● ● Enter Handset Code ● ● Yes ● ●	



Connecting/Browsing



What is the bar at Display bottom?

• This is a data progress bar; the number beside it indicates transmitted (green) or received (red) data.

Page Operations



Internet page does not open completely

• Portions of page content may not appear in tabbed browsing; close other tabs.



Text overlaps

• The site may be designed for browsing on PCs; try Tiny font size.



Cannot access other functions while browsing the Internet

• When switching between Yahoo! Keitai and PC Site Browser (appears), additional function activation may be disabled; close either browser and retry.



6-2
6-2
6-4
6-5
6-8
6-8

ΓV Timer	6-10
TV Timer & TV Recording Timer	
Additional Functions	6-1
Troubleshooting	6-17

6

Digital TV




Basics

930SH supports One Seg terrestrial digital television broadcast services developed for mobile devices in Japan.

Landscape Position

Enjoy widescreen TV images in landscape position.

 Use according to TV orientation. (Key assignments change as follows.)

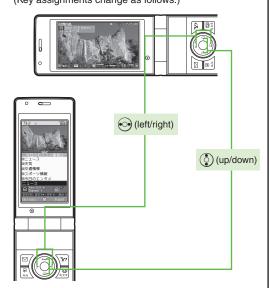

Watch Live Television

Set up a channel list for your service area to access available programming. Capture screenshots while watching TV.

Multi Job

Watch TV in one half of Display using the other to access messaging functions, browse the Internet or open Phone Book, etc.

Access TV Listing (EPG)

Access TV Listing (EPG) to find program channels and times; set Reservations by date and time to record shows or activate TV.

View Data Broadcasts

In addition to audio and visuals, enjoy text, program-related information and interactive services.

Record Shows/Time Shift

Record current program for later viewing on handset; if interrupted by incoming calls while watching TV, record it temporarily for delayed playback.

Reserve TV Programs

Record a show or activate TV at a specified time; enter dates & times manually or reference TV Listing electronic program guide.




Precautions

- 930SH TV is exclusively for use in Japan.
- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- When using TV while charging battery. separate AC Charger and Antenna to avoid interference
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programming may not be viewable or record properly when:
- Too far from or too close to broadcasting stations
- In mountainous areas or near tall buildings
- Aboard trains or in moving vehicles
- Near high-voltage lines, neon lights or wireless base stations
- Near railroad tracks or highways
- Anywhere a jamming signal is broadcast/ reception is unstable

Digital TV Antenna

TV Antenna is located behind Display. Move handset to find best reception.

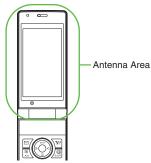

Use optional TV Antenna Connection Cable as needed.







Setup confirmation appears.



Digital TV





Select region → ●



After setup, channel list appears.





To watch TV, select *Digital TV* and press ①.

```
Watching TV without Completing Area Setup
In ⓒ, ﴿ Other Region ♣ ●

Adding Reception Areas

□ ♣ □ ♣ Set Channels ♣ ● ♣

Change Area ♣ ● ♣ Select Area ♣

□ ♣ Set Area Info ♣ ● ♣ From ⓒ
```





Watching TV


Complete Area setup first.
Use ② according to TV orientation.





TV Window

- TV orientation changes with Display orientation.
- In portrait position, Data Broadcast text appears.

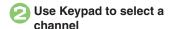

 Use one; Long Press to find channel with stable signal automatically.



Incoming Calls

- Press 🗈 to answer calls.
- When S! Circle Talk request arrives, press to start S! Circle Talk.

When Memory Card is Inserted

 If an incoming Voice Call interrupts a program, it is temporarily recorded to Memory Card for Time Shift playback. To temporarily record programs manually, press (Long) in TV window.

Incoming Messages


 Double beep sounds and New Message notice appears. Long Press of to open messages.

Key Assignments

Open Options Menu	
Toggle Panel On/Off	\Y'
Activate TV/Change Area	Q.XT
Volume Control	◄ ►

Panel Description



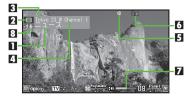

П	Program name	5	Sound Language
2	Channel key	6	Signal strength*
3	Area name	7	Volume
4	Station name	8	Channel

*The more bars the better.

Indicator position varies with display content, etc.

- Twisting key assignments Searching current program on the Internet Enlarging display size for portrait position Smoothing TV images Saving current channel Selecting an audiovisual mode (P.6-11)
 - Adjusting current AV Mode parameters
 Changing panel pattern
 Customizing viewing options for landscape position (And more on P.6-12)



Data Broadcast (Japanese)

Use 5 to select an item and press 6 to access program-related information and interactive services.



Data Broadcast Window

Data Broadcast Fees

- Data Broadcast information viewing is free, however, using data links/related services incurs Internet connection fees.
- A confirmation appears the first time a fee-based Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed.

TV Listing (Japanese)

- በ In TV window, 🗺 (Long)
 - EPG application starts; refer to the application's help menu for operational instructions.
 - When using EPG application for the first time, a confirmation appears.
 Follow onscreen instructions.

Program Info

- 🤰 Program Info. 🕈 💿




Program Info Window

- Select program **→**
 - To return, press twice.

Setting Recording Timer via Program Info [Program Info Window] Select program ▶ ☑

 Timer entries set via Program Info are updated with program changes automatically. Program cancellations cancel corresponding Timer entries. (Poor signal conditions may inhibit updates or cancellations.)

Advanced

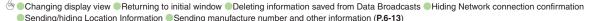


Setting TV Timer via Program Info (P.6-16)

Capturing Screenshots

Capture screenshots while watching TV. (May be unavailable if TV was activated by TV Timer.)

Saved images cannot be forwarded, edited, set as Wallpaper or attached to messages.

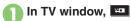



• Image is saved.

Opening Saved Images







Select image → ●

Enlarging Specific Image Portion

Available in landscape position.

n TV window, ≋1⊜ - ⋻9ऄ

• Long Press Key Assignments:

₹3 ₽	46 ₩	6 9 §
Upper left	Upper center	Upper right
⇒2 î Left		®∛ Righ
as 1 o	Æ 4 °	* 7 g
Lower left	Lower center	Lower righ

Multi Job

በ In TV window, 🖳



Select function •

• To toggle function windows, press 🕮.

③ → Function window closes



Recording/Playing Programs

Record clips on handset or Memory Card while watching TV.

Dubbing 10


 930SH supports Dubbing 10 copy protection scheme that allows recorded programs to be copied from handset to Memory Card. Open file properties to check the remaining number of copies allowed to be made.

Precautions

- Saved files cannot be forwarded or attached to messages.
- 930SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank is not liable for any damages resulting from accidental loss or alteration of recorded content

Recording Programs

When Small Light flashes vellow. reception is poor; change location to improve it: Small Light illuminates green for moderate, or blue for strong reception.

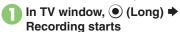



Recording Window

· Changing volume, etc. does not affect recordings.



(Long) → Recording ends

 Clip is saved to handset (or Memory Card. if inserted).

Recording Programs in Portrait Position [TV Window] (Long)

Memory/Battery Runs Low or Video Call/S! Circle Talk Request is Accepted

- Recording stops. (Recorded clip is saved.) Saving Files via the Internet while Recording
- While recording programs to handset, confirm there is enough free memory before saving files.

Chasing Playback

Watch a program from the beginning while recording it on Memory Card.



(Long)

- Recording window returns when playback has caught up to the real-time program.
- See the table on **P.6-9** for playback operations (Split File and Set Marker are not available).





Advanced



🖑 Recording programs without Data Broadcasts Saving Data Broadcasts to Memory Card Disabling Time Shift recording automatic activation Recording programs to handset (P.6-14)


Playing Recorded Programs





Video List

- Handset Video List appears. (Memory Card Video List appears if a card is inserted.)
- m indicates the file is unplayable.

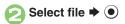



Playback Window

 Playback starts. (The last played file plays from where it stopped.)



Changing Video List from Memory Card to Handset

After ①, ☑ ⇒ Change to Phone ⇒ ⊙

Playback Operations

- Adjust volume or enlarge widescreen image portion in the same way as while watching TV.
- Use according to TV orientation.

Fast Forward
Rewind ⊙ ¹
Skip Forward #9
Skip Backward
Pause ² ('Ye' in portrait position)
Split File (Long)
Set Marker
Toggle Panel On/Off
Parier On/On

¹Long Press to replay. (Available when no Marker is saved.)

²In pause, use of to reverse/advance frame.

Time Shift Playback

Insert a Memory Card to temporarily record TV programs interrupted by incoming Voice Calls for Time Shift playback. (See related indicators in the screenshot below.)



Follow these steps to start playback:




- Playback stops when Time Shift playback has caught up to the real-time program.
- To skip forward/backward or fast forward during Time Shift playback, see "Playback Operations" on the left.

(Long) → Recording/ playback stops

• Recorded content is deleted.

Stopping Fast Forward to Resume Playback

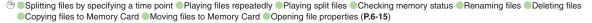



TV Timer & TV Recording Timer









Manual → ● →
Programming or Recording



Enter start date/time

Enter end date/time

€



 When a confirmation appears, read and then press .

Setting Timer via EPG

In ⓐ, From TV Listing ▶ ●

Refer to the application's help menu for operational instructions.

Timer Recording Precautions

Confirm target channel reception; keep handset open.

- End current operations.
- Confirm battery is adequately charged and that there is enough free memory. When TV is activated for Timer recording, audio output is redirected to Speaker/ Headphones even if Sound Output is set to Bluetooth Device. (TV audio is muted.)

When Memory Card is Not Inserted • Clip is saved to handset.

At Timer Time (TV Alarm Time)

TV and Alarm activate. Alarm ends after the set duration.



Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.

While Using Another Function

 Confirmation appears if TV cannot activate in current state; press then end application to enable Timer.



Area & Channel

Switching reception Areas	While watching TV, ♣ Select Area → ●
Renaming Areas	While watching TV, So Set Channels Change Area Select Area Select Area Change Area Name Select Area Se
	Start Here While watching TV, ☑ → Set Channels → • Channel Key Setting → • See below
Changing/disabling function	Toggling All Receivable Channels By Manual
	Disabling Disable ● ●
	Start Here While watching TV,
Editing channels	Moving Channels Move → ● → Select target key → ●
	Deleting Channels Delete → ● → Yes → ●
Deleting all channels in Area	While watching TV, → Set Channels → Change Area → → Select Area → Reset Settings → → Yes → ●
Adding new channels to Area	While watching TV, → Set Channels → → Change Area → → Select Area → → Channel Update → ● Update Further → ●
Updating all channels in the Area	While watching TV, → Change Area → ● Select Area → ○ → Channel Update → ● Update All → ● → Yes → ●

Watching	
Viewing key assignments	While watching TV, → Help → Also available while recording or playing programs.
Searching current program on the Internet	While watching TV,
Enlarging display size for portrait position	While watching TV, ☑ → AV Settings → ● Screen Size → ● Enlarge(Portrait) → ●
Smoothing TV images	While watching TV,
Saving current channel	While watching TV, → Save Channel → → Select key → → To overwrite a saved channel, choose Yes and press →.
Selecting an audiovisual mode	While watching TV,



	Start Here While watching TV, → AV Settings → See below
	Brightness Image → ● → Brightness → ● → Adjust level → ●
	Disabling/Enabling Brightness Adjustment via Light Sensor Image → ● → Brightness → ● → ☑ (□/☑) → ●
Adjusting current AV Mode parameters	Adjusting Brightness Automatically by Scene Image → ● → Control by Scene → ● → On(Light) or On → ●
	Other Image-Related Parameters Image → ● Select item → ● Adjust level → ● • Adjust Contrast, Blackness (black level), Color (color density), Tint (skin color tone) and Sharpness.
	Restoring Default Image Settings Image
	Selecting Sound Option Tone Select option Select option
Changing panel pattern	While watching TV, ☑ → Settings → ● → Panel Type → ● → Select pattern → ●
	Start Here
Customizing viewing options for	Showing Indicators Always Display Icon → ● → On → ●
landscape position	Disabling Partial Image Enlargement Enlarge Point
	Using Portrait Position Key Assignments Key Direction

Switching One Seg service	While watching TV, → Select Serv. Station → → Select service → → Available for programs with multiple services.
	Start Here ● → TV → ● → Settings → ● → Calls & Alarms → ● → See below
Changing handset responses to	Showing Alarm Notice Alarm
incoming transmissions	Showing Calls or S! Circle Talk Requests Select item
	Showing New Message Notice Incoming Message → ● Calls & Alarms → ●
Listening to audio from Speaker	● → TV → ● → Settings → ● → Sound Output → ● → Loudspeaker → ●
Switching audio output to wireless device	→ TV → ● → Settings → ● → 🖁 Sound Output → ● → Bluetooth Device → ●
Using wireless Headphones	While watching TV, (₹) (Long) ■ Pair SCMS-T DRM scheme compliant Bluetooth® headphones beforehand.
Setting TV to end automatically after a period of time	TV Settings Auto Exit Auto Exit Select time
Disabling auto shut-off when handset is closed	● TV → ● → Settings → ● → Auto Exit → ● → Close Action → ● → Watch TV → ●



Data Broadcast (Portrait Position Only)

Changing display view	While viewing Data Broadcast,
Returning to initial window	While viewing Data Broadcast,
Deleting	Start Here ● → TV → ● → Settings → ● → Broadcast Data → ● → Delete StationData → ● → See below
information saved from Data	Deleting by Station Select station
Broadcasts	Deleting All
Hiding Network connection confirmation	→ TV →
Sending/hiding	Start Here
Location Information	Sending Always On ●
	Hiding Always Off
Sending manufacture number and other information	

TV Link (Japanese)

	•
Saving links to Data Broadcasts or related information	While viewing Data Broadcast, select link source Link navigation varies by program. Follow onscreen instructions to save links.
Using TV links	Start Here ● → TV → ● → TV Link → ● → See below
	Opening TV Links Select link • • Connection fees may apply.
	Opening Properties Select link ⇒ ☑ ⇒ Details ⇒ ●
Deleting TV links	Start Here ● → TV → ● → TV Link → ● → See below
	One Entry Select link ⇒ ☑ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●
	All Entries



Subtitle & Sound

Subtitle & Sound	
	Start Here While watching TV, Sound See below
	Showing Subtitles Always Display Subtitle
	Hiding Subtitles Always Display Subtitle
Changing subtitle settings	Changing Subtitle Language Subtitle Language
	Showing Subtitle Area Always Auto Subtitle Off
	Showing Subtitles at the Top Subtitle Position
	Start Here While watching TV, Sound See below
Changing sound settings	Selecting Sound Option Sound Type
seungs	Listening to Sub Language Sound Language
	Listening to Main & Sub Languages Sound Language Main + Sub

Recording

Recording	● TV → ● > Settings > ● > Broadcast
programs without	Data ⇒ ● > Set Recording ⇒ ● > Image
Data Broadcasts	Only ⇒ ●
Saving Data	● → TV → ● → Settings → ● → Broadcast
Broadcasts to	Data ⇒ ● ⇒ Image Location ⇒ ● ⇒ Memory
Memory Card	Card ⇒ ●
Disabling Time Shift recording automatic activation	● → TV → ● → Settings → ● → Set Call Time Shift → ● → Off → ●
Recording programs	● → TV → ● → Settings → ● → Save
to handset	Recording to

Recorded Programs

■ Playback

_ · ···,····	
Splitting files by	During playback,
specifying a time	Select Point → • → • Specify point → •
point	Confirm → ●
Playing files	
repeatedly	Playback Pattern
Playing split files	● → TV → ● → TV Player → ● → Select split file → ☑ → Select file → ●

Managing

■ Managing	
Checking memory status	● → TV → ● → TV Player → ● → □ → Memory Remaining → ●
Renaming files	● → TV → ● → TV Player → ● → Select file → ☑ → Rename → ● → Enter name → ●
Deleting files	Start Here ● → TV → ● → TV Player → ● → See below
	Single Files Select file ⇒ ☑ ⇒ Delete ⇒ ● Yes ⇒ ●
	All Files
Copying files to Memory Card	● TV ● TV Player ● ● □ ◆ □ ◆ Change to Phone ● ● Select file ● □ ◆ Copy to Card ● ● Yes ● ● File is moved from handset to Memory Card when the number of copies made exceeds the limit.

Moving files to Memory Card	● TV ● TV Player ● ● □ → □ → Change to Phone ● ● Select file ● □ → Move to Card ● ● Yes ● ● ■ Files once moved to Memory Card cannot be moved back to handset.
Opening file properties	● → TV → ● → TV Player → ● → Select file → ☑ → Details → ●

Markers

	Start Here During playback ⇒ See below	
Playing files with Markers	Skipping between Markers ⊚ (Long) or ⊙ (Long)	
	Moving to Specific Markers 10 - 9	
	Start Here During playback,	
loing Marker Liet	Starting Playback Select number ●	
Jsing Marker List	Deleting a Marker Select number → ☑ → Delete → ●	
	Deleting All Markers ☑ → Delete All → ● → Yes → ●	



TV Timer/TV Recording Timer		
Setting TV Timer via Program Info	Start Here While watching TV See below In Landscape Position Select program Programming ■ In Portrait Position Program Info. Program Program Info. Select program Programming Progr	
Opening/editing/ deleting Timer details	Start Here ● → TV → ● → Reservation List → ● → See below Opening Entries Select entry → ● Editing Entries Select entry → □ → Edit → □ → Edit → □ • Some entries may not be edited depending on the content. Deleting Entries Select entry → □ → Delete → ● → Yes → ●	
Opening/deleting Timer log	Start Here ● → TV → ● → Reservation List → ● → □ → See below Opening Timer Log Select record → ● Playing Recorded Programs Select record → □ Deleting Records Select record → □ ✓ Yes → ●	

Customizing TV Alarm settings	
	Changing TV Alarm Time Alarm Time
	Disabling Tone/Vibration/Small Light Alarm, Vibration or Light
	Changing Duration Duration Select time
Ending operations	● → TV → ● → Settings → ● → TV Reserve
automatically at	Prior > • • On > •
Timer time	Some operations may not end automatically.

Watching



TV won't activate

• Battery may be low. Charge battery or install a charged battery.



Cannot watch TV

- Reception may be poor (P.6-5); change location to improve it. (TV signal strength is independent of handset signal strength.)
- Handset may not have been used for a period of time: retrieve Network Information (P.13-6).
- TV is disabled upon subscription termination



Area setup does not complete correctly

• Perform Update All in Channel Update. Area setup may not complete correctly depending on the area or service availability.

Recording



Ringtone does not sound as set while recording

• When a Chaku-Uta® file, etc. is set as ringtone, default ringtone may sound for incoming transmissions while recording.

TV Recording Timer



Could not start recording. appeared as recording result

 Recording failed due to low battery/ memory, active function, etc.



Recording aborted. appeared as recording result

 Recording was interrupted due to low memory, Memory Card removal, etc.



Camera	7-2
Getting Started	7-2
Photo Camera	7-4
Capturing Still Images	7-4
Video Camera	7-5
Video Camera Recording Video	
	7-5
Recording Video	7-5

Shooting Modes	7-7
Using Shooting Modes	7-7
Editing Images	7-9
Printing	7-13
Printing Images	7-13
Additional Functions	7-14
roubleshooting	7-18

7

Camera & Imaging



Getting Started

Capture still images or record video.

Various Image Sizes

Select small sizes to send captured images/recorded video via S! Mail*; select larger sizes for higher resolutions.

Multiple Shooting Modes

Apply effect or add frame, capture sequential/panoramic or scan images, or use long exposure.

Auto Focus

Measures the distance between subjects and camera to adjust focus.

Imaging Functions

Edit captured images or print on a compatible printer.

*May not be delivered as sent depending on image/recording size or recipient device.

Precautions

- Clean dust/smudges from lens cover with a soft cloth before use.
- Mobile camera is a precision instrument, however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Subjecting the lens to direct sunlight will damage the camera's color filter.

Auto Shut-off

 Before image capture/recording, mobile camera shuts down after a period of inactivity and handset returns to Standby.

Shutter Click

• Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.



Internal & External Cameras

Use Internal Camera or External Camera; unless noted otherwise, operations in this chapter describe External Camera.

Sizes are limited and shooting modes are not available for Internal Camera.

Camera Key


Press • in Standby to activate mobile camera. (Last used Viewfinder appears first.)

Press 🔀 to toggle Photo Viewfinder and Video Viewfinder.

Display Indicators


The following indicators appear at the top of Display.

Photo Viewfinder

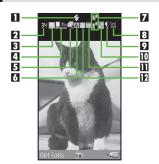

П	Mobile Light	8	Focus
2	Memory	9	Exposure
3	Picture Quality	10	Background Save
4	Picture Size	Ш	Save to
5	Continuous Shoot	Ш	White Balance
6	Scene	12	ISO Sensitivity
U	Long Exposure	124	Self-timer
7	Remote Shutter		

Video Viewfinder

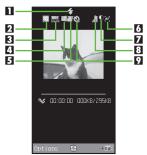

1	Mobile Light	5	Record Time
2			Focus
3	Record Size	7	Exposure
7	Memory for still image capture	8	Save to
ы	image capture	9	Self-timer



Capturing Still Images





Photo Viewfinder

- Frames appear on detected faces. (Face Auto Focus)
- Viewfinder orientation changes with Display orientation.

Frame image on Display **→ ●**





ি ♦ Camera shuts down

Face Detection

• Detection may fail depending on face angle, distance from subject or environment.

Sending Captured Images via S! Mail After ②,

→ Complete message

■ May not be delivered as sent depending on image size or recipient device.

Pre-Image Capture Operations

Zoom In/Out	0 / 0
Toggle Mode	\\\Y'\
Adjust Image Brightness	⊙ /⊙
Change Image Size	≈5 €
Toggle Mobile Light Mode	\$ # @ / Wo
Toggle Internal Camera and External Camera	A D
Open Help	₹0



Image Save Window

 Shutter clicks and the captured image appears. (To discard file and start over, press ...)



- Image is saved. (Viewfinder returns for another shot.)
- Open saved images via Data Folder.



- 9 Viewing key assignments Activating Mobile Light Adjusting focus quickly for close-up shots (And more on P.7-14)
 - Adjusting camera's light sensitivity
 Correcting Face Auto Focus images
 Changing image size
 Changing mode according to lighting or subject Setting Center Auto Focus Adjusting color balance according to lighting conditions (And more on P.7-15 - 7-16)


Recording Video





Video Viewfinder

 For pre-recording operations, see P.7-4 "Pre-Image Capture Operations."

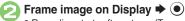

· Recording starts after a tone. (To start over, press .)







Video Save Menu

 Recording stops with a tone. (To discard file and start over, press ...)



- Video is saved. (Viewfinder returns for another shot.)
- Play saved video via Data Folder or Media Player.



Pausing Recording

After @, \(\mathbb{Y} \) (press repeatedly to pause/resume)

■ May be unavailable depending on recording size.

Playing Unsaved Video

In ②, Preview

●

Sending Recorded Video via S! Mail In ②, Send ▶ ● Save and Send

→ Omplete message → Y

■ May not be delivered as sent depending

on recording size or recipient device. Capturing Images while Recording

Video (Still Image Capture)

After 2, 2

■ Captured images are saved when saving recorded clip; open them via Data Folder.

Incoming Calls

 If a call arrives before video is saved. recorded clip is temporarily saved. End the call to return.

When Battery Runs Low

Recording stops. (Recorded clip is saved.)





Opening Saved Files







Review Window

 Last saved mobile camera file opens/ plays. For still images, press to zoom in.

Pausing/Resuming Video
After ②, ③ (press repeatedly to
pause/resume)
Reviewing Immediately After Saving
③⑤ (Long)
Opening Help

Accessing Older Files

- In Review window, 🗹
 - List appears; press 😉 repeatedly to toggle lists.
- Select file 🕈 💿

Accessing Files from Viewfinder

- Select file → ●




Using Shooting Modes

May be unavailable depending on selected image/recording size.

Self-timer



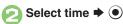



- Frame image on Display **→** (•)
 - After selected time elapses, captured image appears or recording starts.
 - To stop recording, press

Releasing Shutter during Countdown After 🕣. 💿

Incoming Calls/Alarm during Countdown

· Countdown stops. (Self-timer remains active.)

Continuous Shoot (Photo Camera)

Available Modes:

4 Pictures	Capture four separate images with Index Image
9 Pictures	Capture nine separate images with Index Image
Overlapped	Capture five images to create a composite image

In Photo Viewfinder. Pr Modes **→** (•)



Mode Menu

- Continuous Shoot **→** (●)
- Select mode **→ ● →** Select speed **→** (•)
- Frame image on Display (•) · After image capture, Index Image or a composite image appears.
 - When shooting speed is set to Manual (4 Pictures and 9 Pictures modes), repeat 4 for each frame.





All Pictures **→** (•)

All captured images are saved.

Saving the Selected Image After ②, ⊚ (select image) ▶ ● Selected Picture ◆ ●

Adding Frames (Photo Camera)

- In mode menu, Add Frame
- Preset Frames

 ◆

 ◆ Select frame

 ◆

 ●
 - Frame image on Display **→ (•)**

Captured image appears.

Using Frames in Data Folder In ②. Data Folder → ③ → Select frame **→ ● → ●**

Camera Effects (Photo Camera)

- In mode menu, Camera Effects

 ●
- Select effect **→** (•)
- Frame image on Display

 ◆ ●

Captured image appears.



Long Exposure (Photo Camera)

Capture low-light shots (fireworks, night scenes, etc.) clearly.

- In mode menu, *Long*Exposure

 ●
- ② On ⇒ ⊙
- 👣 Frame image on Display 🕈 💿




 Shutter is left open for an extended period of time, then captured image appears.

Panorama Picture (Photo Camera)

In mode menu, *Panorama/*Scanner **▶ ●**



Panorama/Scanner Menu

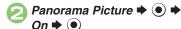





- Move handset slowly to keep ⊕
 aligned with either of yellow lines.
- Image is captured automatically when the bar () turns blue.





Save Menu

- Image is captured and Save menu opens.
- 亏 Save 🕈 🧿

Image is saved.

Checking Unsaved Images

[Save Menu] Preview → ●

Sending Captured Images via S! Mail
[Save Menu] Send → ● → Save and

Send → ● → Complete message → ▼

Scanning Images (Photo Camera)

- In Panorama/Scanner menu, Scanner

 ●
- Select size → Frame image on Display → ●



- Move handset slowly to scan the area to capture. (Refer to indicators on Display.)
- 80
 - Image is captured and Save menu opens.
- Save →
 - Image is saved.

Handling Captured Images

• Preview or send them via S! Mail in the same way as Panorama Picture images.



Editing Images

Getting Started

The following options are available. Some images may not be editable depending on file type and size.

■ Picture Editor

Resize	Select from preset sizes or crop image for size	
Frame	Add Frame to images	
Paste	Add text/dates to images	
Retouch	Dress up images with preloaded visual effects	
Stamp	Add stamps to images	
Face Arrange	Make smiley, angry or sad faces	
Correction	Correct images	
Rotate	Rotate images	
File Format	Convert file format and change file size	

■ Composite

Split Picture	Combine up to four images into one
	Combine two still images into one

Picture Editor

- 🚺 **→** Data Folder **→** ●
- Pictures

 ● Select image

 ●
- Picture Editor → ●



Picture Editor Menu

- When finished, 🗹



- Save as New ▶
 - To overwrite, select *Overwrite* and press ●. (Omit ⑤.)
- Enter name → Save here → ●

Canceling Effects

After ⑤, Undo ▶ ⑥

■ To restore effect immediately after canceling, select *Redo* and press **⑤**.



- Changing Image Size
- Resize to Preset Size
- In Picture Editor menu, Resize **→** •
- Select size **→** •
- Specify display area



- To zoom in/out, press Then use .
- Omit 3 if there is no rectangle on the image.
- - Editing is completed.

- Cropping Images
- In Picture Editor menu, Resize **→** •
- Cut **→** (•)
- Move + to the upper left corner of the portion to crop **→** •




- Move + to the lower right corner of the portion to crop **→** (•)
- Specify display area
- - Editing is completed.



Face Arrange



Face Arrange Menu

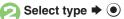




• Editing is completed.

Important Face Arrange Usage Note


 When using Face Arrange, take care not to create images that may embarrass or offend others. Always obtain permission before photographing others.

■ Adjusting Positions

Change the default positions and sizes of targets to fit the image.

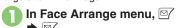

 A rectangle appears with + in the upper left corner.

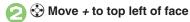





Move + to bottom right of face → ●



 Face line is set. Set the eyes and then mouth in the same way.





 Image is saved as a new entry with Face Arrange positions adjusted.
 Complete Face Arrange. Face Arrange is applied to the adjusted positions.



Composite

Panorama Images


Panorama Image Effects:

Near View	Best suited for close-up shots
Document	Use for images with text
Standard	Apply to other images







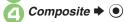





- File selected in ② is set as left image.
- Select image → ●
- EFFECT → Select effect →
 - Editing is completed.
- When finished, 🗹
 Merged image appears.



Changing Images

After ②, select image ◆ ● ▶ ☑ ◆

Select image ◆ ●

Switching Image Positions

After ③, ☑



Printing Images

Digital Print Order Format (DPOF)

Select images from Memory Card and specify the number of copies to print on DPOF-compatible printers, or at digital printing services.

DPOF settings made on other devices are unusable; delete existing settings to create new ones on handset.

- Settings ⇒ ⇒ ⊙Connectivity
- Memory Card → →
 DPOF → ●
- Rumber of Copies → ●



- Gelect folder

 For Each Picture

 Select folder

 Output

 Description:
- Select image ▶ ☑



- Enter a number of copies to print

 ●
 - For more settings, repeat 5 6.



Applying a Number to All Images In ②, For All Pictures → ● Enter

a number of copies to print → ●

Canceling Specified Number In ⓐ, enter 00 → ⓐ → 🔀

Viewing Current Print Settings

Using Printers

Connect handset to a Bluetooth®-compatible printer and print images in Pictures folder.

- Activate Bluetooth[®] on the printer.
- Some images may not be sent depending on file type and size.
- Data Folder Dictures● ●
- Select image → ☑ → Print

 → •
- Via Bluetooth → → Select printer → ●
- Yes

 To cancel, press

 ✓

When Authorization Code is Required Enter Authorization Code

● ●

Photo Camera & Video Camera	
Viewing key assignments	In Photo/Video Viewfinder, ☑ → Help → ●
Activating Mobile Light	In Photo/Video Viewfinder,
Adjusting focus quickly for close-up shots	In Photo/Video Viewfinder, Settings or Record Settings Focus Setting Macro Macro Macro Setting Macro M
Adjusting focus manually	In Photo/Video Viewfinder, Settings or Record Settings Focus Setting Manual Focus Adjust focus To readjust focus, press .
Locking focus	In Photo/Video Viewfinder, • To start over, press • again.
Changing image quality	In Photo/Video Viewfinder,

Sending files	Panorama/Scanned Images After image capture (Save menu opens), Send ⇒ Select option ⇒ ● • Blog Tool is available as send option if Blog Setting is complete.
	Other Still Images After image capture (image appears), Send Send Select option Blog Tool is available as send option if Blog Setting is complete.
	Video After recording (Save menu opens), Send → ③ → Select option → ⑥
Adjusting brightness	In Photo/Video Viewfinder,
Activating automatic saving	In Photo/Video Viewfinder, → Settings → → Auto Save → ● → On → ●
Changing save location	Start Here ● → Camera → ● See below
	Still Images Photo Camera Settings → ● > Settings → ● Save Pictures to → ● > Select location → ●
	Video Video Camera Settings ● Settings ▶ Save Videos to ● Select location

Photo Camera		
Adjusting camera's light sensitivity	In Photo Viewfinder,	
	Start Here After image capture (image appears),	
Correcting Face Auto Focus images	Adjusting Face/Background Brightness Against sun	
	Blurring Out-of-Focus Portions Portrait	
Changing image size	In Photo Viewfinder, ☑ → Picture Size → ⑥ Select size → ⑥	
Changing mode according to lighting or subject	In Photo Viewfinder,	
Setting Center Auto Focus	In Photo Viewfinder,	
Adjusting color balance according to lighting conditions	In Photo Viewfinder,	
Changing shutter click sound	Camera Photo Camera Settings Settings Select pattern Shutter Sound Shutter Sound Shutter Click sounds for Continuous Shoot, Panorama Picture and Scanner are fixed.	
Switching to Internal Camera	In Photo Viewfinder, → Shooting Settings → ● Internal Camera → ●	

Hiding indicators	In Photo Viewfinder,
Zooming in to check image details	After image capture (image appears), □1□ - □9] (Long) ■ Use ⊕ to see outside of enlarged portion. (Press ■ to zoom in further.) To return to captured image, press □. ■ Key Assignments: ■ Portrait Orientation □1□ (Upper left) □2□ (Upper center) □3□ (Upper right) □4□ (Left) □5□ (Center) □6□ (Right) □7□ (Lower left) □8□ (Upper center) □9□ (Lower right) ■ Landscape Orientation □3□ (Upper left) □6□ (Upper center) □9□ (Upper right) □2□ (Left) □5□ (Center) □8□ (Right) □2□ (Left) □5□ (Center) □9□ (Upper right) □1□ (Lower left) □4□ (Lower center) □7□ (Lower right) ■ May be unavailable depending on image size, etc.
Releasing shutter remotely with a Bluetooth® watch	In Photo Viewfinder, press the corresponding button on Bluetooth® watch • Connect handset to a Bluetooth® watch and set Set Remote Shutter to On beforehand. For details, see the Bluetooth® watch guide.
Changing send option assigned to ∑	● Camera ● Photo Camera Settings ● Settings ● Set Send Key ● Short press or Long press ● Select option ● Change send option separately for each key press method.
Disabling quick transition to Viewfinder after saving images	● Camera → ● → Photo Camera Settings • ● → Settings → ● Background Save → ● → Off → ●




Disabling remote shutter control via Bluetooth® watches	Camera
Changing Panorama settings	Start Here In Photo Viewfinder, → Settings → Panorama Settings → ● See below
	Hiding Guides Assisting Lines
	Locking Display Brightness during Image Capture AE-Lock
Changing Panorama image	In Panorama preview,

Video Camera

Switching to Internal Camera	In Video Viewfinder,
Changing recording time/size	In Video Viewfinder, → Record Time/Size → For Message or Extended Video → Select size → ●
Enlarging Viewfinder size	In Video Viewfinder, → Display Size → ● Enlarge → ●
Recording video without sound	In Video Viewfinder,

Editing Images


■ Picture Editor

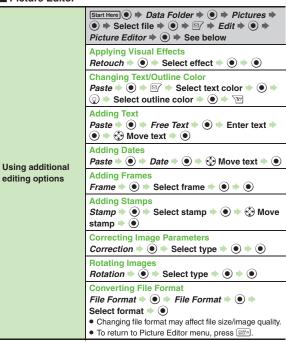



	Start Here		
Using additional editing options	Changing File Size File Format		

Composite

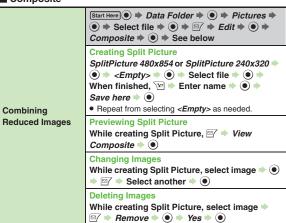

DPOF		
	Start Here ● ⇒ Settings ⇒ ● ⇒ Connectivity ⇒ Memory Card ⇒ ● ⇒ DPOF ⇒ ● ⇒ See below	
Changing print settings	Adding Dates to Prints Settings	
settings	Creating an Index Print Settings	
	Resetting Reset Settings → ● Yes → ●	



Mobile Camera



Display went dark during image capture

• For camera protection, Display may go dark when handset is subjected to strong shocks during image capture. Reactivate mobile camera to solve this.



Captured image appears all white

● When Long Exposure is active (" appears), images captured in daylight or good light appear all white.



Mobile camera won't activate/shuts down automatically

- Battery may be low. Charge battery or install a charged battery.
- Leaving handset at high temperature may cause camera area to heat up, disabling mobile camera activation; wait a while and retry.
- Prolonged camera use may cause camera area to heat up, resulting in automatic shutdown; wait a while and retry.



Cannot use Background Save or **Auto Save**

• Background Save/Auto Save is not available when Save Pictures to is set to Ask Each Time.

Editing Images



Cannot save/send edited images

• Edited images may be too large to save or send via mail.

DPOF



Cannot specify print settings properly

• If Memory Card image files have been deleted or renamed on PCs or other devices, reset print settings and start over with settings.



Media Player	8-2
Media Basics	8-2
Music	8-5
Playing Music	8-5
Video	8-6
Playing Video	8-6

Playlists	8-7
Using Playlists	8-7
S! Appli	8-8
Using S! Applications	8-8
Additional Functions	8-9
roubleshooting	8-14

8


Media Player & S! Applications




Media Basics

Use Media Player to play music/video on 930SH.

- Download media files from Mobile Internet sites via Media Player directly.
- Transfer PC music files and save them on Memory Card.

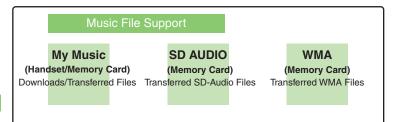

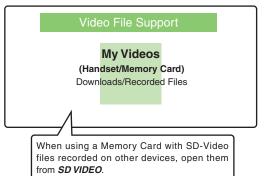

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status
- Playback stops for incoming calls.
- When battery is low, Media Player will not play. If battery runs low during playback, Media Player shuts off.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming); downloaded media cannot be saved. Packet transmission fees apply even while stream is paused.

Compatibility

 Files transferred from PCs cannot be used as ringtones or System Sounds.



Downloading Music

Download music from the Internet. Read information (price, expiry date, etc.) on the source site.





Media Player Menu





Follow the links to download media.

Download via Music Search (Japanese) In ⓒ, *Music Search* ▶ ◉

■ Follow onscreen instructions.

Downloading Video

- In Media Player menu, Videos **→** •
- Download Videos

 Follow the links to download media.



Saving Music Files from PCs

- Use software to convert music file format
- For software usage and specifications, see the provider's website, etc.
- SoftBank does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- · Comply with copyright and other intellectual property laws when using obtained files

Using MTP Mode

Follow these steps to save WMA files via S! Music Connect (Japanese):

- For more about S! Music Connect, see SOFTBANK MOBILE Corp. Website (P.14-22).
- Copy protected files can only be played on the handset with which the files were transferred.












Connect handset to a PC via **USB Cable**

• Copy music from PC. Refer to the S! Music Connect help menu for operational instructions.



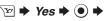

Connection ends Disconnect USB Cable.

Saving AAC Files

Convert PC music files to 930SH-compatible format (P.14-21), then save to corresponding Memory Card folder (P.14-23) via Mass Storage. Install USB Cable driver beforehand.



Playing Music

- → Media Player → → Music → ●
- My Music → → Select tab (folder)



Music Playlists Window

- All Music → ●
- Select file ▶ ●



Music Playback Window

• Album art appears for compatible files.

Stopping Playback
While paused,

Using Other Functions while Playing Music After ②, or ③

- To stop playback, follow these steps in Standby:

Playing SD AUDIO or WMA Files In ⊘, SD AUDIO or WMA ▶ ● ▶ From €

Searching Music Files

After ⓒ, ☑ Search → ⑥ → Enter search text → ⑥

Lyric Display-Compatible Files

Press to display lyrics.

Music Playback Window Indicators



- - Music Playback Operations

Replay	(Long Press: rewind)
Skip Forward	(Long Press: fast forward)
Pause	•
Volume Down	(Long Press: mute)
Volume Up or Cancel Mute	③
Switch Sound Output	(Long)
Open Help	£0

*Release for playback.



Playing Video

- Media Player → Videos → ●
- My Videos → Phone Memory or Memory Card → ●

™® → ₽ Playlist	1505 0
All Videos Playlist 1 Playlist 2 Playlist 3	

Video Playlists Window

- All Videos →
 - Select file **→** ●



Video Playback Window




Playing SD VIDEO Files In ②, SD VIDEO → ③ → ②

Searching Video Files

After e, $\textcircled{=} \Rightarrow Search \Rightarrow \textcircled{e} \Rightarrow Enter$ search text $\Rightarrow \textcircled{e}$

At Alarm Time

- Playback stops.
- Video Recorded on Other Devices
- Video image may appear rotated.

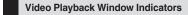



1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

Video Playback Operations

For pause, volume up/down, sound output or help, see **P.8-5** "Music Playback Operations."

Replay	(Long Press: rewind*)	
Skip Forward	(Long Press while paused: advance frame, Long Press: fast forward)	
Toggle Display Size	(m 2 €)	

Release for playback.



Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.

Adding to Playlist

Follow these steps to add a music file to *J° V1IJZŀ1*:







My Music **→** ●









Renaming Playlists

In Playlists window, select Plavlist **▶** ☑







- Organizing Playlists Sorting files Deleting/editing SD AUDIO files Deleting All WMA files Downloading Contents Keys Opening properties (P.8-10 - 8-11)
 - Organizing Playlists Sorting files Downloading Contents Keys Opening properties Deleting SD VIDEO files (P.8-11)




Using S! Applications

Try out the preloaded S! Applications or download and use 930SH-compatible S! Applications, including games.
Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.

Remote Control

 Use Familink Remote S! Application (Japanese) to control a TV, VCR, etc. via infrared.

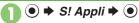





S! Appli Library



Network S! Applications

 A message appears indicating that Internet connection is required. Follow onscreen instructions.

Incoming Calls

 Incoming calls automatically pause S! Application.

Opening S! Appli Request Log In ②, Demand History ▶ ●

Exiting S! Applications







Pausing S! Applications In ②. Suspend ▶ ●

Resuming S! Applications

- Select Cancel to open Main Menu and keep the S! Application paused.
- Select *End* to end the S! Application.

- Downloading S! Applications Adjusting S! Application sound volume Canceling surround effect Setting handset responses to incoming transmissions Setting S! Application to activate in Standby Setting Permissions Opening properties (P.8-12)
 - Moving S! Applications to Memory Card Changing S! Application settings Deleting S! Applications Restoring default S! Application settings
 - Restoring default S! Appli Library
 Synchronizing Memory Card S! Applications with 930SH
 Opening Java™ license information (P.8-13)



Media Playback ■ Music & Video Media Player → ● Music or Videos → Resuming from Last Played Music or Last Played Video stopped point **▶ ●** Switching audio Media Player → ● Settings → ● →

device Music

output to wireless

Playing repeatedly or randomly	Start Here During playback, → Playback Mode → • See below
	Repeat One File Repeat
	Repeat All Files Repeat All ●
	Play Randomly Random
	Repeat Randomly Random Repeat ●
Changing Sound Effects	During playback, → Sound Effects → ● → Select effect → ●

Sound Output → ● → Bluetooth Device → ●

■ Video

- video	
Playing repeatedly or randomly	Start Here During playback, → Playback Mode → ● → See below
	Repeat One File Repeat ●
	Repeat All Files Repeat All
	Play Randomly Random ●
Specifying start point	During playback,
Changing Sound Effects	During playback, → Settings → Sound Effects → → Select effect →
Changing playback size	During playback, → Settings → → Display Size → ● → Select size → ●
Accessing linked information	During playback, → Access WEB Link → → Yes → ●
Setting Backlight status	During playback,
Hiding linked information	During playback, → Settings → → Web Link Setting → → Off → ●



Managing Music Files		
Organizing Playlists	Start Here ● → Media Player → ● → Music → ● → My Music → ● → Select tab (folder) → See below	
	Adding New Playlists	
	Deleting Playlists Select Playlist → ☑ → Delete Playlist → ● → Yes → ●	
	Deleting Playlist Files Select Playlist	
	Changing File Order Select Playlist	
Sorting files	● Media Player ● Music ● My Music ● ● Select tab (folder) → All Music ● ● ■ Sort ● ● Select option ● ●	

Deleting/editing SD AUDIO files	Start Here
	Deleting Single Files All Music → ● → Select file → ☑ → Delete Track → ● → Yes → ● • Source files will be deleted.
	Deleting All Files All Music ⇒ ☑ → Del. All Tracks → ● → Yes → ● → Yes → ● • Source files will be deleted.
	Editing Title/Artist All Music → ● → Select file → ☑ → Edit → ● → Select item → ● → Enter title or name → ●
Deleting All WMA files	● Media Player ● Settings ● Delete All WMA ● Enter Handset Code ● Yes ● ● Source files will be deleted.
Downloading Contents Keys	● Media Player ● Music ● My Music ● ● Select tab (folder) ■ Select Playlist ● ■ Select file (with %) ■ ● Yes ● ● Follow onscreen instructions.



Opening properties	Start Here ● → Media Player → ● → Music → ● See below
	SD AUDIO Files SD AUDIO → ● → All Music → ● → Select file → ☑ → Details → ●
	Other Files My Music → ● → Select tab (folder) → Select Playlist → ● → Select file → □ → Details → ●

Managing Video Files

Organizing Playlists	Start Here
	Adding New Playlists
	Deleting Playlists Select Playlist → ☑ → Delete Playlist → ● → Yes → ●
	Deleting Playlist Files Select Playlist
	Changing File Order Select Playlist
Sorting files	Media Player

Downloading Contents Keys	● Media Player ● Videos ● My Videos ● Phone Memory or Memory Card ● All Videos ● Select file (with ※) ● Yes ● • Follow onscreen instructions.
Opening properties	Start Here ● → Media Player → ● → Videos → ● See below
	SD VIDEO Files SD VIDEO → ● → Select file → ☑ → Details → ●
	Other Files My Videos → ● → Phone Memory or Memory Card → ● → Select Playlist → ● → Select file → □ → Details → ●
Deleting SD VIDEO files	Media Player Solect file Delete Solect file Solect file Source files will be deleted.



S! Applications	
Downloading S! Applications	S! Appli S! Appli S! Appli Library Download Follow onscreen instructions.
Adjusting S! Application sound volume	S! Appli Settings Application Volume Adjust level
Canceling surround effect	Surround Surround Surround Off Off Off Off Off Off Off O
Setting handset responses to incoming transmissions	Start Here
	Showing Calls Select item
	Pausing S! Application for Incoming Mail Incoming Message
	Showing Alarm Notice Alarm → ● → Alarm Notice → ●
	Showing Incoming S! Appli Request Notice Start Demand

	Start Here
Setting S! Application to activate in Standby	Activating Screensaver Settings
	Setting Screensaver S! Appli Library ● ● Select application ● Ø' ★ As Screensaver ● ● • As Screensaver appears for compatible S! Applications. • Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.
	Changing Screensaver Activation Time Settings Screensaver Activation Time Enter time Activation Time Screensaver Enter time Enter time
	Disabling Automatic Screensaver Restart Settings Screensaver Stop Auto Start On On On On On On On On On
Setting Permissions	Start Here
	Customizing Permissions for S! Appli Operations Select item
	Resetting Permission Settings Reset Settings
Opening properties	● S! Appli → ● S! Appli Library → ● Select application → ☑ → Details → ●

Moving S! Applications to Memory Card	● S! Appli ● S! Appli Library ● Select application ▼ Complete selection ► Move to Card ● ● When an older version of the S! Application is saved, choose Yes or No and press ●. ● Repeat application selection step as needed before pressing ♥/. ● Some SI Applications cannot be moved to Memory Card.
Changing S! Application settings	Start Here ● ⇒ S! Appli ⇒ ● > Settings ⇒ ● ⇒ See below
	Enabling Multimedia Communication Communication
	Setting Backlight Status Backlight → ● → Switch On/Off → ● → Select option → ● • Selecting Normal Settings applies Display Backlight setting.
	Disabling Backlight Flashing Backlight
	Disabling Vibration Vibration
Deleting S! Applications	S! Appli Select application Sel

Restoring default S! Application settings	● \$! Appli → ● ⇒ Settings → ● ⇒ Set to Default → ● ⇒ Enter Handset Code ⇒ ● ⇒ Yes → ●
Restoring default S! Appli Library	S! Appli Settings Memory All Clear Enter Handset Code Yes Clear Settings Enter Handset Code Life Handset Life Handset Life Handset Life Handset Life Handset Life Handset Life Handset Life
Synchronizing Memory Card S! Applications with 930SH	 S! Appli Synchronization Yes ●
Opening Java [™] license information	⇒ S! Appli → ● → Information → ●



Music



How do I delete files in All Music?

 Delete All Music files via Data Folder (Music or Ring Tones).



WMA files do not appear

- Did you use 930SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform Delete All WMA and re-transfer the files.
- Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)



Cannot transfer WMA files

WMA files may be corrupted; perform
 Delete All WMA and retry.



Cannot play WMA files

 Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform *Delete All WMA* and retry.

Video



How do I delete files in All Videos?

 Delete All Videos files via Data Folder (Videos).

S! Applications



Cannot move S! Applications to Memory Card

 The S! Application may already be saved or Memory Card memory may be low.



S! Applications do not pause for incoming transmissions despite *Calls & Alarms* settings

 Regardless of setting, a message appears for Screensaver S! Applications.



Calendar & Tasks	9-:
Calendar	9-
Tasks	9-
Alarms	9-
Using Alarms	
Wakeup TV	9-
Using Wakeup TV	
Calculator	9-1
Using Calculator	9-1
Expenses Memo	9-1
Adding Expenses	
Osaifu-Keitai®	9-1
Osaifu-Keitai® (Japanese)	
Locking IC Card	
Pretense Call	9-1
Faking Incoming Calls	9-1
Stopwatch	9-1
Using Stopwatch	9-1
Countdown Timer	9-1
Using Countdown Timer	9-1
World Clock	9-18
Opening World Clock	
Hour Minder	
Using Hour Minder	
•	

Document Viewer	9-20
Opening PC Documents	.9-20
Notepad	9-21
Saving Text	.9-21
Voice Recorder	9-22
Recording/Playing Voice	.9-22
Scan Barcode	9-23
Scanning Barcodes	.9-23
Create QR Code	9-24
Creating QR Codes	.9-24
Scan Card	9-25
Scanning Business Cards	.9-25
Text Scanner	9-26
Scanning Text	.9-26
S! Quick News	9-27
Receiving Content Updates (Japar	
S! Information Channel	
S! Information Channel & Weather	
Indicator (Japanese)	
e-Books	
Reading e-Books (Japanese)	
Additional Functions	
Troubleshooting	

9

Handy Extras



Opening Calendar

① → Tools → ② → In PIM/ Lifestyle menu, Calendar → ③



Calendar Window

Key Assignments

	総/大士	Open previous page	\$8€	Go to (Enter Date)
	\$ # [©]	Open next page		Find (By Category)
	⊅2 ĝ	Stamp ¹	20	Help
	Set Color Go to (Today)		Y:	Toggle view
			③	Select week ²
	12 6 M	Find (By Subject)	•	Select date

¹Available in Month/3Month View. ²In Week View, select time block.

Saving Schedules

Follow these steps to save subject, start/ end date/time, Alarm and schedule details: Either Subject or Description must be saved per entry.

In Calendar window, select date ▶ ●



- ∠Add New Entry>

 ●
- Enter subject → ●



☐ Enter start date/time → ●



- End:

 Enter end date/time

 ●
- 😭 Alarm: 🖈 💿
- Description:

 ● Enter schedule details ●

All-Day Schedule In ②, ☑ → ● → From ② Custom Alarm Time In ②, ② Alarm Time: → ● → Other → ● → Enter date/time → ● → ☑ → From ②





Handy Extras

* Changing default view Changing date color Changing task view option Adding stamps (Month View) Hiding entries Removing/restoring preset holidays Setting Category/Location Saving repetitive schedules (And more on P.9-30 - 9-31)

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



To stop Alarm, press a key.

Opening Schedule

While Alarm sounds/vibrates. \(\forall^{\sigma}\)

When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

Opening Schedules/Tasks

In Calendar window, select date **→** (•)



Schedule List

- Select schedule or task **→** (•)
- BACK ► List returns

Opening Task List

In ②, select task ▶ ☑ ▶ Go to Tasks **▶** (**0**)

Opening Related Message

After ②, ☑ → Related Mail → ③

Deleting Message from Schedule

After ②, ●) → Related Mail: → ●) →

Accessing Secret Entries

Temporarily

◆

●

Enter Handset

Code **→** (•)

Deleting Schedules

- One Entry
- In schedule list, select schedule **▶** ☑
- Delete **→** (•)
- This Appointment


 ◆

 ◆ *Yes* **▶** (•)
- All Entries of the Day
- In Calendar window, select date **▶** 🖾
- Delete → (•) → All This Day → (•) → Yes → (•)



Saving Tasks

Follow these steps to save subject, due date/time, Alarm and task details: Either Subject or Description must be saved per entry.

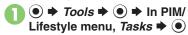




∠Add New Entry>

●



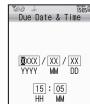

Enter due date/time → ●



🚍 Alarm: 🖈 💿









In ②, ☑ → ● → From ♡

Custom Alarm Time

In ③, ③ Alarm Time: → ● → Other

→ ● → Enter date/time → ● → ☑

→ From ⊘





At Alarm Time

Alarm activates; sounds/vibrates by related settings.



To stop Alarm, press a key.

Opening Task

While Alarm sounds/vibrates, 🗹


When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

Opening Tasks

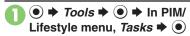



Task List

- Use to open completed or uncompleted task list.
- Select task → ●



RACK ► List returns

Accessing Secret Entries

After ①, ☑ → Unlock Temporarily

→ ○ → Enter Handset Code → ○

Marking Tasks as Completed
After ①, select task ▶ >>>

IASK LIST

Deleting Tasks

- One Entry
 - 📊 In task list, select task 🖈 🗹
- Delete → •
- This Task → Yes → ●
- All Completed Tasks
- በ In task list, 🗹
- Delete → → All Comp. Tasks → ● → Yes → ●




Using Alarms

Setting Alarm

Follow these steps to set Alarm to sound at a specific time on a specific day of the week:

Set Snooze (Alarm repeats at set interval), Alarm Volume and Duration.

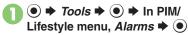



Alarm List




















• For custom intervals, select Other.

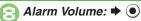











Selecting/Canceling All Days
In ⑤, ☑ Check All or Uncheck Al
→ •
Excluding Holidays
In ⑤, select day ▶ ⑥ (□/☑) ▶

```
Complete selection → Except
```

Activating Alarm Once or Daily

In ②, Once or Every Day (All) → ● From 🕞

Advanced



🔔 🕒 Editing entries 🔍 Saving entry name 🔍 Changing Alarm tone/video 🔍 Setting handset to vibrate at Alarm Time 🔍 Sounding Alarm tone even in Manner mode Activating Alarm based on World Clock time (P.9-33)

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



To stop Alarm, press a key.

When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

When Snooze is Set


Alarm repeats at the set interval. Other Alarms do not activate while handset is Snoozing.


Canceling Snooze

While Snoozing, **● Yes ● •**

• Snooze is automatically canceled after a period of time.

Canceling Alarm

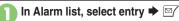

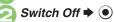


 Reactivate entry to use the same settings.

Reactivating Entry

In ②, Switch On ▶ ●

Deleting Alarm


One Entry

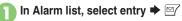





All Entries

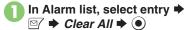



Handy Extras

Using Wakeup TV

Setting Wakeup TV

Follow these steps to activate TV at a specific time on a specific day of the week:

- Complete Area Setup (P.6-4) beforehand.
- TV may not activate in poor signal conditions.
- ① → Tools → ⊙ → In PIM/ Lifestyle menu, Wakeup TV → ⊙



-:-- → ● → Enter hour (24-hour format) → Enter minutes → ●



Wakeup TV Menu

- 🕞 Repeat: 🕈 💿
- Selected Days → ●



- Channel: ▶ ●
- Select channel **→** ●
- ► Saved For more settings, repeat ② - ③.



Canceling Alarm

- [Wakeup TV Menu] Alarm Volume: ▶
 - Adjust level
 From
 From



At Wakeup TV Time

TV activates after Alarm.



Stopping Alarm Instantly

• While Alarm sounds/vibrates, press a key.

When Another Function is Active

 TV may not activate depending on the function.

After TV is On for a Period of Time

 Confirmation appears. Choose Yes and press to exit TV.

Canceling Wakeup TV

- In Wakeup TV list, select entry ▶ ☑
 - Wakeup TV Off →
 - Reactivate entry to use the same settings.

Reactivating Entry
In ②, Wakeup TV On ▶ ●

Deleting Wakeup TV

- One Entry
- In Wakeup TV list, select entry ▶ ☑
- Reset Alarm ▶ ●
- Yes → ●
- All Entries
- In Wakeup TV list, select entry → ☑ → Clear All → ●

Using Calculator


● → Tools → ● → In PIM/ Lifestyle menu, Calculator




Calculator Window

- Use Keypad to enter digits

 → Calculate
 - Clear Memory before starting new Memory calculations.

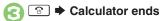

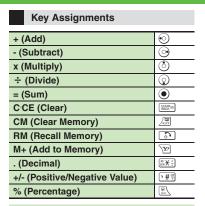

Memory Calculation

 Numbers saved in Memory remain until handset power is turned off.

Incoming Calls

 Calculations are not affected. End the call to return to Calculator.

Using % Function

Use to find definite percentage of a known value

Example: Calculate 30% of 800,000

Enter 800,000 **⇒** x **⇒** 30 **⇒** %

• 240,000 appears.





Adding Expenses

Entering Expenses









Select Category

◆ ●

Saved

Saving under Custom Category
In ⓒ, *Other* ▶ ● Enter name ▶ ●

Checking Entries



Totals
 ●
 ●



Expenses Memo List

Deleting Entries

■ One Entry

In Expenses Memo list, select entry ▶ ⊠

Delete Item → ● Yes → ●

All Entries





Osaifu-Keitai® (Japanese)

Osaifu-Keitai® describes IC Card-equipped handsets that support e-money or credit functions/services. Osaifu-Keitai® encompasses a range of IC Card-based services on FeliCa-compatible SoftBank handsets. 930SH supports Osaifu-Keitai[®]. To use e-money, e-ticketing and reward points, etc., hold handset over a compatible reader/writer at shops, restaurants, and other retail outlets, etc.

Basics

Before using Osaifu-Keitai®, activate Lifestyle-Appli, complete registration, customize settings and charge accounts.

Starting Lifestyle-Appli

● *Tools* **→ (a)** In PIM/Lifestyle menu. Osaifu-Keitai 🕈 💿 🖈 Lifestyle-Appli → ● Select application •


Lifestyle-Appli Precautions

- Contact Osaifu-Keitai[®] service providers for Lifestyle-Appli registration and usage details.
- Keep service passwords/customer service contact information, etc. in a separate place.

Using Osaifu-Keitai®

Follow these steps to conduct a transaction: Example: Making an electronic payment

- Complete transactions without activating a Lifestyle-Appli. Make sure battery is adequately charged.
- Transactions are possible even when handset power is off or during calls or Internet transmissions
- writer > Confirm scan results

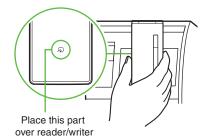

Important Osaifu-Keitai® Usage Note

SoftBank is not liable for damages resulting from accidental loss/alteration of IC Card data/settings.

When Placed Over Sensor

- If recognition is slow, move handset around slightly.
- Handset may respond automatically for some services.

Advanced



🖢 🌑 Enabling to view e-money balances 🌑 Checking e-money balance on External Display 🜑 Moving applications up/down Balance Info list 🜑 Removing applications from Balance Info list (P.9-35)

• Align handset parallel to reader/writer.


Locking IC Card

IC Card Lock

Use this function to restrict access to/prevent unauthorized use of Osaifu-Keitai® on handset.






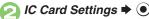



IC Card Settings Menu

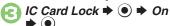



Canceling IC Card Lock
In ⊚, IC Card Lock ▶ ● ▶ Off ▶ ●

Enter Handset Code ▶ ●

Remote Lock

Disable Osaifu-Keitai[®] remotely by mail or phone.

Lock	Send mail to activate Remote Lock
Call Remote Lock	Call from a specified phone to activate Remote Lock

Mail Remote Lock

Preparation on Handset







Mail Remote Lock → ●



Mail Remote Lock Menu



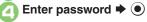

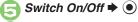



Canceling Mail Remote Lock In ⑤, *Off* ♦ ⑥ ♦ ☑

■ Activating Remote Lock via Mail
If handset cannot receive mail IC Card
Lock is not set.



- Leave other fields blank.
- After handset receives message, IC Card Lock is set and notice is sent as a reply.





- Call Remote Lock
- Preparation on Handset
- In IC Card Settings menu,

 Remote Lock → ★ Enter

 Handset Code ◆ ●



Call Remote Lock → ●



Call Remote Lock Menu

Phone No. to Lck 1 or Phone No. to Lck 2 ▶ ●



- Phone Book

 Select entry

 Select phone number

 Output

 Description:
 - Select *Phone Number* to enter directly.
- Switch On/Off → ●
- 🕞 On **→** 💿 **→** 🖅

Enabling Activation via Public Phone
In ⊕, Set Public Phone → ● → On
→ ● → From ⊕

Canceling Call Remote Lock In ⑤, Off ▶ ⑥ ▶ ☑

- Activating Remote Lock via Phone
 If handset cannot receive calls IC Card
 Lock is not set
- Using one of the specified phones, call handset

 Send Caller ID.
- Handset receives call ⇒
 End the call
- The call is recorded as a Missed Call.
- Within three minutes, repeat 0 2 twice



- After the third Missed Call, IC Card Lock is set; a message announces Remote Lock activation. Confirm the message and end the call.
- If Series is Interrupted by Another Call
- Missed Call count is reset. Start over from the beginning.



Faking Incoming Calls

Handset rings to emulate an incoming call.

- Pretense Call ringtone is fixed.
- Ringer may be muted by handset settings.
 To override Silent setting, see P.9-36.

Setting Pretense Call





Pretense Call Menu







- Name: → Enter name
 → ●
- Fhone Number:

 Enter phone number

 √y

 ✓y
- PIM/Lifestyle menu returns

When Name and Phone Number are Unset

● Handset rings with Caller ID "Withheld."

Canceling Pretense Call

[Pretense Call Menu] Switch On/Off

• ● ◆ Off ◆ ● ◆ 图

Using Pretense Call

- በ 🔼 (Long)
 - Available regardless of handset position.
 - Handset rings and incoming Voice Call window opens.
 - Ringtone stops after a period of time.
- In incoming Voice Call window, press
 - Voice Call window opens. (Softkeys are dummies.)



Setting Wait Time

[Pretense Call Menu] Calling Timing

→ • Select time → • ▼

When Calling Timing is Not Immediacy

- Press or during wait time to cancel Pretense Call activation.
- Pretense Call activation is canceled by incoming calls, Alarms, etc. during wait time.

 \bullet \rightarrow Tools \rightarrow \bullet

→ (**•**)



Stopwatch Window





Press to resume.



 Records are deleted when Stopwatch ends.

Recording Lap Times While Stopwatch is running, Saving Records to Notepad After €,

Save to Notepad

Output Resetting Records After ③, ☑ → Reset → ⑥ → From ② **Incoming Calls** Stopwatch is not affected by incoming calls. End the call to return.

Using Countdown Timer

① ● → Tools → ② → ②
Timer/Clock → Countdown
Timer → ③



Timer Entry Window

Enter minutes → Enter seconds → ●




Countdown Timer Window

Press to change time.

- **③ ●** Countdown starts
 - Press

 to stop/resume countdown.
- Set time elapses → Tone sounds

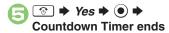

Resetting Timer
Stop countdown and
Incoming Calls

 Countdown is not affected by incoming calls. End the call to return.

When Set Time Elapses

Tone sounds.



When Timer Time Elapsed during a Call

• Tone sounds after the call.



Opening World Clock

① ◆ Tools ◆ ② ◆ ②
Timer/Clock ◆ World Clock
◆ ③



- Select area → ●

Advancing One Hour (Daylight Saving)

[Set Time Zone Window]

To cancel, press

Adding Custom Time Zone

Opening World Clock in Standby

- Settings → In Phone Settings menu, Display → ●
- Standby Display ▶ ●



- Clock/Calendar → ●





Set Time Zone Window

Using Hour Minder

Setting Hour Minder

Follow these steps to activate the hourly time signal at selected hours:





Hour Minder Menu











Adjusting Hour Minder Volume
In ②, Advanced → ● → Volume: →
● → Adjust level → ● → ☑ →
From ⑤

Changing Hour Minder Duration
In ②, Advanced → ● → Duration:
→ ● → Select time → ● → ☑ →
From □

■ For custom Duration, select Other.

Selecting/Canceling All Hours
In ②, ☑ → Check All or Uncheck All

At Hour Minder Time

Hour Minder activates; sounds/vibrates by related settings.



To stop tone instantly, press a key.


When Another Function is Active

Hour Minder does not activate.
 Incoming Calls

Active Hour Minder stops for incoming calls.

Canceling Hour Minder



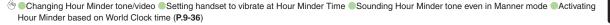

Opening PC Documents

Supported File Formats:

PDF (.pdf)
Microsoft® Excel® (.xls)
Microsoft® Word (.doc)
Microsoft® PowerPoint® (.ppt)

- Some files may not appear correctly.
- Download files via the Internet.
- When transferring files from PCs, save to corresponding Memory Card folder (P.14-23).
- → Tools → → ⊙ Doc./Rec. → Document Viewer → ●



Select file > •

Key Assignments		
•	View whole page	
:	Scroll	
æ 1 ∞	View upper left	
⊅ 2 ŝ	Toggle full screen view on/off	
₹3 E	View upper right	
£4 f / ►	Zoom out	
Long) (Long)	Continuous zoom out	
₩5 K	View center	
□ 6 8 /	Zoom in	
Long) (Long)	Continuous zoom in	
*7 B	View lower left	
₹8€	Jump to page	
6 9 ¥	View lower right	
20	Open Help	
s # ©	Next page	
記号 大 二	Previous page	
Û	Fit width	
Y	Rotate 90°	

Zooming In/Out with Loupe (Magnifier)
In open file, ♣ (Long) ♣ Specify
portion ♣ ✔ ♣ Zoom Out or Zoom
In ♣ ●

Saving Text

New Notepad Entry





∠Add New Entry> → ●



- Enter text ▶ ●
- Select Category → → Saved

Sorting Entries Temporarily

[Notepad List] 🖭

■ Press

repeatedly to toggle sort options (Modified, Created, Category and Accessed).


Opening Notepad



🔁 🕪 🖈 List returns

Deleting Entries

One Entry

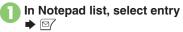

- Delete Item → Yes

 → ●
- All Entries
- In Notepad list, select entry


 → ☑ → Setting/Manage

 → ●
- Delete All → → Enter Handset Code → ● → Yes → ●

Recording/Playing Voice

Recording

- If battery runs low while recording, Voice Recorder shuts off.
- Record conversations during calls via Record Caller Voice (P.3-15).

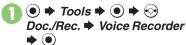



Recording Window







- For Extended Voice, recording is saved automatically.
- Save → ●

Play Before Saving
In ②, Playback ◆ ● → Playback
starts → □□□□ → Playback stops
Starting Over
In ②, □□□□ → From ②

Playback

In recording window,

Ring Songs Tones

●



- Select file >
 - Use 🐧 to adjust volume.
 - Press to pause/resume. Press
 ito stop playback.



Scanning Barcodes

Scan UPC/JAN (1D barcodes) or QR Codes (2D barcodes).


- Membership file or password may be required when scanning barcodes.
- Some barcodes may not be scanned.







Scan Barcode **→** •

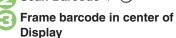



Scan Window

- Use Focus Adjustment Bar as a guide (better focus in darker blue).
- If focus is poor, press \(\frac{\frac{1}{2}}{2} \) to switch to Shutter mode.



- Scan starts
 - If recognition takes time, slowly adjust the distance between handset and barcode.
 - Press \(\mathbb{Y} \) to stop scan.

Tone sounds ◆ Scan results appear



Key Assignments in Scan Window


- : Toggle focus mode
- : Focus Lock
- *#9: Mobile Light on/off
- : Adjust brightness
- ⊕0 : Open Help

Split Data


- After scanning, confirmation appears. Follow onscreen prompt(s).
- Scan results do not appear until all split data is scanned.

Starting Over



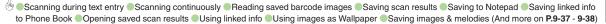



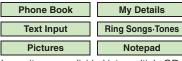

Large items are divided into multiple QR Codes.

Procedure

Follow these steps to create QR codes from Data Folder files:

① ◆ Tools ◆ ○ ◆ ⊙
Doc./Rec. ◆ Barcode/Scan

▶ (



Create QR Code → ●

👔 Data Folder 🕈 💿



- Select folder

 Select file or entry

 Select
 - QR Code is created.
- **6**0
 - QR Code is saved to Data Folder (Pictures).

From Phone Book Entries

In ②, ② Phone Book → ③ → ③
Select entry → ③ → ⑤

From My Details

In ⓒ, My Details ❖ ⑥ ❖ Select item ❖ ⑥ ❖ ⑤

From Entered Text

In \odot , Text Input $\Rightarrow \odot \Rightarrow$ Enter text $\Rightarrow \odot \Rightarrow \Box$

Switching Storage Media

In \bigcirc , \boxtimes \Rightarrow Save to \Rightarrow \bigcirc \Rightarrow Phone or Memory Card \Rightarrow \bigcirc \Rightarrow \bigcirc

Attaching to S! Mail

In \bigcirc , \boxtimes \rightarrow Send $As \rightarrow \bigcirc$ \rightarrow Complete message \rightarrow \boxtimes

Incoming Calls

 QR Code creation is not affected by incoming calls. End the call to return.

Scanning Business Cards

Scan business cards and save names, addresses, etc. to Phone Book.

- English business cards may not be scanned correctly.
- Some cards may not be scanned.













Scan Window

- 4 Press
 - Press 😉 to stop scan.

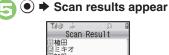

- - New Phone Book entry is saved.

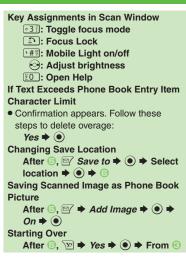





Scanning Text

Scan text (URLs, mail addresses, phone numbers or alphanumerics).

Some text cannot be scanned.





Scan Text **→** (•)

Frame text in center of Display



Scan Window

- Adjust to frame text in [].
- Use Focus Adjustment Bar as a guide (better focus in darker blue).
- - Press 🖭 to stop scan.





Starting Over



Key Assignments in Scan Window ा Togale focus mode Focus Lock 5#9: Mobile Light on/off : Adjust brightness **№0**: Open Help For White Text on Black Background In ②. ☑ → Reversed Text → ③ → **Correcting Text Type** After ⑤, ☑ ▶ Change Mode ▶ ⑥ Select type ⇒ ● ⇒ ⑤ **Editing Scanned Text** After ⑤. ☞ ♦ Select/Edit ♦ ⑥ ♦ Select character

◆ Select alternative from list or edit directly ⇒ ③

In \bigcirc , \bigcirc \Rightarrow Yes \Rightarrow \bigcirc \Rightarrow From \bigcirc






Receiving Content Updates (Japanese)

View content updates or breaking news. Transmission fees apply.

Registering S! Quick News Items






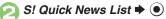




S! Quick News List

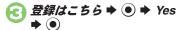

- Handset connects to the Internet.
- Select item →
 - Follow onscreen instructions.

Opening Information

- In S! Quick News List, select item ▶
 - Title list appears.

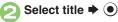



• Press or to return to title list, or to open next title.

Updating Items Manually [S! Quick News List] Select item → ☑ → 更新 → ⑥ → 一件 or 全件 → ⑥		
Indicators		
© *	Unread Special news	
@	Read Special news	
₽	Unread News Flash	
₹ 8	Read News Flash	
	Unread General news	

Read General news

Auto update disabled

X





S! Information Channel & Weather Indicator (Japanese)

Transmission fees apply.


Service Registration & Content Subscription





S! Information Channel Menu



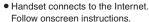

New Received Information

Information window opens for new S! Information Channel info delivery.

While Information window appears, *S! Info. Channel* **▶** ●

- S! Information Channel page opens. Follow onscreen instructions.
- S! Information Channel page handling is similar to that of Yahoo! Keitai.



Opening Unread Latest Issue
[S! Information Channel Menu]
What's New

Opening Back Issues

Using Weather Indicator

After S! Information Channel registration, local area weather indicator appears in Standby.

-)0	•	Clear skies (day)	8	Snow
-		Clear skies (night)	8	Thunder showers
a	Ø	Cloudy		Then
36	7	Rain	/	Partly/chance of

Indicators other than the above also appear for more information.

Manual Update

[S! Information Channel Menu]


Weather Indicator → ● → Manual


Update → ● → Yes → ●



Reading e-Books (Japanese)

Downloading e-Books

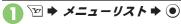

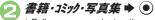

- Follow onscreen instructions.
- Downloaded e-Books are saved to Data Folder (Books).

Note

 Alternatively, visit SH-web to download e-Books.

e-Book Viewer

Read XMDF books and dictionary files. Some files may not be supported.





Entertainment Menu

e-Book Viewer

●

 e-Book Viewer starts. Refer to the e-Book Viewer help menu for operational instructions.

BookSurfing®

Download Contents Keys and read CCF files. Some files may not be supported.

- In Entertainment menu,

 BookSurfing
 - BookSurfing® S! Application starts.
 Refer to the BookSurfing® help menu for operational instructions.

Moving CCF Files via Memory Card

 When purchasing a new handset, move CCF files and retrieve Contents Keys to open the files. Some files may need to be re-downloaded.



Calendar	
■ View Settings	
Changing default view	● Tools ● In PIM/Lifestyle menu, Calendar ● ■ ✓ Calendar Settings ■ Default View ● ■ Select type ■
	Start Here ● → Tools → ● In PIM/Lifestyle menu, Calendar → ● → See below
Changing date color	By Days of the Week
	By Date Select date ⇒ ≥43 ⇒ Select color ⇒ ●
	Resetting "By Date" Colors
Changing task view option	● * Tools * ● * In PIM/Lifestyle menu, Calendar * ● * * ○ * Calendar Settings * • * Tasks View * ● * Select option * ●
Adding stamps (Month View)	● * Tools * ● * In PIM/Lifestyle menu, Calendar * ● * Select date * 21 * Select stamp * ●
Hiding entries	● Tools ● In PIM/Lifestyle menu, Calendar ● Select date ● Select entry ● ● Secret: ● On ● ●

Removing/ restoring preset holidays	● * Tools * ● * In PIM/Lifestyle menu, Calendar * ● * ☑ * Calendar Settings * ● Set Holiday * ● * ⊙ Set My Holidays or Public Holidays * Select holiday * ● (□/☑)
Saving/Editing I	Entries
	Start Here
Setting Category/ Location	Category Category: Select Category Figure 1:
	Location Location:
Saving repetitive schedules	● Tools ● In PIM/Lifestyle menu, Calendar ● Select date ● Select entry ● ● ● Repeat: ● Select frequency ● Enter repeat time ● ● Repeat time is not available for Every Year.
	Start Here
Saving S! Friend's Status information	Availability Answer Status: ● ● Edit ● ● ▶ ● ▶ • Set Category first.
	Comment: Comment: Enter text Enter tex



Saving additional holidays	Start Here®
Editing schedules	Tools • In PIM/Lifestyle menu, Calendar • Select date • Select entry • Select item • Edit in the same manner as saving schedules • •
Changing Alarm tone/video & duration	Start Here
	Alarm Tone/Video Assign Tone/Video: Select folder Select tone/file Select start point if required.
	Duration Duration: Select time Duration: Duration: Duration: Durat
Changing Alarm volume	 Tools In PIM/Lifestyle menu, Calendar Image: Self-William Selfing Alarm Volume: Adjust level Image: Self-William Self-Wil
Changing Vibration option	 Tools In PIM/Lifestyle menu, Calendar Image: Select option Vibration: Image: Select option Image: Select option

Sounding Alarm tone even in Manner mode	● * Tools * ● * In PIM/Lifestyle menu, Calendar * ● * ■ * Alarm Settings * ● For Manner Mode: * ● * Ring * ● Yes * ●
■ Managing Entri	es
Searching entries	Start Here ● → Tools → ● In PIM/Lifestyle menu, Calendar → ● → See below
	By Subject □63 → Enter text → ●
	By Category
Checking memory status	● * Tools * ● * In PIM/Lifestyle menu, Calendar * ● * Select date * * Memory Status * ●
Deleting all schedules	● Tools ● In PIM/Lifestyle menu, Calendar ● ● ☑ Delete ● ● All Appointments ● ● Enter Handset Code ● ● Yes ● ●
Deleting entries by specifying week (Week View)	Start Here ● → Tools → ● In PIM/Lifestyle menu, Calendar → ● → See below
	Within One Week Select week → ☑ → Delete → ● → All This Week → ● → Yes → ●
	Up to the End of Previous Week Select week → ② → Delete → ● → Up to Last Week → ● → Yes → ●

Deleting entries by specifying month (Month/3Month View)	Start Here ● → Tools → ● In PIM/Lifestyle menu, Calendar → ● → See below
	Within One Month Select month → ☑ → Delete → ● → All This Month → ● → Yes → ●
	Up to the End of Previous Month Select month → ☑ → Delete → ● → Up to Last Month → ● → Yes → ●
Deleting entries in two/six months (2Month/6Month View)	● Tools ● In PIM/Lifestyle menu, Calendar ● ■ Delete ● All This 2Months (or All This 6Months) ● Yes ● ●

Tasks

Task List

Tasks ⇒ ● ⇒ Select task ⇒ 🗹 ⇒ Edit ⇒ ●
⇒ Secret: ⇒ ● → On ⇒ ● ➤

■ Saving/Editing Entries

Editing tasks	● → Tools → ● In PIM/Lifestyle menu, Tasks → ● → Select task → ☑ → Edit → ● Select item → ● → Edit in the same manner as saving tasks → ● → ☑
Setting priority	● * Tools * ● In PIM/Lifestyle menu, Tasks * ● * Select task * ☑ * Edit * ● Priority: * ● * Select option * ● * ☑

	Start Here
Changing Alarm tone/video & duration	Alarm Tone/Video Assign Tone/Video: Select folder Select tone/file Select start point if required.
	Duration Duration: Select time Duration: Durat
Changing Alarm volume	● * Tools * ● In PIM/Lifestyle menu, Tasks * ● * ☑ * Alarm Settings * ● * Alarm Volume: * ● * Adjust level * ●
Changing Vibration option	● * Tools * ● * In PIM/Lifestyle menu, Tasks * ● * ☑ * Alarm Settings * ● * Vibration: * ● * Select option * ●
Sounding Alarm tone even in Manner mode	● * Tools * ● * In PIM/Lifestyle menu, Tasks * ● * ☑ * Alarm Settings * ● * For Manner Mode: * ● * Ring * ● * Yes • ●

■ Managing Entries

Managing Entries	
	Start Here
Searching tasks	By Subject By Subject
	By Due Date By Due Date ● ● Enter date ●
Sorting entries by priority	● → Tools → ● → In PIM/Lifestyle menu, Tasks → ● → ☑ → Sort → ● → Priority → ●
Checking memory status	● → Tools → ● → In PIM/Lifestyle menu, Tasks → ● → ☑ → Memory Status → ●
Deleting all tasks	 Tools In PIM/Lifestyle menu, Tasks Delete All Tasks Enter Handset Code Yes

Alarms	
Editing entries	● * Tools * ● * In PIM/Lifestyle menu, Alarms * ● * Select entry * ● * Select item * ● * Edit in the same manner as saving entries * ● * ½
Saving entry name	 Tools → ● In PIM/Lifestyle menu, Alarms → ● → Select entry → ● → Subject: → ● Enter name → ● → ☑
	Start Here
Changing Alarm tone/video	Using Preset Tone or Data Folder File Select folder → ● ⇒ Select tone/file → ● ⇒ ☑ • Select start point if required.
	Using Customized Screen Tone/Video Customized Screen
Setting handset to vibrate at Alarm Time	● * Tools * ● * In PIM/Lifestyle menu, Alarms * ● * Select entry * ● * Vibration: * ● * On or Link to Sound * ● *** *** *** *** *** *** **
	 Select Link to Sound to allow compatible SMAF files to control vibration.
Sounding Alarm tone even in Manner mode	● * Tools * ● In PIM/Lifestyle menu, Alarms * ● * Settings * ● * For Manner Mode * ● * Ring * ● * Yes * ●
Activating Alarm based on World Clock time	● * Tools * ● In PIM/Lifestyle menu, Alarms * ● * Settings * ● * Link to World Clk * ● * On * ●



Wakeup TV

Editing entries	● * Tools * ● In PIM/Lifestyle menu, Wakeup TV * ● Select entry * ● * Select item * ● Edit in the same manner as saving entries * ● * Yell
	Start Here
Changing Alarm tone/video	Using Preset Tone or Data Folder File Select folder → ● ⇒ Select tone/file → ▼ • Select start point if required.
	Using Customized Screen Tone/Video Customized Screen → ● → ▼
Sounding Alarm tone even in Manner mode	● * Tools * ● * In PIM/Lifestyle menu, Wakeup TV * ● * For Manner Mode * ● * Ring * ● * Yes * ●

Calculator

Copying calculation results	While result appears,
Changing exchange rate for currency conversion	● Tools ● In PIM/Lifestyle menu, Calculator ● ■ ☑ Money Converter ● Exchange Rate ● Domestic or Foreign ● Enter rate ●
Converting currencies	● * Tools * ● In PIM/Lifestyle menu, Calculator * ● * Enter amount of money * Money Converter * ● * To Domestic or To Foreign * ● Set Exchange Rate first.

Expenses Memo

Changing Category of saved entry	● * Tools * ● In PIM/Lifestyle menu, Expenses Memo * ● * Totals * ● * Select entry * ● * Select Category * ●
Changing amount	● * Tools * ● In PIM/Lifestyle menu, Expenses Memo * ● * Totals * ● * Select entry * ○ * Change Amount * ● * Edit * ●
Renaming Categories	● * Tools * ● In PIM/Lifestyle menu, Expenses Memo * ● * Edit Category * ● * Select Category * ● * Enter name * ●

Osaifu-Keitai [®]	
Enabling to view e-money balances	● * Tools * ● In PIM/Lifestyle menu, Osaifu-Keitai * ● * IC Card Settings * ● * Balance Info * ● * Enter Handset Code * ● * Empty * ● * S! Appli or Lifestyle-Appli • ● * Select application * ● • For use with compatible Lifestyle-Applications. • Start Lifestyle-Appli once before adding it to Balance Info list.
Checking e-money balance on External Display	With handset closed,
Moving applications up/down Balance Info list	 Tools In PIM/Lifestyle menu, Osaifu-Keitai IC Card Settings Balance Info Enter Handset Code Select application Move Select location
Removing applications from Balance Info list	● Tools ● In PIM/Lifestyle menu, Osaifu-Keitai ● IC Card Settings ● Balance Info ● Enter Handset Code ● Select application ● If Delete ● If Delete ■
Customizing handset response to reader/writer commands	 Tools In PIM/Lifestyle menu, Osaifu-Keitai IC Card Settings Interface Settings Enter Handset Code Select item Off
Opening IC Card properties	Tools In PIM/Lifestyle menu, Osaifu-Keitai IC Card Settings IC Card Status IC Card Status

Changing IC Card Lock notice recipient	Start Here
	Changing Recipient To Set Recipient → ● → Set Recipient → ● → Select method → ● → Select/enter number/address → ● ➤
	Disabling Notice Off → ● ● ● ● ► ► ► ► ►
Changing required Missed Call count for Call Remote Lock	● Tools ● In PIM/Lifestyle menu, Osaifu-Keitai ● IC Card Settings ● PREMOTE Lock ● Enter Handset Code ● Call Remote Lock ● Count for Lock ● Enter Missed Call count ● PREMOTE Lock ● PREM
Restoring default Osaifu-Keitai [®] settings	● Tools ● ● In PIM/Lifestyle menu, Osaifu-Keitai ● IC Card Settings ● Set to Default ● Enter Handset Code ● Yes ●
Changing required Missed Call count for Call Remote Lock Restoring default Osaifu-Keitai®	To Set Recipient Set Recipient Select method Select/enter number/address Select/enter Notation Select/enter number/address Select/enter Notation Select/enter number/address Select/enter number/addre

Starting via Pretense Call menu	● Tools ● In PIM/Lifestyle menu, Pretense Call ● Run Pretense Call ● Yes ● • Pretense Call starts immediately regardless of Calling Timing setting. • Settings remain even after starting Pretense Call during setup.
Clearing caller information	● * Tools * ● * In PIM/Lifestyle menu, Pretense Call * ● * Set Caller * ● * ♥ Yes * ● * ₩ * ₩
Overriding Silent volume setting	● * Tools * ● * In PIM/Lifestyle menu, Pretense Call * ● * Set Silent * ● * Ring * ● * Yes * ● * ™

Hour Minder	
	Start Here
Changing Hour Minder tone/video	Using Preset Tone or Data Folder File Select folder → ● Select tone/file → ● →
	Select start point if required.
	Using Customized Screen Tone/Video Customized Screen
Setting handset to vibrate at Hour Minder Time	● Tools ● ● Timer/Clock Hour Minder ● Advanced ● Vibration: ● On or Link to Sound ● E E • Select Link to Sound to allow compatible SMAF files to control vibration.

Sounding Hour Minder tone even in Manner mode	● Tools • • • Timer/Clock • Hour Minder • • Advanced • • For Manner Mode: • • Ring • • Yes • • □
Activating Hour	● Tools • ● • ⊙ Timer/Clock • Hour
Minder based on	Minder • ● Advanced • Link to
World Clock time	World Clk: • ● On • ● ▼ ▶

Notepad	
	Start Here
Editing Notepad	Editing Text Edit Text ● ■ Edit • ●
	Changing Category Change Category Select Category
Searching text within all entries	● * Tools * • • • Doc./Rec. * Notepad • • Select entry * □ * Search * • * Enter text * •
Inserting Notepad text into message text	● Tools ● ⊖ Doc./Rec. Notepad ● Select entry
Sending entries via S! Mail	● Tools ● ● ⊖ Doc./Rec. Notepad ● Select entry □ Send ● ♥ Via Message ● Complete message ♥ ☑
Creating text files	Tools Doc./Rec. Notepad Select entry Setting/Manage Create Text File Saya hera Saya hera Tools Setting/Manage Enter name

Importing text files	● * Tools * ● * ◆ Doc./Rec. * Notepad * ● * Select entry * * * Setting/Manage * ● * Import Text File * ● * Select file * ●
Checking memory status	● ▼ Tools ▼ ● ▼ ⊖ Doc./Rec. ▼ Notepad ▼ ● ➤ Select entry ▼ ☑ ▼ Setting/Manage ▼ ● ➤ Memory Status ▼ ●
Opening properties	● → Tools → ● → ❖ Doc./Rec. → Notepad → ● → Select entry → ☑ → Details → ●

Voice Recorder

Saving longer recordings	Tools
Sending Voice files via S! Mail	● * Tools * • • Doc./Rec. * Voice Recorder * • • Recording starts * • Recording ends * Save and Send * • Complete message * ☑ • Available in For Message mode.
Switching storage media	● ➤ Tools ➤ ● ➤ Doc./Rec. ➤ Voice Recorder ➤ ● ➤ ☑ ➤ Save Recording to ➤ ● Select option ➤ ● • Available in For Message mode. • Set to Ask Each Time to select media after every recording.

Scan Barcode	
Scanning during text entry	Start Here In a text entry window,
	Pasting All Scan Results
	Pasting a Part of Scan Results ☑ → Select first character → ● → Highlight text range → ●
Scanning continuously	Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● ☑ Continuous Scan ● On ● Frame barcode in center of Display ● Choose Yes to continue scanning or No and press ● to view scan results.
Reading saved barcode images	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Open Barcode * ● * Select file * ●
Saving scan results	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * ☑ * Save * ●
Saving to Notepad	● Tools ● ● Doc./Rec. ■ Barcode/ Scan ■ ● Scan Barcode ● ● Frame barcode in center of Display ● ● ☑ ◆ Notepad ● ●



Saving linked info to Phone Book	● Tools ● ODC./Rec. ■ Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select number or mail address ■ Save to Ph.Book ● As New Entry ● ● Complete other fields ▶ ☑ ● To add to an existing entry, select As New Detail. ● When MEMORY: appears in scan results, press ● to enter the items underlined with a dotted line automatically in Phone Book entry window.
Opening saved scan results	● Tools ● ● ODC./Rec. ■ Barcode/ Scan ● Scanned Results ● Select file ● ● • Select a file and press ☑ to rename files, open properties or delete files. • Some files may not open.
Using linked info	Start Here
	Dialing Numbers Select phone number
	Sending Messages Select mail address
	Accessing Internet Sites Select URL

Using images as Wallpaper	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select image ● Set as Wallpaper ● ● • If Wallpaper Display options appear, follow onscreen prompts.
Saving images & melodies	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select file ■ To Data Folder ●
Opening or playing files	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * Select file * ●
Using images for System Graphics	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select image ● As System ● Select item ● Specify display area ● • Some images may be usable without specifying display area.

Pasting to message text	Start Here
	Selected Text
Copying text	Start Here ● → Tools → ● → O Doc./Rec. → Barcode/Scan → ● → Scan Barcode → ● → Frame barcode in center of Display → ● See below
	Text ☑ → Copy → ● Select first character → ● Highlight text range → ●
	Number, Address or URL Select number, mail address or URL → ☑ → Copy Telephone, Copy Address or Copy URL → ●

Scan Card	
Saving to Notepad	● ★ Tools ★ ● ★ ⊙ Doc./Rec. ★ Barcode/ Scan ★ ● ★ Scan Card ★ ● ★ Frame card in center of Display ★ ● ★ ☞ ★ Notepad ★ ●
Pasting to message text	Start Here
	All Text
	Selected Text Select first character → → Highlight text range → → S! Mail or SMS → → Complete message → S! Mail Composition window opens automatically depending on character count.
Copying text	Start Here $\textcircled{o} \Rightarrow Tools \Rightarrow \textcircled{o} \Rightarrow \textcircled{o} Doc./Rec. \Rightarrow$ $Barcode/Scan \Rightarrow \textcircled{o} \Rightarrow Scan Card \Rightarrow \textcircled{o} \Rightarrow$ Frame card in center of Display $\Rightarrow \textcircled{o} \Rightarrow \textcircled{o} \Rightarrow$ See below
	Text



Scan Text	
Scanning during text entry	In a text entry window,
Scanning more text	● Tools ● ● Doc./Rec. ■ Barcode/ Scan ● Scan Text ● ■ Frame text in center of Display ● ■ Select line ● ● ■ Continue Part or Scan More ■ ■ Select Continue Part to enter additional text or Scan More to enter text after a line break.
Saving scan results	● Tools ● ODOC/Rec. Barcode/ Scan ● Scan Text ● Frame text in center of Display ● Select line ● ● ■ Save ●
Saving linked info to Phone Book	● Tools ● ● Doc./Rec. Barcode/ Scan ● Scan Text ● Frame text in center of Display ● Select line ● ● Select number or mail address ● Save to Ph.Book ● As New Entry ● Complete other fields ► ☑ • To add to an existing entry, select As New Detail.
Saving to Notepad	● Tools ● ● Doc./Rec. ■ Barcode/ Scan ● Scan Text ● ■ Frame text in center of Display ● ■ Select line ■ ■ ■ Notepad ■

Opening saved scan results	● Tools ● ODC./Rec. Barcode/ Scan ● Scanned Results ● Select file ● • Select a file and press for to rename files, open properties or delete files. • Some files may not open.
Using linked info	Start Here ● → Tools → ● → ⊙ Doc./Rec. → Barcode/Scan → ● → Scan Text → ● → Frame text in center of Display → ● → Select line → ● → ● → See below Dialing Numbers
	Select phone number Sending Messages Select mail address Complete message ✓
	Accessing Internet Sites Select URL
Pasting to message text	Start Here ⓐ \Rightarrow Tools \Rightarrow ⓐ \Rightarrow ⊙ Doc./Rec. \Rightarrow Barcode/Scan \Rightarrow ⓐ \Rightarrow Scan Text \Rightarrow ⓐ \Rightarrow Frame text in center of Display \Rightarrow ⓐ \Rightarrow Select line \Rightarrow ⓐ \Rightarrow ⓐ \Rightarrow Send Message \Rightarrow ⓐ \Rightarrow See below
	All Text
	Selected Text



Copying text	Start Here ● → Tools → ● → ⊙ Doc./Rec. → Barcode/Scan → ● → Scan Text → ● → Frame text in center of Display → ● → Select line → ● → ● → See below
	Text ☑ → Copy → ● → Select first character → ● → Highlight text range → ●
	Number, Address or URL Select number, mail address or URL → ☑ → Copy Telephone, Copy Address or Copy URL → ●

Receiving S! Loop item updates	Start Here ● → Entertainment → ● → S! Quick News → ● → S! Loop List → ● → See below
	Registering with S! Loop Items S!ホープ・にアウキス ◆ ⑥ ◆ Yes ◆ ⑥ • Handset connects to the Internet. Refer to the S! Loop help menu for operational instructions.
	Opening Information Select item → ● ➤ Select title → ●
Updating list automatically	Start Here ● → Entertainment → ● → S! Quick News → ● → Settings → ● → Automatic Update → ● → See below
	S! Quick News List S! Quick News ● ● Select item ● ● ● Select interval or choose On ● When a confirmation appears, press ●. When Special is set to On, items are updated every four hours. When General is set to On, items are updated once a day. To cancel automatic update, choose Off and press ● Updating items may incur high charges. Only available in Japan.
	S! Loop List S! Loop → ● → ● → On → ● → ● Items are updated about four times a day. Only available in Japan.

Checking update schedule	Description Descripti
Changing background image	Entertainment S! Quick News Settings Change Skin Select pattern
	Start Here
Deleting S! Quick News items	One Entry —件 ● ● ≯ Yes ● ●
	All Entries 全件 ◆ ● → Enter Handset Code → ● → Yes → ●
Updating S! Loop items manually	Start Here
	One Entry Select item ⇒ 室 ⇒ 更新 → ● → 一件 ⇒ ●
	All Entries ② ◆ 更新 ◆ ● ◆ 全件 ◆ ●
Accessing source sites	● Entertainment ● S! Quick News ● Select list ● Select item ● Select title ● Select title ● ● Select title ● ● Select title ● ● Select title ● ● Yes ●
Disabling image download	● ★ Entertainment ★ ● ★ S! Quick News ★ ● ★ Settings ★ ● ★ Show Image ★ ● ★ Off ★ ●

	Start Here
Deleting S! Loop	One Entry
items	-# → • Yes → •
	All Entries 全件 → ● → Enter Handset Code → ● → Yes → ●
	Description Descripti
Resetting S! Quick	Settings Delete S! Quick News
News List and	Lists ⇒ ● ⇒ Enter Handset Code ⇒ ● → Yes
S! Loop List	→ ●
	Not available during automatic updates.

S! Information Channel

Hiding Information window for new received info	● ★ Entertainment ★ ● ★ S! Information Channel/Weather ★ ● ★ Notification ★ ● ★ Off ★ ●
Changing Display Size	On a page,
Changing scroll unit	On a page, → Settings → ● → Scroll Unit → ● → Select unit → ●
Copying text	On a page, → Copy Text → ● → Select first character → ● → Highlight text range → ●

Opening non-930SH e-Books (Library)	● Entertainment ● ● e-Book Viewer ● Select file ● ● Some files may not open.
	Start Here ● → Entertainment → ● → e-Book Viewer → ☑ → See below
	Adding Folders
	Switching Folders
Using Library	Renaming Folders/Files Select folder/file → ☑ → Change Name → ● ⇒ Enter name → ●
	Moving Files Select file → ☑ → Move → ● → Select folder → ● → Move here → ●
	Deleting Folders/Files Select folder/file → ☑ → Delete → ● → Yes → ●

Opening File Properties
Select file → ☑ → Details → ●


range 🗼 💿

e-Books


Copying text

Saving files to Data Folder	On a page, Save Items Select Save here Some files are saved automatically. Save Items Save here Some files are saved automatically.
Requesting re-delivery	● Entertainment → ● ⇒ S! Information Channel/Weather → ● ⇒ Get Latest Contents → ● Yes → ●
Opening page properties	On a page,
Checking weather forecast	Entertainment Symposium St. Information Channel/Weather Symposium Weather Indicator Weather Symposium Weather Symposium Sympo
Changing weather forecast page font size	On a page,
Hiding Weather Indicator in Standby	● Entertainment ● ● S! Information Channel/Weather ● ● Weather Indicator ● Settings ● ● Standby Setting ● ● ● Off ●
Canceling Weather Indicator automatic updates	● Entertainment ● ● S! Information Channel/Weather ● ● Weather Indicator ● ● Settings ● ● Icon Update ● ● Off ● ●
Hiding Information window for weather updates	● Entertainment ● ● S! Information Channel/Weather ● ● Weather Indicator ● Settings ● ● Weather Notif. ● ● Off ● ●


Osaifu-Keitai®

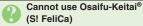

 Battery may be low. Charge battery or install a charged battery.

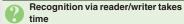


 Check logo area. Foreign articles can block/hamper recognition.

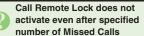

- Missed Call count is reset by calls from other numbers. If series is interrupted, start over from the beginning.
- When Call Forwarding is active, Missed Calls may not be recorded.

Wakeup TV

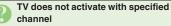

 If Wakeup TV Time arrives while TV is active, channel does not switch to the specified one.

Voice Recorder



Cannot record properly

 If incompatible microphone is connected, recording may fail.



Noise/skipping occurs

 Avoid shocks to handset while recording; may cause noise or skipping.



Recording takes time to start

 Recording window may take longer to open as more Voice files are saved on Memory Card.



Scanning Barcode/Card/Text



Cannot read barcodes properly

- · Scan may fail if barcode is dirty or unclear.
- Scan may fail if barcode is scanned under inadequate light.
- Scan may fail if multiple barcodes are captured at one time.



Cannot read barcodes during text entry

 Scanning is not available during calls or when mobile camera is active



Cannot read barcode images in **Data Folder automatically**

 When scan fails, follow onscreen instructions and select next barcode image manually.



Cannot scan business cards properly

- Scan fails if business card is printed in light-colored text on a dark background, handwritten or printed in casual/decorative fonts, decorated with a background pattern, or designed with both vertical and horizontal text.
- . Scan may fail if business card is printed in light-colored text on a light background, printed in italics or extremely small fonts, decorated with a logo or logo-like text, printed on a glossy paper or other material, or dirty/folded.



Cannot scan text properly

- Scanning over 35 characters at one time may yield poor results.
- Adjust to frame text in []. Letters at the ends may be distorted.

S! Quick News



Cannot receive content updates

- Update may fail out-of-range or in poor signal conditions.
- Automatic Update does not affect S! Quick News List News Flash or S! Loop List update items overnight.
- USIM Card replacement cancels Automatic Update.



S! Town & S! Loop	10-2
Using S! Town & S! Loop (Japanes	e)
	10-2
S! Friend's Status	10-3
Using S! Friend's Status	10-3
S! Circle Talk	10-6
Using S! Circle Talk	10-6

Near Chat	10-8
Using Near Chat (Japanese)	10-8
Blog Tool	10-9
Blogging	10-9
Additional Functions	10-10
Froubleshooting	10-12






Using S! Town & S! Loop (Japanese)

S! Town

Select an avatar to enter this 3D virtual town, where you can play games and meet other users.

- To use S! Town, agree to the terms of service then complete free user registration.
- Internet connection is required; may incur high charges.

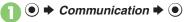





- S! Town (S! Application) starts.
- Refer to the S! Town help menu for operational instructions.
- When an upgrade notice appears, follow onscreen instructions to upgrade.


S! Town Library


Downloaded S! Town-compatible
 S! Applications are saved to S! Town
 Library. To start an application in S! Town
 Library, follow these steps:

◆ Communication ◆ ● ◆ S! Town
 ◆ Select application ◆ ●

S! Loop

S! Loop is an online communication service. Share your diary, join BBS, etc. Internet connection is required; may incur high charges.

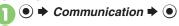

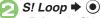

 Refer to the S! Loop help menu for operational instructions.



Using S! Friend's Status

- S! Friend's Status requires a separate contract and basic monthly fee.
- Set Connection status to Online beforehand.

Changing My Status

Follow these steps to change Status, Availability and Comment; new status is sent to the members.



If Connection status is Online, skip ahead to 2.






- Choose Yes to register members.
- Omit ② if a member is already registered.







My Status Window

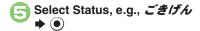



Status Template Window

- Select new Status ▶ ●
- Select Availability, e.g.,

 Answer OK → → Select

 new Availability → ●





Changing Connection Status

[My Status Window] Online (or Offline) → ● → Select status → ●
Changing Status Icon/Label

[Status Template Window] Select Status → → Status Icon or Status Label → ● → Select Pictogram or enter text → ● → → →
Changing Availability Settings at Once In ⊘, Answer Status → ● → From ○
Editing My Status Name

[My Status Window] → Edit Name → ● → Edit → ●



Creating Status Templates

Save custom combinations of Status Icon and Status Label to each template.

- ② Enter name **→** • *未定*> **→** ●



- Status Icon

 Select

 Pictogram

 O

 Select
- Status Label → ► Enter text → → Y
- Repeat € 5 → 🗹 → Saved
- Saving to Data Folder

 [Status Template Window] ↔ Select template ▶ ☑ → Save to DF → ●

 → Save here → ●
- Renaming Templates

 [Status Template Window] → Select template → □ → Edit Temp. Name

 → → Enter name → ●

- Resetting Templates
- One Template
- Reset → Yes → •
- All Templates
- 📗 In Status Template window, 🗹



Registering Members

Follow these steps to register a number saved in Phone Book for the first time. To add members, see **P.10-10**.





- Phone Book → Select entry → ●
- Select phone number

 Omit ③ if only one number is saved.
- Yes →
 - Registration request is sent to the number. Registration is complete when an acceptance notice arrives.

When Registration is Complete

 My Status is sent and member's status appears on handset.

Direct Entry

In ②, Add New Entry → ● ⇒ Enter phone number → ● ⇒ ②

Registering from Received Request

When a registration request arrives, a confirmation appears.



- Nes →
 - Acceptance notice is sent; the number is registered.

Rejecting

In \bigcirc , No \Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc

- Rejection notice is sent; the number cannot be registered for 24 hours.
- For ConfirmLater, Information window opens.

Opening Member Status





Select member → ●



When Cancellation Notice Arrives

 Member is deleted from S! Friend's Status member list.





Registering Members

Follow these steps to register a number saved in Phone Book:



받

• When registering a member for the first time, a confirmation appears. Choose **Yes** and press , then skip ahead to @.









Group **→ •**) **→** Group Name: ● **♦** Enter name **♦** ●



Select number, e.g., No.1: \Rightarrow \bigcirc



Select phone number **→ ●**



- Omit 3 if only one number is saved.
- Repeat (2) (3) to add members.



Saving as Individuals In ⓒ, Individual ▶ ⊙ ▶ 🖯 - 🕞 Saving from S! Friend's Status Member List In ⑤, Members List → ⑥ → Select member **→ (•) → (**2) ■ Omit when *Individual* is selected in <a>©.

Initiating S! Circle Talk

Follow these steps to send S! Circle Talk requests to members: Set My Status to *Online* first (P.10-3).









 S! Circle Talk starts when request is accepted by a receiver.

Direct Entry



Speaking

Press and hold when Press and Hold appears
You have the floor



iOwn appears when you have the floor.

Keep holding □ to speak

Release □ ► Floor is
released

Warning tone sounds before time limit.

Canceling Loudspeaker During S! Circle Talk,

■ To reactivate, follow these steps:

● While message appears, ●

■ Exiting S! Circle Talk



 S! Circle Talk ends automatically when there is only one participant left, including yourself.

Rejoining S! Circle Talk

⊘I → Select most recent S! Circle
 Talk record → ☑ → Rejoin Circle
 Talk → ⑥

An error message appears when S! Circle Talk has ended or maximum number of participants are already engaged.

Accepting S! Circle Talk Request

While handset is ringing/
vibrating, ♠ \$! Circle
Talk starts

Alternatively, press

• S! Circle Talk Operations: left


Using Near Chat (Japanese)

- In the event that this handset may be used by a minor, access to this application may be password restricted by a supervising adult. In this case, Handset Code access must also be managed to prevent the execution of Memory All Clear (P.8-13) that may be used to reset the application password.
- Because this application employs Bluetooth® wireless technology transmission/connection fees do not apply.

Sending Near Chat Request





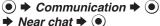















• For more, see Near Chat S! Application instructions.

Receiving Near Chat Request

When a Near Chat request arrives, a tone sounds and S! Appli Notification appears.



After a period of inactivity. Information window opens, tone sounds and notification appears.





- Near Chat S! Application starts.
- For more, see Near Chat S! Application instructions.

Rejecting Request





Blogging

Save blog details to view or update blogs easily on handset.

Saving Blog Details

Follow these steps to save blog name, URL (for Yahoo! Keitai) and address for posting:

- Dommunication DomBlog Tool Dom
 - Blog Tool

 Ocreate New
 Create New
 Blog Tool Window
- 🔁 Create New 🕈 💿



Blog Setting Menu

- Blog Menu → ➤ Enter
- URL(Yahoo! Keitai) → → Enter URL →
 - Email Address → →
 Enter address → ●
- 🕞 🗹 **▶** Saved
- Setup for PC Site Browser
 [Blog Setting Menu]

 URL(PCSiteBrowser)

 ● Enter

 URL ● □
- - when posting.

Posting to Blogs

- In Blog Tool window, select entry ▶
 - S! Mail Composition window opens with address entered.
- Complete message ▶ ☑ ▶
 Posted

Opening Blog Page

- In Blog Tool window, select entry ▶ ☑ ▶ Connection starts
 - Page opens.
 - When PC Site Browser message appears, follow onscreen prompts.

When URL is Saved for Yahoo! Keitai & PC Site Browser

In ①, select browser ▶ ⊙



S! Friend's Status

■ Members/Groups

Adding members	● Communication ● S! Friend's Status ● ● Select Group ■ Add Member ● ● Select method ● Select entry or enter phone number ● ● Yes ●
Deleting members	© Communication © S! Friend's Status © ⊙ Select Group Select member © Registration Release © Yes © Yes © © Cancellation notice is sent; deleted members cannot be re-registered for 24 hours.
Moving members	● Communication ● S! Friend's Status ● ● Select Group ● Select member ● Change Group ● ● Select target Group ● ●
Renaming Groups	● Communication ● S! Friend's Status ● ● Select Group ● → Edit Group Name ● ● Enter name ● ●

■ Member Status & Notices

Updating manually	● Communication ● S! Friend's Status ● ● Select Group ● S Settings ● ● Status Update ● ●
Opening notices	● Communication ● S! Friend's Status ● ● Select Group ● Status Notif. List ● ● Select notice ● ●

■ My Details

	● Communication • ● S! Friend's Status • • • Select Group • Select member •
	Send Image → ● Yes → ●

■ Settings

	Settings	
	Start Here ● ◆ Communication ◆ ● ♦ S! Friend's Status ◆ ● ▶ ☑ ◆ Settings ◆ ● ♦ Request Reply ◆ ● ◆ See below	
	Rejecting requests	Rejecting Requests from Unsaved Numbers Confirm if Registered ● ● ● ● Rejection notice is sent to rejected numbers automatically.
		Rejecting All Requests Always Ignore Rejection notice is sent to all requesters automatically.
	Saving custom Availability combinations	● Communication • S! Friend's Status • ● Settings • Answer Status • ● User Setting • Select type • ● Select Availability • ● Y
	Changing Status Icon Pictogram or Status Label description	© Communication © SI Friend's Status © Settings © Status Setting © Select template Select Status © Status Icon © Select Pictogram © Status Label © Enter text © ™



S! Circle Talk

■ Member List

Editing individual members	Start Here Select member ⇒ ✓ ⇒ See below
	Replacing Members Edit → ● → ● ⇒ Select method → ● → Select entry → ●
	Deleting Members Delete → ● → Yes → ●
	Start Here ▶ Select Group ▶ ☑ ▶ See below
Editing Groups	Editing Group Name/Members Edit → ● → Select target → ● Delit/enter → ● → ☑
	Deleting Group Members Edit → ● → Select member → □ → Delete → ● → Yes → ● → □
	Deleting Groups Delete → ● → Yes → ●

Settings

3 -	
Disabling Loudspeaker	■ Description Substitution Sub
Exiting S! Circle Talk for incoming calls	□□ → □ → Incoming Calls → ● → Voice Calls or Video Calls → ● → Accept Calls → ●

Blog Tool

Editing entries	● Communication ● Blog Tool ● Select entry ● Edit ● Select item ● Edit
Deleting entries	● → Communication → ● → Blog Tool → ● → Select entry → ☑ → Delete → ● → Yes → ●
Posting captured images	© ● ● to shoot ● ☑ ● Send ● ● ● Blog Tool ● ● Select entry ● ● Complete message ● ☑
Posting Data Folder images	● Data Folder ● Select folder ● Select file ● Select file ● Select file ● Complete message ● F



S! Friend's Status



Cannot use S! Friend's Status

• Set IP Service Setting to On.



Handset rejected a registration request automatically

 Rejection notice is sent automatically when 30 members are already registered or handset fails to respond within two hours.



Registration request arrived from a deleted member

· Registration request arrives when a member fails to receive cancellation. notice within 24 hours.



Registration request was sent to a member automatically

 Registration request is sent automatically when handset fails to receive rejection/cancellation notice within 24 hours.



Cannot create Status Templates

• Three templates may already be added; reset one and retry.

S! Circle Talk



Cannot use S! Circle Talk

• Set IP Service Setting to On.



S! Circle Talk starts automatically

· Check My Status; handset accepts S! Circle Talk requests automatically if S! Circle Talk Availability is set to Auto Join.



Cannot accept S! Circle Talk requests

• Check My Status; handset rejects S! Circle Talk requests automatically if S! Circle Talk Availability is set to Join NG.

Near Chat



Cannot receive Near Chat requests

• S! Appli Request may be set to Off.



Handset Security	11-2
Operations Security	11-2
Information Security	11-3
Face Recognition	11-4
Using Face Recognition	11-4
Additional Functions	11-6



Handset Security



Operations Security

Function Lock

Restrict access to handset functions.

Auto	Lock when Display turns off or handset is closed
Once	One time lock
At Power On	Lock when handset is turned on





Locks Menu






Unlocking Temporarily While handset is locked, enter Handset Code **→ (•)**

When Function Lock is Active

 Press corresponding key to turn handset on/off, answer calls, place callers on hold, end calls, etc.

PIN Entry

Activate PIN Entry to require PIN entry each time handset is turned on.

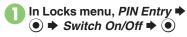




Secure Remote Lock

Lock a lost handset remotely via PC or another handset. Secure Remote Lock disables all operations except turning handset on, and activates IC Card Lock (P.9-13). For more about Secure Remote Lock, see SOFTBANK MOBILE Corp. Website (P.14-22) or contact SoftBank Customer Center, General Information (P.14-40).

Accessing My SoftBank

Access My SoftBank as needed.

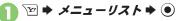

My SoftBank → ● → English **→** (•)



Information Security

Application Lock

Restrict access to these functions:

Phone Book

Calendar/Tasks Mail

Yahoo! Keitai Notepad

● Settings ● ● In Phone Settings menu, Locks ● ●



Locks Menu

Application Lock → ●



Select item → ● (☑ appears)

- For Phone Book, select No Refer or Refer and press .
- **2 ►** Enter Handset Code **→**

Temporary Access to Functions

 When accessing functions, enter Handset Code and press .

History Lock

Restrict access to Call Log and sent/ received mail records.

In Locks menu, *History*Lock ▶ ●



- Select item → (✓ appears)
- **③ ▶** Enter Handset Code

Temporary Access to Records

 When accessing records, enter Handset Code and press .

Show Secret Data

Activate Show Secret Data to access Secret entries.

- In Locks menu, Show Secret

 Data

 ●
- On → ► Enter Handset Code → ●

When Show Secret Data is Active

- Predictive is not available for text entry.
- Activating Temporarily with Motion Control
- Enter Handset Code

 Shake handset left or right
 - Close handset in Standby to cancel Show Secret Data.



Using Face Recognition

Capture portraits with mobile camera then match live image to saved ones to unlock handset or access functions/files. If Face Recognition fails, Function Lock activates.

Setup



- Identification accuracy is not guaranteed.
 SoftBank cannot be held liable for misuse or any damages associated with the use of Face Recognition.
- Handset Code is required to cancel Face Recognition. Changing the code helps enhance security.
- Osaifu-Keitai[®] is available even when Face Recognition is active.
- When capturing/scanning face, remember these points:
 - Make sure your face is clearly visible.
 - Face should be lit evenly and brightly.

Saving User Information

- → Settings → In Phone Settings menu, Locks → ●
- Face Recog → ●



Face Recognition Menu





Select from *User 1* to *User 5*



- User Name: → ► Enter
- Register Riddle:

 ●

 Enter question

 ●
- Register Answer:

 ●

 Enter answer

 ■
- 🛐 Face Image: 🕈 💿



- Select from *Image 1* to *Image 5* **▶** ⊠
 - Mobile camera activates



- Frame your face on Display
 - **▶ ● ▶**
- ¶ Yes →
 - To save more, repeat ⑤ ⑩.
- [2 GEARES → Y27 → Saved

Precautions for Portrait Capture

- Look straight into lens and frame whole face with no expression.
- Do not wear a mask when capturing portraits, even for use with Low(Mask).

- Activating & Canceling
- In Face Recognition menu, Switch On/Off

 ● ●
- On or Off → ► Enter Handset Code → ●

Scanning Face

- Face the Display ▶
 Recognition starts
- If face matches a saved portrait, handset unlocks
- Unlocking Handset after Face Recognition Fails
- When No Matching Portrait is Found
 - Enter Handset Code → ●
- When Matching Portrait is Found Saved question appears.

If You Cannot Remember the Answer
In ①, ③ → Enter Handset Code → ⑥
When No Question or Answer is Saved
In ①, Enter Handset Code → №



PIN Entry		
Changing PINs	Start Here ● → Settings → ● In Phone Settings menu, Locks → ● → See below	
	Changing PIN PIN Entry	
	Changing PIN2 Change PIN2	



Face Recognition	
Editing/deleting user information	Start Here
	Editing
	Deleting
Changing/deleting portraits	Start Here Settings Settings Settings Settings menu, Locks Set
	Changing
	Deleting

Changing accuracy level	● Settings ● In Phone Settings menu, Locks ● Face Recog ● Security Level ● Select level ● ● When set to Low(Mask), handset recognizes faces with masks.
Changing recognition guide option	● Settings ● In Phone Settings menu, Locks ● Face Recog ● ● Conductor ● ● Select option ● ●
Opening contact information when recognition fails	● Settings ● In Phone Settings menu, Locks ● Face Recog ● Face Recog ● Enter Handset Code ● Enter contact information ● ●

Infrared1	2-2
Transferring Files via Infrared 1	2-3
IC Transmission1	2-5
Transferring Files via IC Transmission1	2-5
Bluetooth®1	2-7
Transferring Files via Bluetooth® 1	
	2-8

Backup	12-11
Backup & Restore	.12-11
S! Addressbook Back-up (SAB)	12-13
About SAB	.12-13
Backup & Restore	.12-15
Additional Functions	12-16
Troubleshooting	12-19

Connectivity & File Backup

Infrared

Wirelessly transfer the following files between 930SH and compatible devices.

Phone Book	Received Msg.
Calendar	Sent Messages
Tasks	Drafts
Notepad	Templates
Bookmarks	Data Folder

- Copy/forward protected files are not transferable.
- Some files may not be transferable; some settings may be lost, or files may not be saved properly. (For details, see P.12-19 "Troubleshooting.")

Getting Started

Infrared Precautions

Align Infrared Ports of both devices.



- Do not place objects between devices.
- Keep Infrared Ports aligned during transfer.
- Do not look into Infrared Port during infrared transmissions. Eyesight may be affected.

Transfer Options One File Transfer All File Transfer IrSS Transfer Less Transfer Transfer all files by function Exchange single image files with compatible devices at high speed

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

Authorization Code

 Four-digit code required for infrared transfers. All File Transfers possible when codes match. (Authorization Code is changeable for each transfer.)



Transferring Files via Infrared

Receiving Files

- (•) (Long)
 - Infrared is activated.
 - Handset receives files if sent within three minutes.
 - Handset must be in Standby to accept connection requests.
 - To cancel infrared, Long Press .

Connection request arrives



Request Window

- Perform subsequent operations
 - To cancel transfer, press \(\subseteq \).

Subsequent Operations

One File Transfer

Yes → • Yes → •

- When confirmation for save location appears, select a location and press .
- All File Transfer (Adding Files) Yes → • Enter Handset Code →
 - Enter Authorization Code ●
 - → As New Items → ●
- IrSS Transfer
 - Yes **▶** (•)
 - Files are saved to Data Folder (Pictures).






Sending Files

One File Transfer

Example: Phone Book entry

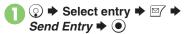



Via Infrared → ●



Yes → ● Transfer starts

 When finished, entry search window returns.

All File Transfer



- Send All → ●
- Yes → ► Enter Handset Code → ●



- Select item → ●
- Enter Authorization Code

 Transfer starts
 - When finished, Send All menu returns.

Sending Phone Book

 In ⑤, follow these steps to select whether to send Phone Book Pictures:
 Yes or No → ⑥

Sending JPEG Images at High Speed

- Pictures or DCIM

 ●

 For DCIM, select a folder and press

 ●.
- Select image → ™ (Long)
- - When finished, file list returns.
 - Transfers are one-way; end even if files are not received.



Transferring Files via IC Transmission


Wirelessly transfer files between 930SH and compatible devices.

- For transferable files, see P.12-2.
- Cancel IC Card Lock beforehand
- Disconnect Headphones, USB Cable and AC Charger beforehand.

Getting Started

IC Transmission Precautions

Align 2 logos of both devices.

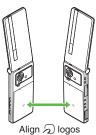

Keep 2 logos aligned during transfer.

Transfer Options


One File Transfer	Transfer single files
All File Transfer	Transfer all files by function

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

Authorization Code


 Four-digit code required for IC transfers. All File Transfers possible when codes match. (Authorization Code is changeable for each transfer.)

Disabling One File Reception

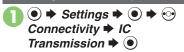



IC Transmission Menu

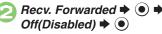



Receiving Files

Connection request arrives




Request Window

- Perform subsequent operations
 - To cancel transfer, press \(\mathbb{Y} \).
- **Subsequent Operations**
- One File Transfer *Yes* **♦ (•)** *Yes* **♦ (•)**
 - When confirmation for save location appears, select a location and press .
- All File Transfer (Adding Files)
 - As New Items ●

Sending Files

One File Transfer

Example: Phone Book entry

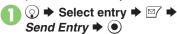



Via IC Transmission **→** ●



- ➡ Transfer starts **Yes ♦** (**•**)
 - When finished, entry search window returns.

- All File Transfer
- In IC Transmission menu.
- Yes

 ◆ (•)

 Enter Handset Code **→** (•)



- Select item **⇒** (●)
- Transfer starts
 - When finished. Send All menu returns.

Sending Phone Book

• In <a>\textcal{Q}\$. follow these steps to select whether to send Phone Book Pictures: Yes or No ▶ •



Bluetooth®

Wirelessly transfer files/data between 930SH and compatible devices (watches, handsfree devices, etc.).

Bluetooth® connection may not be possible with some Bluetooth® devices.

- Handset shall be connected to certified Bluetooth® devices that meet the specification standards developed by Bluetooth SIG
- Data transfers may fail depending on characteristics or specifications of the certified Bluetooth[®] devices.
- Noise may interfere with wireless or handsfree conversations.

Getting Started

Bluetooth® Precautions


- Bring handsets to within ten meters.
 (Bluetooth® connection/transfer rate may vary depending on conditions.)
- TV audio is supported only on SCMS-T DRM scheme compliant Bluetooth[®] devices.

Handsfree Device Precautions


Handle call operations on the device in use.

Bluetooth® Watches

Compatible Bluetooth® watches support these functions:

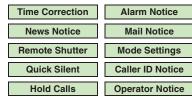

For details about functions/operations, see the Bluetooth® watch guide.

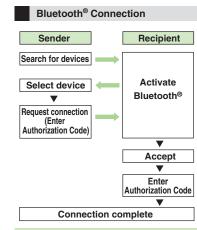

Authorization Code

 4 to 16-digit code required for Bluetooth[®] connections. Pairing possible when codes match.

- Cloaking handset to avoid connection requests Setting idle time after which Bluetooth Bis canceled Switching audio output to wireless device Changing Bluetooth name for handset Talking on handsfree device Avoiding connection requests from Bluetooth compatible S! Applications in Standby, etc. Opening Bluetooth replaced handset properties (P.12-16)
 - Synchronizing Bluetooth® watch with handset Enabling/disabling Bluetooth® watch responses (P.12-17)




Transferring Files via Bluetooth®

Toggling Bluetooth® On/Off



 Handset must be in Standby to accept connection requests from unpaired handsfree devices, etc.

Connecting to Bluetooth® Devices

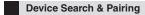

Activate Bluetooth® on devices to be paired with.





Bluetooth Menu

Add Device → ●



- Found devices are listed after search.
- Press to cancel.
- Select device → ●

If handset is already connected to another device, choose **Yes** and press **.**



- On the other device, complete code entry within 30 seconds.
- For handsfree devices, enter specified Authorization Code.
- Authorization Codes are not necessary for paired devices.

Connecting to Paired Devices

In Bluetooth menu, *Paired Devices*

●



If handset is already connected to another device, choose **Yes** and press **(a)**.

Advanced



© Editing Paired Devices list Disconnecting devices Connecting to devices supporting handsfree telephony and audio output by service Specifying a preferred device for wireless connection (P.12-17)

Accepting Connection Requests

Follow these steps to accept connection requests from unpaired devices:

Connection request arrives



Request Window





Enter the same **Authorization Code as** sender's **→** (●)

- Complete code entry within 30 seconds.
- For handsfree devices, enter specified Authorization Code.

Transferring Files


Follow the steps below to exchange files with paired devices.

- For transferable files, see P.12-2.
- When requested, enter Authorization Code.
- Receiving
- **Connection request arrives** Yes → (•)
- Yes **♦** (•)
 - When confirmation for save location appears, select a location and press .
 - To cancel transfer, press \(\subseteq \).

All File Transfer (Adding Files) In ②. enter Handset Code → • • → As New Items ▶ •

One File Transfer

Example: Phone Book entry

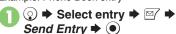

Via Bluetooth **→** •

- Select device **→** Yes **→** (•) **→** Transfer starts
 - When finished, entry search window returns.
 - **All File Transfer**
- In Bluetooth menu, Send All **▶** (**●**)
- Select device **→ (•) →** *Yes* ● **Enter Handset** Code **→** (•)
- Select item **→** (•) **→** Transfer starts
 - When finished. Send All menu returns.

Sending Phone Book

 In ②, follow these steps to select whether to send Phone Book Pictures: Yes or No ▶ •




Connecting to PC

Accessing Memory Card from PC

Connect handset to a PC via USB Cable to access Memory Card from the PC without removing the card from handset.

- USB Cable may be purchased separately.
- If handset is connected to a PC via USB Cable, disconnect it first.

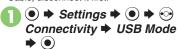







Connect handset to a PC via USB Cable

• Use PC to access Memory Card.



 Safely remove handset (recognized as removable hardware device) on the PC, then disconnect USB Cable.

Utility Software (Japanese)

For more PC-related operations, download Utility Software (including USB Cable driver) from the following URL.

■ Utility Software

http://k-tai.sharp.co.jp/download/tools/utility/

Mobile Data Communication Fees

 Using the Internet by connecting handset to PC/PDA via USB Cable or Bluetooth[®] may incur high charges as large-volume packet transmissions tend to occur in a short period of time.



Backup & Restore

Back up information to Memory Card, and restore to handset as needed.

The following folders/entries can be transferred at once:

Phone Book	Drafts*
Calendar*	Templates
Tasks [*]	Contents Keys
Bookmarks*	Data Folder
Notepad [*]	S! Town
Received Msg.*	Mail Groups
Sent Messages	User Dictionary

^{*}Selectable simultaneously via Check Selection in Options menu.

Precautions

- Not available if battery is low.
- Some items may not be transferable; some settings may be lost, or files may not transfer properly.

Transferring All Items

Use blank Memory Card for Backup All Items. Do not use the card to save other files after Backup All Items; backed up content may not be restored properly.

Transferring Selected Items

- Received Msg. Transfer may delete sort keys.
- Mail Notices are restored as messages. invalidating complete message retrieval.
- If spam filter is available on recipient handset. Spam Folder messages are saved in spam folder regardless of the setting. (If unavailable, they are saved as normal received messages.)

Sent Messages

Transfer may delete sort keys.

■ Drafts

If transferred from Drafts, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

■ Bookmarks

- Yahoo! Keitai, Streaming and PC Site Browser Bookmarks are all backed up.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

■ Contents Keys

Moving Keys to Memory Card creates a special file. Performing Backup again on the same Memory Card overwrites that file. Perform Restore beforehand.



Handset to Memory Card


Follow these steps to back up selected items at once:





Backup/Restore Menu

- Backup Selected Items ▶ ● Enter Handset Code
- Yes **▶** (•)
- Select item \Rightarrow (\square/\square) \Rightarrow Complete selection
 - For Phone Book, confirmation appears. Choose Yes or No and press (•).

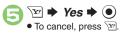

- Backup complete **→ ● →**
- Selecting Multiple Items at Once From 🖯 Selecting/Canceling All Items In ②, ☑ Check All or Uncheck All **▶** (**0**)

Memory Card to Handset

Follow these steps to restore selected items:

Restoring backed up content to handset overwrites current handset content (with the exception of Contents Keys).

- In Backup/Restore menu, Restore Selected Items > Enter Handset Code **→** (•)
- Yes **→** (•)
- Select item \Rightarrow (\square/\square) \Rightarrow Complete selection



- If no file list appears, skip ahead to .
- Select file **→** (•) Repeat (5) to complete selection.
- *Yes* **▶** (**•**) • To cancel, press \(\subseteq \).
 - Restore complete **→** (**•**) **→** (**•**)

Selecting Multiple Items at Once In €,

Select option

Select option From @


Selecting/Canceling All Items **▶** (**•**)

Changing Restoration Method After €, select item ▶ 🖾 ▶ Change to Add Mode or Chg. to Overwrite Mode → • From ④



About SAB

Back up Phone Book content in SAB; add Phone Book changes to SAB anytime. Edit SAB online via PC; add SAB changes to Phone Book anytime. Restore lost or altered Phone Book content from SAB.

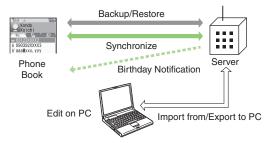

- SAB requires a separate contract and basic monthly fee.
- Use SAB to add Phone Book content to a new compatible SoftBank handset; some conditions apply (P.12-14).
- Use a PC to edit SAB online.
- For more about SAB, see the corresponding Website (P.14-22).
- Sync commands (Backup, Restore and Synchronize) all incur transmission fees.

SAB Sync Commands & Features

Backup/	Backup	Export Phone Book content to SAB ¹
Restore	Restore	Import SAB content to Phone Book ²
	Synchronize	Synchronize Phone Book and SAB ³
Synchronize	Sync from Client	Add Phone Book changes to SAB4
	Sync from Server	Add SAB changes to Phone Book ⁵
	Import from PC	Upload PC address book info to SAB
Edit on PC	Export to PC	Export SAB content to PC address book
Send Notice ⁶ Email Addr Notification "Disaster Me Board" Mess	Birthday Notification	SAB sends reminders via SMS to handset
	Email Address Notification ⁷	Send new handset mail address to specified addresses
	"Disaster Message Board" Message Notification ⁸	Send emergency message board update to specified addresses
Spam Filter	Tomodachi Email Filter ⁹	Always accept messages from mail addresses saved in SAB

¹Any existing SAB content is deleted.



²Any existing Phone Book content is deleted.

³If the same entry item is edited in Phone Book and SAB, SAB content is referenced.

⁴Unrelated SAB changes remain.

⁵Unrelated Phone Book changes remain.

⁶Access this function via handset or a PC.

⁷Backup resets notification setting; handset address is sent to all addresses.

⁸Backup resets notification setting; updates are not sent to any address.

⁹Export Phone Book content to SAB beforehand.

Service Usage Outline

Complete Contract

Visit a SoftBank Shop, dial 157 from a SoftBank handset for SoftBank Customer Center, General Information or access My SoftBank (Japanese) via Yahoo! Keitai.



Receive User ID & Password

After subscription, user ID and password arrive via SMS.

• User ID and password are required to use SAB via a PC.



Use SAB

Export Phone Book content to SAB.

Precautions

Unsynchronizable Items

SAB restoration cancels these Phone Book settings:

- Picture, Tone/Video, Light, Vibration
- Unintentional Phone Book or SAB Content Deletion
- When no Phone Book content exists, selecting Synchronize, Sync from Client or Backup deletes all SAB content.
- When no SAB content exists, selecting Synchronize, Sync from Server or Restore deletes all Phone Book content.
- Phone Book ⇔ SAB Content Capacity Disparities

When the number of savable items varies between Phone Book and SAB entries, Synchronization reflects lower limit.

■ Contract Termination

SAB content is deleted upon contract termination.

- SAB Transfers to New Handsets
- SAB-Compatible 3G Handsets
 SAB remains as last saved and is fully accessible.
- Other 3G Handsets
 SAB remains as last saved and is accessible via PC.
- V3/V4/V5/V6/V8 Series
 Service contract is terminated and SAB content is deleted.
- When Double Number is Active

Regardless of usage mode setting, all Phone Book content is backed up.



Backup & Restore

Backup (Phone Book → SAB)

Any existing SAB content is deleted.





SI Addressbook Menu



- - Backup starts; when completed, details appear.

Canceling Backup

→ Yes → •

Restore (SAB → Phone Book)

Any existing Phone Book content is deleted.

- In S! Addressbook menu,

 Start Sync → → Restore

 → ●
- - Restore starts; when completed, details appear.

Synchronizing Phone Book

Synchronize Options:

-y	
Synchronize	Synchronize Phone Book and SAB
Sync from Client	Add Phone Book changes to SAB
Sync from	Add SAB changes to
Server	Phone Book

If this is your first use of SAB (new handset), Synchronization is performed via Synchronize regardless of selection.

- In S! Addressbook menu,

 Start Sync → → Select
 option → ●
- - Synchronization starts; when completed, details appear.
- Synchronization complete



Infrared

Overwriting existing files	When connection request arrives, Yes → ● → Enter Handset Code → ● → Enter Authorization Code → ● → Delete All & Save → ● → Yes → ● • For Phone Book, My Details except handset phone number is overwritten as well.
Sending My Details	● Description Send My Card Description Will Infrared Description France Description Send My Card Description Williams Via Infrared Description Descri
Sending non-Phone Book files	In file list, select file ▶ ☑ ▶ Send (or Send/ Blog) ▶ ● ▶ Via Infrared ▶ ● ▶ Yes ▶ ● Transfer starts

IC Transmission

Overwriting existing files	When connection request arrives, Yes → ● Enter Handset Code → ● ➤ Enter Authorization Code → ● ➤ Delete All & Save → ● → Yes → ● For Phone Book, My Details except handset phone number is overwritten as well.
Sending My Details	● ★ EO ★ Send My Card ★ ● ★ Via IC Transmission ★ ● ★ Yes ★ ● ★ Transfer starts
Sending non-Phone Book files	In file list, select file ▶ ☑ ▶ Send (or Send/ Blog) ▶ ● ▶ Via IC Transmission ▶ ● Yes ▶ ● ▶ Transfer starts

Bluetooth®

■ General

Cloaking handset to avoid connection requests	Settings Output Bluetooth Output My Device Settings Output Visibility Output Hide My Phone Output O
Setting idle time after which Bluetooth® is canceled	● Settings → ● → ○ Connectivity → Bluetooth → ● → My Device Settings → ● Bluetooth Timeout → ● → Select time → ●
Switching audio output to wireless device	Settings My Device Settings Sound Output Bluetooth Device is set automatically when connection is made from wireless Headphones.
Changing Bluetooth® name for handset	Settings Output Bluetooth Output My Device Settings Output Device Name Output Enter name Output Device Name
Talking on handsfree device	● Settings ● ● ⇔ Connectivity → Bluetooth ● ● My Device Settings ● ● Handsfree Setting ● ● Handsfree Mode ● ●
Avoiding connection requests from Bluetooth®-compatible S! Applications in Standby, etc.	 Settings Settings My Device Settings Appli Request Off Off
Opening Bluetooth®-related handset properties	● Settings ● ● ❤️ Connectivity ◆ Bluetooth ● ● My Device Details ● ● • Press 🐨 to view service details.

■ Bluetooth® Watches

Synchronizing Bluetooth® watch with handset	● Settings ● ● ○ Connectivity ► Bluetooth ● ● Setting Watch ● ● Set BT-Watch Time ● ● Yes ● • Connect handset to a Bluetooth® watch beforehand.
Enabling/disabling Bluetooth® watch responses	● Settings ● Setting Watch ● Notification ● Select item ● Permit or Polibit ● Designer of Plusters ■ Setting Watch ● Permit or Polibit ■ Permit or Polibit ■ Permit or Plusters

Paired Devices	
Editing Paired Devices list	Start Here
	Renaming Paired Devices Change Name ● ● Enter name ●
	Deleting Paired Devices Delete → ● → Yes → ● To delete a device connected to handset, choose Yes and press ●.
Disconnecting devices	● Settings ● ● ⊖ Connectivity → Bluetooth ● ● Paired Devices ● ● Select device ● ●
Connecting to devices supporting handsfree telephony and audio output by service	Settings

	Start Here
Specifying a preferred device for wireless connection	For Handsfree Telephony Handsfree On ● ● For Handsfree On, specified device reconnects to handset when placing/receiving calls.
	For Audio Output Audio On ● For Audio On, Media Player/TV audio output is redirected to specified device automatically when Sound Output is set to Bluetooth Device.

File Transfer

Overwriting existing files	When connection request arrives, Yes → ● Enter Handset Code → ● Delete All & Save → ● Yes → ● For Phone Book, My Details except handset phone number is overwritten as well.
Sending My Details	● ★ EO ★ ★ Send My Card ★ ● ★ Via Bluetooth ★ ● ★ Select device ★ ● ★ Yes ★ ● ★ Transfer starts
Sending non-Phone Book files	In file list, select file ♦ 🖾 ♦ Send (or Send/ Blog) ♦ ● ♦ Via Bluetooth ♦ ● ♦ Select device ♦ ● ♦ Yes ♦ ● ♦ Transfer starts



Backup

■ Backup & Restore

Backing up all items	● Settings ● Settings ● Backup All Items ■ Backup All Items ■ Enter Handset Code ● Yes ● Yes ● Backup complete ● ● Setup All Items
Encoding data for backup	Settings Settings Settings/Manage Settings/Manage Select item Available for Phone Book, Messaging folders, Calendar and Tasks.
Restoring all items	Settings Connectivity Backup/Restore Restore All Items Enter Handset Code Yes Restore complete Restore complete

■ Backup Files

	● Settings → ● → Connectivity →
Deleting backup files	Backup/Restore
	File Management → ● Select item →
	● Select file → ● (□/☑) → Complete
	selection ⇒ ¬ Yes ⇒ •

S! Addressbook Back-up

Confirming user ID & password	★ニューリスト
	Start Here
	Activating Set On/Off → ● → On → ●
Auto synchronization	Changing Auto Sync Frequency Set On/Off ● On ● On Set Frequency ● Select frequency ● Enter/select date/time/day of the week ● ● For After Editing Ph.Book(10 min.), omit steps for date, time, etc.
	Changing Auto Sync Command Set On/Off
Opening log	Phone S! Addressbook Backup Sync History Select record Select record

File Transfer



Phone Book settings are lost

- One file transfer resets these settings:
 - Category, Tone/Video, Light, Vibration, Secret
- Picture setting may be lost depending on image; send the image separately and reassign it.



Calendar/Tasks settings are lost

- One file transfer resets these settings:
 - Alarm Tone/Video. Secret. S! Friend's Status



Cannot find streaming Bookmarks

• In All File Transfers, received streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.



Messages are not saved properly

- Files received via One File Transfer are saved to Other Docs folder and cannot be used as messages.
- Sky Mail may be received as S! Mail when transferred from other SoftBank handsets via All File Transfer



Received messages are not saved properly

- Mail Notices are restored as messages, invalidating complete message retrieval.
- All File Transfers may save Spam Folder messages to the incoming message folder on recipient SoftBank handsets (except 930SH).



Received Msg. folder settings are lost

 In All File Transfers, overwriting messaging folders deletes sort keys.



Draft messages are not saved properly

• In All File Transfers, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved on recipient SoftBank handsets (except 930SH).



Cannot find files in DCIM folder

 Received files in DCIM folder are saved to Pictures folder.



Cannot receive some files

- Messages may not be received depending on the size.
- Large Bookmarks may not be received correctly.



Some files are not received

 If the limit is reached during transfers. remaining files will not be received.



Cannot receive/accept connection requests even when Infrared/ Bluetooth® is On

- Handset may not be in Standby.
- Keypad Lock/Function Lock may be active.
- Software Update may be in progress.

Infrared



Infrared transfer fails

- Infrared Port may be obstructed by dust, etc.; clean with a soft cloth.
- Transfers may fail in direct sunlight. under fluorescent lighting or near infrared equipment.



Backup & Restore



Backup fails

 Check handset/Memory Card memory; backup may fail if the memory is low.



Cannot restore some messages

 When importing data backed up on other SoftBank handsets, some messages may not transfer depending on the size.



Some files are not restored

 If the limit is reached during Restore, remaining files will not be restored.



Cannot use backup files on other SoftBank handsets or PCs

 Some backup files may not be usable on other SoftBank handsets or PCs.



Cannot open backup files

 Some backup files may open only after being restored to handset.



Phone Book settings are lost

 Picture setting may be lost depending on image; send the image separately and reassign it.



Messages are not restored properly

 Sky Mail may be restored as S! Mail when imported from other SoftBank handsets.



Date & Time13-2
Display & Key13-3

 Ringtones & Sounds
 13-5

 Connectivity
 13-6

 Reset
 13-8

Handset Customization



□ X Date & Time Settings-

Clock View/Settings Start Here Start Here Settings In Phone Settings menu, Date & Time In Phone Settings menu, Date & Time In Phone Settings menu, Date & Time In Phone S	
Setting the date and time	Set Date/Time
Correcting Clock manually	Time Correction
Disabling auto Clock correction	Time Correction → ● → Auto Corr. Setting → ● → Off → ●
Setting auto Clock correction timing	$ \hline \textit{Time Correction} \Rightarrow \textcircled{\bullet} \Rightarrow \textit{Auto Corr. Setting} \Rightarrow \textcircled{\bullet} \Rightarrow \textit{On} \Rightarrow \textcircled{\bullet} \Rightarrow \text{Select item} $ $ \Rightarrow \textcircled{\bullet} (\Box \land \textcircled{N}) \Rightarrow \textcircled{\bullet} \Rightarrow \textcircled{\bullet} $
Activating Daylight Saving	Daylight Saving → ● → On → ●
Changing Time Zone	Set Time Zone → ● Select area → ●
Adding custom time zone	Set Time Zone → ● → □ → Enter city name → ● → ♣ + or - → → + Enter time difference → ●
Changing time format to 12 hour	Time Format
Changing date format	Date Format → ● > Select option → ●
Starting the Calendar week on Monday	Calendar Format ▶ ● ▶ Monday-Sunday ▶ ●



🏅 Display & Key Settings 💵 Language Start Here Settings Phone Settings menu Switching interface between Japanese and English Language or 言語選択 → ● English or 日本語 → ● Display Image Start Here → Settings → → In Phone Settings menu, Display → O System Graphics Select item Preset Animation (or Pattern 1 Showing preloaded images for incoming calls, etc. to Pattern 3) ⇒ • System Graphics → ● Select item → ● Select folder → ● Select Showing Data Folder images for incoming calls, etc. • Some images may be usable without specifying display area. System Graphics → • Select item → • Customized Screen → • • • Showing Customized Screen for incoming calls, etc. Not available for Power On or Power Off Changing image enhancement option for Standby and Vivid Mode → • Select option → • video playback Changing font of numbers entered in Standby Dial Number Select pattern Output Dial Number Output Dial • When using Double Number in Dual Mode (P.1-19), press \(\overline{V} \) in System Graphics menu to switch modes.

п		
ı	Changing display transition effects	Display Effects
ı	Changing Display/Keypad Backlight illumination time	Backlight → ● → Time Out → ● → Select time → ●
ı	Changing Display Brightness	Backlight → ● → Brightness → ● → Adjust level → ●
ı	Canceling/activating Light Sensor	Backlight → ● → Brightness → ● → 🗹 (□/☑) → ●
ı	Changing inactivity time after which Display turns off	Display Saving ▶ ● Select period ▶ ●

Start Here () → Settings → () → In Phone Settings menu. Display → ()

Display Illumination



Disabling Keypad light illumination


□ X Display & Key Settings 2 -

External Display Start Here ● → Settings → ● In Phone Settings menu, Display → ●	
Changing inactivity time after which External Display turns off	External Display ▶ ● Duration ▶ ● Select time ▶ ●
Hiding new received messages	External Display → ● → Messages → ● → Not Display → ●
Hiding caller's number/name	External Display → ● Caller Display → ● Off → ●
Changing Clock view	External Display → ● → Display Date&Time → ● → Select type → ●
Changing Clock font	External Display → ● → Clock Type → ● > Select pattern → ●
Additional Display Settings Start Here (Changing Clock/Calendar	 Settings → ● In Phone Settings menu, Display → ● Standby Display → ● → Clock/Calendar → ● → Select type → ●
Showing/hiding indicators or Softkeys in Standby	Standby Display
Showing Network service provider name in Standby	Standby Display ▶ ● Show Operator Name ▶ ● → On ▶ ●
Showing a message each time handset is turned on	Greeting Message → ● → Edit Message → ● → Enter message → ● → Switch On/Off → ● → On → ●
Handset Keys Start Here)	→ Settings → ● Phone Settings menu

Set Key Light → ● → Off → ●



X Ringtone & Sound Settings

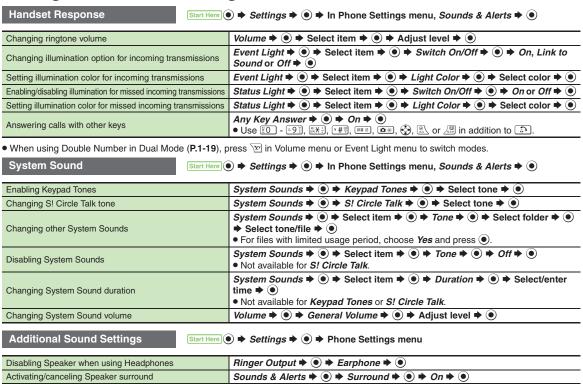


Advanced Connectivity Settings II-

Network Start Here	● ♦ Settings ♦ ● → ↔ NW Settings
Selecting a Network manually	Select Network ▶ ● ▶ Manual ▶ ● ▶ Select Network ▶ ●
Adding preferred Networks	Select Network → ● → Set Preferred → ● → Select location → ● → Insert → ● → Select Network → ●
Adding preferred Networks to the end	Select Network → ● → Set Preferred → ● → Add to End → ● → Select Network → ●
Deleting preferred Networks	Select Network → ● → Set Preferred → ● → Select Network → ● → Delete → ●
Adding Networks	Select Network → ● → Add New NW → ● → Add → ● → Enter country code → ● → Enter Network code → ● → Enter name → ● → Select NW Type → ● → Select type → ● ● • After selecting Add New NW and pressing ●, Network list appears if Network has already been added. To add more, press ● again and proceed.
Editing Networks	Select Network → ● → Add New NW → ● → Select Network → ● → Change → ● → Edit in the same manner as adding Networks → ●
Deleting Networks	Select Network → ● → Add New NW → ● → Select Network → ● → Delete → ●
Switching Network services manually	Select Service Manual Select service Manual Select service Output
Retrieving Network Information	Retrieve NW Info → ● → Yes → ●
Checking Network status	Network Info ▶ ●
Editing access point names for communication with external devices	External Device → ● → Select name → ● → Edit → ●
Clearing access point names for communication with external devices	External Device → ● → □ → Reset → ● → Enter Handset Code → ● → Yes → ●



X Advanced Connectivity Settings 2

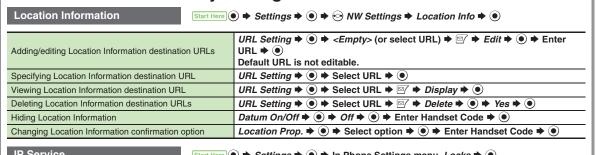

30.1.00	4 Cettings 4 G 4 III I Holic Octalligs Ilicita, 20085 4 G
Disabling IP Service	IP Service Setting

• When Off, S! Friend's Status, S! Circle Talk, Decoration Call and S! Appli Communication are disabled.

X Reset Settings

Restoring Default Settings Start Here Start Here Find Phone Settings menu, Master Reset → ● Reset Settings → ● ➤ Enter Handset Code → ● → Yes → ● → Yes → ● Some default settings may not be restored. Reset All → ● ➤ Enter Handset Code → ● → Yes → ● → Yes → ● Some default settings may not be restored. Reset All → ● ➤ Enter Handset Code → ● → Yes → ● → Yes → ● Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications. Handset Code returns to the default setting.

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.



USIM Card	14-2
About USIM Card	14-2
USIM Card Installation	14-3
Battery	14-4
Battery Installation	
Software Update	14-5
Troubleshooting	14-6
Key Assignments	14-8
Pager Codes	14-10
Pager Code List	14-10


Character Codes	14-11
Character Code List	14-11
Weather Indicators	14-17
Weather Indicator List	14-17
Specifications	14-18
Memory Card Structure & Contents .	14-23
Menu List	14-24
Index	14-31
Warranty & Service	14-39
Customer Service	



Appendix

USIM Card is an IC card containing customer and authentication information, including the handset number. USIM Card must be inserted to use this handset. Save Phone Book entries on USIM Card Phone Book to use them on other SoftBank handsets. Depending on the USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

Precautions

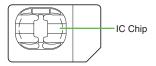

- Do not insert USIM Card into any other IC card device. SoftBank is not liable for resulting damages.
- Keep the USIM Card IC chip clean; malfunction may result. Use a dry, soft cloth to clean the USIM Card.
- Do not attach labels to USIM Card.
 Malfunction may result.

Important

- USIM Card is the property of SoftBank.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to SoftBank upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Back up USIM Card files. SoftBank is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Customer Center, General Information (P.14-40).

USIM PINs

There are two Security Codes for USIM Card; both are *9999* by default.

PIN	Security Code to prevent unauthorized use of handset
PIN2	Required to clear Call Costs and to set Max Cost, etc.

PIN Lock

 Entering incorrect PIN three consecutive times activates PIN Lock or PIN2 Lock, limiting handset use.

Canceling PIN Lock

 Contact SoftBank Customer Center, General Information (P.14-40) for your Personal Unblocking Key (PUK Code) and follow these steps:

Enter PUK Code → ● → Enter new PIN/PIN2 → ● → Re-enter new PIN/PIN2 → ●

■ Write down PUK code.

PUK Lock

 Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. Contact SoftBank Customer Center, General Information (P.14-40) for recovery.




USIM Card Installation

- Do not apply excessive force to insert/remove USIM Card.
- USIM Card must be inserted to use this handset.

Inserting

- Remove battery (P.14-4)
- Slide in USIM Card with IC chip facing up

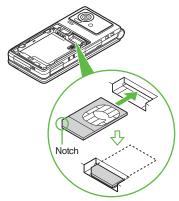

• Reinstall battery (P.14-4).

Removing

Take care not to lose removed USIM Card.

- Remove battery (P.14-4)
- **Gently slide out USIM Card** as shown



• Reinstall battery (P.14-4).

After Repairs, USIM Card Replacement or Handset Upgrade/Replacement

• Some downloaded files may be inaccessible. In addition, S! Applications, BookSurfing®, S! Town and Near Chat may be disabled after USIM Card replacement.



Battery Installation

About Battery

- Charge battery at least once every six months; an uncharged battery may become unusable or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with a dry cotton swab.

Lithium-ion Battery

• This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.



- To recycle a used lithium-ion battery, take it to any shop displaying the symbol shown above.
- To avoid fire or electric shock, do not short-circuit or disassemble battery.

Inserting & Removing





• Press and slide as shown.





 With logo side up, fit tabs into battery cavity slots.

Close cover



• Position and slide the cover gently as shown until it stops.

Removing

• Turn handset power off and lift battery as shown.





Software Update

Check for firmware updates and download as required.

Precautions

- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Update failure may disable handset. To reduce failure risk, make sure signal is strong and stable, and charge battery beforehand.
- Update will not start if other functions are in use. Before updating software (or before scheduled update time), end all active functions/applications.
- Disconnect USB Cable beforehand to reduce failure risk.
- Always back up important information.
 SoftBank cannot be held liable for damages from lost information, etc.

Updating Software

Packet transmission fees do not apply to updates (including checking, downloading and rewriting).







Follow onscreen instructions.

Setting Update Period (Japanese)

In ②, Update Period → •

■ Follow onscreen instructions.

Update Result

In ②, Update Result ▶ ●

Scheduled Update

Confirmation appears at scheduled update time. Press
o or wait a while for update to start.

When Updated

A message appears and handset reboots.



After reboot, completion message appears and Information window opens.

Update Result

While Information window appears, *Update Result* **▶ ●**

Reboot Failure

 If handset does not return to Standby after update, turn power off, reinsert battery, then restart it. If it still does not restart, contact SoftBank Customer Center, Customer Assistance (P.14-40).

Troubleshooting

■ General

Problem	Possible Cause	Solution
	Was pressed long enough?	Press 💿 longer.
Handset won't turn on	Battery may need to be charged or replaced.	Charge battery or install a charged battery.
	Battery may not be properly installed.	Install battery properly (P.14-4).
Handset won't respond	Is Switch On/Off in PIN Entry On ?	If <i>On</i> , PIN is required. Enter PIN according to onscreen prompt.
Insert USIM Card	USIM Card may not be properly inserted.	Turn power off and check that USIM Card is properly inserted, then restart handset. If the message still appears, USIM may be damaged.
appears	The correct USIM Card may not be inserted.	Make sure the correct USIM Card is inserted. The inserted USIM Card may not be valid.
	There may be debris on IC chip/terminals.	Clean relevant parts with a dry cloth and re-insert.
REFRESH appears and handset returns to Standby	Handset may have been dropped or subjected to shocks.	Handset failed to recognize USIM Card temporarily. This is not a malfunction.
Keypad won't	Keypad Lock may be active (# appears).	Cancel Keypad Lock (P.1-18).
respond	Function Lock may be active (appears).	Cancel Function Lock (P.11-2).

Problem	Possible Cause	Solution		
Battery strength indicator flashes when not charging	Ambient temperature may be outside 5°C to 35°C.	Use within an ambient temperature of 5°C - 35°C.		
Saved entry/folder does not appear on handset	Entry/folder may be set to Secret.	Activate Show Secret Data (P.11-3).		
Cannot use Predictive	Show Secret Data may be active.	Cancel Show Secret Data.		
	Handset/AC Charger may warm while charging.	Unless handset/AC Charger is		
Handset/AC Charger feels warm	Handset may warm during extended periods of use.	too hot to touch, warmth is considered normal. Always avoid prolonged skin contact t		
	Handset may warm during Video Calls.	prevent burn injuries.		
Cannot access Memory Card files	Memory Card may not be properly formatted.	Use 930SH-formatted Memory Cards.		
Clock settings are lost	Did you leave handset without battery?	Clock settings remain even when removing battery for replacement, etc. However, if handset is left with no battery or an exhausted one for an extended period of time (approximately one hour), Clock will need to be reset.		

Problem	Possible Cause	Solution	
	Remaining charge shortens charging time.	This is normal.	
Battery charges quickly	Battery may be terminally exhausted or defective. (Small Light flashes red.)	Replace battery with a new one.	
Battery charges	Charging slows during Video Calls.	End the call to charge faster.	
slowly	Battery may be charging via USB.	Use AC Charger.	
	AC Charger may not be properly connected to handset.	Make sure connector is securely inserted and retry.	
	AC Charger may not be firmly plugged in to AC outlet.	Remove plug from outlet, re-insert and retry.	
Battery won't charge	Battery may not be properly installed.	Install battery properly (P.14-4).	
	Battery, AC Charger, or Charging Terminals, or Device Port may be obstructed by dust, etc.	Clean terminals, connector and Port with a dry cotton swab and retry.	
	Charger, etc. may not be supported.	Use specified AC Charger, etc. only; others may damage battery.	

Problem	Possible Cause	Solution			
Battery Time	High power consuming operations are in use.	Keep handset closed in Standby; reduce TV, S! Application, Media Player and Camera use, and limit transmissions/external connections.			
seems shorter than usual	Using handset in poor conditions may shorten Battery Time.	Avoid prolonged use of handset out-of-range or in poor signal conditions.			
	Power hungry settings may be active.	Lower Brightness, select shorter Display Saving/ Backlight time, etc.			

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes	
(as 1 ○	あいうえお ぁぃぅぇぉ	アイウエオ @./-1 ァィゥェォ □ (space)		1	1	
± 2 ĝ	かきくけこ	カキクケコ	ABCabc2	2	2	
₹3₽	さしすせそ	サシスセソ	DEFdef3	3	3	
æ4 ^a i	たちつてとっ	たちつてとっ タチツテトッ GHIghi4 4				
₹5 ₺	なにぬねの	ナニヌネノ JKLjkl5 5		5	5	
# 6 M	はひふへほ	ハヒフへホ	ハヒフへホ MNOmno6 6		6	
* 7 §	まみむめも	マミムメモ PQRSpqrs7		7	7	
₹8€	やゆよゃゅょ	ヤユヨャュョ TUVtuv8 8		8	8	
6 9 ¥	らりるれろ	れろ ラリルレロ WXYZwxyz9 9		9	9	
₹0	わをんー	ワヲンー	0	0	0	
(8) X +	* •	* * _1		★ + P (pause) ? -²		
E4X 7		Log, Pictogram List (do	uble-byte), Symbol List3			
5 # [@]	,	0	,-	#		
(#°)		l (line break) ? ! 🗌 (space	e)	π		

¹- is available only in single-byte katakana entry.

²Available for phone number entry; some characters may not be enterable in some windows.

³May not be enterable in some windows.

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
③	Conversion (up) ⁴		Curs	or up	
②	Conversion (down) ⁵		Cursor down		
(0)			Cursor left		
<u>•</u>			Cursor right		
Q X P			Change entry mode		
	Tog	ggle case (for some charact	ers)		
(A)			Toggle mode (upper/ lower and lower case)		
CLEAR (S)			Delete one character		
(BACK 65)	Cancel conversion				Delete code
(Long)		1	Delete before or after curso	r	
		Reco	over characters deleted with	GLEAR BACK SS	
ĵ.	Re-convert ⁶				
•		•	OK		
	Phonetic Conversion				
Į.	Hiragana to Katakana/ Alphanumeric Conversion				

 ⁴Cursor moves up except during conversion.
 ⁵Cursor moves down except during conversion.
 ⁶Press mimmediately after inserting characters to re-convert them.

Gray background indicates upper and lower case available. Press . to switch immediately after character entry.

■ Double-byte Upper Case

			Second Digit (Press Next)								
		1	2	3	4	5	6	7	8	9	0
	1	あ	(1	う	え	お	Α	В	С	D	Ε
First)	2	か	き	<	け	IJ	F	G	Н	_	٦
這	3	ゎ	し	す	せ	そ	K	┙	М	Ν	0
(Press	4	た	5	つ	て	۲	Р	Q	R	S	Т
Pre	5	な	に	ぬ	ね	の	U	٧	W	Х	Υ
<u>:</u>	6	は	S	ふ	^	ほ	Ζ	?	!	_	/
Digit	7	ま	み	む	め	も	¥	&			*1
	8	ゃ	(ゆ)	ょ	X	#	Space	8	*2
First	9	6	IJ	る	れ	ろ	1	2	3	4	5
	0	わ	を	h	*	۰	6	7	8	9	0

■ Double-byte Lower Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
		1	2	3	4	5	6	7	8	9	0
	1	あ	(1	う	え	お	а	b	С	d	е
First)	2						f	Q)	h	:-	j
臣	3						k	_	m	n	0
SS	4			n			р	a	r	S	t
Pre	5						u	٧	W	Х	У
it (6						Z				
Oig	7										*1
st [8	や		ゆ		ょ					*2
First Digit (Press	9										
	0					_					

■ Single-byte Upper Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
		1	2	3	4	5	6	7	8	9	0
	1	7	1	ġ	I	t	Α	В	С	D	Е
First)	2	Л	‡	ク	ታ	٦	F	G	Ι	_	٦
	3	Ħ	ッ	λ	t	y	K	١	М	Ν	0
SS	4	9	£	ŋ	Ŧ	١	Р	Q	R	S	Η
Pre	5	t	П	Z	À	1	٦	٧	W	Χ	Υ
<u>=</u>	6	/\	Ł	7	٨	*	Z	?	!	-	/
Digit (Press	7	₹	"	۵	¥	ŧ	¥	&		7	*1
st [8	þ	(1)	3	X	#	Space	8	*2
First	9	ī	IJ	Jb.	V	П	1	2	3	4	5
	0	7	7	ン	*	۰	6	7	8	9	0

■ Single-byte Lower Case

		Second Digit (Press Next)												
		1	2	3	4	5	6	7	8	9	0			
	1	7	1	ġ	I	t	а	b	С	d	е			
rst)	2						f	gg	h	-	j			
正	3						k	1	m	n	0			
SS	4			ッ			р	q	r	s	t			
Pre	5						u	٧	w	х	У			
= =	6						z							
jgi	7										*1			
First Digit (Press First)	8	t		1		3					*2			
i Z	9													
	0				,									

^{*1}Press ₱7 ₱ ₱0 to insert 🖋 (line break) in mail message text, Notepad, etc.

^{*2}Press 83 to toggle upper and lower case modes.

Character Code List

First Three				L	ast	Di	git				First Three				Las	Di	git				First Three		Last	Dig	it			First Three			Last	t Diç	git		
Digits	0	1	2	3	3 4	. 5	5 6	3 7	8		Digits	0	1	2	3 4	1 5	5 6	7	8	9		0 1 2	3 4	1 5	6	7	8 9	Digits	0 1	2	3 4	4 5	6	7	8 9
010 011 012	! "	(Space		9			. ^	:	;	?	047 048	ゆゐ	よゑ		らしん) 3	られ	13	わ	わ	161 162 163	葵 茜 穐 梓 圧 戟 監 東	悪扱給	3姐	虻:	章給暗	苦 絢 蒙	188 189 190	介绘懷	戒	回拐械	欠			怪悔絵芥
013 014	- "	/,,	(, ^)	-	- Ì	·. [. ' {	}	050 051	オブ	カ	ガ	イキ、	ř 5	7 5	゛ケ	-		164	鞍杏		(١ -			-	191 192	蟹開慨概	階涯	貝哥	肌 刻	外方該	咳鎧	害崖骸浬
015 016 017	+ /=				٠ ٠ ٩	_ =	′	"			052 053 054	-	タド	ダナ	= 3	デッスオ		ラグハ	デバ	デパ	164 165 166	威尉惟移維緯	伊意胃育	易衣	椅:	為違	夷 異 医	193 194 195	馨拉赫	格郭	核関	没 獲 忌 幸	確学	穫兵	各
018 019 020	\$ *					> _ _	× ×) § • **	☆	055 056 057	Ì	ポョ	ピマヨ	フミラ	フランノノ	ァヘモレ	ベヤロ			167 168 169	引 飲 淫	鰯ヶ胤商	印		壱月[益逸因姻	198	叶椛	笠活樺	樫渇鞄	骨毛供	福富	潟轄蒲	割且盤鎌
021 022 023		· -	- ↑ > L	1			∈	=	9 ⊆	\supseteq	058 060	苹		ヲ B	ン 5	ijt. ΔΕ) ク		Θ	1	170 170	院陰	隠音	う -		宇』	- 尿急	199 200 201	噛 鴨 勘 勧	柏川巻	茅苅	宣轧乾	元侃	冠	寒刊寛干
024			^	. \	/ —		> <= = :-	ľ	′∃ <>		061 062 063		Λ	M	N Ξ Ψ Ω	2		I P	Σ		171 172 173	迂雨 明 蘭 三 軍	鵜魚	E 是 既	碓浦.	白河瓜	烏渦嘘噂	202 203 204	幹款等	感汗	慣漢	惑 換	環	柑甘	?桓監誓 檀看
027 028 029		~	· .	- 5	S. 5.1	ſ	, ,			۰ ¶	064 065	θ σ			λ	LV	/ ξ	0	π		173 173 174		荏魚	える叡田	営	嬰爿	影類認	205 206 207	+諌舘鷹	還含	鑑岸	冒限	関	陥	元韓館 岩 翫
031 032	4	5	6				3) 1		3	070 071 072	Τ	У	Κ Φ	В Г Л М Х L		ic	П	Р	С	175 176 177	閱榎厭掩援沿	演步	見堰	煙	宴		207 208	_			き企			_ 喜 器 揮 机
033 034 035	H R	S	J T	K	L	. N	V X	I C) P	Q	073 074 075	б	Э	Γ	Д				И		178 178	艶 苑 薗		お -		於	- 汚甥	209 210 211	旗機機能	期帰規	寄棋毅記簿	₹ 表 表	畿軌	祈輝:	季稀駒
036 037 038	f p	q	h		j s t	k k	: 1	m	d n n x		076 077 078	ф	Л Х Я		H (D F				у	181	凹 央 興 明 時 間 明 時 間	横沟	双侧	王屋	翁信	襖 鴬 桶	212 213 214	鬼镊		機製結	× 義語 翻記	L 滅 I 議 i 砧	投掬杵	擬類素
039 040 041	z ä	あか	ヽヵ	1 =	りきき	トラくす		* H		_	080 081	_	-	<u> </u>	Γ		ا ا	E	Ŧ	- 	182 182	牡乙俺	卸总	湯温 か -	想	音	- 下化	215 216 217	客宮究	急	逆救級挙	1.5 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4	汲出	泣牛	及
042 043 044	لے	لح ا	ただな	きに	5 き	うこ なれ) = Q ().		うてはば	でぱ	082 083	-		‡	+-		ľ	+		Т	183 184 185	家寡科禍禾稼	価服用	架苛	歌茄	河荷	夏火華	218 219 220	巨禦魚供	亨侠	享僑	包競	許	M	鋸漁協匡
045 046		7	ĸ Ũ	8 13	いら	13	10	\ ^	べつや	ほ	160		亜	唖	娃阝	あ引家	变变	挨	: 始	逢	186 187	蝦課嘩我牙画	貨边	0過	霞!	蚊化	俄峨親駕	221 222	卿叫挟教	喬	境山	夹強王狭	強彊	怯	恐春興



First Three	Last Digit	First Three	Last Digit	First Three	Last Digit	First Three	Last Digit
Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9
223 224	蕎鄉鏡響饗驚仰凝尭暁 業局曲極玉桐粁僅勤均 中錦斤旅欽琴禁禽88	257 258	号合壕拷濠豪轟麹克刻 告国穀酷鵠黒獄漉腰甑	293 294	従 戎 柔 汁 渋 獣 縦 重 銃 叔 夙 宿 淑 祝 縮 粛 塾 熟 出 術	329 330	煽旋穿箭線 繊羨腺舛船薦詮賎践 選遷銭銑閃鮮前善漸然
225	中錦斤欣欽琴禁禽筋緊	259	忽惚骨狛込	295	述俊峻春瞬竣舜駿准循	331	選選銭銑閃鮮前善漸然
226	芹菌衿襟謹近金吟銀	260 261	此頃今困坤墾婚恨懇 昏昆根梱混痕紺艮魂	296 297	及 成 成 方 成 行 板 時 時 連 利 が 大 の で を 情 順 り 初 が ま に に に に に に に に に に に に に	332	全禅繕膳糎
226		001		298	醇順処初所暑曙渚庶緒 署書警請講助叙女序徐	332	噌塑 岨 措 曾
227 228	俱句区为软	261 262	佐 叉 唆 嶢 左 差 杳 沙 瑳 砂	299 300	短额除傷價 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個	333 334	知 蘇 卦 旧 潮 曷 傳 創 V 叢
229	電車 一 一 一 一 一 一 一 一 一 一 一 一 一	263	詐 鎖 裟 坐 座 挫 倩 催 再 最	301	勝匠升召哨商唱嘗獎	335	組蘇訴阻避縣質別國際自動,與國際與一個國際與一個國際,與一個國際與一個國際,與一國國際,與一國國一國國國一國國際,一國國際,
230 231	加 屈 省 乳 轡 洼 熊 陵 采 栗 繰 桑 鍬 勲 君 薫 訓 群 軍	264 265	哉塞妻宰彩才採栽歲済 災采犀砕砦祭斎細菜裁 戦際剤在材罪財冴坂阪	302 303	彰承抄招掌捷昇昌昭晶 松梢樟樵沼消渉湘焼焦 照症省硝礁祥称章笑粧	336 337	技 押 捶 撰 异 晋 果 信 慴 漕 燥 争 痩 相 窓 糟 総 綜 聡
232	郡	266 267	載際剤在材罪財冴坂阪	304 305	照症省硝礁祥称章笑粧紹肖菖蒋蕉衝裳訟証詔	338 339	漕燥争痩相窓糟総綜聡草屛烙養
232		268	堺榊肴咲崎埼碕鷺作削 咋搾昨朔柵窄策索錯桜 鮭笹匙冊刷	306	紹 肖 菖 蒋 蕉 衝 裳 訟 証 詔 詳 象 賞 醤 鉦 鍾 鐘 障 鞘 上	340	霜騷像増増 促側則即息 腹蕨贈造促側則即続
233 234	珪型契形径恵慶慧憩掲 携敬景桂渓畦稽系経継	269 270	鮭 笹 匙 冊 刷 察 拶 撮 擦 札 殺 薩 雑 皐	307 308	無紹詳文情 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個	341 342	捉 束 測 足 速 俗 属 賊 族 続 卒 袖 其 揃 存 孫 尊 損 村 遜
235	繋罫茎荊蛍計詣警軽頚	271	鯖捌賃鮫皿晒三傘参山	309	醸 錠 嘱 埴 飾		
236 237	鶏 芸 迎 鯨 劇 戟 撃 激 隙 桁 傑 欠 決 潔 穴 結 血 訣 月 件	272 273	惨 撒 散 桟 燦 珊 産 算 纂 蚕 讃 賛 酸 餐 斬 暫 残	310 311	B酸 触心疹。 全球 大幅 大幅 大幅 大幅 大幅 大幅 大幅 大幅	343 344	他多太汰詑 唾堕妥惰打 柁舵楕陀駄騨体堆対耐
238	倹 倦 健 兼 券 剣 喧 圏 堅 嫌			312	蝕 辱 尻 伸信 侵 唇 娠 寝 審 心 慎 振 新 晋 森 榛 浸 深 申 疹 真 神 秦 紳 臣 芯 薪 親 診	345	岱帯待怠熊戴替泰滞胎
239 240	建憲懸拳捲檢権牽犬献研硯絹県	273 274	任仔伺 使刺司史嗣四士始姉姿	313 314	疹真神秦紳臣芯薪親診 身辛進針震人仁刃塵壬	346 347	腿苔袋貸退逮隊黛鯛代 台大第醍題鷹滝瀧卓啄
241	肩見謙賢軒遣鍵険顕験	275	子屍市師志思指支孜斯	315	尋 甚 尽 腎 訊 迅 陣 靭	348	宅托択拓沢濯琢託鐸濁 諾茸凧蛸只
242 243	一人 一人 一人 一人 一人 一人 一人 一人 一人 一人	276 277	紙 紫 肢 脂 至 視 詞 詩 試 誌	315		349 350	即 但 達 辰 奪 脱 巽 竪 辿
243		278 279	紙紫肢脂至視詞詩試誌 諮資賜雌飼歯事似侍児 字寺慈持時	316 317	須酢図厨逗吹垂帥推水	351 352	即但達辰奪脱巽竪辿棚谷狸鱈樽誰丹単嘆坦 担探旦歎淡湛炭短端箪
244	乎個古呼固 姑孤己庫弧戸故枯湖狐	280	次 滋 治 爾 璽 痔 磁 示 而	317	須酢図厨逗吹垂帥推水 炊睡粋翠衰遂酔錐錘随 瑞髓崇嵩数枢趨雛据杉	353	綻 耽 胆 蛋 誕 鍛 団 壇 弾 断
245 246	脚落贴拙流电容竖耸屏	729.1	耳自蒔辞汐鹿式識鳴竺軸宍雫七叱執失嫉室悉	319 320	相菅頗雀裾 澄摺寸	354	暖檀段男談
247	を を を を を を を を を を を を を を	283	湿漆疾質実蔀篠偲柴芝		t	354	値知地弛恥
248 249	乞 鯉 交 佼 侯 候 倖 光 公 功 効 勾 厚 口 向	284 285	屡 蕊 縞 舎 写 射 捨 赦 斜 煮 社 紗 者 謝 車 遮 蛇 邪 借 勺	320 321	世瀬畝是凄制勢姓征性成政整星晴棲	355 356	智池痴稚置致蜘遅馳築畜竹筑蓄逐秩窒茶嫡着
250		200	l 尺 杓 灼 爵 酌 釈 錫 若 寂 弱	322	柄 下 清 牲 牛 感 精 聖 声 製	357	中仲宙忠抽昼柱注虫衷
251 252	巧巷幸広庚康弘恒慌抗 拘控攻昂晃更杭校梗構	287 288	惹主取守手朱殊狩珠種腫趣酒首儒受呪寿授樹	323 324	西誠誓請逝醒青静斉稅 脆隻席惜戚斥昔析石積	358 359	田中门机备处校基准注户中门机备处校基准注户时间的电压电子 化多种 化二甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基
253	江洪浩港溝甲皇硬稿糠	289	授需囚収周 京 計划 悠 秋 长 洲 禾 秋	325 326	籍績脊責赤跡蹟碩切拙接摂折設窃節説雪絶舌	360	帖帳庁弔張彫徵懲挑
254 255	巧拘江紅航 村上 大 大 大 大 大 大 大 大 大 大 大 大 大 大 大 大 大 大	290 291	經需囚収周 宗就州修愁拾洲秀秋 終繍習臭舟蒐衆襲讐蹴 輯週酋酬集醜什住充十	326	蝉仙先千占宣専尖川戦	361 362	暢朝潮牒町眺聴脹腸蝶 調諜超跳銚長頂鳥勅捗
256	砿鋼閝降項香高鴻剛劫	292	輯週酋酬集醜什住充十	328	扇撰栓栴泉浅洗染潜煎	363	直朕沈珍賃鎮陳



First Three	Last Digit	First Three	Last Digit	First Three	Last Digit	First Three	Last Digit
Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9
363 364 365		392 393 393	粘乃廼之埜嚢悩濃納能 脳膿農覗蚤 は 巴把播覇杷	424 425 426	僻壁癖碧別瞥蔑箆偏変 片篇編辺返遍便勉娩弁 鞭ほ	449 450 451	ー φ ー ー ー ー ー ー ー ー ー ー ー ー ー ー ー ー ー ー
366 366	演布辻蔦綴鍔椿漬坪壷嬬紬爪吊釣鶴	394 395 396	波派琶破婆罵芭馬俳廃 拝排敗杯盃牌背肺輩配 倍培媒梅楳煤狽買売賠	426 427 428	保舗鋪圃捕歩甫補輔 穂募墓慕戊暮母簿 佐包末報 を包まれ	452 452	石 裕 誘 遊 邑 郵 雄 融 夕 よ
367 368 369 370	製 負 呈 堤 提 梯 便 係 任 任 任 任 任 任 任 任 任 任 任 任 任 任 任 任 任 任	397 398 399 400		429 430 431 432	抱 捧 放 方 息 題 題 題 題 題 題 題 題 題 題 的 后 題 ら 。 ら ら ら ら り ら り ら り ら り ら り ら り ら り ら	453 454 455 456	余与營與預傭幼妖容庸 揚揺擁曜楊様洋溶熔用 窯羊耀葉蓉要謡踊遥 養慾抑欲沃浴翌翼淀
371 372 373	股紅	402 403 404	抜 筏 閥 鳩 噺 塙 蛤 隼 伴 判 半 反 叛 帆 搬 斑 板 氾 汎 版 犯 班 畔 繁 般 藩 販 範 釆 煩	433 434 435 436	望某棒冒紡肪膨謀貌貿 鉾防吠頬北僕ト墨撲朴 牧睦穆釦勃没殆堀幌奔 本翻凡盆	456 457 458	マリスティッション
373 374 375 376 377 378	堵賭怒宕盗。 性	405 405 406 407 408	頒飯挽晩番盤磐蕃蛮 - ひ- 卑のにて彼を悪い。 電子のでは、 では、 では、 では、 では、 では、 では、 では、		ま 摩磨魔麻埋 妹 味 枚 毎 哩 槙 幕 膜 枕 鮪 柾 幌 林 板 毎 曜 槙 幕 膜 枕 鮪 柾 樹 暦 万 慢 満 漫 蔓	458 459 460 461 462	ラリー 種類 では、 では、 では、 では、 では、 では、 では、 では、
379 380 381 382	答筒糖統到 董蕩藤討謄豆踏逃透 鐙陶頭騰闘働動同堂導 懂撞洞瞳童胴萄道銅峠	409 410 411 412	正計 此 於 於 於 於 於 於 於 於 於 於 於 於 於	440 441	ーー・みーー・ 味未魅巳箕岬密 蜜湊蓑稔脈妙粍民眠 ーー・むーー・	463 464 465	両凌寮料梁涼猟療瞭稜糧良諒遼量陵領力緑倫 厘林淋燐琳臨輪隣鱗 ニーー る~わ
383 384 385 386	鴇匿得徳涜特督禿篤毒 強読栃橡凸厚教福属 寅酉瀞噸屯 ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・	413 414 415 415	サメ 川山	4.40	夢無牟矛霧鵡椋婿娘 一一め一 名命明盟迷銘鳴姪牝滅 毎娘線緬面麺	466 467 468 469 470	瑠塁淚累類令伶例 / / / / / / / / / / / / / / / / / / /
386 387 388	奈那内乍凪薙 謎灘捺鍋楢馴縄畷南楠 軟難汝	416 417 418 419	之。 一、 一、 一、 一、 一、 一、 一、 一、 一、 一、	444 444 445		470 471 472	スラー スター スター スター スター スター スター スター スター スター スタ
388 389 390	二尼弐迩匂賑肉 虹廿日乳入 如尿韮任妊忍認 ぬ~の	420 421 422	福腹複覆淵弗払沸仏物鮒分吻噴墳憤扮焚奮 粉糞紛雰文聞———~~	446 447 447	目 杢 勿 餅 尤 戻 籾 貰 問 悶 紋 門 匁 ・や	473 473	肋録論 わ
390 391	濡禰 袮寧葱猫熱年念捻撚燃	422 423	丙 併 兵 塀 幣 平 弊 柄 並 蔽 閉 陛 米 頁	448 449	也冶夜爺耶野弥 矢厄役約薬訳躍靖柳薮 鑓	475 476	碗腕



First Three

Digits

477

478

479

480

481

482

Last Digit

式 所 不 个 丱 、 丼 丿 乖 乘 亂 亅 京 亳 亶 从 仍 仄

历仗例例任价值供估佛 523

0 1 2 3 4 5 6 7 8 9

496	529 530 531 531 535 535 536 536 537 538 538 538 540 541 542 543 545 54	用堡墟墙将夭奢 姜婀嫋嬌孀學寔寶尹 岑峇崗嵌嶢鹟将、增、素本學好研啶嫂彈子李寐尅屁屐岔峙嵜嵒鰺縣工臺壞廛久夾獎妝姚娵嫣嬲字亡寶專屎房岫峽崛嵋嶮似地發墙壜夊竒篴佞娥竪媉嫐孛它寢對屓屬岻峺嶌嵬嶽爫圯ଖ墸壤敻奕 娃娟婢嫦嬪孥宦寰尠 乢岬嶌単嵶聚店裡塹壅壯梦奎 妲娜媚嫖斓훩下、寶專屎房岫峽崛嵋峻巡地野壓壺夥奚 姆娉媼孄孃孳寇寰尨 屹峅華崙嶄巉急地擊擊	568 569 570 571 572 573 574 575 576 577 578 580 581 582 583 584 586	©愴慆憇應懣戉 扞抓拆挌捍掉揉攝撓 舉擺攵敞斷圧懪愽慯憬犪懶戍戞扣抖擔拮搜掟插搗撥據擠攀攷敝旃旱©懵傷憹犪懶戍戞扣抖擔拮搜掟插搗撥據擠攀攷敝旃旱燃慘憬憿騰	608 609 610 611 612 613 614 615 616 617 620 621 622 623 624 625	你禮榧樛樔樶檍 櫑欖歉殀殯毬氣汾泅 洽浚涵淅瘓頚 人 人 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一
499	知 538539540541542543545546547	寶尹 岑咨崗嵌器 医侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧侧	578 579 580 581 582 583 584	攝撓 舉鄉文敘所无昴晨爾 舉鄉文敘所无昴晨爾	618 619 620	沿级 在 河沟 海河 河沟 河沟 河河 河河 河河 河河 河河 河
509 壁咬哄哈咨 510 咫吨咤咤局听哥哦 511 唐哽啅唉啗嗚唳呎 512 售쪬啤嗷嗡嗚呎啝單啼 513 咯喊喟啻啾喘唧單啼	549 第 550 空 551 喀 552	廟 ቦ 原	589 590 591 592 593 594 595 596	暨 暹曉 暾 歐 歐 歐 歐 歐 歐 歐 歐 歐 歐 歐 歐 歐 歐 康 康 服 數 歐 康 朦朧 氧 礼 机 析 柱 标 相 标 机 析 相 标 机 析 相 标 相 相 框 格 榜 格 检 梳 榕 格 格 格 格 格 格 格 格 格 格 格 格 格	629 630 631 632 633 634 635 636	滲漱沸濕滌潺涛清 澁溫濂海 濱溝溝溝 濱溝潭澤 東 濱溝潭 溪灣潭 溪灣 河 灣 灣 灣 灣 灣 灣 灣 灣 灣 灣 灣 灣 灣 灣 灣 灣 灣

Last Digit

嚼囁囃囀囈囎囑囓□囮

圷圳坎圻址坏坩埀垈坡

坿垉垓垠垳垤垪垰埃埆

埔埒埓堊埖埣堋堙堝塲

2 3 4 5 6

面画菌

或 圍 圓 惠

First Three

Digits

519

520

521

0.1

Last Digit

怕怫怦快怺恚恁恪恷恟 恊恆恍恣恃恤恂恬恫恙

愆惶惷愀惴惺愃惚惻 愍愎慇愾殼愧慊愿愼

2 3 4 5 6

First Three

Digits

559

560

561

8

Last Digit

2 3 4 5 6 梟梏梭梔條梛梃檮梹桴 梵梠梺椏梍桾椁棊椈棘 椢椦棡椌棍

楷糊楸楫楔楾楮椹楴椽

楙 椰 楡 楞 楝 榁 楪 榲 榮 槐

First Three

Digits

597

598

599

600

601

602

603

8 9



First Three	Last Digit	First Three	Last Digit	First Three	Last Digit	First Three	Last Digit
Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9
637	熙熙煦煢煌煖煬熏燻炊	677	竊針竏竕竓站竚竝竡竢	717	艷艸艾芍芒芫芟芻芬苡	757	諞諛謌謇謚諡謖謐謗謠 謳鞫韾謪謾謨譁譌譏譎
638	煩熨熬燗熹熾燒燉燔煮	678	竦竭蝉笂笏笊笆笳笘笙	718	苣苟苒苴苳苺莓范苻苹	758	謳鞫謦謪謾謨譁譌譏譎
639	燠 燬 煫 燵 燸	679	笞 笵 笨 笶 筐	719	苞 茆 苜 茉 苙	/59	證 潜 證 譜
640	菱燿爍爐爛爨爭爬 爲爻爼爿牀牆牋牘牴牨			720	一 茵茴茖茲茱荀茹荐荅 茯茫茗茘莅莚莪莟莢莖	760	譟譼譯讉譽讀讌讎讒 讓讖讙讚谺豁谿豈豌豎
641	爲爻爼爿牀牆牋牘牴牯 犂犁犇犒犖犢犧犹犲袑		筧 筰 筱 筬 筮 箝 箘 箟 箍 箜	721	茯茫茗荔莅莚莪蓍莢莖	761	讓讖讙讚谺豁谿豈豌豎豐豕豢豬豸豺貂貉貅貊
642 643	犂 犁 犇 犒 犖 犢 犧 犹 犲 狙 狆 狄 狎 狒 狢 狠 狡 狹 狷 倘	683		722 723	莫莎莇莊茶莵荳荵莠莉 莨菴萓菫菎菽萃菘萋菁	762 763	豐豕豢豬豸豺貂貉貅貊貍貎貔豼貘戝貭貪貽貲
644	清 猊 猜 猖 猝 猴 猯 猩 猥 ¾		族 節 篳 篷 築 簍 篶 簣 簧 簪	723	民 电 且 重 民 叔 平 松 姜 丙 蒂 萇 菠 菲 萍 萢 萠 莽 萸 蔆	764	主
645	獎獏默獗獪獨獰獸獵鳥	f 685		725	林 葭 萪 萼 蕚 蒄 葷 葫 蒭 葮	765	賻贄贅贊誓贏贍贐齎贓
646	類珈玳珎玻珀珥珮珞珥		籘 籟 籤 籤 籥 籬 籵 粃 粐 粤	726	蒂葩葆萬葯葹萵蓊葢蒹	766	賻贄贅贊贇驘贍贐齎贓 賍贔贖赮赭赱赳趁趙跂
647	琅瑯琥珸琲琺瑕琿瑟珠	≦ 687	給 粢 粫 粡 粨 粳 粲 粱 粮 粹	727	蒿蒟蓙蓍蒻蓚蓐蓁蓆蓖	767	趾趺跏跚跖跌跛跋跪跫
648	瑁瑜瑩瑰瑣瑪瑶瑾璋瑪		粽糀糅糂糘糒糜糢鬻糯	728	蒡 蔡 蓿 蓴 蔗 蔘 蔬 蔟 蔕 蔔	768	跟跣跼踈踉跿踝踞踐踟
649	壁瓊瓏瓔珱	689	糲糴糶糺紆	729	蓼蕀蕣蕘蕈	769	蹂 踵 踰 踴 蹊
650 651	瓠瓣 瓧瓩瓮瓲瓰瓱瓦 瓷甄甃甅甌甎甍甕甓			730 731	蕁蘂蕋蕕薀薤薈薑薊 薨蕭薔薛藪薇薜蕷蕾薐	770 771	蹇蹉蹌蹐蹈蹙蹤蹠踪 蹣蹕蹶蹲蹼躁躇躅躄躋
652				732	薨蕭薔薛藪薇薜蕷蕾薐 藉薺藏薹藐藕藝藥藜藹	772	
653			緇綽綫總綢綯緜綸綟綰	733	租	773	察 躾 軅 軈 軋 軛 軣 軼 軻 軫
654	疊疊疊弄灰疝疥疣痂和		緘緝緤緞緻緲緡縅縊縣	734	· · · · · · · · · · · · · · · · · · ·	774	軾 輊 輅 輕 輒 輙 輓 鯔 輟 輛
655	痃 疵 疽 疸 疼 疱 痍 痊 痒 疹		縡縒縱縟縉縋縢繆繦縻	735	蚋 蚌 蚶 蚯 蛄 蛆 蚰 蛉 蠣 蚫	775	輌 輦 輳 輻 輹 轅 轂 輾 轌 轉
656	痣 痞 痾 痿 痼 瘁 痰 痺 痲 痳	₹ 696	縵 縹 繃 縷 縲 縺 繧 繝 繖 繞	736	蛔蛞蛩蛬蛟蛛蛯蜒蜆蜈	776	轆轎轗轜轢轣轤辜辟辣
657	瘋瘍癥瘟瘧瘠瘡瘢瘤糧	6 97	繙繚繹繪繩繼繻纃緕繽	737	蜀蜃蛻蜑蜉蜍蛹蜊蜴蜿	777	辭辯上迚迴迢迪迯邇迴
658	瘰 瘻 癇 癈 癆 癜 癘 癡 癢 煟		辦艦纈纉續纒纐纓纔纖	738	蜷 蜻 蜥 蜩 蜚 蝠 蝟 蝸 蝌 蝎	778	逅 迹 迺 逑 逕 逡 逍 逞 逖 逋
659 660	癩 癪 癧 癬 癰 癲 癶 癸 發 皀 皃 皈 皋 的	699 700	纖 纛 纜 缸 缺	739 740	蝴蝗蝨蝮蝙 蝓蝣蝪蠅螢螟螂螯蟋	779 780	浴菱逵逹迸 遏遐遑遒逎遉逾遖遘
661	院 皓 晳 皚 皰 皴 皸 皹 皺 置	701	罅罌罍罎罐网罕罔罘 罟罠罨罩罧罸羂羆羃羈	740	職 奶 物 地 虫 跃 即 鱼 彩	781	遞遨遯遠隨遲邂遽邁邀
662	去 盖 盒 盞 盡 盥 盧 盪 蘯 F		弱	742	蟯蟲蟠蠏蠍蟾蟶蟷蠎蟒	782	邊邊羅邨邯邱邵郢郤扈
663	皖哲		羹 羶 羸 譱 翅 翆 翊 翕 翔 翡	743	蠑蠖蠕蠢蠡蠱蠶蠹蠧蠻	783	郛鄂鄒鄙鄲鄰酊酖酘酣
664	眸睇睚睨睫睛睥睿睾睛	704	翦翩翳翹飜耆耄耋耒耘	744	衄 衂 衒 衙 衞 衢 衫 袁 衾 袞	784	酥酩酳酲醋醉醂醢醫醯
665	瞎瞋瞑瞠瞞瞰瞶瞹瞿り			745	祖 衽 袵 衲 袂 袗 袒 袮 袙 袢	785	醪醵醴醺釀釁粙釋釐釖
666	瞽瞻矇矍矗矚矜矣矮硕	I 706	聚智聢聨聳聲聰聶聹聽	746	抱袤袰袿袱裃裄裔裘裙	786	釟 釜 釛 釼 釵 釶 鈞 釿 鈔 鈬
667	砌砒礦砠礪硅碎硴碆磃		津肄肆肅肛肓肚肭冐肬	747	裝裹褂裼裴裨裲褄褌編	787	鈕鈑鉞鉗鉅鉉鉤鉈銕鈿
668 669	碚碌碣碵碪碯磑磆磋碌 碾碼磅磊磬	708 709	胛 胥 胙 胝 胄 胚 胖 脉 胯 胱 脛 脩 脣 脯 腋	748 749	褓襃褞褥褪禠襁襄褻褶 褸襌褝襠襞	788 789	鲍 鉐 銜 銖 銓 銛 鉚 鋏 銹 銷
670	碾碼磅磊磬 磧磚磽磴礇礒礑礙 礫祀祠祗祟祚祕祓祺		所 所 朋 服 隋 腆 脾 腓 腑 胼 腱 腮 腥	749 750	樓 襌 褝 襠 襞 襦 襤 襭 襪 襯 襴 襷 襾 覃	790	鋩 錏鋺鍄錮 錙錢錚錣錺錵錻鍜鍠
671	礫祀祠祗祟祚祕祓祺澈		腦腴膃膈膊膀膂膠膕膤	751	要 覊 覓 覘 覡 覩 覦 覬 覯 覲	791	鍼鍮鍖鎰鎬鎭鎔鎹鏖鏗
672	禊禝禧齋禪禮禳禹禺		膣腟腸膩膰膵膾膸膽臀	752	覺 覽 覿 觀 觚 觜 觝 觧 觴 觸	792	鏨 鏥 鏘 鏃 鏝 鏐 鏈 鏤 鐚 鐔
673	秕 秧 秆 秡 秣 稈 稍 稘 稙 秋	713	臂膺臉臍臑臙臘臈臚臟	753	1. 芳 訐 訂 辦 訝 訥 訶 詰 詛	793	镦 鐃 鐇 鐐 鐶 鐫 鐡 鐡 鐺 鑁
674	稟禀稱稻稾稷穃穗穉 穢穩龝穰穹穽窈窗宨暑		臠臧臺臻臾舁舂舅與舊	754	治詆詈詼詭詬詢誅誂誄 誨滅誑誥誦誚誣諄諍諂	794	鑒 鑄 鑛 鑠 鑢 鑞 鑪 鈩 鑰 鑵
675	穢 穩 龝 穣 穹 穽 窈 窗 窕 著		舍舐舖舩舫舸舳艀艙艘	755	海滅誑誥誦誚誣諄諍諂	795	鑷 鑽 鑚 鑼 鑾 钁 鑿 門 閇 閊
676	窖窩竈窰窶竅竄窿邃竇	716	艝 艚 艟 艤 艢 艨 艪 艫 舮 艱	756	諚諫諳諧諤諱謔諠諢諷	796	閔閑閘鬧閠閨閧閭閼閻



(Q	
		Ĭ

First Three	Last Digit		First Three			Last					First Three					t Di				First Three					Digi			
Digits ()	1 2 3 4 5 6 7	8 9	Digits	0 1	2	3 4	5	6	7 8	3 9	Digits	0	1	2	3 .	4 5	5 6	7	8 9	Digits	0	1	2 3	4	5	6	7 8	9
797 798 800 801 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 821 822 823 824 825 826 828 829 830 831 831	閾闡陋陜隧雉霓霽靦鞆韃訽顋顱飩餤饋駇駻驂驥髑髮髺鬩魑鮨鯢鰉鰥閍闥焀陟殗嫑霩靨鞋韆頏顫顴飫餠饑郮騴驀驤髓髴鬆閜魘鮴蜫鰓鯯闠阡攺陲隰雜雺魗靫鞐箿頱顰颪銄篒饌駝騏賝驫髞氜鬚鬯鮓鯊鯡鱔瓣闦阨 啝隴霍霖靈靱鞜韐轁頤 颯僾餽饕跲騅驕驪髟 鬟鬲鮃鮹鯵鰈鱇闌斻 隍隶雕霙瓥靹鞨韭頏 颭餔餾馗鴑騈驍骭髢 鬢蚫鯆鯲鰒鰲闌斻 隉隶雕霙瓥靹鞃韭頏 颭餔餾尨鴑駢驍骭髩	閻陂 隕隹霄霪靜靶鞣韲頹 飄餡饉馥駁蔫驗骼髦 鬥魏鮗鯑鯰鰄鰾鴈鴕 鶉鷁鷦麁麸點闖陌 隗雎霆霰靠鞁鞳竟顆 飃餝饅馭駱騷驟髀髯 鬧魍鮟鯒鰕鰮鱚鳫鴒 鶫鶻鷭麈麪黝		電 離 藍 藍 藍 藍 藍 藍	離調	皷鼕齠齠	· A a a a a a a a a a a a a a a a a a a	鼬鼻齧齒			·																	

Weather Indicator List

Basic Status									
*	Clear skies (day)								
2)	Clear skies (night)								
9	Cloudy								
	Rain								
·	Snow								
4	Thunder showers								
O %	Chance of rain: 0%								
10%	Chance of rain: 10%								
20%	Chance of rain: 20%								
30%	Chance of rain: 30%								
40%	Chance of rain: 40%								
50%	Chance of rain: 50%								
♦	Chance of rain: 60%								
↑ 70%	Chance of rain: 70%								
80%	Chance of rain: 80%								
90%	Chance of rain: 90%								
100%	Chance of rain: 100%								
	Then								
	Partly/chance of								

Pollen Count									
	Low								
A	Moderate								
	High								
	Extreme								

Cherry Blossom									
	Flowering								
	Almost full bloom								
*	Full bloom								
	Beginning of petal fall								

Fall Foliage	
*	No color change
A S	Colors appearing
*	Peak
*	Defoliating

Ultraviolet	
	Low
	Moderate
*	High
	Extreme

Typhoon	
<u></u>	Forming
S	Approaching
(%)	Caution necessary

Disaster	
Æ	Heavy rain
2	Gale

Information	
₫	Notification



Specifications

SoftBank 930SH

Weight	Approximately 110 g
Continuous	Approximately 230 minutes (3G)
Talk Time	Approximately 210 minutes (GSM)
Continuous Standby Time	Approximately 300 hours (3G)
	Approximately 270 hours (GSM)
	(handset closed)
	AC Charger: Approximately
Charging Time	135 minutes
(power off)	In-Car Charger: Approximately
	140 minutes
Dimensions	Approximately 48 x 105 x 15.2 mm
	(handset closed, without
(W x H x D)	protruding parts)
Maximum	0.25 W (3G)
Output	2.0 W (GSM)

- Above values calculated with battery installed
- Continuous Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Continuous Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals. In Japan (3G service area), the value is calculated with IP Service Setting, Decoration Call and S! Appli Communication set to Off.
- Talk Time/Standby Time may vary with environment, status, settings, etc.
- Display employs precision technology, however, some pixels may appear brighter/darker.

Handset Materials

Parts	Materials & Finishing
Housing (Display side, Keypad side)	Nylon resin/SUS (insert-molded), discontinuous deposition/UV painting
Housing (Display back hinge edges, Keypad side hinge), External Display window	ABS resin, discontinuous deposition/UV painting
Housing (Display back)	SUS, two-part coating, UV painting (SUS, electrodeposition coating for Silver)
Housing (Keypad side)	PC resin (with UV coating)/PET (with UV coating)
Housing (battery side), Battery Cover	ABS resin, UV painting
Display window, camera lens, Camera ornament panel (including Infrared Port)	Acrylic resin
Multi Selector, Center Key	Aluminum, anodized aluminum paint
Start Key, Power On/Off Key, Mail Key, Yahoo! Keitai Key, Shortcuts & A/a Key, Clear/Back Key, TV & Text Key, Multi Job & Manner Key, Keypad, Mobile Light	PC resin

Parts	Materials & Finishing
Side Keys	PC resin, deposition/ UV painting
External Device Port Cover, Headphone Port Cover, Memory Card Slot Cover	PC resin/Elastomeric resin, discontinuous deposition/UV painting
Charging Terminals	SUS/Gold plating (sealer: nickel)
Screw (all pieces)	SWCH12A/Trivalent chromate, EPDM O-ring seal
USIM pin	Copper alloy/Gold plating (sealer: nickel)

Accessories

Battery

Voltage	3.7V
Battery Type	Lithium-ion
Capacity	710 mAh
Dimensions	Approximately 37.7 x 46.9 x 4.2 mm
(W x H x D)	(without protruding parts)



Basic Operations

■ Wallpaper/Standby Window

Standby Window 3 tags (100 characters each)

■ Text Entry

User Dictionary	250 entries (5 per reading) Word: 15 characters Reading: 8 hiragana
Acquire Dictionary	5 dictionaries
Paste List	10 text strings
Recoverable	15,360 characters
Deleted Characters	(30,720 bytes)

■ Phone Book

Entry	1,000 entries
Name/Reading	Last/First: 32 characters each
Phone Number	5 numbers (32 digits each)
Mail Address	5 addresses (128 characters each)
Category	16 Categories
Address	Postal Code: 20 characters Country: 32 characters Others: 64 characters each
Office	Office Name/Division/Post: 32 characters each
Homepage	1,024 bytes
Note	256 characters
Mail Groups	20 Groups (20 members each) Group name: 16 characters

■ Data Folder

Memory	100 MB (shared with Templates
Moniory	folder and S! Appli Library)

Calling

Dialed Numbers	Dialed Numbers: 30 records Dialed Frequency: 10 records
Received Calls	30 records
Answer Phone/ Caller Voice	20 messages or 90 seconds
Auto Answer List	10 numbers
Decoration Call	100 KB including 20 characters
Speed Dial/Mail	100 numbers/addresses

Messaging

	Received	10 MB or
	Msg.	3,000 messages
	Drafts	
	Sent	5 MB (or
Memory	Messages	1,000 messages for
welliol y	Unsent	Sent Messages)
	Messages	
		100 MB (shared with
	Templates	Data Folder and
		S! Appli Library)
PC Mail/S! Mail	E10 single hute sharestore	
Subject	512 single-byte characters	
PC Mail/S! Mail	Approximately	
Message	30,000 single-byte characters	
SMS Message	160 single-	byte alphanumerics
Auto Resend	2 times	
Attachment	20 files or 3	300 KB
Send Reservation	10 messag	es
Signature	256 single-	byte characters
Recipient	20 numbers/addresses	
	20 folders (20 sort keys each)	
Folder	20 folders (20 sort keys each)
Folder	20 folders (Memory	300 messages per folder
Folder Chat Folder		

Graphic Mail	1 sound or Flash® file, or 40 images/ My Pictograms (with 1 sound or Flash® file)	
3D Pictogram	150 characters	
Auto Reply	20 numbers/addresses (256 single-byte characters each)	
Anti Cuero	Individual	20 entries
Anti Spam Measures	Permitted List	20 entries

■ PC Mail Settings

PC Mail	Account	3 accounts
Account	Account Name	20 characters
	User Name	128 characters
Set	Password	40 characters
Receiving	ReceivingServer	128 characters
	Port Number	1 to 65535
Set Sending	Sender Name	20 characters
Set Sending	Mail Address	128 characters
PC Mail DL	Individual Address	20 addresses

Yahoo! Keitai & PC Site Browser

	Yahoo! Keitai	300 KB per page
Download	PC Site	1 MB per file
	Browser	i wib per file
History	300 pages	
URL Entry Log	10 URLs	
Bookmarks/	100 pages 3 tabs at one time	
Saved Pages		
Tab		
Input Memory	20 entries	
Streaming	10 URLs 30 entries (30 KB per entry)	
History		
RSS Feeds		



Q

Digital TV

Recorded File	ISDB-T mobile Video profile (SD-Video standard)		
Pagarding Time	Handset	Approximately 30 minutes	
Recording Time (example)	Memory Card	Approximately 80 minutes on 256 MB Memory Card	
Marker	99 Markers (10 per file)		
Split File	99 portions per file		
Time Shift Recording	30 minutes		
Reservation List	5 entries (4 hours each on 1 GB Memory Card)		

Camera & Imaging

■ Mobile Camera

Effective Pixels	8.0 Megapixels
Auto Shut-off Time	Approximately 3 minutes

■ Photo Camera

Zoom	1x - 5.1x	
	8M	2448 x 3264
	3M	1536 x 2048 (QXGA)
	Full HD	1080 x 1920
	2M	1200 x 1600 (UXGA)
Picture Size	1.2M	960 x 1280 (Quad-VGA)
(W x H dots)	Normal HD	768 x 1366
	Wallpaper	480 x 854
	VGA	480 x 640
	Mail L	240 x 320 (QVGA)
	Mail S	120 x 160 (QQVGA)
Scanner Image Size	Free, 1200 x 640, 480 x 1488,	
(W x H dots)	1280 x 960	

File Format	JPEG
Memory	Approximately 40 files* (8M, High Quality)
File Name	yymmdd_hhmmss
Recording Distance	Macro: 10 cm
Long Exposure	Exposure time: 4 seconds
Background Save	3 files
Face Auto Focus	VGA or larger
Other	Use 40 KB or smaller transparent PNG files as Frames

*Approximate value for handset with no files.

■ Video Camera

Zoom	1x - 5.1x	
		864 x 480 (Wide)
		640 x 480 (VGA)
	Extended	320 x 240 (QVGA)
Record Size	Video	240 x 176 (HQVGA)
(W x H dots)		176 x 144 (QCIF)
		128 x 96 (SubQCIF)
	For	176 x 144 (QCIF)
	Message	128 x 96 (SubQCIF)
File Format	3GP	
	Extended Video	Approximately
Recording Time		30 minutes* on
per Shot		Memory Card
per onot	For Message	295 KB
File Name	yymmdd_hhmmss 1.5 m in good light 3 images HQVGA or larger	
Recording Distance		
Still Image Capture		
Recording Pause Supported		

*Varies with handset usage, location or settings.

■ Editing Images

	Picture Editor	Resize (W x H dots)	Wallpaper (480 x 854) Power On/Off (480 x 854) Incoming Call (320 x 320) Alarm (480 x 208) Pictogram (96 x 96) VGA (480 x 640) QVGA (240 x 320) Cut
		Retouch	52 x 52 dots or larger JPEG/PNG images
		Paste	16 characters
		Correction	52 x 52 dots or larger JPEG/PNG images
	Composite	Merge Panorama	JPEG images between W 48 x H 64 dots and 240 x 320 dots

Media Player & S! Applications

■ Media Player

	W١
Supported	Se
	(Sc
	on

MA (.wma), AAC (.mp4/.3gp/.m4a), ecure AAC (SD-Audio standard) ome files may not play depending sampling frequency and bit rate)

S! Applications

	100 items or 100 MB (shared
	with Templates folder and other
	folders in Data Folder)
Remote Control	Approximately 5 m

Handy Extras

■ PIM/Lifestyle

Calendar*/ Tasks	300 entries, Subject: 32 characters Description: 128 characters Location: 16 characters Set Holiday: 10 holidays	
Alarms	5 entries, Subject: 9 characters	
Wakeup TV	Auto Shut-off	Approximately 30 minutes
Calculator	999,999,999,999	
Expenses Memo	30 entries (999,999.99 yen each)	
Osaifu-Keitai®	Remote Lock password: 5 - 16 single-byte alphanumerics	

*Preset holidays are based on Japanese calendar as of September 2008.

■ Timer/Clock

Stopwatch	23 hours 59 minutes 59.9 seconds in 0.1-second increments Lap time: 4 records
Countdown Timer	60 minutes in 1-second increments
World Clock	City name: 16 characters

Doc./Rec.

Dictionary	Meikyo Japanese Dictionary: Approximately 47,100 words/phrases Genius English-Japanese Dictionary: Approximately 45,700 words/phrases Genius Japanese-English Dictionary: Approximately 55,800 words/phrases	
Document Viewer	Supported Microsoft® Excef® (.xls) Formats Microsoft® Word (.doc) Microsoft® PowerPoint® (.ppt)	
	File Size 10 MB	
Notepad	500 entries (8,192 characters each)	
Voice Recorder	For Approximately Message 3 minutes per file Extended 99 hours 59 minutes Voice 59 seconds	
Scan Barcode	UPC/JAN 50 codes QR Code 16 codes	
(Continuous Mode)		
Create QR	Equivalent of 513 digits,	
Code	311 alphanumerics or 131 kanji	
Scan Text	256 characters	

■ Entertainment

S! Quick News	Special: 1 item News Flash: 1 item General: 4 items
e-Books	Copy text strings of up to 20 characters

Communication Services

S! Loop

S! Loop List 5 items

S! Friend's Status

Member	30 members
My Status	Name: 7 characters Comment: 15 characters Status Label: 4 characters
Status Templates	Template name: 12 characters

S! Circle Talk

Participant	11 members	
Speak Time	30 seconds each	
Member List	30 entries (10 members per Group)	

■ Blog Tool

Blog Details	5 entries	
	Blog Menu	16 characters
	URL (Yahoo! Keitai)	1,024 characters
	URL (PC Site Browser)	1,024 characters
Blog Settings	Email Address	128 characters
blog Settings	Title	32 characters
	Text	128 characters
	Picture Size	S (320 x 320) M (640 x 640) L (1024 x 1024) Send

Connectivity & File Backup

■ Infrared

Infrared	IrMC 1.1 Range Within 20 cm Receive 2 MB or smaller JPEG images	
Transfer		
IrSS Transfer		

■ Bluetooth®

Communication System	Bluetooth® specification Ver. 2.0	
Supported Profiles	Headset Profile Hands-Free Profile Dial-up Networking Profile Object Push Profile File Transfer Profile Basic Imaging Profile Advanced Audio Distribution Profile Audio/Video Remote Control Profile	
Output	Bluetooth® Power Class 2	
Range	Within 10 m	
Device Search	16 devices	
Pairing	32 devices	
Device Name	16 characters	
Printing	JPEG/PNG images	

■ Memory Card

Backup File Name	yymmddXX* (XX: 2 digits/alphabets)

*yymmdd for Contents Keys.

S! Addressbook Back-up

Lon	10 Backup/Restore/
Log	Synchronization records

Network



Add Network

5 Networks
Country/Network code: 3 digits
Name: 25 single-byte characters

Reference URLs

■ SOFTBANK MOBILE Corp.

http://mb.softbank.jp/mb/en/

■ microSD[™] Memory Card Compatibility

From PC (Japanese)

 $http://k-tai.sharp.co.jp/peripherals/sd_support.html$

From Handset (Japanese) http://shweb.sharp.co.jp/

http://shweb.sharp.co.jp/

S! Addressbook Back-up
http://mb.softbank.jp/mb/en/service/advanced/sab/

■ SVG-T

From Handset (Japanese)

http://shweb.sharp.co.jp/svgt/index_pdc.html

Association for Promotion of Digital Broadcasting

From PC

http://www.dpa.or.jp/english/

From Handset (Japanese)

http://www.dpa.or.jp/1seg/k/

Memory Card Structure & Contents

Memory Card Structure		ire	Contents (Location when Viewed on Handset)	
DCIM	XXXSHARP			Still images in DCIM
		Local Contents		SD Local Contents
		Mail		Messaging folder backups (Received Msg., Sent Messages and Drafts)
			Book	e-Book files in Data Folder (Books)
			Bookmarks	Yahoo! Keitai Bookmarks
			Character	PNG files in Data Folder (Character)
			CSI	Decoration Call files in Data Folder (Decoration Call)
			Custom Screens	Customized Screen files in Data Folder (Customized Screen)
			Flash(R)	Flash® Wallpaper files in Data Folder (Flash®)
PRIVATE			Flash(R) Ringtones	Flash® ringtones in Data Folder (Flash® Ringtones)
			Games and More	S! Applications
	MYFOLDER	My Items	Hot Status Template	Template files in Data Folder (Status Templates)
	MYFOLDER		Message Templates	Graphic Mail templates in Templates folder
			Music	Music files in Data Folder (Music)
			Other Documents	Other files in Data Folder (Other Docs)
			Pictograms	GIF files in Data Folder (My Pictograms)
			Pictures	Still images in Data Folder (Pictures)
			Sounds & Ringtones	Melodies and other sound files in Data Folder (Ring Tones)
			Videos	Video files in Data Folder (Videos)
			Virtual Space	S! Town files
			WMAudio	WMA files for Media Player (WMA)
		SH_Folder		Application management files
		Utility		Backup files (Phone Book), etc.
	SHARP	MOBILE	•	Backup files (User Dictionary), etc.
SD_AUDIO		•	•	SD-Audio files for Media Player (SD AUDIO)

Menu List

Messaging

	·	
	Refer to	
Received Msg.		P.4-10
Create Messa	nge	P.4-4
Retrieve New	1	P.4-21
Drafts		P.4-26
Templates		P.4-20
Sent Messag	es	P.4-10
Unsent Mess	ages	P.4-26
Chat Folder		P.4-13
	Mail List	P.4-21
Server Mail	Retrieve All	P.4-21
Box	Delete All	P.4-24
	Mailbox Volume	P.4-27
Create New SMS		P.4-7
	Address Settings	P.4-3
	General Settings	P.4-27
	S! Mail Settings	P.4-29
Settings	PC Mail Settings	P.4-16
	SMS Settings	P.4-31
	Speed Dial/Mail	P.4-18
	Set Mail Group	P.4-14
Memory Status		P.4-23

■ Settings: General Settings

Function		Refer to
	Delivery Report	P.4-28
	Reply to Settings	P.4-28
,	Reply with Text	P.4-28
Send/ Compose	Auto Reply	P.4-23
Compose	Set Quick Reply	P.4-23
	Auto Resend	P.4-28
	Sending Status	P.4-28
	Message Notice	P.4-28
Receive	Link to Feeling	P.4-29
Receive	3D Pictogram	P.4-29
	Animation View	P.4-28
Anti Spam Measures		P.4-12
Report Spam		P.4-27
Scroll Unit		P.4-27
Message List View		P.4-27
Address View		P.4-27
Received Msg. View		P.4-27
Sent Msg. View		P.4-27
Auto Delete	Received Msg.	P.4-27
Auto Delete	Sent Messages	P.4-27

■ Settings: S! Mail Settings

Function		Refer to
Message DL(Japan)		P.4-29
Message DL(Abroad)		P.4-29
Signature		P.4-18
Picture Appearance		P.4-30
Auto Play	Pictures	P.4-30
File	Sounds	P.4-30
Send File Settings		P.4-30

■ Settings: PC Mail Settings

Function	Refer to
PC Mail Account	P.4-16
PC Mail DL	P.4-30
Check New Mail	P.4-30
Word wrap	P.4-30

■ Settings: SMS Settings

Function	Refer to
Expiry Time	P.4-31
Message Center	P.4-31
Char-code	P.4-31

Yahoo! Keitai

Function	Refer to
Yahoo! Keitai	P.5-3
Bookmarks	P.5-7
Saved Pages	P.5-7
Enter URL	P.5-3
History	P.5-3
PC Site Browser	P.5-4
Browser Settings	P.5-14

■ PC Site Browser

Function		
Homepage		
	P.5-7	
	P.5-7	
	P.5-4	
	P.5-4	
	P.5-8	
Yahoo! Keitai		
Font Size	P.5-14	
Scroll Settings	P.5-14	
Cursor Settings	P.5-14	
Downloads	P.5-14	
Memory Op.	P.5-14	
Security Settings	P.5-15	
Download to	P.5-14	
Initialized Browser	P.5-15	
Reset Settings	P.5-15	
Warning Message	P.5-14	
Zoom Factor	P.5-10	
Zoom Area	P.5-10	
Softkey Area	P.5-4	
	Font Size Scroll Settings Cursor Settings Downloads Memory Op. Security Settings Download to Initialized Browser Reset Settings Warning Message Zoom Factor Zoom Area	

■ Browser Settings

Function	Refer to
Font Size	P.5-14
Scroll Unit	P.5-14
Cursor Settings	P.5-14
Downloads	P.5-14
Memory Op.	P.5-14
Security Settings	P.5-15
Download to	P.5-14
Initialized Browser	P.5-15
Reset Settings	P.5-15

S! Appli

Function	Refer to
S! Appli Library	P.8-8
Osaifu-Keitai	P.9-12
Demand History	P.8-8
Settings	P.8-13
Information	P.8-13

■ Settings

Function		Refer to
Application V	Application Volume	
Backlight		P.8-13
Vibration		P.8-13
Synchronization		P.8-13
Communication		P.8-13
Calls & Alarms		P.8-12
Screensaver	Switch On/Off	P.8-12
	Activation Time	P.8-12
	Stop Auto Start	P.8-12
Surround		P.8-12
Set to Default		P.8-13
Memory All Clear		P.8-13

ΤV

Function	Refer to
Digital TV	P.6-5
TV Player	P.6-9
TV-Image Folder	P.6-7
TV Link	P.6-13
TV Listing	P.6-6
Familink Remote	P.1-3
Reservation List	P.6-10
Settings	P.6-12

■ Settings

	Function	Refer to
	Alarm	P.6-16
	Vibration	P.6-16
TV Alarm	Light	P.6-16
	Alarm Time	P.6-16
	Duration	P.6-16
	Set Recording	P.6-14
	Image Location	P.6-14
Broadcast	Notify Connection	P.6-13
Data	Location	P.6-13
	Manufacture Number	P.6-13
	Delete StationData	P.6-13
Screen Size		P.6-11
Landscape Sets.		P.6-12
Sound Output		P.6-12
Sound Output		P.6-12
Set Call Time Shift		P.6-14
Calls & Alarms		P.6-12
TV Reserve Prior		P.6-16
Save Recording to		P.6-14
Auto Exit	Auto Exit Time	P.6-12
Auto Exit	Close Action	P.6-12
Smooth Mode		P.6-11
<u> </u>		



Q

Function		Refer to
Photo Came	ra	P.7-4
Video Camer	a	P.7-5
	Scan Barcode	P.9-23
Barcode/ Scan	Scan Card	P.9-25
Scan	Scan Text	P.9-26
Review		P.7-6
Photo Camera Settings	Picture Size	P.7-15
	Picture Quality	P.7-14
	Settings	P.7-14
Video Camera Settings	Record Time/Size	P.7-16
	Microphone	P.7-16
	Settings	P.7-14

■ Photo Camera

Function		Refer to
	Exposure	P.7-4
Shooting	Focus Setting	P.7-14
Settings	White Balance	P.7-15
	Internal Camera	P.7-15
	Add Frame	P.7-7
	Continuous Shoot	P.7-7
Modes	Camera Effects	P.7-7
	Long Exposure	P.7-8
	Panorama/Scanner	P.7-8
Barcode/Scan		P.9-23
Data Folder		P.7-6
Picture Size		P.7-15
Scene		P.7-15
Picture Quality		P.7-14
Self-timer		P.7-7
Settings		P.7-14
ISO Sensitivity		P.7-15

Function	Refer to
Help	P.7-4
Mobile Light	P.7-14

■ Video Camera

Function		Refer to
Record	Exposure	P.7-4
Settings	Focus Setting	P.7-14
Display Size		P.7-16
Data Folder		P.7-6
Record Time/Size		P.7-16
Microphone		P.7-16
Video Quality		P.7-14
Self-timer		P.7-7
Settings		P.7-14
Internal Camera		P.7-16
Help		P.7-4
Mobile Light		P.7-14

■ Photo Camera Settings: Settings

Function	Refer to
Display Indicators	P.7-15
Shutter Sound	P.7-15
Save Pictures to	P.7-14
Auto Save	P.7-14
Background Save	P.7-15
Panorama Settings	P.7-16
Set Remote Shutter	P.7-16
Set Send Key	 P.7-15

■ Video Camera Settings: Settings

Function	Refer to
Save Videos to	P.7-14
Auto Save	P.7-14

Entertainment

Function		Refer to
S! Quick News		P.9-27
	What's New	P.9-28
	Back Issue	P.9-28
S! Information Channel/ Weather	Registration/Cancel	P.9-28
	Get Latest Contents	P.9-43
	Notification	P.9-42
	Weather Indicator	P.9-28
BookSurfing		P.9-29
e-Book Viewer		P.9-29

S! Quick News

- 0: 44:01:10:10		
Function		Refer to
S! Quick News List		P.9-27
S! Loop List		P.9-41
Settings	Automatic Update	P.9-41
	Show Image	P.9-42
	Check Schedule	P.9-42
	Change Skin	P.9-42
	Delete S! Quick News Lists	P.9-42

S! Information Channel/Weather: Weather Indicator

Function		Refer to
Weather		P.9-43
Manual Update		P.9-28
Settings	Standby Setting	P.9-43
	Weather Notif.	P.9-43
	Icon Update	P.9-43

Tools

■ PIM/Lifestyle

Function		Refer to
Calendar		P.9-2
Alarms		P.9-6
Wakeup TV		P.9-8
Tasks		P.9-4
Calculator		P.9-10
Expenses Memo		P.9-11
Osaifu-Keitai		P.9-12
	Run Pretense Call	P.9-36
	Switch On/Off	P.9-15
Pretense Call	Set Caller	P.9-15
	Calling Timing	P.9-15
	Set Silent	P.9-36

■ PIM/Lifestyle: Osaifu-Keitai

Function		Refer to
Lifestyle-Appli		P.9-12
IC Card Settings	IC Card Status	P.9-35
	IC Card Lock	P.9-13
	Remote Lock	P.9-13
	Interface Settings	P.9-35
	Balance Info	P.9-35
	Set to Default	P.9-35

■ Timer/Clock

Function	Refer to
Stopwatch	P.9-16
Countdown Timer	P.9-17
World Clock	P.9-18
Hour Minder	P.9-19
Battery Meter	P.1-18

Doc./Rec.

Function		Refer to
Dictionary		P.2-14
Search		P.2-16
Document Vie	ewer	P.9-20
Notepad		P.9-21
Scratch Pad		P.2-17
W-1	Record Time	P.9-37
Voice Recorder	Ring Songs-Tones	P.9-22
	Save Recording to	P.9-37
	Scan Barcode	P.9-23
Barcode/ Scan	Open Barcode	P.9-37
	Create QR Code	P.9-24
	Scan Card	P.9-25
	Scan Text	P.9-26
	Scanned Results	P.9-38
Phone Help	•	P.1-18

Data Folder

Function	Refer to
Pictures	P.7-9
DCIM	P.2-21
Ring Tones	P.9-22
S! Appli	P.8-8
Music	P.2-21
Videos	P.2-21
Lifestyle-Appli	P.9-12
Books	P.2-21
Customized Screen	P.2-6
Status Templates	P.2-21
Decoration Call	P.3-7
Flash®	P.2-21
Other Docs	P.2-21
Memory Status	P.2-21

Media Player

	Function	
Music	Music	
Videos		P.8-6
Streaming		P.5-11
Cattings	Sound Output	P.8-9
Settings	Delete All WMA	P.8-10
MTP Mode		P.8-4

■ Music

Function		Refer to
Last Played	Music	P.8-9
My Music		P.8-7
SD AUDIO	SD AUDIO	
WMA		P.8-5
Download Music		P.8-3
Music Search		P.8-3
Settings	Sound Effects	P.8-9
	Playback Mode	P.8-9

■ Videos

	Function		Refer to
Ī	Last Played V	ideo	P.8-9
Ī	My Videos		P.8-6
	SD VIDEO		P.8-6
Ī	Download Videos		P.8-3
		Playback Mode	P.8-9
		Backlight	P.8-9
	Settings	Display Size	P.8-9
		Sound Effects	P.8-9
		Web Link Setting	P.8-9



Communication

Function	Refer to
S! Town	P.10-2
S! Loop	P.10-2
S! Friend's Status	P.10-3
S! Circle Talk	P.10-6
Near chat	P.10-8
Blog Tool	P.10-9

Phone

Function		Refer to
Phone Book		P.2-20
Add New En	try	P.2-18
Information		P.1-22
Call Log		P.3-9
Play Messag	jes	P.3-4
Call Voicema	ail	P.3-12
Category Co	ontrol	P.2-19
My Details		P.1-18
Speed Dial/Mail		P.3-8
Mail Groups		P.4-14
S! Addressbook Backup		P.12-15
	Sort Entries	P.2-20
	Select Phone Book	P.2-31
Ph.Book Settings	Save New Entry	P.2-31
Settings	New Number Prompt	P.2-29
	View Settings	P.2-29
	Copy All	P.2-31
Manage	Memory Status	P.2-31
Entries	Change Mode(All)	P.2-31
	Delete All	P.2-31

Settings

■ Phone Settings

	Function	Refer to
Mode Settings		P.1-22
Display		-
Customize		P.2-27
Sounds & Al	erts	P.2-7
Date & Time		P.13-2
Set Key Ligh	it	P.13-4
言語選択 (La	nguage)	P.13-3
User Diction	ary	P.2-13
Set Key Sho	rtcut	P.1-11
	Display Change	P.1-15
Motion Control	Action Settings	P.1-15
Control	Action Test	P.1-22
Ringer Outp	ut	P.13-5
Earpiece Volume		P.3-14
Change Menu		P.1-12
	Switch On/Off	P.1-19
	Double Mode	P.1-21
	Password Entry	P.1-23
Double Number	Mode Name	P.1-23
Settings	Reject By Line	P.1-23
octango	Show Missed	P.1-23
	Packet Warning	P.1-23
	Send Priority	P.1-23
Locks		P.11-2
Software Update		P.14-5
Master	Reset Settings	P.13-8
Reset	Reset All	P.13-8

■ Phone Settings: Display

	. ,	
	Refer to	
Wallpaper		P.2-5
System Graph	nics	P.13-3
VeilView	Pattern Setting	P.1-23
veiiview	Density Setting	P.1-23
Display Effect	ts	P.13-3
Font Settings		P.2-2
	Clock/Calendar	P.13-4
Standby	Standby Window	P.2-4
Display	Show Indicators	P.13-4
	Show Operator Name	P.13-4
Vivid Mode		P.13-3
Mini Battery		P.1-23
Greeting Message		P.13-4
	Duration	P.13-4
	Messages	P.13-4
External Display	Display Date&Time	P.13-4
Display	Clock Type	P.13-4
	Caller Display	P.13-4
Backlight		P.13-3
Display Saving		P.13-3
Dial Number		P.13-3

■ Phone Settings: Sounds & Alerts

Function	Refer to
Volume	P.13-5
Ringtone/videos	P.2-7
System Sounds	P.13-5
Vibration	P.2-7
Event Light	P.13-5
Status Light	P.13-5
Any Key Answer	P.13-5
Surround	P.13-5

■ Phone Settings: Date & Time

Function	Refer to
Set Date/Time	P.13-2
Time Correction	P.13-2
Daylight Saving	P.13-2
Set Time Zone	P.13-2
Clock/Calendar	P.13-4
World Clock	P.9-18
Alarms	P.9-6
Set Holiday	P.9-30
Time Format	P.13-2
Date Format	P.13-2
Calendar Format	P.13-2

■ Phone Settings: Locks

Function	Refer to
PIN Entry	P.11-2
Change PIN2	P.11-6
Face Recog	P.11-4
Function Lock	P.11-2
IP Service Setting	P.13-7
Application Lock	P.11-3
History Lock	P.11-3
Show Secret Data	P.11-3
Set Lock Message	P.11-6
Chg. Handset Code	P.1-17

■ Connectivity

	•	
	Function	Refer to
Bluetooth		P.12-7
Infrared	Switch On/Off	P.12-3
inirared	Send All	P.12-4
IC	Recv. Forwarded	P.12-5
Transmission	Send All	P.12-6
USB Mode	Mass Storage	P.12-10
USB Wode	MTP Mode	P.8-4
USB Charge		P.1-22
Memory Card		P.2-25
	Backup All Items	P.12-18
	Backup Selected Items	P.12-12
Backup/ Restore	Restore All Items	P.12-18
nestore	Restore Selected Items	P.12-12
	Settings/Manage	P.12-18

■ Connectivity: Bluetooth

Function	Refer to
Switch On/Off	P.12-8
Add Device	P.12-8
Paired Devices	P.12-8
Send All	P.12-9
Setting Watch	P.12-17
My Device Settings	P.12-16
My Device Details	P.12-16

■ Connectivity: Memory Card

	Function	Refer to
	Number of Copies	P.7-13
DPOF	Settings	P.7-17
DPOF	Check Settings	P.7-13
	Reset Settings	P.7-17
SD Local Co	ontents	P.2-33
Format Card		P.2-25
Memory Sta	tus	P.2-21

	Function	Refer to
0-11 Ti 0	Call Timers	P.3-10
Call Time &	Data Counter	P.3-18
Cost	Call Costs	P.3-10
	Switch On/Off	P.3-4
Answer	Answer Time	P.3-13
Phone	Guidance Msg	P.3-13
	Volume	P.3-13
	Voicemail	P.3-11
Voicemail/	Diverts	P.3-11
Divert	Cancel All	P.3-12
	Status	P.3-18
	Camera Picture	P.3-20
	Incoming Picture	P.3-20
	Outgoing Picture	P.3-20
	Hold Guidance Pict	P.3-21
Video Call	Backlight	P.3-21
	Loudspeaker	P.3-20
	Mute Microphone	P.3-21
	Remote Monitor	P.3-13
Show My Nur	nber	P.3-20
out Missed Ca	alls	P.3-12
Int'l Calling		P.3-14
Disp. Time/	Display Call Cost	P.3-17
Cost	Call Time Counter	P.3-17
	Outgoing Calls	P.3-20
	Incoming Calls	P.3-20
Call Barring	Rejected Numbers	P.3-19
	Change NW Password	P.3-19
Minute Minde	r	P.3-17

	Function	Refer to
	Switch On/Off	P.3-16
Decoration Call	Play in Receiving	P.3-16
Call	Notice	P.3-16
Auto Answer		P.3-20
Call Waiting		P.3-18

■ NW Settings

	•	
	Function	Refer to
Select Netwo	ork	P.13-6
Select Service	e	P.13-6
Offline Mode	1	P.1-16
Retrieve NW	Info	P.13-6
	URL Setting	P.13-7
Location Info	Datum On/Off	P.13-7
	Location Prop.	P.13-7
Network Info		P.13-6
External Device		P.13-6

Index

Numbe	r
3D Pictogram	4-8, 4-29
Α	
AC Charger Accessing Functions Accessory After-Sales Services Alarms Canceling Deleting Editing entries For Manner Mode Link to World Clk Animation View Answer Phone Anti Spam Measures Any Key Answer Application Lock Auto Focus Auto Reesend Auto Reply Auto Retry Function	1-10
В	
Backlight	12-1112-181-4, 14-41-1810-9, 10-1112-7
Printing images Receiving files	

Sending files	
Bookmarks	
BookSurfing®	9-29
С	
Calculator	
Calendar	
Calendar Settings	
Deleting Schedules	
Editing schedules	
Opening Schedules	
Saving Schedules	
Call Barring	3-11, 3-19
Call Forwarding	
Call Log	3-9, 3-17
Call Time & Cost	
Data Counter	
Call Time Counter	
Call Waiting	
Call Waiting (answering Line 2)	3-18
Call Waiting (answering Line 2)	3-18 3-11, 3-20
Call Waiting (answering Line 2) Caller ID Camera	3-18 3-11, 3-20 7-2
Call Waiting (answering Line 2) Caller ID Camera Auto Save	3-18 3-11, 3-20 7-2
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images	3-18 3-11, 3-20 7-2 7-14 7-4
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure	3-18 3-11, 3-20 7-14 7-14
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera	3-18 3-11, 3-20 7-2 7-14 7-4 7-15
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus	3-18 3-11, 3-20 7-2 7-14 7-14 7-15 7-14
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus Macro	3-18 3-11, 3-20 7-2 7-14 7-14 7-15 7-14
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus Macro Manual Focus	3-18 3-11, 3-20 7-2 7-14 7-14 7-15 7-14 7-14
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus Macro Manual Focus Mobile Light	3-18 3-11, 3-20 7-2 7-14 7-14 7-15 7-14 7-14 7-14
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus Macro Manual Focus Mobile Light Picture Quality	3-18 3-11, 3-20 7-2 7-14 7-15 7-14 7-14 7-14 7-14 7-14
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus Macro Manual Focus Mobile Light Picture Quality Video Quality	3-18 3-11, 3-20 7-2 7-14 7-15 7-14 7-14 7-14 7-14 7-14
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus Macro Manual Focus Mobile Light Picture Quality Video Quality Recording Video	3-18 3-20 7-14 7-14 7-14 7-14 7-14 7-14 7-14 7-14
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus Macro Manual Focus Mobile Light Picture Quality Video Quality Recording Video Review	3-18 3-11, 3-20 7-2 7-14 7-14 7-15 7-14 7-14 7-14 7-14 7-14 7-14 7-15
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus Macro Manual Focus Mobile Light Picture Quality Video Quality Recording Video Review Save Pictures to	3-18 3-11, 3-20 7-12 7-14 7-14 7-15 7-14 7-14 7-14 7-14 7-14 7-14 7-15 7-6 7-6
Call Waiting (answering Line 2) Caller ID Camera Auto Save Capturing Still Images Exposure Internal Camera Locking focus Macro Manual Focus Mobile Light Picture Quality Video Quality Recording Video Review	3-18 3-11, 3-20 7-14 7-14 7-15 7-14 7-14 7-14 7-14 7-14 7-14 7-14 7-14

0 1	
Send	/-14
Center Access Code	
Change NW Password	3-19
Change PIN	
Change PIN2	
Character Code List	
Charging Terminals	
Charging	1-4
Chat Folder 4-13	
Clock/Calendar	
Communication Services	10-1
Composite 7-9	∂, 7-12
Countdown Timer	9-17
Customer Service	
Customized Screen (Japanese)	2-6
D	
Data Broadcast (Japanese)	6-6
Change View (Data)	6-13
Returning to initial window	6-13
Set Recording	
Data Folder 2-2	
Files (attaching)2-2	
Files (moving/copying)	
Files (opening)	
Files (renaming)	
Folders (adding)	
Selecting Multiple Files	
Set Secret (folders)	
Slide Show	
Date & Time	
Calendar Format	
Date Format	
Time Format	
Daylight Saving9-18	
Decoration Call3-7	
Delivery Report 4-8. 4-19	



7

Dialing from Call Log records3-17
Dictionary2-14
Digital TV (→ TV)6-2
Adding Reception Areas6-4
Area Setup 6-4
Auto Exit 6-12
Calls & Alarms 6-12
Change Area 6-11
Image 6-12
Program Info. Search6-11
Save Recording to 6-14
Screen Size 6-11
Set Call Time Shift6-14
Set Channels6-11
Smooth Mode 6-11
Sound Output6-12
Sound Output 6-12
Subtitle/Sound 6-14
Time Shift playback6-5, 6-9
Tone6-12
TV Alarm 6-16
Display1-2, 1-7
Display (settings) 13-3
Backlight13-3
Clock/Calendar13-4
Dial Number
Display Saving
External Display
Greeting Message
Show Indicators
Show Operator Name
System Graphics 13-3
System Graphics
System Graphics 13-3 Vivid Mode 13-3 Display Call Cost 3-17
System Graphics 13-3 Vivid Mode 13-3 Display Call Cost 3-17 Display Effect 4-29
System Graphics 13-3 Vivid Mode 13-3 Display Call Cost 3-17 Display Effect 4-29 Display Effects 13-3
System Graphics 13-3 Vivid Mode 13-3 Display Call Cost 3-17 Display Effect 4-29 Display Effects 13-3 Display Saving 13-3
System Graphics 13-3 Vivid Mode 13-3 Display Call Cost 3-17 Display Effect 4-29 Display Effects 13-3 Display Saving 13-3 Document Viewer 9-20
System Graphics 13-3 Vivid Mode 13-3 Display Call Cost 3-17 Display Effect 4-29 Display Effects 13-3 Display Saving 13-3 Document Viewer 9-20 Double Number 1-19, 1-23
System Graphics 13-3 Vivid Mode 13-3 Display Call Cost 3-17 Display Effect 4-29 Display Effects 13-3 Display Saving 13-3 Document Viewer 9-20

DPOF 7- Add Date 7- Check Settings 7- For All Pictures 7- Index Print 7-	17 13 13
E	
Earpiece 1 Earpiece Volume 3- e-Book Library 9- e-Book Viewer 9- e-Books (Japanese) 9-29, 9- Emergency Calls 3 English 13 Event Light 13 Expenses Memo 9- External Camera 1 External Device Port 1 External Display 1-2, 1-9, 13	14 43 29 43 -2 -3 -5 11 -2 -2
F	
Face Arrange 7- Face Recognition 11 Feeling Mail (receiving) 4 Feeling Mail (sending) 4 Focus (locking) 7- Focus Setting 7- Font Size 2 Format Card 2- Function Lock 11	-4 -5 14 14 -2
G	
General Notes	-6 18 18

Handset Closed	1-2
Handset Code	1-17
Handset Keys	1-3
Handset mail address	
Handset Menus	1-10
Handset Open	1-2
Handset Parts	
Handset Positions	
Handset Power On/Off	1-6
Handset Responses	
Duration (ring time)	
Ringtones	
Vibration	
Headphone Port	
Headphones (answering calls)	
History Lock	
Hold	
Hour Minder	
Assign Tone/Video	
For Manner Mode	
Link to World Clk	
Vibration	
VIDIGUOTI	

IC Card	9-13
IC Card Lock	9-13
Remote Lock	9-13
IC Transmission	12-5
Indicators	1-7
Camera (Viewfinder)	7-3
Display	1-7
External Display	1-9
Messaging (message list)	4-9
Music Playback Window	8-5
Video Playback Window	
Information window	
Infrared	12-2
Receiving files	

Sending files 12-4, 12-16
Infrared Port1-2
Internal Antenna1-2
Internal Camera1-2
International calls 3-4, 3-14
Internet5-2
Accessing 5-3, 5-4
Basic Operations5-5
Browser Settings5-14
Enter URL 5-3, 5-4
History 5-3, 5-4
Saving pages/Bookmarks5-7
Int'l Call3-4
IP Service Setting13-7
IrSS Transfer12-2
17
K
Key Assignments14-8 Keypad Lock1-18
L
Language
M
Mail Groups 4-14 Changing members 4-26 Deleting 4-26 Edit Name 4-26 Main Menu 1-10 Manner mode 1-16 Mass Storage 12-10 Master Reset 13-8 Format Card 2-25

Reset All	13-8
Reset Settings	13-8
Media Player	8-2
Delete All WMA	
Playlists 8-7, 8-	10, 8-11
Sound Output	8-9
Memory All Clear (S! Applications)	8-13
Memory Card	2-24
Format Card	2-25
Opening files	2-25
Memory Card Structure & Contents	
Menu List	
Camera	14-26
Communication	
Data Folder	14-27
Entertainment	14-26
Media Player	14-27
Messaging	
Phone	
S! Appli	
Settings	14-28
Tools	14-27
TV	14-25
Yahoo! Keitai	
Message List View	
Message Notice	4-28
Messages (creating/sending) 4-4, 4	
3D Pictogram	
Attachments	
Drafts	
Edit	4-26
Edit & Send	
Graphic Mail	
Inserting signature manually	
Msg. Settings	
Preview Message	
Recipient status	4-18
Recipients (adding)	
Recipients (editing/deleting)	4-18
Recipients (selecting/entering)	4-18

Resend 4-26 Save to Drafts 4-19 Send Reservation 4-19 Set Auto Play File 4-20 Set Sent Cancel 4-19 Signature 4-18	
Speed Dial/Mail 4-18	
Templates 4-20 Messages (deleting) 4-17, 4-24	
Auto Delete	
Messages (forwarding) 4-27	
Messages (protecting)4-10	
Messages (receiving/checking) 4-8	
Mail List 4-21	
Message List 4-9, 4-23	
Message Window 4-9, 4-22	
Opening new mail out of Standby 4-21	
Retrieving New PC Mail 4-17	
Retrieving new S! Mail manually 4-21	
Save to Data Folder 4-22	
Messages (sorting) 4-12	
Anti Spam Measures 4-12, 4-25	
Messaging (→ SMS, S! Mail, PC Mail) 4-2	
General Settings 4-27	
PC Mail Settings	
Receive (settings)	
S! Mail Settings	
SMS Settings 4-31	
Microphone1-2	
Minute Minder	
Missed Call Notification 3-12	
Mobile Light1-2	
Mode Settings 1-22	
Motion Control 1-14	
MTP Mode 8-4	
Multi Job 1-13	
Music (deleting) 8-10	
Music (downloading) 8-3	
Music (playing)8-5, 8-9	

7	<u>7</u>
N	4

My Details 1-18 Sending via Bluetooth® 12-17 Sending via IC Transmission 12-16 Sending via Infrared 12-16
N
Near Chat (Japanese) 10-8 Network Password 1-17 Notepad 9-21 Edit Text 9-36 Change Category 9-36
0
Offline Mode 1-16 Optional Services 3-11 Optional Services (checking status) 3-18 Osalfu-Keitai® 9-12 Balance Info 9-35 Checking e-money balance 9-35 IC Card Settings 9-13 Locking 9-13 Set to Default 9-35
P
Pager Code List 14-10 PC (connecting handset) 12-10 PC Mail 4-2, 4-15 PC Mail (sending) 4-17 PC Site Browser 5-4 Pen Light 1-18 Phone Book (deleting) 2-31 Phone Book (saving) 2-38 Phone Book (saving) 2-18 Phone Book (using) 2-20 Phone Book search 2-20 Phone Help 1-18 Picture Editor 7-9 PIN Entry 11-2 PIN Lock 14-2

PIN2 Playlists8-7, 8-10, Pretense Call	14-2 8-11 9-15
Q	
QR CodeQuick Operations	1-10
R	
Received Msg. View	3-15 4-22 3-13 9-13 9-14 9-35 9-13 9-35 3-13 4-23 4-23 4-23 13-8 13-8 13-8
S	
S! Addressbook Back-up 1 Confirming user ID & password 1 Set Auto Sync 1 Sync History 1 S! Applications	2-18 2-18 2-18

S! Circle Talk	
Accepting requests	10-7
Initiating	10-7
IP Service Setting	13-7
Registering Members	10-6
S! Familiar Usability	
S! FeliCa (→ Osaifu-Keitai®)	9-12
S! Friend's Status	.10-3, 10-10
IP Service Setting	13-7
Opening Member Status	10-5
Registering Members	
S! Information Channel (Japanese)	
Weather Indicator	9-28
S! Loop (Japanese)	10-2
S! Mail	4-2
Attaching Files	4-5
Feeling Mail	
Graphic Mail	
S! Mail Settings	
S! Mail (sending)	
S! Music Connect (Japanese)	
S! Quick News (Japanese)	
Automatic Update	
Deleting items	
S! Loop List	
S! Town (Japanese)	
Safety Precautions	
SAR	
Saved Pages	
Scan Barcode	
Open Barcode	
Scanning during text entry	
Using scan results	
Scan Card	
Using scan results	
Scan Text	
Scanning during text entry	
Using scan results	9-40
Schedules (→ Calendar)	
Scratch Pad	2-17

Screenshots (capturing)	
Search	
Security Codes	1-1
Sent Msg. View	4-2
Set as Wallpaper	2-3
Set Date/Time	
Set Key Light	13-
Set Key Shortcut	1-1
Set Sent Cancel	
Set Time Zone9	
Set to Default (S! Applications)	
Shortcuts	
Show My Number	
Show Secret Data	
Side Keys	
Signature	
Simple Menu	
Slide W paper	
Small Light	
SMS	
SMS Settings	
SMS (sending)	4-
Snooze	9-6, 9-
Softkeys	
Software Update	
Sounds & Alerts	
Speaker	
Specifications	
Specifications (by function)	14-1
Basic Operations	
Calling	14-1
Camera & Imaging	
Communication Services	
Connectivity & File Backup	14-2
Digital TV	
Handy Extras	
Media Player & S! Applications	
Messaging	14-1
NetworkYahoo! Keitai & PC Site Browser	14-27
tatiou: Keital & PC Site Browser	14-1

Speed Dial/Mail	
Standby	
Standby Window (Japanese)	
Calendar/Tag Panel	
Display Panel	
Display Window	
Member Panel	
News Panel	
Shortcut Panel	
Using Tags	
Status Templates	
Still images (capturing)	
Add Frame	
Camera Effects	
Continuous Shoot	
Correlate to Face	
ISO Sensitivity	
Long Exposure	
Panorama Picture	
Picture Size	
Scanner	
Scene	
Shutter Sound	
White Balance	
Still images (capturing & sending)	
Still images (capturing while record	
video)	7-5
Still images (editing)	
Additional editing options	
Changing sizes	
Face Arrange	
Merge Panorama	
Stopwatch	
Strap Eyelet	
Streaming	
Swap Calls	
System Graphics	
System Sounds	13-5

able of Contents	
asks	
Deleting Tasks	
Editing tasks	9-32
Opening Tasks	
ext (editing)	2-12
ext Entry	
Emoticons	2-10
Hiragana to Katakana/Alphanumeric	
Conversion	2-1
Hiragana	2-9
Input/Conversion	
Inserting line breaks	
Inserting Phone Book entry items	2-28
Inserting spaces	
Katakana	
Mail & Web Extensions	
One-Hiragana Conversion	
Phonetic Conversion	
Pictograms & Symbols	
Quick Conversion	
Reset Log	
Switching Entry Modes	2-8
Undo conversion or recover deleted	
characters	
Using Character Codes	
Using Pager Code	
When Target Word is Not Listed	
ime Correction	
roubleshooting	
V (watching)	
AV Mode6-1	
Channels (saving)	
Data Broadcast (Japanese)	6-6
Help	
Program Info	6-6
TV Listing (Japanese)	
Using wireless Headphones	6-12



Q	
	_

TV Player 6-8 TV programs (recording/playing) 6-8 Copy to Card 6-15
Details 6-15
Marker List
Markers 6-15
Memory Remaining 6-15
Move to Card
Playback Pattern
Playing split files
Recorded programs (deleting) 6-15 Recorded programs (renaming) 6-15
Split File
TV Reserve Prior
TV Timers (watching/recording) 6-10
Setting Timer via Program Info
Timer entries (editing/deleting)
Timer log records (opening/deleting) 6-16
TV Alarm 6-16
Wakeup TV9-8
U
USB Charge 1-4, 1-22
User Dictionary
USIM Card14-2
USIM PINs (→ PIN)14-2
Utility Software12-10
Othity Software12-10
V
VeilView1-18
Vibration 2-7
Video (deleting) 8-11
Video (downloading)8-3
Video (playing)8-6, 8-9
Video (recording) 7-5
Display Size7-16
Microphone7-16
Record Time/Size7-16
Video (recording & sending)7-5

Video Calling	
Remote Monitor	
Video Calls (answering)	
Video Calls (placing)	3-6
Voice Calling	3-3
Voice Calls (answering)	
Voice Calls (placing)	3-3
Voice Calls (placing while abroad)	
Voice Recorder	
Save and Send	
Save Recording to	
Voicemail	
Volume (ringtones)	
` • /	10-5
W	
Wakeup TV	0.0
Wallpaper	
Slide W paper	
Warranty	
Weather Indicator	
Icon Update	
Manual Update	
Weather	9-43
Weather Indicator List	. 14-17
World Clock	
Υ	
Yahoo! Keitai	5-3
Objectives	
Accessing Secret Files/Entries	
Data Folder	2-23
Messaging folders	
Phone Book	
Schedules/tasks	9-3
Accessing the Internet	
From message text	4-22
From scan results9-38	3, 9-40

Media Player	8-3
PC Site Browser	5-4
RSS Feeds	5-8
Yahoo! Keitai	5-3
Browsing/Viewing	
Document Viewer	9-20
e-Books	
PC Site Browser	
S! Information Channel	
S! Quick News	
Yahoo! Keitai	
Calculating	
Calculator	9-10
Expenses Memo	
Canceling	
Alarm	0-7
Answer Phone	
Call Forwarding	
Customized Screen	
Download Dictionary	
Function Lock	
Hour Minder	
IC Card Lock	
Keypad Lock	
Large Font Menu	
Manner mode	
Offline Mode	
S! Familiar Usability	
S! Information Channel	
Secret folders	
Simple Menu	
Speed Dial entries	
Voicemail	3-12
Changing	
Font Size	
Font Weight	2-2
Handset Code	1-17
Handset mail address	
Network Password	3-19
PIN & PIN2	11-6

Changing Ringtones
Phone Book2-19
Ringtone/videos2-7
Via Data Folder2-32
Composing/Sending Messages
Feeling Mail4-5
From Call Log records3-17
From Internet pages5-10
From message text4-22
From Phone Book2-30
From received messages4-9
From scan results 9-38, 9-40
From Scratch Pad2-17
From sent messages4-26
Graphic Mail 4-6, 4-20
PC Mail4-17
S! Mail4-4
SMS4-7
Copying
Calculation results9-34
Data Folder files2-23
From text entry window2-12
Scan results 9-39, 9-41
Text (e-Books)9-43
Text (Internet pages)5-10
Text (Messaging)4-22
Text (S! Information Channel pages)9-42
Downloading
Customized Screen2-6
Music8-3
S! Applications8-12
Video8-3
Exchanging Files
Bluetooth®12-7
IC Transmission12-5
Infrared12-2
IrSS Transfer12-2
Mass Storage12-10
MTP Mode8-4
Hiding Files/Entries

Data Folder	2-23
Messaging folders	4-11
Phone Book	2-19
Schedules/tasks	9-30, 9-32
nserting/Removing	
Battery	14-4
Memory Card	2-24
USIM Card	14-3
.ocking/Restricting	
Application Lock	11-3
Call Log	
Function Lock	
Incoming/outgoing calls	3-19
Keypad Lock	1-18
Mail records	11-3
Osaifu-Keitai®	9-13
PIN Entry	11-2
lanaging Schedules	
Calendar	
Tasks	9-4
Measuring Time	
Countdown Timer	
Stopwatch	9-16
lotifying Phone Number	
Opening My Details	1-18
Via Bluetooth®	12-17
Via IC Transmission	
Via Infrared	12-16
Placing Calls	
By entering phone numbers	3-14
From Call Log records	3-17
From Internet pages	5-10
From message text	
From Phone Book	
From scan results	
International calls	
Speed Dial	
Video Calls	
While abroad	3-4
Playing	

	Answer Phone messages/Caller Voice 3-4 Files (Scan Barcode) 9-38 Music 8-5 Recorded TV programs 6-9 Recorded TV programs from Timer log 6-15 Split files (TV) 6-15 Streams 5-11 Video 8-6	
	Voice files 9-22	
_	Voicemail messages	
К	ejecting	
	Calls from public phones	
	Calls from specific numbers 3-19	
	Calls from unsaved numbers	
	Calls with undisplayable Caller ID 3-19	
	Calls without Caller ID	
_	Near Chat requests 10-8	
н	esetting/Formatting	
	All settings	
	Handset	
_	aving	
0	Backup 12-12	
	Captured still images7-4, 7-7, 7-8	
	Draft messages 4-19	
	Edited still images	
	Files (Internet)	
	Files (S! Information Channel pages) 9-43	
	Graphic Mail templates 4-6	
	Mail attachments 4-22	
	Notepad entries 9-21	
	Phone Book entries	
	Recorded video	
	Scan results 9-37, 9-39	
	TV channels 6-11	
S	aving Phone Book Entries	
	Add New Entry 2-18	
	From Call Log records	
	From message text 4-22	
	From received messages 4-22	
	•	



Index

From scan results	9-38, 9-40
Scanning	
Business cards	9-25
QR Codes	9-23
Text	9-26
Searching	
Messages	
Music to download	8-3
Music to play	8-5
Notepad entries	9-36
Phone Book	2-20
Text (Internet pages)	5-9
TV program information	6-11
Video to play	8-6
Web Search	2-16
Sending via Mail	
Data Folder files	2-22, 4-5
Notepad entries	9-36
QR Codes	9-24
Scan results	9-39, 9-40
Still images	7-4, 7-8
URLs	5-10, 5-11
Video	7-5
Voice files	9-37
Setting Wallpaper	
From attached files	4-22
From Phone Settings	2-5
From scan results	9-38
Via Data Folder	2-32
Showing in Standby	
Clock/Calendar	13-4
S! Applications	8-12
Standby Window	2-3
Wallpaper	2-5
World Clock	9-18
Using as Alarm Clock	
Alarm	9-6
Hour Minder	9-19
Wakeup TV	9-8
Using Away from Home	

Alarm	9-6
Camera	7-2
Digital TV	6-2
Hour Minder	9-19
Osaifu-Keitai®	9-12
Pen Light	1-18
Scratch Pad	2-17
Search	2-16
Voice Recorder	9-22

Warranty & Service

Warrantv

Warranty is provided when you purchase handset.

- Check the name of distributor and date of purchase.
- Read contents and keep in a safe place.
- The warranty term is described in the warranty.

■ After-Sales Services

See P.14-6 "Troubleshooting" before contacting SoftBank for service or repairs.

If you cannot find solutions or solve problems, contact SoftBank Customer Center, Customer Assistance (P.14-40) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, possible repairs are performed upon request at subscriber expense.

For other services, contact the distributor, the nearest SoftBank Shop or SoftBank Customer Center, General Information (P.14-40). Replacement parts are available for 6 years after termination of production.

- SoftBank is not liable for any damages resulting from use of this product.
- SoftBank is not liable for any damages resulting from accidental loss/alteration of handset data. Keep a copy of Phone Book entries, etc. in a separate place.
- Disassembling or modifying handset may violate the Radio Law. Modified handset will not be repaired.

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Customer Centers

From a SoftBank handset, dial toll free at **157** for General Information or **113** for Customer Assistance

SoftBank Global Call Center

From outside Japan, dial +81-3-5351-3491 (International charges apply.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo,	General Information	© 0088-240-157
Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	Customer Assistance	© 0088-240-113
	General Information	© 0088-241-157
Aichi, Gifu, Mie, Shizuoka	Customer Assistance	© 0088-241-113
Ocaka Huaga Kuata Nara Shiga Wakayama	General Information	© 0088-242-157
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	Customer Assistance	© 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime,	General Information	© 0088-250-157
ochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	Customer Assistance	6 0088-250-113



SoftBank 930SH User Guide

January 2009, First Edition **SOFTBANK MOBILE Corp.**

For additional information, please visit a SoftBank Shop.

Model: SoftBank 930SH

Manufacturer: SHARP CORPORATION



Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- Handsets, batteries and chargers submitted for recycling cannot be returned.
- Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.

